3 1761 05446924 2

PRACTICAL BUILDING CONSTRUCTION

PRACTICAL BUILDING CONSTRUCTION

A HANDBOOK FOR STUDENTS PREPARING FOR THE EXAMINATIONS OF THE SCIENCE AND ART DEPARTMENT, THE ROYAL INSTITUTE OF BRITISH ARCHITECTS, THE SURVEYORS' INSTITUTION, ETC.

Designed also as a Book of Reference for Persons Engaged in Building

BY

JOHN PARNELL ALLEN

SURVEYOR

LECTURER ON BUILDING CONSTRUCTION AT THE DURHAM COLLEGE OF SCIENCE, NEWCASTLE-ON-TYNE

Containing over One Thousand Illustrations

SECOND EDITION, REVISED

LONDON

CROSBY LOCKWOOD AND SON

7, STATIONERS' HALL COURT, LUDGATE HILL

1897

LIBRARY
JUN 12 1975
UNIVERSITY OF TORONTO

TH
145
A42
1897

LIBRARY
758102
UNIVERSITY OF TORONTO

PREFACE.

IN this work, which is intended primarily for students in every trade concerned in Building Construction, —and which has been arranged on the basis of Notes prepared for a Course of Lectures on the subject,—the Author has endeavoured to deal, in a concise and practical manner, with all the details of the construction of a building. He has aimed also at giving such a description of the nature and characteristics of the various Building Materials in general use, as should be sufficient (with other subjects dealt with in the volume) for the purposes of the examinations in Building Construction prescribed by the Science and Art Department, the Royal Institute of British Architects, and the Surveyors' Institution, respectively.

Students who may be preparing for the Elementary and Advanced Examinations of the Science and Art Department (see Appendix, pp. 421 to 424) will be able, by following the abstract of the requirements of their several stages, to omit, in their reading, those portions of the work with which their particular class is not concerned; while Honours students, and those preparing for the Examinations of the Royal Institute or the

Surveyors' Institution, will find that the work covers the ground sketched by the Syllabus of each of those bodies.

While the courses prescribed by the several authorities referred to above are those which the Author has had specially in mind, it need hardly be pointed out that the materials here provided will be available for preparation for other examinations covering similar ground, as well as for students not seeking certificates ; the Author's aim having been to provide what he believes is not to be found elsewhere in a form at once so complete and so compact—namely, a HANDBOOK of PRACTICAL BUILDING CONSTRUCTION, which should be found useful by all who seek proficiency in the rudiments of the Building Arts.

It is believed, also, that the work will be found of material service as a Book of Reference by both Operative and Master Builders, as well as by Houseowners and Estate Agents, Surveyors and Architects, and others whose interests are to be promoted by acquaintance with its subject.

It should be mentioned that the numerous diagrams and other illustrations, about one thousand in number, have been specially drawn and engraved for this work.

The Author takes this opportunity of tendering his thanks to those personal friends and other gentlemen—specialists in their several departments—who have so kindly assisted him with their suggestions in relation to one or other portions of this work.

NEWCASTLE-ON-TYNE,
September 1893.

PUBLISHERS' NOTE TO SECOND EDITION.

IN issuing the present edition, the opportunity has been taken by the Author of carefully revising the work throughout, and of inserting a few additional illustrations, with the necessary explanatory text. A few of the original illustrations have also been re-drawn, with a view to greater effectiveness. Subject to these several improvements, the work is again issued, without abridgment, substantially in the form in which it has already attained to such extended popularity as the "best and most complete text-book on Building Construction."

September 1897.

CONTENTS.

CHAPTER I.

BRICKS AND THEIR COMPOSITION.

PAGE

Bricks as Building Material—Brick-earth and its Constituents—Varieties of Brick-earth—Manufacture of Bricks—Varieties of Bricks—Purpose-made Bricks . . . . . 1—11

CHAPTER II.

BRICK BOND AND ITS APPLICATIONS.

Bond in Brickwork—Structures of Brickwork—Different Kinds of Bond—Application of the Various Bonds . . . . . 12—28

CHAPTER III.

BRICK REVEALS, ARCHES, AND POINTING.

Reveals and their Construction—Forms of Arches—Construction of Arches—Bond of Arches—Pointing—Fireplaces—Flues—Hoop-iron Bond—Wood Bricks and Pads—Brick Corbelling . . . . . 29—51

CHAPTER IV.

DAMP AND ITS PREVENTION.

Danger of Damp—Protection below Ground—Protection above Ground—Prevention of Damp Rising—Prevention of Damp Descending . . 52—58

CHAPTER V.

BUILDING STONES AND STONE WALLING.

Stone as a Building Material—Sandstones—Limestones—Stone Walling—Limestone Facings—Sandstone Facings . . . . . 59—71

CHAPTER VI.

STONE DRESSINGS, JOINTS, AND STAIRS.

PAGE

Plinths—Sills, Heads, and Jambs—Mullions and Transoms—Hoods or Labels—Strings and Cornices—Parapets and Balustrades—Quoins—Copings—Joints—Steps—Handrailing . . . . . 72—85

CHAPTER VII.

WOOD FOR BUILDING PURPOSES.

Carpentry and Joinery—Wood in the Tree—Good and Bad Timber—Seasoning of Timber—Preservation of Timber—Deal or Fir—Elm—Oak—Teak—Mahogany—Walnut—Beech—Ash—Sycamore—Birch . . . . 86—98

CHAPTER VIII.

WOOD FLOORS.

Naked Floors and Floor-boards—Single Floors—Floor Joints—Double Floors—Framed Floors—Flooring . . . . . 99—122

CHAPTER IX.

PARTITIONS.

Partitions defined—Framed or Quartered Partitions—Trussed Partitions . 123—131

CHAPTER X.

ROOFS.

Local Adaptation of Roofs—Couple Roof—Couple-close Roof—Fished Joints—Scarfs—King-post Roofs—Queen-post Roofs—Wood and Iron King-trusses—Wood and Iron Collar-truss—Queen Flat-truss—Mansard Roof—Details of Roofs . . . . . 132—163

CHAPTER XI.

IRON AND STEEL.

Pig Iron—Cast Iron—Cast Malleable Iron—Wrought Iron—Rolled Girders and Joists—Steel . . . . . 164—169

CHAPTER XII.

RIVETS AND RIVETING.

Riveted Work—Hand Riveting—Machine Riveting—Forms of Rivets—Size of Rivets—Methods of Riveting . . . . . 170—175

CHAPTER XIII.

IRON ROOFS.

PAGE

Iron *versus* Wood—Wood Members—Iron Trusses—Strains on Truss Members—Joints and Connections—Dimensions . . . . . 176—187

CHAPTER XIV.

COVERINGS FOR ROOFS.

Lead Work—Lead on Roofs—Zinc Work—Zinc on Roofs—Slates—Forms of Slates—Fixing of Slates—Tiles—Fixing of Tiles—Special Forms of Tiles . . . . . 188—212

CHAPTER XV.

FIREPROOF FLOORS.

Essentials of Fireproof Construction—Brick Arches—Concrete Floors—Special Systems . . . . . 213—218*d*

CHAPTER XVI.

JOINTS AND MOULDINGS IN JOINERY.

Joinery defined—Framed Joints—Angle Joints—Dovetails—Scribing—Mouldings—Match Boarding—Affixing Joinery Work . . . . . 219—235

CHAPTER XVII.

DOORS: THEIR FINISHINGS AND FASTENINGS.

Door Frames—Ledged Door—Ledged and Braced Door—Framed and Braced Door—Framed and Ledged Door—Fanlights—Panelled Doors and Panelling—Door Casings—Dadoes—Skirtings . . . . . 236—271

CHAPTER XVIII.

WINDOWS AND WINDOW FINISHINGS.

Sash, or Cased Frames—Solid Frames and Casements—Borrowed Lights—Window Finishings—Shutters . . . . . 272—302

CHAPTER XIX.

WOODEN STAIRS.

Stairs and Staircases—Definition of Terms and Rules—Kinds of Stairs—Construction of Stairs and Details—Handrails . . . . . 303—322

CHAPTER XX.

SKYLIGHTS AND LANTERNS.

PAGE

Skylights—Lanterns on Roofs and Flats—Louvres—Ceiling Lights . . 323—332

CHAPTER XXI.

PLASTERING, PAINTING, AND GLAZING.

Plaster Work Materials—Plaster Work Processes—External Work—Ornamental Work—Glass and Glazing—Patent Glazing . . . . . 333—344

CHAPTER XXII.

CENTRING, FOUNDATIONS, SHORING, SCAFFOLDING, SEWERS.

Centring—Foundations—Different Soils—Sewers—Shoring and Strutting—Scaffolding—Hoisting Tackle—Underpinning . . . . . 345—362

CHAPTER XXIII.

MISCELLANEOUS MATERIALS.

Asphalte — Granite — Limes and Cements — Mortar — Concrete — Marble—Terra-cotta—Artificial Stones . . . . . 363—369

CHAPTER XXIV.

STRESSES.

Definitions—Loads—Stresses—Reactions—Discernment of Strains . . 370—380

CHAPTER XXV.

CALCULATION OF STRAINS.

Computation of Strains on Cantilevers, Girders, and Trusses variously loaded 381—402

CHAPTER XXVI.

SANITATION.

A Model Dwelling—Air and Ventilation—Draughts—External Ventilators as Inlet—Ventilating Fans—Drainage—Traps—Drain Pipes and Testing—Inspection Opening and Ventilation Inlets—Ventilation Outlets—Flushing—Cesspools—Sewage Irrigation—Water Closets and Soil Pipes—Baths—Water Supply . . . . . 403—420

APPENDIX.

Syllabus of the Subjects in which Examinations in Building Construction are held by the Department of Science and Art . . . . . 421—424

INDEX . . . . . 425—450

PRACTICAL
BUILDING CONSTRUCTION.

CHAPTER I.

BRICKS AND THEIR COMPOSITION.

Bricks as Building Material—Brick-earth and its Constituents—Varieties of Brick-earth—Manufacture of Bricks—Varieties of Bricks—Purpose-made Bricks.

Bricks as Building Material.—Bricks, the chief material of the bricklayer, are hard rectangular blocks, of an originally clayey substance, which has been tempered and moulded into the shapes required, and then burnt in a clamp or kiln until it is quite hard.

Bricks are an ancient building material, having been made and used by the Romans for arches, facings, pavings, etc. Though they were, at that period, of larger and smaller sizes than those used generally in the present day, they were always made with half-bricks or double bricks—double their width in length—to allow of bond, as will hereinafter be explained. They thus varied in length from $7\frac{1}{2}$ to 22 inches, and were generally very thin (about $1\frac{1}{2}$ inch), the smaller sizes being used for facing rubble walls, and the larger sizes for bonding every fourth course or thereabouts. The latter were also used for arches.

In more modern times bricks have been used for walling, facing, arches, and paving; and generally their dimensions are now about 9 inches long by $4\frac{1}{2}$ inches (or half their length) in breadth, so that two laid crosswise will cover two laid lengthwise. They are made from $2\frac{1}{2}$ to $3\frac{1}{2}$ inches in height, according to local custom or the requirements of construction.

They are of numerous different qualities, kinds, and colours, each from its peculiar nature adapted to a particular purpose or use. A concise classification of the various kinds, their peculiarities, qualities, and uses, will be given hereinafter.

It is to be noted that the quality of a brick depends on the clay from which it is made, and on the different manipulation which the clay will allow of in its manufacture.

Brick-earth and its Constituents.—A good brick-earth or clay, such as is used for common red bricks, is generally composed of silica and alumina, accompanied by a slight percentage of lime or other flux (to fuse the two into a hard mass), and a still smaller percentage of oxide of iron, manganese, magnesia, or an alkali to give it its colour. The properties of the different constituents of clay are as follows:—

Silica, the greatest in bulk, is practically sand: that is, in an uncombined state, it is infusible, whether alone or with alumina, without a small quantity of flux in the form of lime or oxide of iron; and it acts as a preventative to cracking, shrinking, or warping. Up to a certain proportion the more silica there is the better the shape and more even the texture of the resulting brick. An excess of silica (or sand) renders a brick too brittle. The silica should be in chemical combination with the alumina, as opposed to a mere mechanical admixture.

Alumina is the principal and most important constituent of a good clay, as it imparts the plastic qualities, though it shrinks, cracks, and warps very considerably under the influence of heat, which renders it very hard.

Lime may be called a flux, though its presence in the bulk has a double effect: it both diminishes the contraction in the process of drying the raw material, and it blends the silica and alumina together in the burning. This carbonate of lime must be present in very small quantities, comminuted and equally distributed throughout the mass; for if it exists in lumps it will be slaked by moisture, and cause the disintegration of the brick, whether laid or not in the finished work.

Iron is also a flux, when in the form of an oxide, and in the presence of nearly equal quantities of silica and alumina. It is the colouring matter of most kinds of bricks, the intensity of the colour (from a light yellow to a dark red) being in proportion to the quantity of iron oxide present. With 8 or 10 per cent. of oxide of iron, the colour is a dark blue or purple, and the addition of a small proportion of *manganese* gives almost a black colour to the brick; and with lime the two impart a cream colour, the one darkening and the other lightening the shade. *Magnesia* and *iron oxide* make a yellow brick. The presence of *alkalies* is generally a source of trouble, as they act too strongly as a flux when in any quantity, though that may be only a small percentage. They melt the clay, as it were, and render the resulting brick unsymmetrical, while giving it a greenish-blue tint.

A *good brick-earth* contains silica and alumina in due proportions, together with such a percentage of a flux (in whatever form) as will fuse the silica and alumina without running the bricks together and rendering them vitrified.

Varieties of Brick-earth.—There are three different kinds of brick-earth, as follows:—

1. *Pure clay*, also called *Plastic* or *Strong* clay, which contains silica and alumina, with such a small proportion of lime, iron oxide, or other flux that the brickmaker calls it "foul clay," as it is of very little use by itself, a soft, uncombined brick being the result of what little burning the clay will stand. The addition of more lime or other flux improves the clay greatly for brick-making purposes.

2. *Sandy*, *Mild*, or *Loamy* clays are so loose that they are useless for the manufacture of bricks unless a flux is added in sufficient quantity to make the fusion perfect.

3. *Marls* or *Limy* clays are the best of all, as they contain the necessary constituents in the first instance, without further addition, except to regulate the burning.

An artificial brick-making clay of this quality, called *malm*, can be obtained by washing the clay and mixing it with the necessary lime in a mill.

Having dealt with the qualities and peculiarities of the different clays and their constituents, a short *résumé* of the process used in the preparation of the clay and manufacture of the bricks may with advantage be given before proceeding to a detailed classification of the different kinds of bricks and their characteristics.

Manufacture of Bricks.—After the removal of the turf and surface-soil, which is called *encallowing*, the clay is dug out, in the autumn, and placed in heaps or places called *kerfs*, and there the different kinds are mixed together and other ingredients added, as the nature of the clay requires, for the production of a first-class article. Of course, all stones and other unsuitable substances are picked out, and sometimes, when the clay is hard or uneven, it is ground in a mill to a finer admixture.

This done, the clay remains in these heaps or kerfs during the winter; and, about the end of March, the winter's seasoning having reduced its liability to warp, the clay is turned over, trodden under foot, or ground in a mill, which tempers the clay and renders it ready for conversion into bricks.

Malm, the washed and artificial brick-making earth, is likewise made in the autumn by mixing the newly dug clay with a proportion of chalk, to make up the deficiency in the natural constituents. This is done in a mill, and as soon as the mixture becomes of a creamy nature, it is run through large sieves into what are called *backs*, large tanks in which the substance becomes hardened, after which a layer of fine screened ashes is sandwiched between two layers of malm, and in this condition the mass remains during the winter to mellow.

The clay or malm being thoroughly ripe, it is ready to be made into bricks, which can be done by machinery or by hand, the latter making the better bricks.

Machine-made Bricks.—Machine-made bricks are of two kinds, dry or plastic; in the latter case the clay, when still in a soft, sticky condition, is forced by pressure through a rectangular channel of indefinite length but the width of a brick lengthwise and the height of a brick on edge (that is, about 10 in. × 5 in.) on to a smooth greased iron platform. When sufficient has descended on to the platform, the supply through the channel is cut off, and what remains, being 10 in. × 5 in. and of indefinite length, is cut by knives or wires, in a frame worked by machinery, into the height of the brick required—whether it be $2\frac{1}{2}$ in. or 3 in.

This, in the course of a few seconds, cuts a definite number of bricks out of the clay, and these are carried away to a shed or out into the sun to dry gradually.

Machine-made bricks can also be formed from clay which has been dried and ground to a powder, which is put into a mould (as explained hereinafter in treating of hand-made bricks) and subjected to great pressure, so that a consolidated mass is formed of very even surfaces. The resulting brick, being already dry, is ready to be burnt in the kiln.

Hand-made Bricks.—Hand-made bricks are of two kinds, *slop* or *sand*-moulded; the difference being that, for the former, the mould (which is made a little larger than the ultimate size of the brick required, so as to allow for shrinkage as the clay or malm dries) is dipped into water, to prevent the clay from adhering to its sides; whereas for the latter the same end is attained by sprinkling the inside of the mould with sand, fine ashes, or a specially ground powder.

Sand-moulded bricks are considered to be cleaner, more sharp, regular, and perfect in shape than *slop*-moulded bricks. In both cases alike, the clay or malm is pressed by hand into the mould on a flat and smooth table, and the superfluous clay is cut off by a straight edge.

The rectangular block of clay is then turned out of the mould and taken to the shed to dry, exactly as with the machine-made bricks.

In some cases a *frog* or indent is formed on the bed of a brick, either hand-made or made by machine; or the brick may be made by hand and afterwards machine-pressed to give it a closer body and finer finish.

This *frog* or *kick*, as it is called, is made by a projection on the stock board, over which the mould is placed and fitted to form a bottom before the clay is pressed home within the mould to form the brick; or in the case of machine-pressed bricks, projections are left on the top and bottom plates of the pressing box.

Drying.—The soft, half-dry bricks are then dried gradually, in the sun or under sheds, being *scintled*, that is, stacked diagonally, so

that the air can have free access all round them. When they are dried out of doors, they are placed on *hacks*; these are long narrow banks, raised above the ground which is covered with dry material, such as ashes or brick rubbish, to reduce the moisture to a minimum and to facilitate the drying process.

Burning.—When the raw bricks are sufficiently dry they are wheeled into the kilns or clamps and stacked in layers, sometimes diagonally, to allow of a perfect circulation of the heat from a bottom of burnt bricks, covered with six inches of breeze, channels, filled with faggots, being left across the bottom to draw the heat. This done, and the clamps covered up or the ends of kilns blocked, the fire is lighted and kept burning for a period of from two to six weeks, after which they are allowed to cool, and the brick is then ready and fit for the builder.

Clamp-made bricks should always have a certain amount of ashes or breeze incorporated in them in the mixing, so that they may take the fire better and burn more readily.

Clamps are chiefly used in country brickyards, and for temporary purposes; they consist of walls, built of dried raw bricks, smeared with clay to hold the heat, and encircling a honeycomb of flues, on which the bricks to be burnt are stacked, on layers of breeze, laid over the flues, in such a way as to leave each brick as far as possible exposed on all sides to the heat during the process of burning; and they are then covered over by a few courses of burnt bricks, after which the fires are lighted, when the whole mass, connected by the flues, commences to burn gradually.

Kilns.—Kilns are more permanent structures, and may be either circular or rectangular in plan, the former being the better of the two; but a detailed description of them is beyond the province of these notes. Glazed bricks are burnt in domed kilns.

Defects.—As soon as the bricks are cool they are fit for use, though they require some selection; those near the flues being over-burnt and run together, called *burrs*; and those near the outside being soft and more or less imperfectly burnt, called *place bricks*, *grizzles*, or *samels*.

Chuffs are bricks on which rain has fallen while they are hot, making them full of cracks, and otherwise wholly defective.

Sound Bricks.—A sound, good brick should be hard, well-burnt, square, and regular in shape, with clean sharp arrises. It should give a clear ring when struck; be free from lumps of lime and other impurities, and as non-absorbent as possible.

Varieties of Bricks.—The chief kinds of bricks at present in the market, and their characteristics, are as follows :—

Gaults are bricks made from a natural clay with sufficient lime in the form of chalk to act as a flux. They are made in the southern and eastern counties, and are very hard, heavy, and durable, of the first quality, suitable for best facings, and usually of a white colour, though the inferior bricks have a slight pinky tinge. The *Cambridge* common white bricks have a proportion of pinky ones, the mixture being classified as *Mingles*.

Malms, as the name implies, are made from a marl or chalky mixture, and principally used for facings and other best work. *Suffolk bricks* are of a similar quality, and mostly of a light colour.

Common firebricks are made from a refractory clay containing almost pure alumina and silica in the proportion of one part of the former to three parts of the latter; they are generally of a whitish yellow or light brown colour, and rather porous. They should be uniform in texture, and of course free from lime and iron. They are made chiefly in Shropshire, Staffordshire, and near Leeds, Newcastle, and Stourbridge. They are used for lining blast furnaces, setting grates and boilers, and casing fire-resisting flues and furnaces, and in fact in any position where brickwork is exposed to the action of fire.

Dinas firebricks are made in Glamorganshire from sand, *i.e.*, pure silica, which is mixed with 1 per cent. of lime and a little water, and pressed together by machinery before burning. They are the best fire-bricks in existence, of a porous nature, and they will expand and withstand an enormous heat.

Ganister bricks are made from a hard fireclay marl found in the coal measures, which is ground and pugged and moulded in the ordinary way. They are closer in grain, and superior to firebricks for furnaces, etc.

Guismuyda firebricks are similar to the Dinas bricks.

Lee Moor firebricks are made near Plymouth, from the refuse of china and clay, and are very hard, compact, and of a dull red colour.

Thompson's are light, strong, fireproof bricks, lately introduced from Cheshire; they are of a common red colour, and extraordinarily light in weight.

Glazed bricks are made extensively in the south-west of Scotland, in Wales, Warwickshire, Yorkshire, Northumberland, and Durham, from the best qualities of fire-clay, which is generally ground much finer than for firebricks. Glazed bricks are made by hand and machinery (the latter chiefly), and all, when sufficiently dry, are pressed and as fine a skin put on them as possible; after which the glaze, of whatever tint required, is put on by either of two methods, called respectively the *dry* and *wet dip*. Of these two methods the former is the better, because the previous drying (as hereinafter explained) prevents any further contraction.

The *dry dip* consists of dipping the bricks in the glaze after they have

been once burnt in the kiln; whereas, in the "wet dip" process, the glaze is applied to the wet, undried, or unburnt bricks. After they have been dipped each process is completed by burning the bricks at a very high temperature. Glazed bricks are generally one-eighth of an inch higher than the ordinary kinds, so as to reduce the mortar joint; and they may be either glazed at one end or one side only, or at both ends, both sides, or on end and side as required.

Fareham and Woodville red bricks are of a close, sandy nature; or they can be made smooth, coming from a moderately plastic clay. Their deep red, even colour, and good surface, render them most suitable for facings.

Staffordshire or Nuneaton blue and black bricks are very hard, well-burnt and close, non-absorbent, and will resist enormous weights and pressure. They are used for damp courses, pavings, weatherings, piers, dressings, and positions requiring great compressive strength, and for damp situations. They are made from a clay containing about 10 per cent. of oxide of iron, which gives them their colour. The clay is also made into copings, channels, and many other specialities.

Black bricks, made in Berkshire, have no uniformity in colour, but are hard, close, and sandy in texture, and make a good mottled front, their ends being alternately black, blue, and a glazed yellow or white: so much so that they give the appearance of being daubed irregularly with soot before being burnt.

Rubber bricks are of a soft, sandy nature, of fine, rich, red colour, and capable of being cut, carved, or rubbed into any shape or form. They are made near Birmingham and Bracknell, and should be compact, of uniform colour, texture, and hardness, so that they cannot be scored with a knife, even in the centre; while they should rub well. They are generally made slightly larger than ordinary bricks, to allow for the rubbing down.

Dutch or adamantine clinkers are small, cream-coloured, and very hard bricks, vitrified throughout, and used chiefly for paving; and, if anything, the Adamantine is the better brick of the two for the purposes required. They are grooved or chamfered, to give a firmer foothold for horses, etc., in pavings.

Candy's bricks are of a similar character, though perhaps harder and yet more brittle, and they are supposed to "wear rougher." They are of a lighter colour, of a more watery appearance, and suitable for the same purposes as the clinkers.

Concrete and breeze bricks are made of cement and gravel or breeze, and used for fixing purposes. They are supposed to be fireproof, and yet suitable and easy for use with woodwork to be attached thereto.

Dust bricks are blue bricks, which have been made in moulds sprinkled with dust instead of sand.

Pressed bricks are those made by machinery under pressure, and *Dressed bricks* have had their sides and beds beaten with a "dresser," which gives them a better arris and more even face.

Of course, it will be understood that most of the above kinds of bricks can be moulded (before being burnt) into any shape, form, or size, to suit requirements.

Purpose-made Bricks are of innumerable kinds, and made in various clays. The chief kinds are enumerated below, though it must be understood that this list is not, and cannot be made, exhaustive; special circumstances requiring special bricks, which should be ordered early, before the operations of building are commenced, so that no delay may be caused while they are being made, as their manufacture occupies a considerable time in some cases.

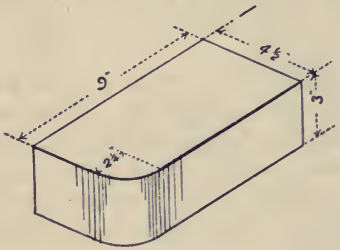

Fig. 1.

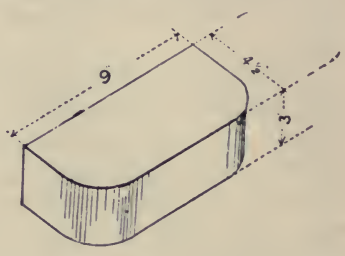

Fig. 2.

Bullnoses are bricks with rounded angles. On the accompanying plate (showing special-purpose-made bricks) fig. 1 represents a bullnosed angle to a $2\frac{1}{4}$-inch radius; fig. 2 a double bullnosed angle to a $2\frac{1}{4}$-inch radius;

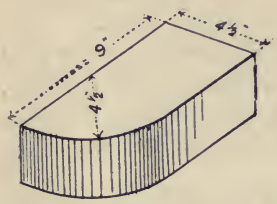

Fig. 3.

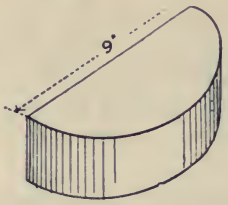

Fig. 4.

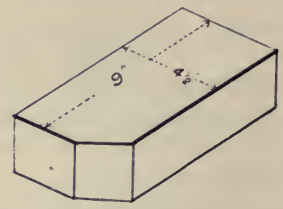

Fig. 5.

fig. 3 a bullnosed angle to a $4\frac{1}{2}$-inch radius; fig. 4 a double bullnosed angle to a $4\frac{1}{2}$-inch radius.

Cants are jamb-bricks with an angle cut, as shown in fig. 5; fig. 6 being a double cant.

Birdsmouths are for internal angles other than right angles; fig. 7 representing a stretcher and fig. 8 a header. The converse, as shown in fig. 9, is called a *squint*, and is used for external angles.

Jamb-bricks of another kind are represented by figs. 10 and 11; while fig. 12 illustrates a *string* brick, and figs. 13 and 14 stretcher and header *plinths*.

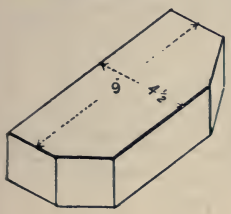

Fig. 6.

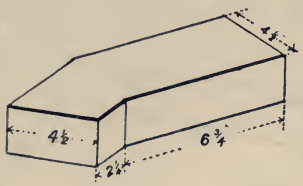

Fig. 7

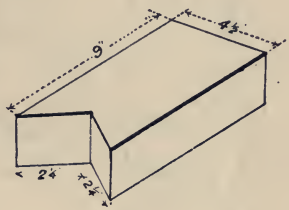

Fig 8.

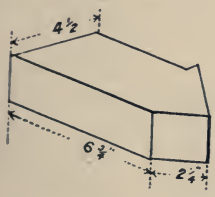

Fig. 9.

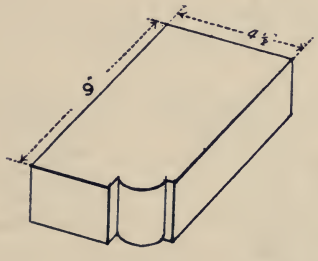

Fig. 10.

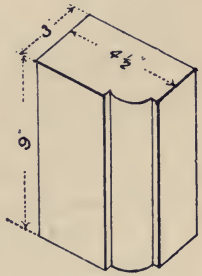

Fig. 11.

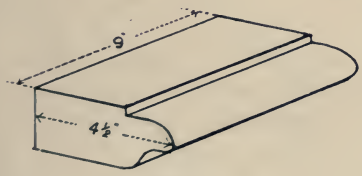

Fig. 12.

Fig. 13.

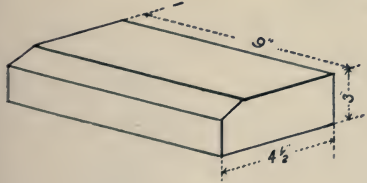

Fig. 14

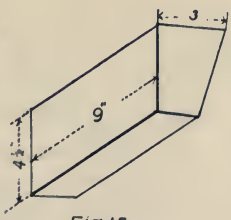

Fig. 15.

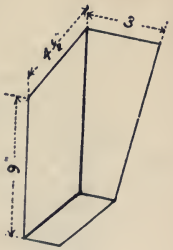

Fig. 16.

Of the one-centred *arch* brick, figs. 15 and 16 show respectively a header and a stretcher, and fig. 17 a *compass* brick, fig. 18 representing a *circular* brick.

Camber arch-bricks are shown by fig. 19, and *elliptical* arch-bricks by fig. 20.

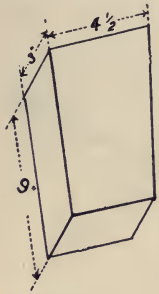

Fig.17.

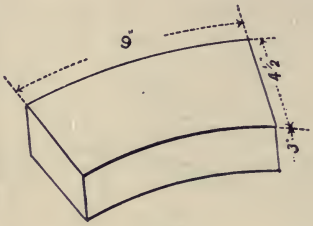

Fig.18.

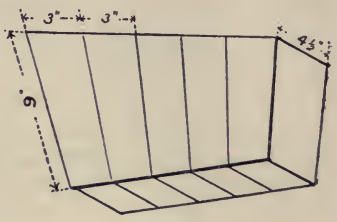

Fig.19.

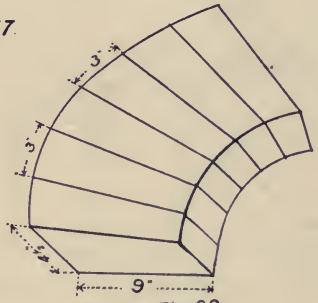

Fig.20.

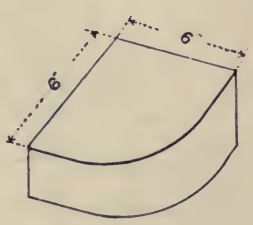

Fig.21.

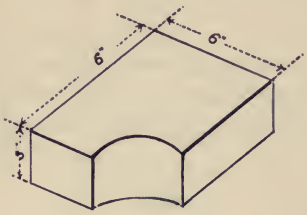

Fig.22.

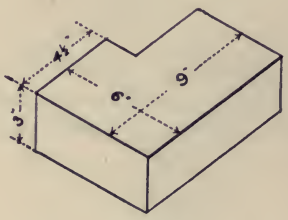

Fig.23.

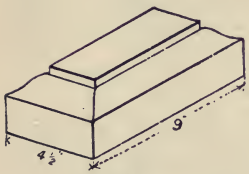

Fig.24

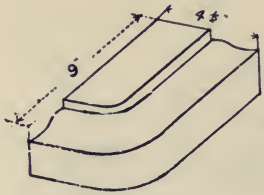

Fig.25.

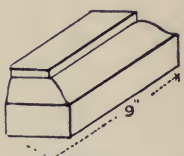

Fig.26.

External rounded angles are represented by fig. 21, and internal ditto by fig. 22; while square angles, both internal and external, are depicted by fig. 23.

Of *moulded* bricks, quoins are illustrated by fig. 24; moulded bull-noses by fig. 25; moulded squints by fig. 26; moulded cants by fig. 27; external angles by fig. 28, and internal angles by fig. 29.

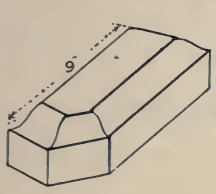

Fig 27.

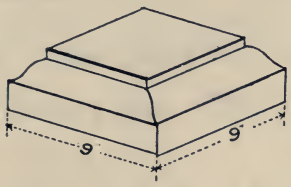

Fig 28.

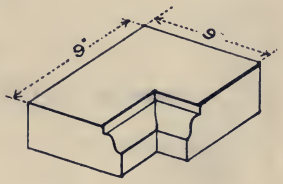

Fig. 29.

Soaps are bricks 9 inches long, $2\frac{1}{4}$ inches only in breadth, and 3 inches high; while *splits* are 9 inches long, $4\frac{1}{2}$ inches broad, but only about $1\frac{1}{2}$-inch high (or thick).

Stocks are the sound marketable clamp burnt London bricks when the "place bricks" have been removed and the "picked" stocks selected for superior purposes—the "stock" is the medium quality—and they are mostly burnt in clamps, having a quantity of ash refuse and breeze incorporated in them, so that very little fuel is required to burn them.

Brindled bricks are inferior common blue bricks, of a browny blue colour, very hard and durable, and suitable for engineering purposes. It should be noted that good blue bricks are made out of a hard blue or purple marl, which is ground to a powder and pugged into a plastic state ready for moulding. The best and soundest bricks are excellent for all damp situations, some being specially annealed for use in storage tanks for chemical gases, etc., and all true blue bricks should be close, hard, and absolutely non-absorbent, though not necessarily blue all the way through. Sometimes *dust* bricks are made by the dry process similar to tiles.

CHAPTER II.

BRICK BOND AND ITS APPLICATIONS.

Brickwork defined—Bond in Brickwork—Structures of Brickwork—Different Kinds of Bond—Application of the Various Bonds.

BRICKWORK strictly speaking is understood by the trade to mean work executed with standard-sized bricks, *i.e.*, 9 inches long, $4\frac{1}{2}$ inches wide, and from $2\frac{1}{2}$ to $3\frac{1}{2}$ inches high, and any larger-sized materials used are considered out of the province of the bricklayer.

Bond in Brickwork.—The principal point which the bricklayer must always have in view in his work, beyond good workmanship, with the good materials given to him, is to have one pervading bond throughout each separate piece of work, so that the many bricks used will form one continuous unbroken mass from every point of view. By this word *bond* —which is the very essence of sound work—is meant the arrangement of the bricks in such positions beside and above each other, that no single vertical joint between any two bricks is immediately in line and above that between two others; that is to say, the bricks must always break joint on the solid surface of a brick beneath.

A straight vertical joint between two bricks exactly over a similar joint of the course below is exceedingly bad construction, and an unsound, weak piece of work, which should never be overlooked. Moreover, in good bond the bricks should *break joint* vertically both in the length and thickness of the wall, so as to bind the several bricks forming the mass into one solid piece of work, and fairly to distribute the superincumbent weight.

Fig. 30 illustrates this principle of breaking joint, and also its object and effect in distributing the load, as the dotted lines show how it is carried from one brick on to the centres of the bricks below.

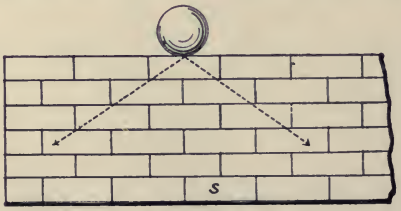

Fig. 30.

Fig. 31 shows a piece of walling with no *bond*, or *breaking joint*, and fig. 32 the effect a heavy load would have on an unsound foundation; the bricks immediately underneath the weight would sink down, and leave those adjacent to them, on each side, in their original position. The same applies to the thickness of the wall as well as to its length, as shown in figs. 33, 34, and 35, on the same principle.

Fig. 31.

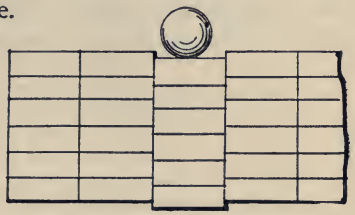

Fig. 32.

Having shown the necessity for such a principle, to break joints and effect a bond both lengthwise and crosswise, it will be convenient, before proceeding, to explain the modes of carrying out that principle: first, to note that all longitudinal joints, or the beds of the bricks, must be perfectly horizontal, so that the vertical joints can be made perfectly perpendicular without unnecessary trouble, inasmuch as all bricks are, or should be, made rectangular in form on all sides.

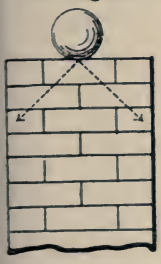

Fig. 33.

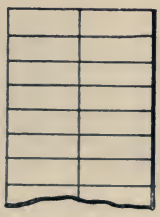

Fig. 34.

Fig. 35.

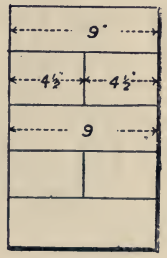

Fig. 36.

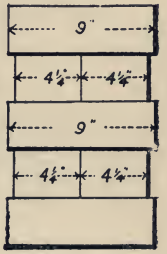

Fig. 37.

The standard size of a brick being 9 inches long, $4\frac{1}{2}$ inches wide, and 3 inches deep, the brick is twice as long as it is broad. The necessity of this proportion is illustrated by the vertical transverse section of a 9-inch wall, properly bonded, as shown in fig. 36; from which it will be obvious that the front and back surfaces of this wall would be uneven—*i.e.*, in and out each alternate course—if the two small sections were not the exact equivalent, in form and dimensions, of the one long one. Fig. 37 shows the result of such a defect. Of course, a little must be allowed for the mortar joint; and for this purpose the width of a brick is always barely $4\frac{1}{2}$ inches—say, generally about $4\frac{3}{8}$ inches—thus leaving a quarter of an inch joint in 9 inches, which should scarcely ever be exceeded.

From these illustrations it will be obvious that, with the use of bricks of one standard and regular size, the bond must be obtained by laying the

bricks in different directions—one course transversely with two others longitudinally side by side, and so on.

A brick which measures, when laid, 9 inches long and 3 inches high on the face or back of a wall, is called a *stretcher*; and one which shows $4\frac{1}{2}$ inches long and 3 inches high is called a *header*; and consequently a whole horizontal course of stretchers only is called a *stretching course*, and one of headers alone a *heading course*.

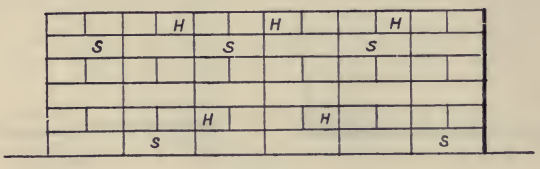

Fig. 38.

The thickness of a brick wall is either defined by inches or by the number of *header* bricks; a 9-inch wall being described as a 1-brick wall, a 14-inch as a $1\frac{1}{2}$-brick, an 18-inch as a 2-brick wall, etc.

Now, we know that when stretchers are laid in every course, we have a bond in which the bricks of every course break joint over the centre of the bricks below, as shown on fig. 30. But if you use one course of headers and one of stretchers on the face of the work, the bricks only break joint properly

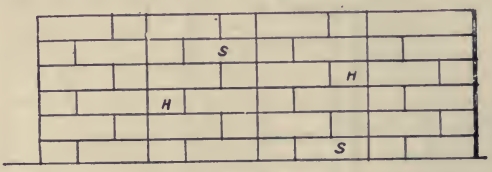

Fig. 39.

at every other joint—*i.e.*, one joint in two, as shown in fig. 38; whereas, by alternating the headers and stretchers in every course, though the same defect has to be contended with, it is in lesser degree, viz., only in the proportion of one unbroken joint in three, as shown in fig. 39, instead of one in two, as fig. 38. To remedy this, recourse has to be had to the use of $\frac{1}{4}$-bricks, called *closers*, which are placed at the angles or *plumbings*, the only places where they are legitimate and allowed in good brickwork. This gives a *three-quarter bond*, which means that the joint is broken either in the centre of a header or on the first or third quarter of the stretcher, as shown on fig. 40.

While dealing with closers it will be well to point out that there are three kinds of closers, as follows:—

Queen closers, or *through* quarters, as fig. 41, an *ordinary closer* being shown on fig. 42.

King closers are cut to shape, as fig. 43, showing $2\frac{1}{4}$-inch face, and, with $4\frac{1}{2}$-inch at back, 9 inches inwards.

Bats may be either $\frac{1}{4}$, $\frac{1}{2}$, or $\frac{3}{4}$ bats, according to the proportion they bear to the size of a whole brick.

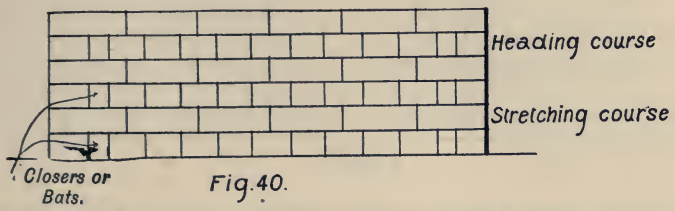

Fig. 40.

Having got all our materials, and their several sizes, positions, and duties assigned, it will be as well to emphasise a few points and rules which must be adhered to in all kinds of bond before giving a description of the varieties of bond.

Structure of Brickwork.—The cardinal points of brickwork, to be attended to under all circumstances, are :—

1. To place a *closer next to the first header in each alternate course* where there is a *plumbing—i.e.*, after the header, at each and every angle where a bricklayer has to use his plumb-rule to mark the upright



Fig. 41.

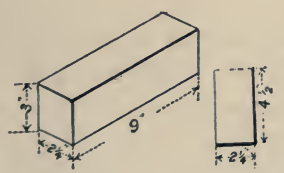

Fig. 42.

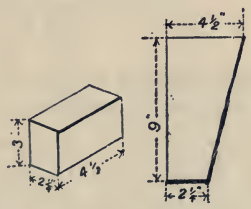

Fig. 43.

line correctly perpendicular, whether it be at an angle of the building, window or door jamb, projection or recess. There can be no exception. The student must also note that the brickwork in each course is started at both ends, that is, at each plumbing, and worked towards the centre between the two plumbings. Therefore any odd-sized bricks, to make up given lengths, must come in the middle, and there only ; and every closer must be within 7 inches of every angle or plumbing.

2. To bear in mind that the *closers go in pairs* in the same course—*i.e.*, one must be placed at each end, or else there would be a toothing at the other end, as shown in fig. 44 ; the correct and only way to make the work in order being as in fig. 45, which shows a closer at each end, and at each jamb of the window.

3. To take care that the *closer* (or $\frac{1}{4}$-brick) goes through the *whole thickness* of the wall, and in a broken line, if possible ; a similar defect to

the last-mentioned being the result of inattention to this rule; *vide* the comparison of lengths of figs. 46 and 47, representing the plans of the heading course, with closer for a wall 18 inches thick.

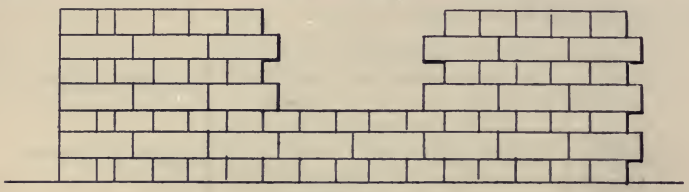

Fig. 44.

4. To *tie* internal angles, where possible, *with headers*; $2\frac{1}{4}$ inches showing in elevation, and the other $2\frac{1}{4}$ inches being within the angle of the wall.

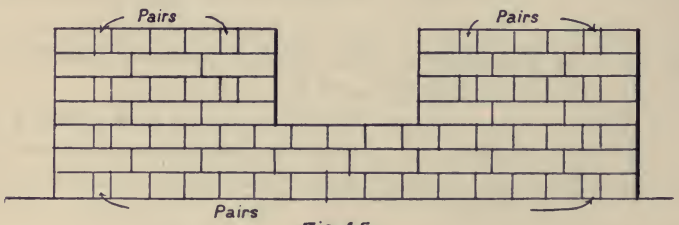

Fig. 45.

5. To start every *heading* course at *both ends*, as in fig. 48*a*, filling in according to the bond specified; and the *stretching* course must

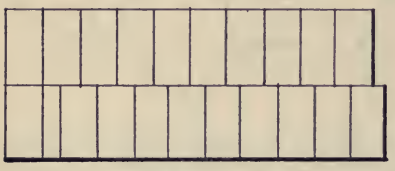

Fig. 46.

Fig. 47.

begin at *both ends*, as shown in fig. 48*b*, the filling in being according to bond specified.



Fig. 48ª



Fig 48ᵇ

Different Kinds of Bond.—There are a considerable number of different bonds, including the following:—

Heading bond, which consists entirely of headers, is very seldom used

because of the difficulty there is in making a finish and bond as well, it being necessary to use a stretcher at the commencement of each alternate course, as shown in fig. 48. It can only be used for walls of the thickness of or exceeding 9 inches.

Fig. 48.

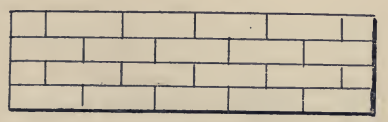

Fig. 49.

Stretching bond (fig. 49), as the name implies, consists of stretchers only, with headers at ends to bond; and is suitable for walls $4\frac{1}{2}$ inches or $\frac{1}{2}$-brick thick only, being practically no bond at all in thicker walls, as shown at X in fig. 50. It is also used for chimneys, which are only $4\frac{1}{2}$ inches thick; and is accordingly sometimes called *chimney bond.*

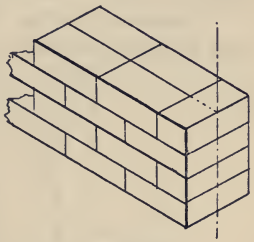

Fig. 50.

English bond consists of one row or course of headers and one of stretchers alternately, as in fig. 51. This is the simplest, best, and strongest form of bond, employing a good combination of cross and longitudinal ties.

Flemish bond, as in fig. 52, is built up of alternate headers and stretchers in the same course, and may be said to look better in elevation than "English," though this is its only advantage, the latter being much stronger owing to the extra number of headers required. "Flemish" certainly makes better 9-inch walls, because the unevenness of walls showing

Fig. 51.

Fig. 52.

two faces is not so apparent with courses of alternating header and stretcher, instead of alternate heading and stretching courses.

There are two kinds of "Flemish bond," similar in elevation but differing on plan, called *single* and *double*; the latter showing a "Flemish" face on each side (as shown on the plans in figs. 75 and 76, 82 and 83, etc., pp. 21, 22), and the single a "Flemish" face outside, and "English" inside (as in figs. 78 and 79).

It will be noticed that *single Flemish* bond is only applicable to walls

of 14 inches and over in thickness, and that it entails the use of *false* or half-headers, a 14-inch wall being formed of two skins, not bonded together in the one course, and only slightly bonded by alternate headers in the others. It is a very inferior bond, and only used to save expensive

Fig. 53

Fig. 54.

bricks in facings; as one whole brick will answer for two false or snap headers, which come inside in the Double Flemish.

Garden-wall bond, a commonly used bond in inferior 9-inch work, may either consist of one header to three stretchers, as in fig. 53, or one

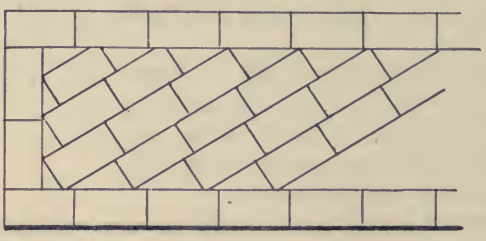

Fig. 55.

course of headers to three courses of stretchers, fig. 54; the former being called *Flemish garden-wall*, and the latter *English garden-wall.*

Raking bond can be of two kinds—either *diagonal*, as fig. 55, or

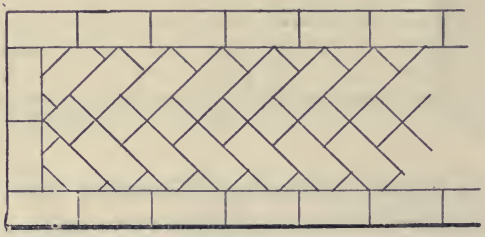

Fig. 56

herring-bone, as fig. 56. It is used for thick walls only, with an outer casing of another kind, only bonded inwardly occasionally. It is, on the whole, a useful longitudinal bond inside; though the triangular fittings next the outer skin are an objection and defect.

Footings should always be bonded, or break-joint; and this can be effected without closers by making the offsets $2\frac{1}{4}$ inches, instead of using a closer. For this purpose English bond (if it may be called so) is the best, most suitable, and most used; as all bricks in footings should show

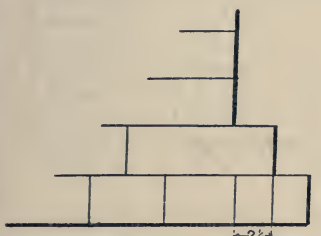

Fig. 57.

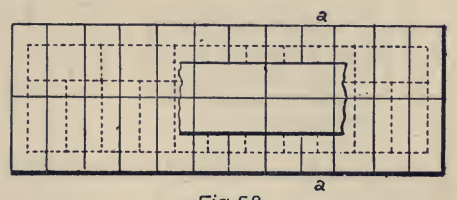

Fig. 58

as headers, and whatever stretchers are absolutely necessary must be used in the *middle*, because an offset taking place over a stretcher allows of only $2\frac{1}{4}$ inches bearing for the top brick, as shown by fig. 57. All offsets

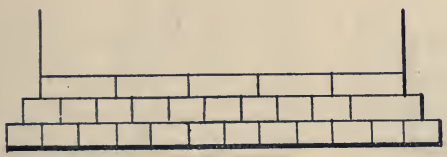

Fig. 59.

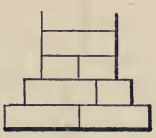

End Elevation

Fig. 60

should be $2\frac{1}{4}$ inches, and the bottom course of footings generally double the width of the wall built thereon; the steps rising either 3 or 6 inches per offset. Figs. 58, 59, and 60 represent the footings of a 9-inch

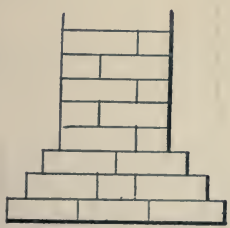

Fig. 61.

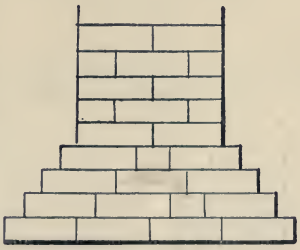

Fig. 62.

wall in plan, front and sectional elevation; figs. 61 and 62 those, respectively, of a 14-inch and 18-inch wall in sectional elevation. These will require no special explanation if the student has mastered the points previously

enumerated; it being remembered that the first course of the wall above the footings should be a stretching course—*i.e.*, start with a stretcher.

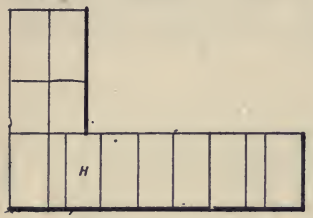

Fig.63.

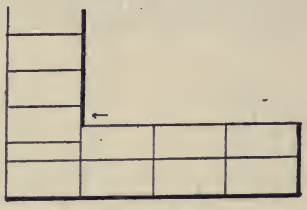

Fig.64.

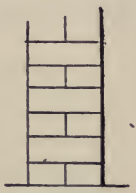

Fig.65.

Application of the Various Bonds.—The angles of walls are given below; the attention of the student having been called to all really

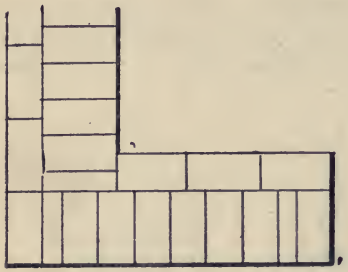

Fig.66.

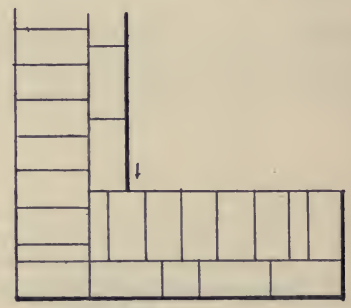

Fig.67.

essential points, except that the closer course in pairs comes alternately on each side of the angle, as the brick at the angle, which is header

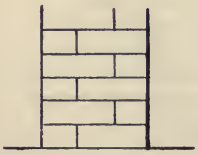

Fig.68.

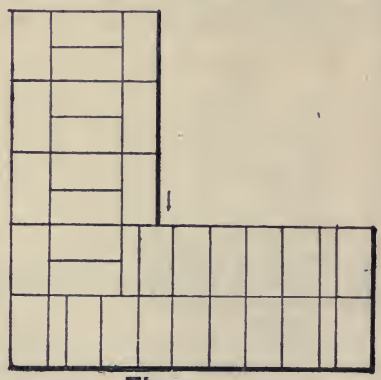

Fig.69.

to one face, is stretcher to the other, and *vicè versâ*; and the student should note also that the internal angle is bonded in one way in one

course, and the other way in the next course, alternately (as shown by the arrows), and always with a header, if possible.

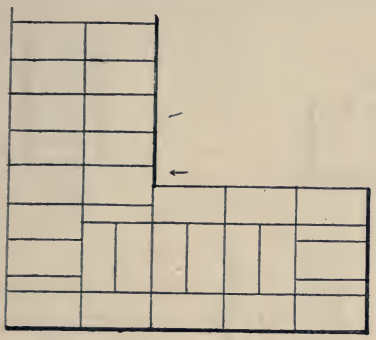

Fig. 70

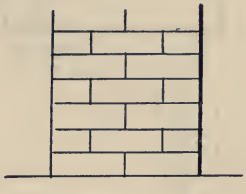

Fig. 71.

Figs. 63, 64, and 65 represent, in plan and section, two alternating courses at a corner or angle, with a blank end of 9-inch wall, *English*

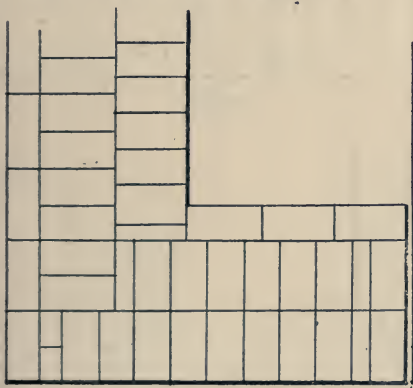

Fig. 72

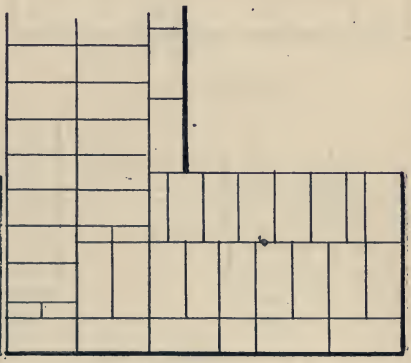

Fig. 73.

bond; and figs. 66, 67, and 68, 69, 70, and 71, and 72, 73, and 74, the same for a 14-inch, an 18-inch, and a 22-inch wall respectively.

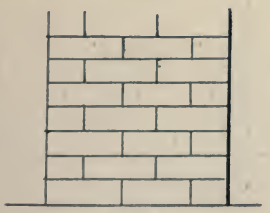

Fig. 74

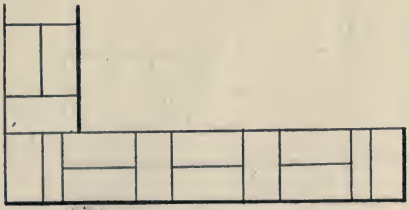

Fig. 75.

Figs. 75, 76, and 77 illustrate, similarly, a 9-inch wall in *Flemish* bond;

figs. 78, 79, 80, and 81, the same for a 14-inch wall in *single* Flemish

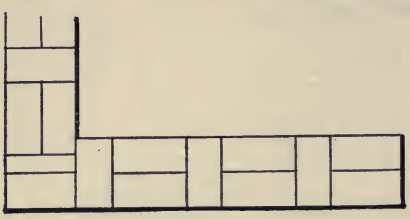

Fig.76.

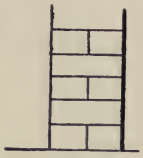

Fig.77.

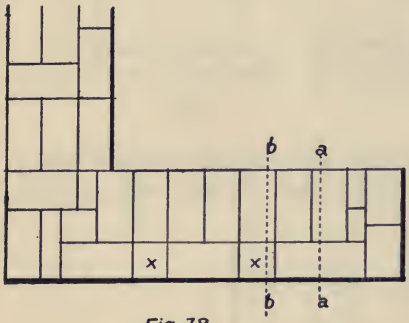

Fig.78.

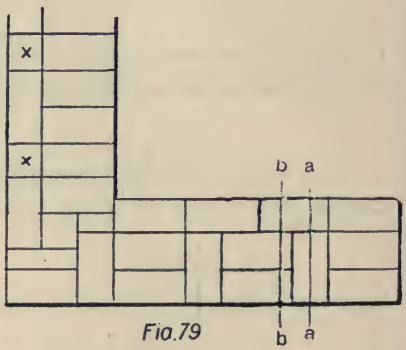

Fig.79

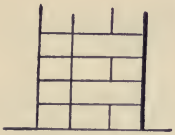

Section b b.
Fig.80.

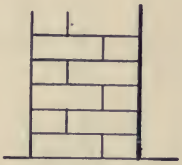

Section a a.
Fig.81.

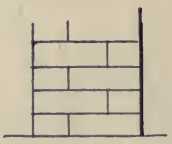

Fig 84

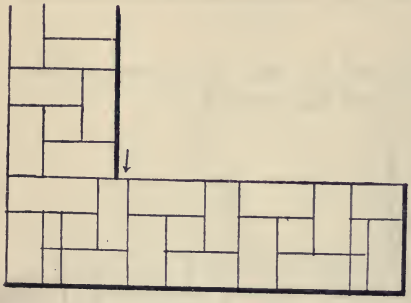

Fig 82.

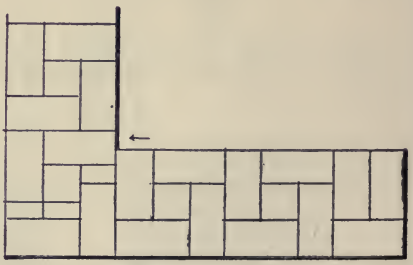

Fig.83.

bond, showing false headers, marked thus X X; *double* Flemish bond for the same being shown in figs. 82, 83, and 84; while, for an 18-inch wall,

double Flemish bond is shown in figs. 85, 86, and 87; and *single* Flemish

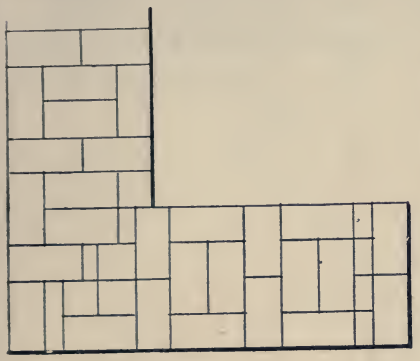

Fig. 85.

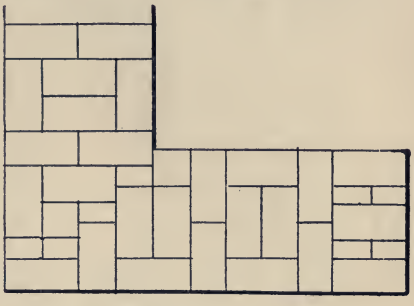

Fig. 86.

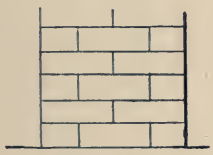

Fig. 87

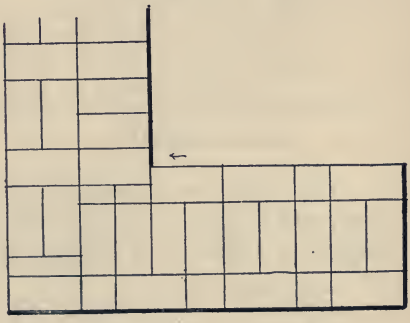

Fig. 89

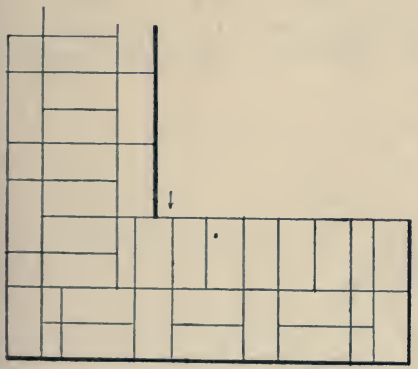

Fig. 88

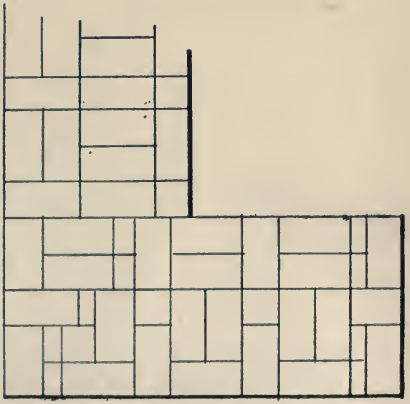

Fig. 91.

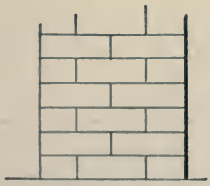

Fig. 90

bond in figs. 88, 89, and 90. Finally, figs. 91, 92, and 93 show a 22-inch

wall in Flemish bond, from which it will be seen that Flemish becomes very troublesome and weak in thicker walls, as compared with English; the angles having to be tied in with stretchers internally, which is against the rule previously laid down.

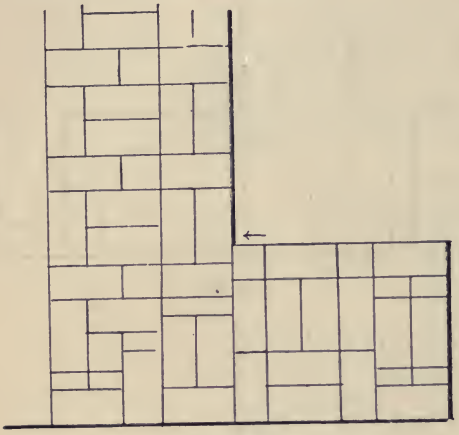

Fig. 92

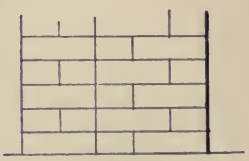

Fig. 93

The modes of treatment and construction for *irregular angles* are dealt with in figs. 94, 95, 96. and 97, which represent 14-inch bay-window angles, in English and Flemish bond respectively. The external angles

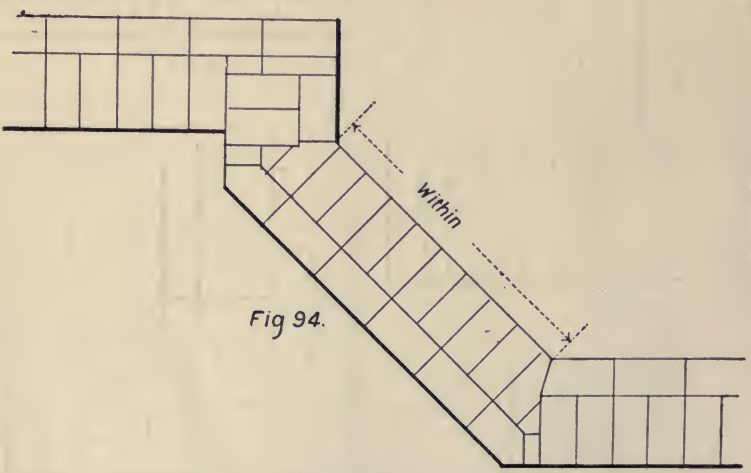

Fig 94.

of these are called *squints*, and the internal *birdsmouths*; the bricks measuring $6\frac{3}{4}$ and $2\frac{1}{4}$ inches on the two faces, which are placed alternately; each course with a closer always coming next the $2\frac{1}{4}$-face in the work, this being equivalent to a header.

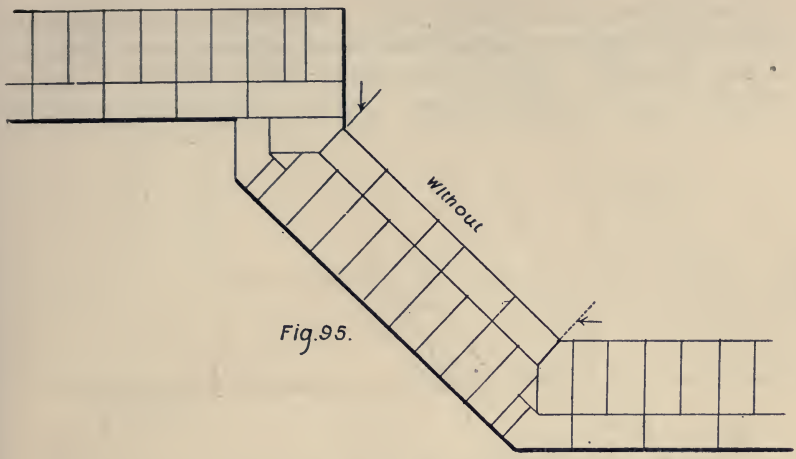

Fig.95.

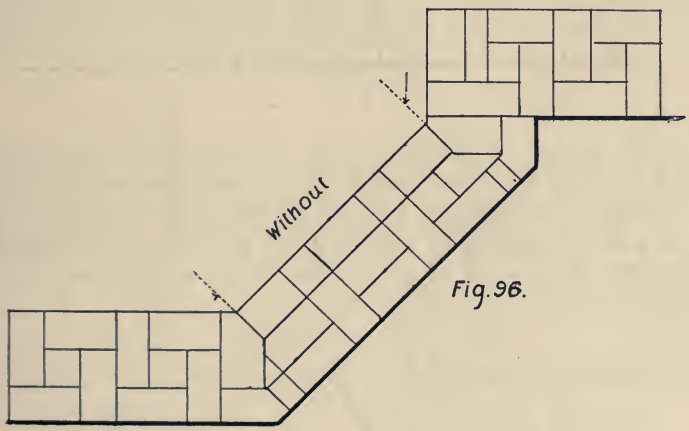

Fig.96.

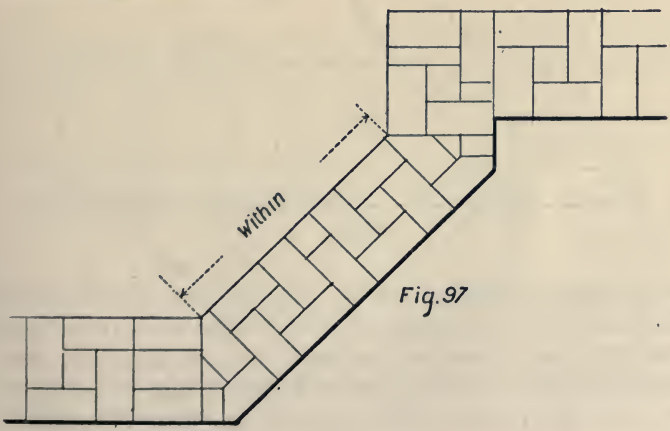

Fig.97

It will be noticed that the Flemish bond (as figs. 96 and 97) is very inferior and irregular; in fact, there is no regular system about it—no two bricklayers working such angles alike in Flemish bond, the difficulty being in the *internal* work. The only rule that can be laid down

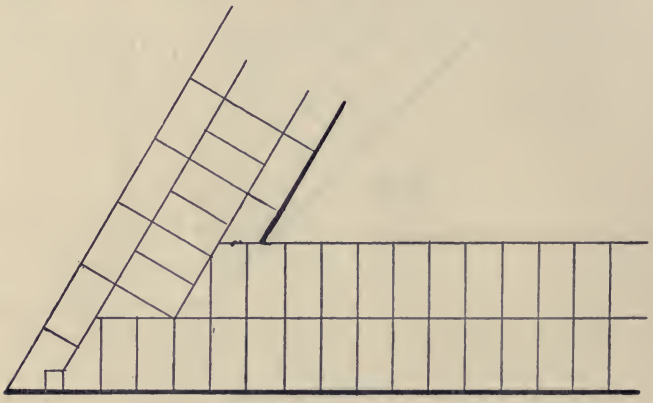

Fig. 98.

with regard to them is that they must be bonded in alternate courses by pairs of headers cut and tied in by the stretchers *within* the angle one course, and *without* the next, as shown in the figures; the same rule, of course, applying to English bond as well; the internal header being placed at the back of the $6\frac{3}{4}$ face of the squint brick.

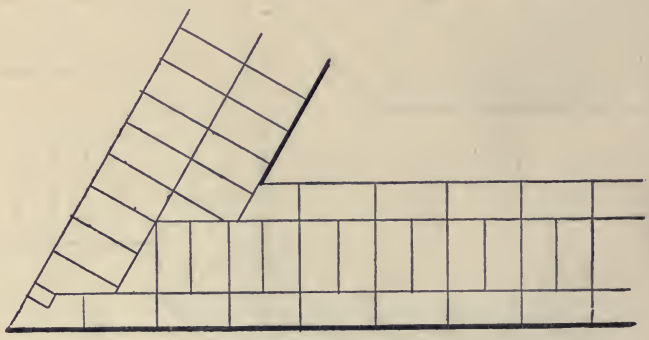

Fig. 99.

In the same way, figs. 98 and 99 represent the methods of treatment and construction for two courses of an *acute* angle in an 18-inch wall.

Intersections of internal and external walls are done very simply, the *internal* wall toothing into the *external* wall $2\frac{1}{4}$ inches in each alternate course, as in figs. 100, 101, 102, and 103; the joints being broken alter-

nately on the respective courses, as shown by the arrows, and care being taken that where possible each should tie in with a header.

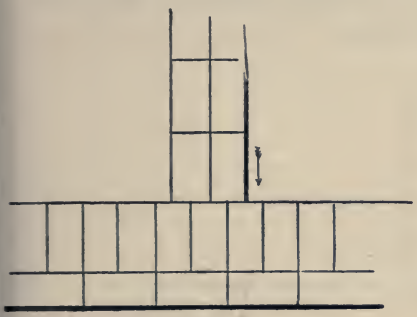

Fig.100.

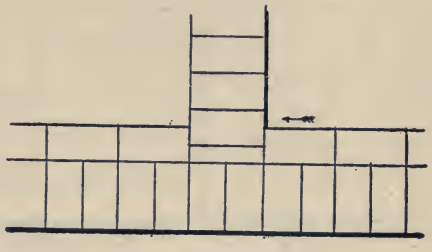

Fig.101.

Brick piers are subjected to the same treatment with regard to the necessary closer at the plumbing angles to break the joint; though it

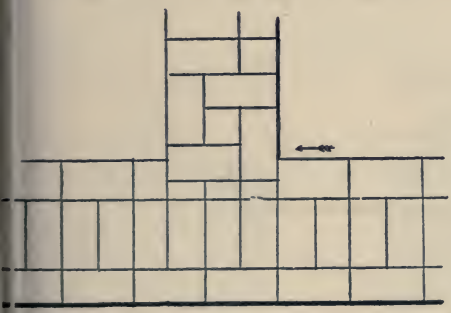

Fig.102.

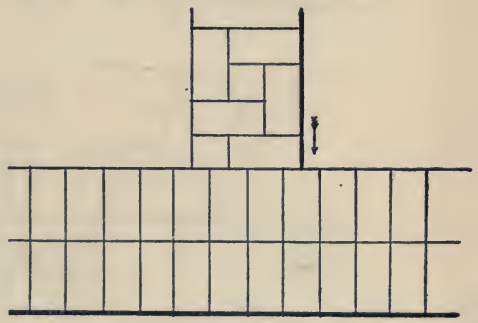

Fig.103.

cannot be applied to anything smaller than piers with sides of 18 inches wide or more, in which case they are treated as shown in figs. 104, 105,

Fig.104.

Fig.105

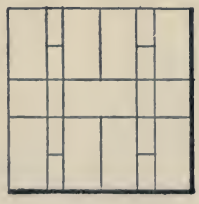

Fig.106.

Fig.107.

106, 107, 108, and 109; from which it will be seen that English alone the bond necessarily used.

Sleeper walls supporting ground floor joists are built $4\frac{1}{2}$ inches thick, and about 8 feet apart, to reduce the spans of the joists in big rooms; and they are either built with openings here and there to allow of ventilation, or as fig. 110, which is called *honeycomb* work.

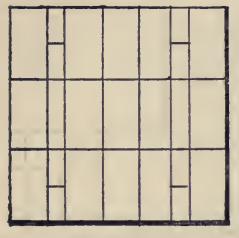

Fig 108.

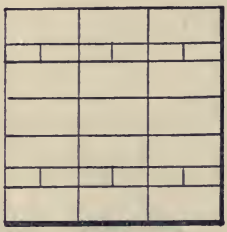

Fig.109

Fig.110.

Fender walls are those built round fireplaces to carry the hearthstones and take the ends of the joists, which would otherwise have to be trimmed.

Brick cores are the irregular-shaped brick surfaces between the tops of flat lintels and the soffits of relieving or discharging arches, as in fig. 111.

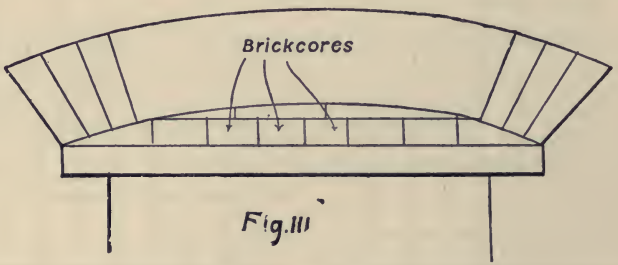

Fig.111

CHAPTER III.

BRICK REVEALS, ARCHES, AND POINTING.

Reveals and their Construction—Forms of Arches—Construction of Arches—Bond of Arches—Pointing—Fireplaces—Flues—Hoop-iron Bond—Wood Bricks and Pads—Brick Corbelling.

Reveals.—A *reveal* is that part of an opening which returns at right angles from the front of the wall—*i.e.*, that part which shows vertically between the necessary angle from the face line and the front of the door

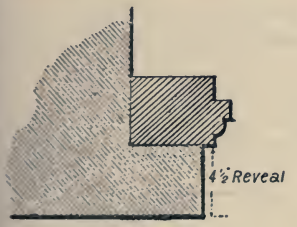

Fig. 112.

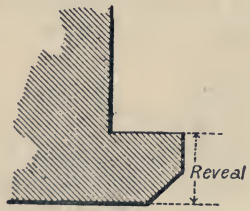

Fig. 113.

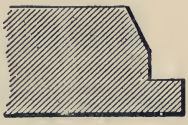

Fig. 114.

or window frame, as in fig. 112, fig. 113 being an illustration of a *splayed reveal*, and fig. 114 a *splayed jamb*, explaining the difference between that and a splayed reveal; the former applying to the *internal* and the latter to the *external* finish.



Fig. 115.

Whether a reveal be square or splayed, the student must always bear in mind that a closer must be used on each side of the opening in the same horizontal line in the same course as that in which the closer is placed at the main angles. For instance, fig. 115 represents a square reveal in a

wall, in the heading course of English bond, where the king closers will be seen to advantage, fig. 116 being the succeeding or stretching course of the same.



Fig. 116.

It should be pointed out that the setting back of the jamb (or reveal, as it is sometimes improperly called) varies in *width* according to the

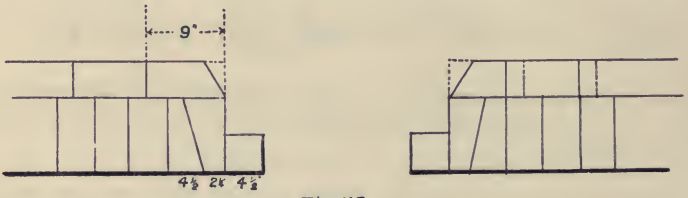

Fig. 117.

joinery frame that it has to take, usually being $4\frac{1}{2}$ inches wide for sash-windows, and from $1\frac{1}{2}$ to 3 inches for door and solid window frames.

It will be obvious that a splayed reveal is made by the peculiar shape

Fig. 118.

of special bricks called *cants*, as shown by the dotted lines to figures; whereas a splayed jamb is generally roughly cut, and worked according to convenience in bonding.

Fig. 119.

Figs. 117 and 118 represent succeeding courses up both window jambs, with a reveal in a 14-inch wall with a splayed jamb, *English* bond; and figs. 119 and 120 that in an 18-inch or 2-brick wall; fig. 121 showing the

same, without the splayed jamb; the dotted lines on fig. 119 representing the other course.

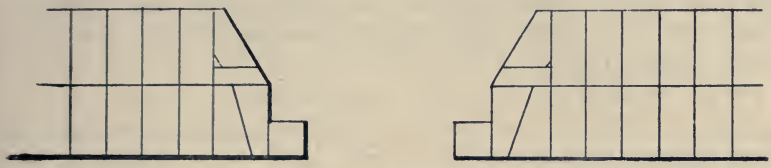

Fig. 120.

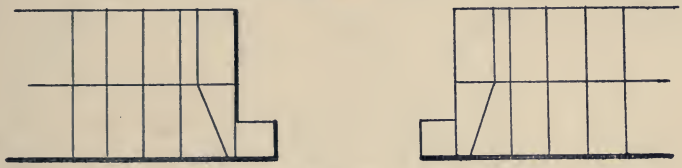

Fig. 121.

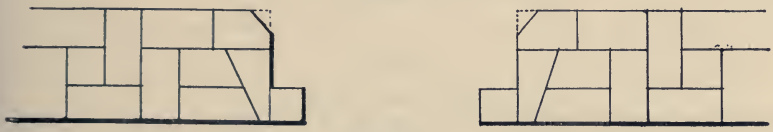

Fig. 122.

Fig. 123.

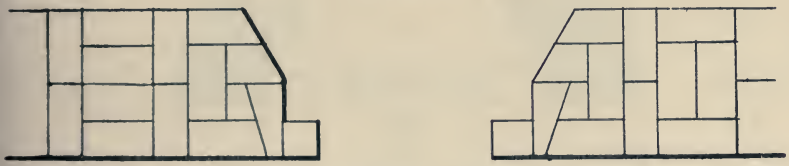

Fig. 124.

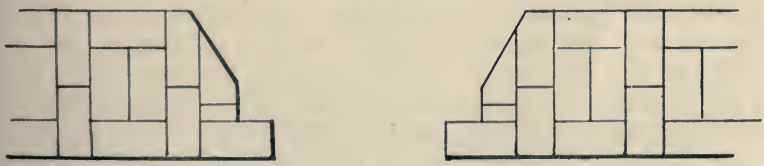

Fig. 125.

The 14-inch wall, treated in *Flemish* bond, is represented on figs. 122 and 123, and the 18-inch on figs. 124 and 125.

Below the sills the brickwork is often set back within the thickness of the wall, the jambs continuing down to floor-line to allow of window *backs* from window board to floor (as shown on fig. 140), making a 14-inch wall only 9 inches thick below the window sill and between the jambs. *Vide* fig. 126.

Forms of Arches.—An arch is an arrangement of bricks, placed to any shape or curve over an opening, so that each brick is supported by mutual pressure from its neighbours, the whole being wedged in, as it were, over the jambs on each side of the opening.

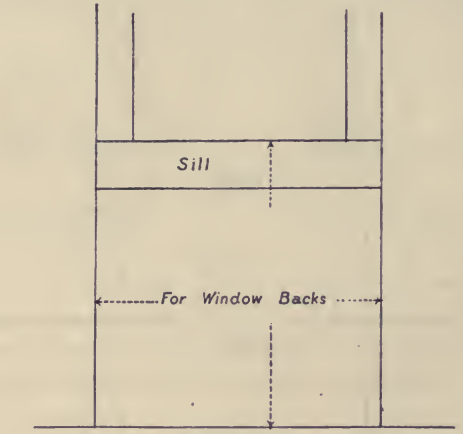

Elevation.

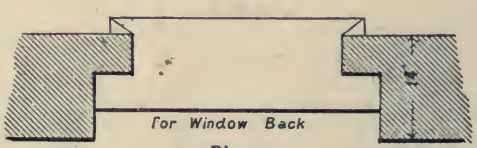

Plan.

Fig. 126.

Before proceeding to explain the application of bricks to the formation of arches, it will be as well to make the student acquainted with the different parts of an arch, their names, and the various kinds of arches in use.

Fig. 127 is an elevation of a semicircular arch, the capital letters referring to the text with explanations, as follows: *A* represents the *abutments* which support the arch, and from which it springs; they are really the jambs of small openings, and a *pier* will act as abutment to two arches, as shown at *P* on the illustrations: *C* is the *crown or top* of an arch; *E* indicates the *extrados, top, back, or outside*; *F* is the *face*; *H* are the *haunches, sides, or shoulders*, comprising the sides of an arch up to a point halfway

between the springing and the crown; *I* represents the *intrados, soffit, bottom, or under-side* of the arch; *J* shows the *jambs or sides* of the abutments and piers; *K* is the *keystone*, or *central voussoir* or *archstone*; *S* indicates the *spandrils*, the spaces over the extrados and haunches up to a line horizontal with the crown; *Sp* is the *springing*, or place from which

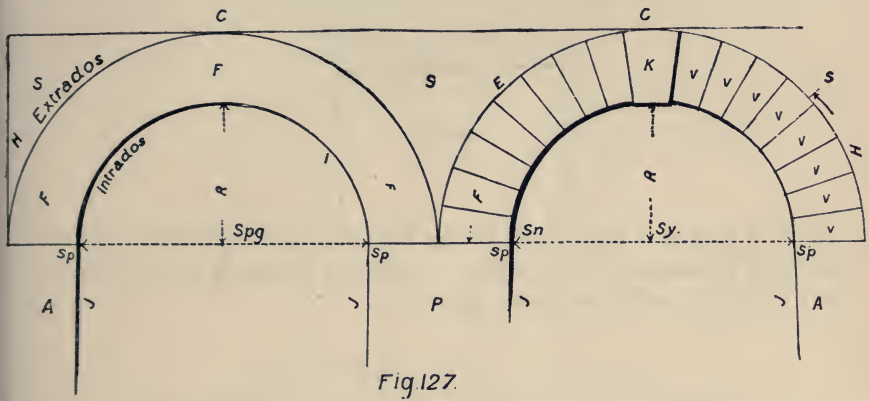

Fig.127.

the arch starts—called *skew-backs* in other than semicircular arches—they radiate to the centre, and form a key to keep the arch in and wedge or tighten it up; *Sn* represents the *span*, or width of the opening over which the arch is built; *Spg* is the *springing or horizontal* line, from which the arch commences; *R* is the *rise* of the arch, from the springing to the soffit

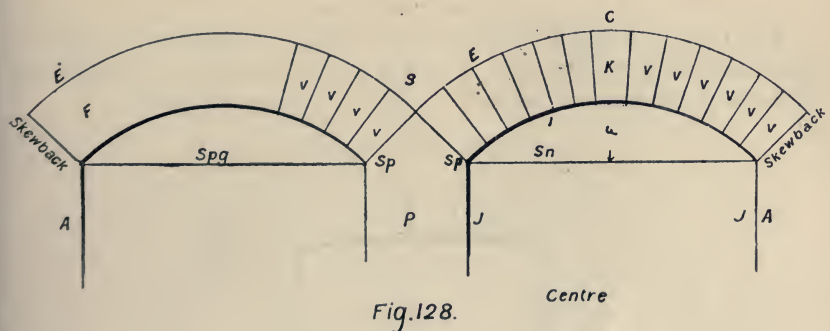

Fig.128.

of the crown; *V* are the *voussoirs*, *blocks*, *or bricks*, which form the arch, radiating from the centre-point, and supported by mutual pressure from their neighbours.

Fig. 128 is a *segmental* arch, shown for the purpose of indicating the position of the skewbacks, which do not occur in semicircular arches. The same reference-letters and nomenclature apply as in the last case.

The *semicircular* arch (shown in Fig. 127) is made from one centre situated on the springing line, halfway between the jambs of the abutment. The *segmental or "scheme"* arch (shown in Fig. 128) is formed with a curve

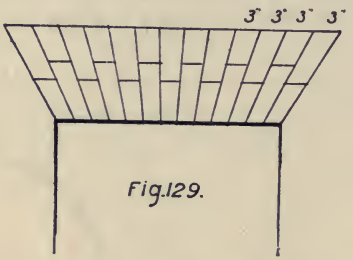

Fig.129.

which is part of a circle, also struck from one centre, halfway between jambs of abutments, but at a distance below the springing line, which may vary according to the rise of the arch.

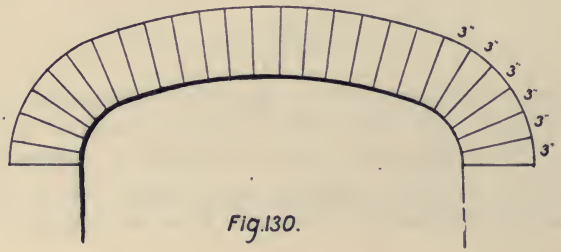

Fig.130.

Fig. 129 is a *straight* or *flat* arch, the bricks (or voussoirs) varying in thickness from a maximum of 3 inches at the extrados to a minimum thickness at the intrados, so as to radiate to a centre below it.

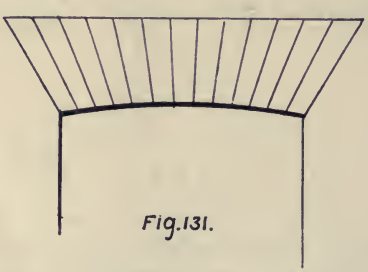
Fig.131.

Fig. 130 is an *elliptic* arch, has half an ellipse for its curve, and is used for wide spans, where only a small rise is obtainable.

Fig. 131 is a *cambered* arch, which is similar to a straight arch, except ing that the intrados or soffit rises slightly in a flat curve towards the centre.

As a rule, in fact, all flat or straight arches should be thus made with a small camber, to allow for settling.

Fig. 132 is an *equilateral* arch—*i.e.*, one whose curves have each

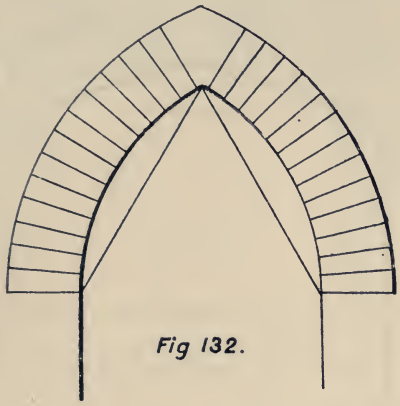

Fig 132.

an angle of an equilateral triangle as its centre, the two meeting at the third angle. This is also called a *Gothic* arch.

Fig. 133 represents an arch struck from *three centres*, as shown, and is, as will be seen, akin to the elliptic arch (fig. 130).

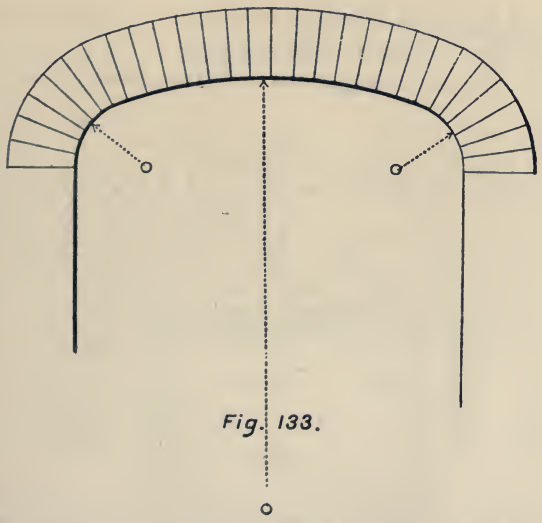

Fig. 133.

Fig. 134 shows an arch struck from *four centres*, and called a *Tudor* arch; being also a *Gothic* arch, but of a later period than fig. 132.

In setting out three- and four-centred aches, the line joining the centres

should be at an angle of 30 degrees with the vertical, which can always be contrived by altering the radii.

Trimmer arches will be explained hereinafter, when treating of the

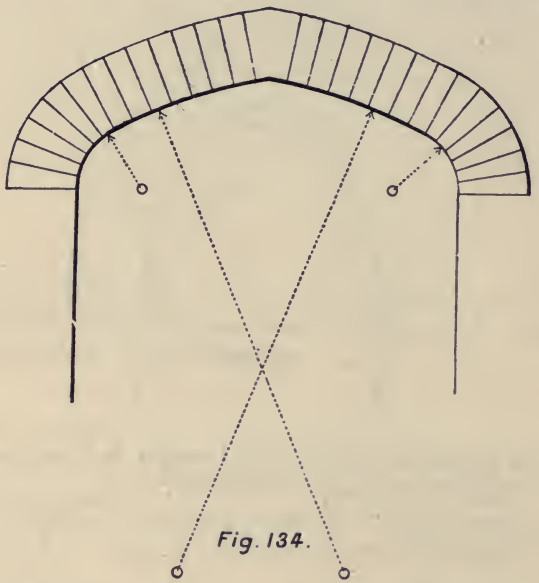

Fig. 134.

construction of fireplaces, chimneys, and flues. *Groined* arches are those which intersect one another at various angles.

Having thus become acquainted with the different kinds of arches,

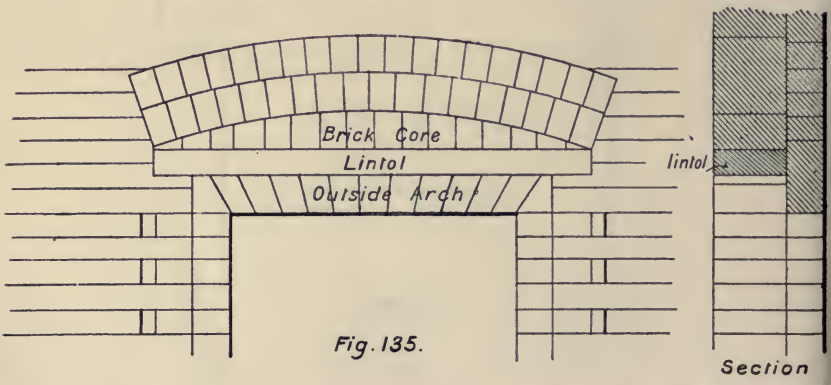

Fig. 135.

and the names of the various parts, the student will the more easily be enabled to master the constructional points and details.

Construction of Arches.—The principal kind of arch, most commonly used, is the ordinary brick *relieving* or *discharging* arch, made of

rough bricks, over the inside openings of doors and windows and internal openings. It springs from skewbacks outside the ends of lintels,

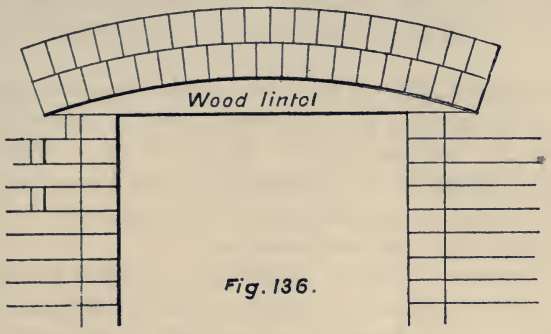

Fig. 136.

and is bedded on a brick core, over the lintel, as shown in fig. 135, or on a circular extrados cut on the lintel, as fig. 136. These relieving arches rise in the centre about one inch for every foot of span.

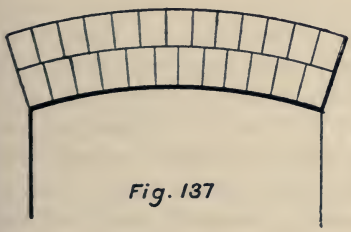

Fig. 137

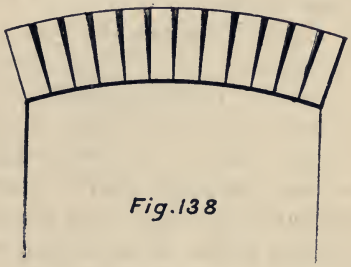

Fig. 138

Such arches, of a very small span and of a considerable rise, are built up in half-brick rings, as shown in fig. 137, in order to obviate the excessively large joints, which would result from the use of whole bricks, at the extrados, as shown in fig. 138.

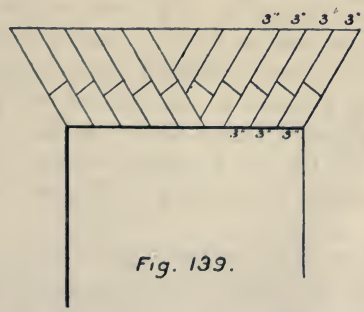

Fig. 139.

French or *Dutch* arches are flat or straight, as shown in fig. 139, differing from fig. 129.

Other kinds of arches are built on temporary wooden framings or centres of the required dimensions and curves, to support the brickwork until it has settled into its proper position, and become duly bound together and solidified by the setting and hardening of the cement or mortar.

The commonest arch of this class, which requires centres, is the *French* or *Dutch* arch. This is a rough flat or cambered arch, but distinct from the ordinary flat arch (fig. 129), by a different mode of construction in regard to the arrangement of the bricks, as appears from fig. 139; but, from its unsightliness, it is only suitable for walls which are to be plastered or otherwise covered up.

All the different kinds of arches can be built, either rough for plastering, with the ordinary common bricks, or they can be axed or rubbed and gauged for facework, as hereinafter explained; and all such arches should be built in cement, for the best work.

An *axed* arch is one formed of hard bricks, which are cut, either roughly or finely, by the bricklayer's axe, to the wedge-shaped size and shape required.

Rubbed and gauged arches are built of "rubber" or other soft bricks, which have been cut and finely rubbed to the form and dimensions required. They are usually set in "putty," with very fine joints; and care should be taken that the joint of each brick is perfectly true, and at right angles with and within its face; so that the pressure may be equally distributed, and the edges of the bricks not liable to crack and split away from any undue pressure at the outside, where they are bound to show a line. Some arches are built with special-made bricks of the required wedge-shape and size.

The student will notice that, in openings with rubbed or axed arches outside and a rough arch inside, the inner arch is to be set back to the full depth of the jamb, outside the line of soffit of the outer arch as shown in figs. 140 and 141; or as already shown in fig. 135, when applied to lintels and discharging or relieving arches. There is only one, difference by which the various kinds of arches can be distinguished on drawings, *common* brick arches showing thick wedge-shaped joints, and each brick measuring 3 inches at the intrados, while the bricks in both *axed* and *rubbed and gauged* arches show 3 inches on the extrados; and the difference between the two is further shown by two grades of the lines, thin lines indicating the superior kind, while the thick lines denote common work.

Inverted arches are those turned upside down, for the purposes of spreading the weights and pressure from piers, and in special places, on to a wider area of foundation; as in such instances as big chimney-breasts and arcades, shown in fig. 142.

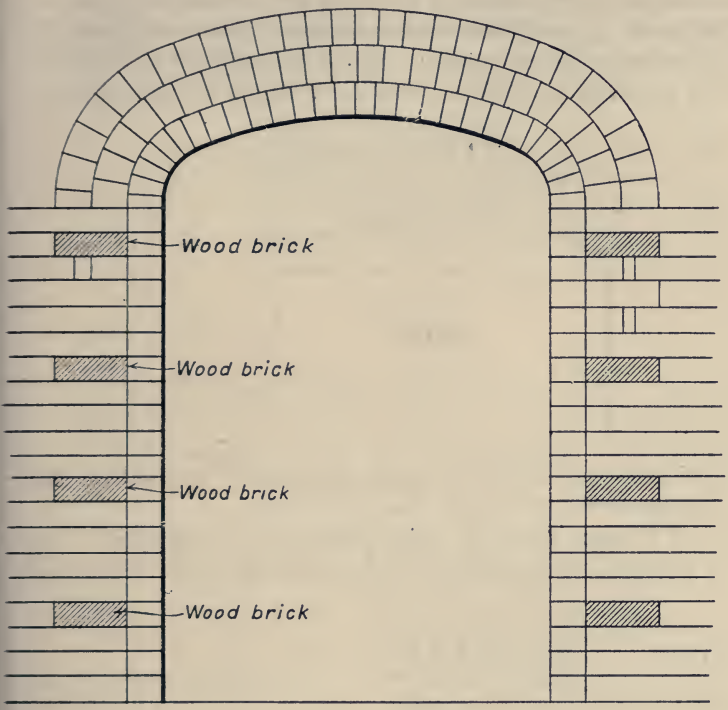

Fig. 140.

Section
Fig. 141

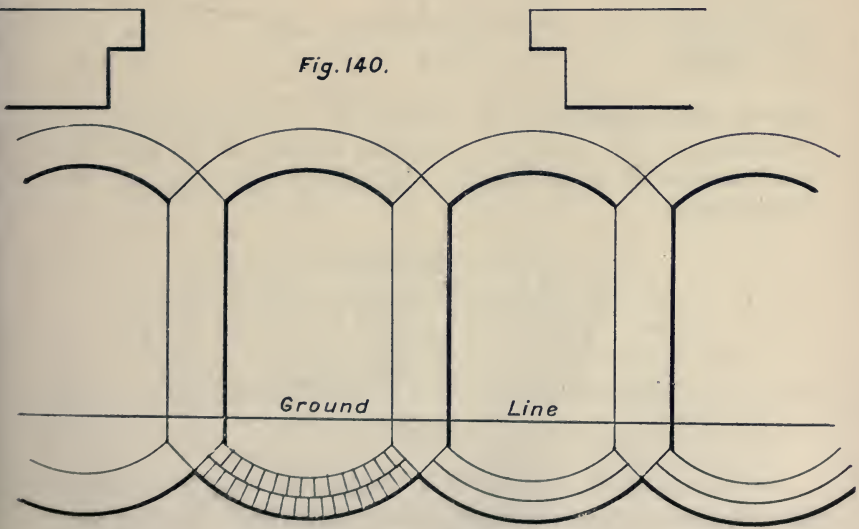

Fig. 142.

Bond of Arches.—The bond of arches is not generally so intricate as that of walls, etc.; though there must necessarily be some system of binding the component parts together. Before entering into this subject, however, it is necessary to point out that brick arches are described by

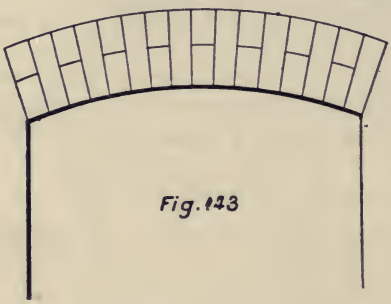

Fig. 143

the number of rings or half-brick rings in which they are built—a ring indicating a course of the arch struck from the centre.

English and Flemish bond, in arches formed of a single-brick ring, are alike in elevation, being similar to fig. 143, the usual well-known

Fig. 144.

Fig. 145.

Fig. 146.

difference only occurring in the arrangement of the bricks from the face as appearing on the soffit; fig. 144 being the plan of the soffit (as seen from underneath) of an English bonded arch; and fig. 145 that of Flemish bond.

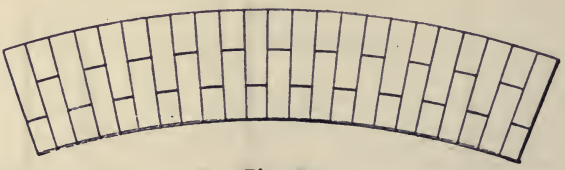

Fig. 147.

Heading bond, in an arch of a single-brick ring, is illustrated by fig. 146; but the most practically bonded arch (which has also the best appearance) is the brick-and-a-half-ring arch shown in fig. 147.

Half-brick-ring arches, such as that depicted in fig. 148—formed of several half-brick rings—show a finer joint, with less labour, and they are the most easily built; but in big spans the rings are apt to separate from each

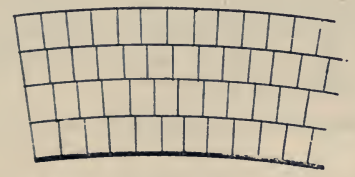

Fig. 148.

other at the coursing joint, from want of bond. This absence of unity and solidity frequently becomes a source of weakness; and in order to guard against such defects in heavy arches, a few courses must be bonded occasionally, when the heading joints which radiate are in line so as to

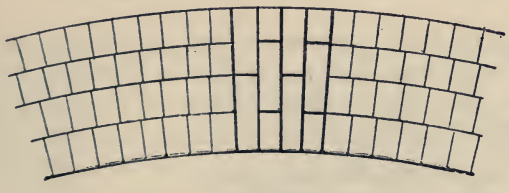

Fig. 149.

allow of it, as in fig. 149, for half-brick rings; but a more complete and stronger arch than this can be made by superseding the half-brick ring entirely, as shown in fig. 150, for an 18-inch or 2-brick arch.

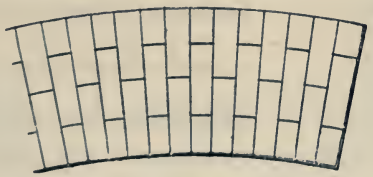

Fig. 150.

Larrying, as applied to brickwork, is the term used for pushing up the bricks within the outsides of thick walls into their position, collecting mortar to form the joint, as they go along, from a rough quantity that has been thrown in.

Grouting consists in pouring mortar (of the consistency of cream) over the top or last course of three or four successive courses which have not

been properly jointed. The semi-fluid mortar runs into all crevices that may have been left, and forms the whole, when set, into one solid mass.

Dinging is the term used to describe the brushing over of the brickwork with a wet brush while the mortar is damp after being "struck fair."

Wigging is a term employed in Dublin to denote the facing treatment applied to the rough bricks used there, the vertical joints being filled up with blue mortar and the horizontal ones with red, the whole being afterwards pointed with a white cut joint.

Pointing.—"Pointing" is the finishing off (with the trowel) of the

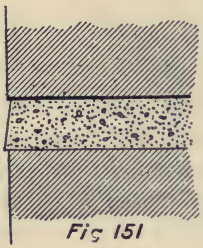

Fig 151

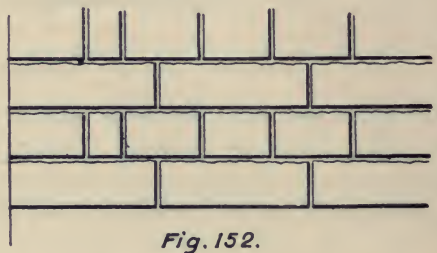

Fig. 152.

mortar in the rough joints between the bricks, so as to give the work a better appearance on the face; and the stipulation should be specified, that no four courses of 3-inch bricks should exceed 13¼ inches in height when laid.

Figs. 151 and 152 represent—in enlarged sectional and front view respectively—*struck-joint pointing*, or, as it is also called, *broad pointing*, in which the mortar is pressed in with the trowel.

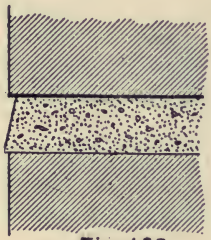

Fig. 153.

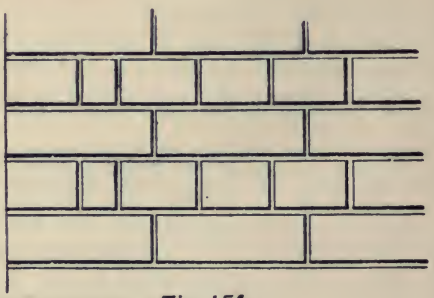

Fig. 154.

Figs. 153 and 154 show, similarly, the latter, when the joint is cut with the trowel on the bottom edge, called *cut* pointing. It has a better effect than that shown in fig. 151, and it has a cleaner and sharper appearance, the bottom edge of the mortar being cut to a horizontal line.

Figs. 155 and 156 explain in like manner *weather*-pointing, which is done with the trowel, the upper edge of the mortar, under the bottom of the upper brick, being pressed in.

Figs. 157 and 158 also represent a *rule* joint, the mortar being pressed in with the trowel; and then a jointer of thin bar-iron, bent to the form

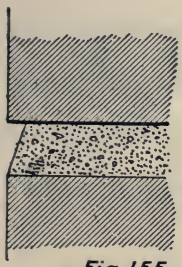

Fig. 155.

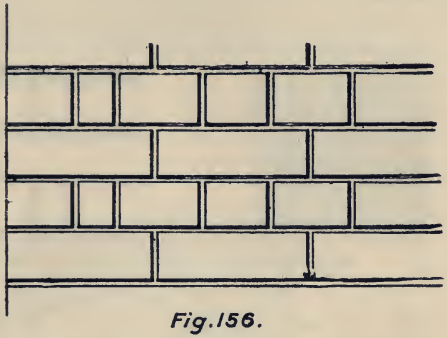

Fig. 156.

of an S, is run along the middle of the mortar to press it in a horizontal line, being guided by a straight-edge or rule laid along the joint, on

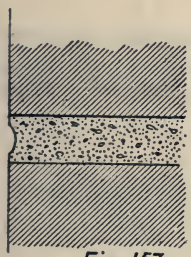

Fig. 157

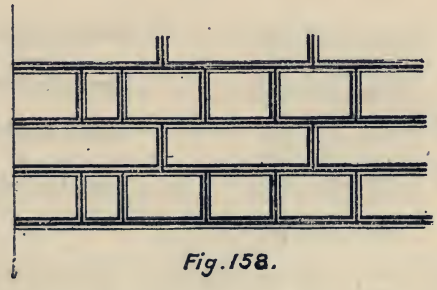

Fig. 158.

which the S-jointer travels. The dark horizontal lines left by the jointer give the work a better and more finished appearance.

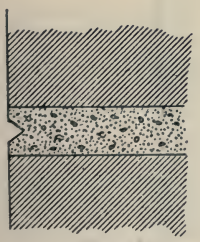

Fig. 159.

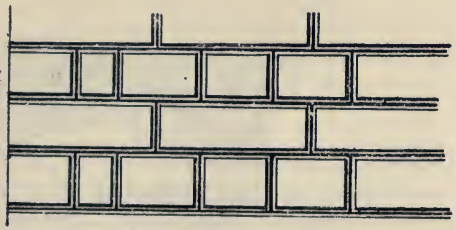

Fig. 160

Figs. 159 and 160 illustrate *V-pointing*, which is done similarly to the last described, but with the jointer pointed to leave an impression like a *V*.

Figs. 161 and 162 represent *beaded* pointing, the work being done just as the two last-named, but with the jointer made to impress a bead on the joint.

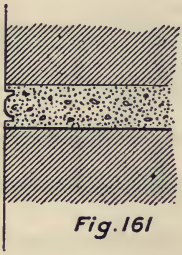

Fig. 161

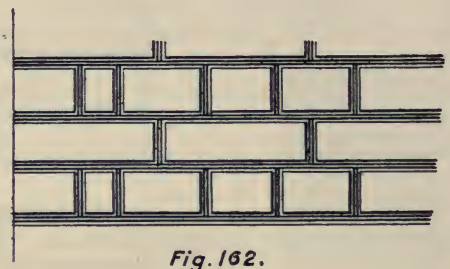

Fig. 162.

Figs. 163 and 164 are examples, in the same way, of *tuck*-pointing. In this mode of pointing, after the ordinary mortar has been pressed into the joint or scraped out, and the joint stopped up flush with mortar the colour of the bricks, a straight-edge is laid horizontally along the joint, and

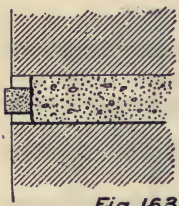

Fig. 163.

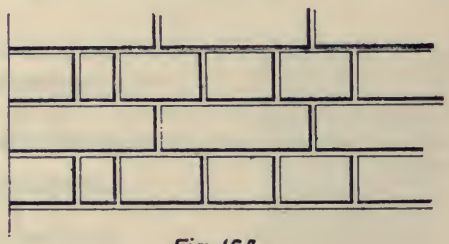

Fig. 164.

thin white-coloured putty is laid on the top of it and pressed into the joint, after which the top edge is cut off level, leaving the projection as shown. The vertical joints are, of course, done in the same way.

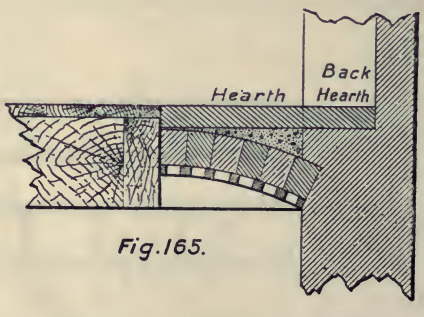

Fig. 165.

Fireplaces.—As fires are a source of danger to a building, which must necessarily have some wood floors, it becomes essential that some means should be employed to reduce those risks to a minimum, and

with that view *trimmer* arches were devised for wood floors with ceilings under them. The joists are framed round the chimney breast (as is explained in Chapter VIII.), and the open space left in front of the fireplace is filled in with brick-arching $4\frac{1}{2}$ inches thick, springing from a skewback cut into the breast of the chimney, above the ceiling line, to

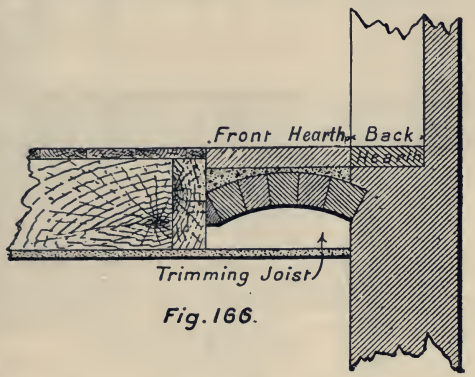

Fig. 166.

he trimmer-joist, as shown in fig. 165, and resting on light centring, which is left in for the purpose of carrying the ceiling-lath underneath.

Another method is shown in fig. 166, a feather-edged wood springer being nailed to the trimmer-joist, and the arch springing from both sides

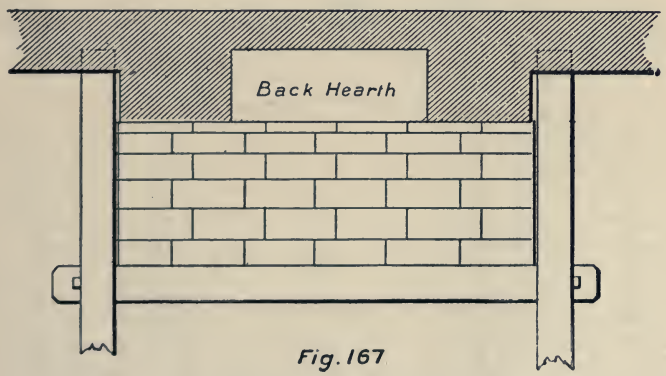

Fig. 167

instead of from only one (*i.e.* the wall), as shown in fig. 165. The spandril above this trimmer-arch is filled in with concrete, and levelled up to receive the tiles, cement, or hearthstones about 2 or $2\frac{1}{2}$ inches thick, as shown on the sections. The plan of the hearth, etc., is as shown in fig. 167, which shows the trimmer-arch under the front hearth to be 14 inches wider on each side of the jambs of the fireplace, and to project 14 inches outward —though 18 inches would be better. Certainly it should project no

less than 14 inches, and be no less than 9 inches wider on each side of the fireplace jambs.

Ground-floor fireplaces, in stone or brick-paved compartments, require no special provision for safety from fire; and those with wood floors have their hearths as for the upper floors; but, instead of being supported by

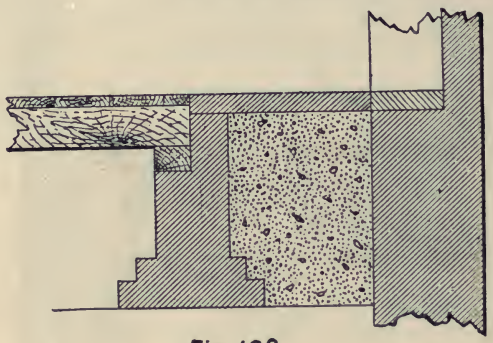

Fig. 168.

trimmer-arches, they are secured by sleeper walls enclosing the usual space filled in with concrete, as explained by fig. 168.

Fireplace openings are generally arched over on a $2\frac{1}{2}$ in. by $\frac{3}{8}$ in. wrought-iron chimney-bar, curved to the form required, and with the ends going

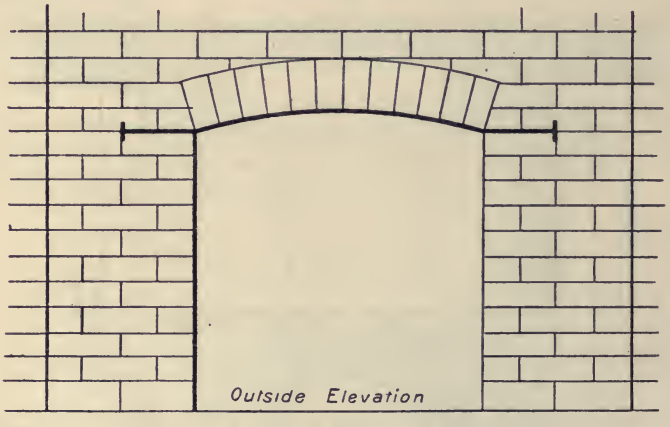

Fig. 169.

9 inches into the breasts, split and turned up and down to keep them in, as seen in fig. 169. At the back of this the jambs are gathered over, by $2\frac{1}{4}$-inch projections, to the size of the flue; and in best work a York-stone slab is generally placed on the top course to act as a *ledge* to stop down-draughts of *wind*. This construction is delineated in fig. 170. When

circular fireclay flue-pipes are used to line the flues a special-made radiating pot (fig. 171) is used to gather the opening over to the size of the flue.

As to the construction of the flue itself, after the brickwork has thus been gathered in or collected to the flue, it must be impressed on the student that no flues should be made of less dimensions internally than 9 by 14 inches, and they may be made as large as 18 by 18 inches, though

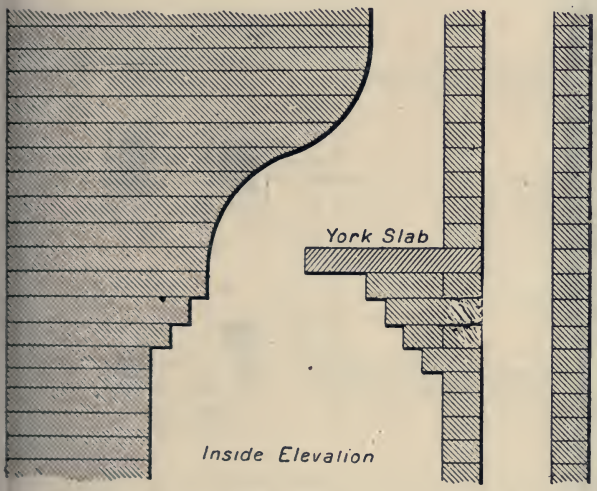

Fig. 170

Fig. 171.

it is essential they should be of the same size exactly throughout. They should, however, not be built straight all the way up, but diverted, in one way or another, as much as possible, as a good, well-constructed flue should not allow daylight at the top to be visible to any one looking up from the fireplace. The necessary arrangement of a breast and stack of several chimneys will be understood from figs. 172, 173, 174, 175, 176, 177, and 178, representing complete plans and sections of a large chimney-breast.

The supplementary fig. 179 is an enlarged detail-section of the breast, etc., on the uppermost floor, and fig. 180 is a section through a cottage, showing how flues are, from separate chimney-breasts, sometimes brought together.

Flues.—Flues should be *cored—i.e.*, tested for their uniformity, and all obstruction cleared off; and the interior surface must be smoothly *parged* or *pargeted*, or covered with mortar mixed with cowdung, to prevent cracking; or the inside flue-faces may be built in smooth regular bricks, and neatly flush-pointed in cement mortar—a process which has an advantage over

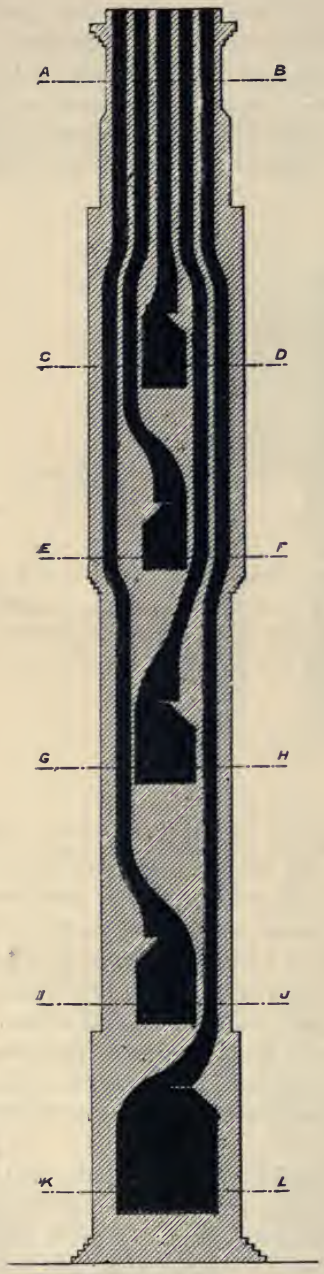

Fig. 172

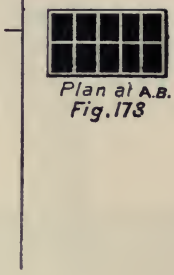

Plan at A.B.
Fig. 173



Plan at C.D
Fig 174.

Plan at E.F
Fig. 175.



Plan at G H
Fig. 176.



Plan at I.J.
Fig. 177.

Plan at K.L
Fig. 178.

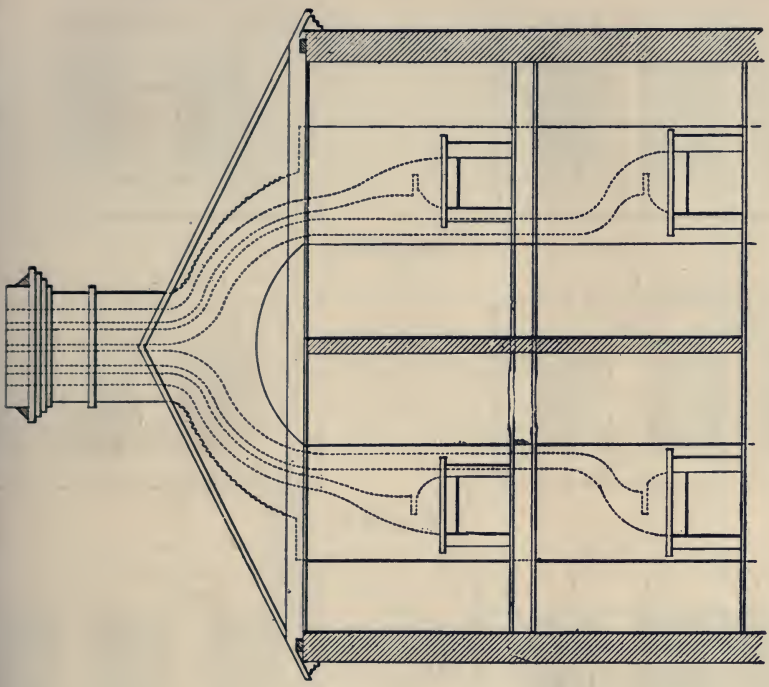

Fig. 180.

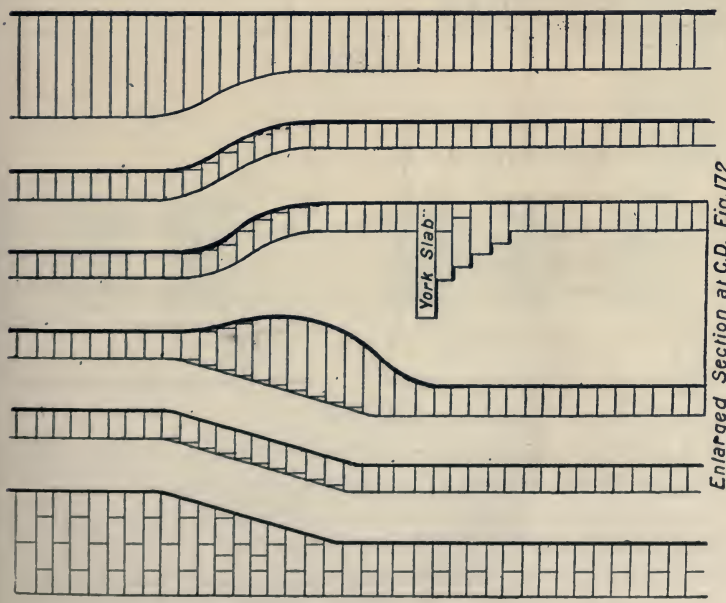

Enlarged Section at C.D. Fig. 172.
Fig. 179.

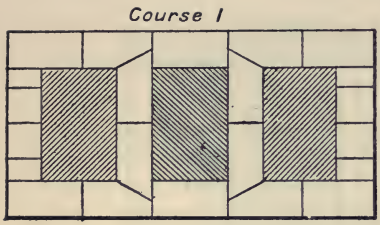

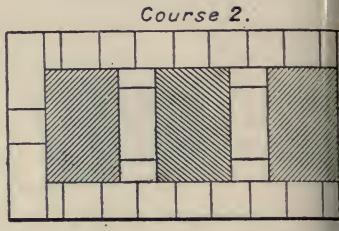

Fig. 181

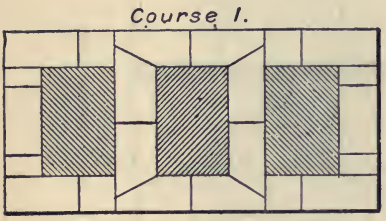

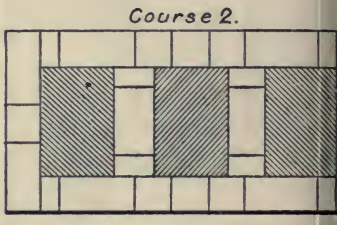

Fig. 182.

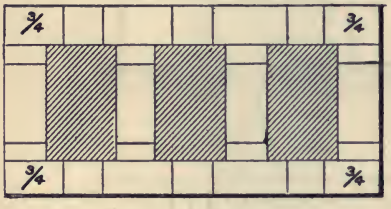

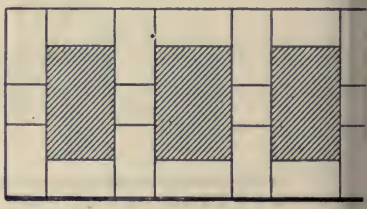

Fig 182A

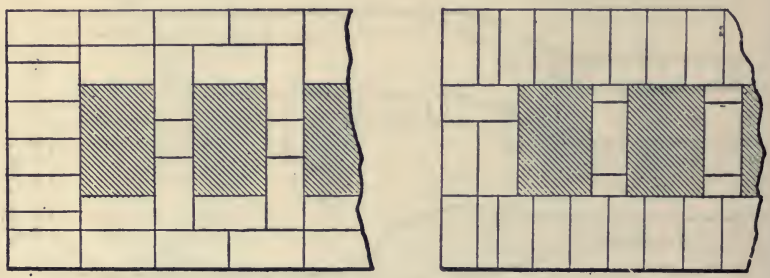

Fig. 183.

pargeting in that there is no coating to knock off the flue-walls, which may happen when alterations have to be made next the flues.

The partition-walls between flues are called *withes*, or *mid-feathers*; and, of course, they should be bonded each way, at every alternate course, into the outside casing. Fig. 181 represents two alternate courses of English

bond, ½-brick thick, and fig. 182 those in Flemish bond, while fig. 183 shows that there is practically little difficulty in bonding the withes into 9-inch outside walls of whatever bond; fig. 182A showing a much-used arrangement which has its advantages, although not strictly Flemish bond.

The *caps* of chimney stacks are made more or less ornamental by the use of moulded bricks or terra-cotta, but more commonly by means of several *oversailing* courses, projecting or corbelling out one above another, as shown in fig. 184, and mitring at the angles, or returning all round the chimney, and finished off with a chimney pot. The top courses should always be set in cement; and it should be here remarked that no corbel or oversailing brick should project more than 2¼ inches at a time, just as offsets and all projecting bricks should be headers.

Hoop-iron bond, which has superseded the use of longitudinal bond-timbers, consists of thin long strips of wrought-iron, about 1⅛ inches by

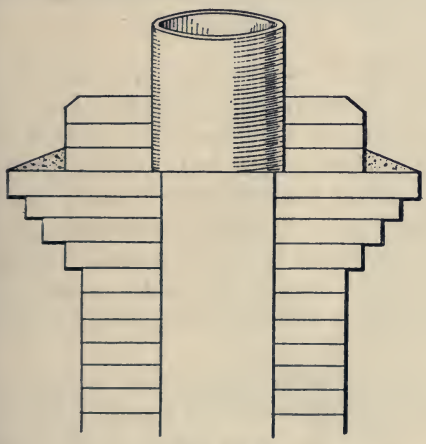

Fig 184

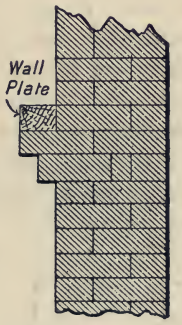

Fig.185

$\frac{1}{16}$ inch laid and built in along the walls, between the courses, in rows at every two or three feet in height above head, and below sills of window, and turned at the ends up joints to assist in preventing rupture of the brickwork horizontally from unequal settlements. It is often specified to be tarred and sanded before being built in.

Wood bricks are often built in jambs for fixing joinery work to; though they are now generally superseded by breeze and patent bricks, which are fireproof. *Elm pads*, 4½ inches by 9 inches by ¼ inch, are also used for the same purpose, and built in the joints, sometimes vertically, for the attachment of skirtings, etc.

Brick corbelling is a series of projecting bricks, for the purpose of giving additional suppor' to, or to carry, wall-plates and other projections over plain walls below. *Vide* fig. 185.

CHAPTER IV.

DAMP AND ITS PREVENTION.

Danger of Damp—Protection below Ground—Protection above Ground—Prevention of Damp Rising—Prevention of Damp Descending.

Danger of Damp.—The chief, if not the greatest, enemy of the builder is damp. It will ascend, descend, and penetrate—*i.e.*, attack materials in all directions; and wherever it makes—or is allowed from inattention, carelessness, or want of forethought, in the first instance, to make—an inroad, it brings ruin to the building itself, in every manner, by sowing the seeds of decay; ruin to the furnishing and finishing of the building; and oftentimes ruin to the health of its occupants. Therefore it is the duty, and should be the chief care, of the builder to keep damp out, by one or other of the various means which will hereinafter be pointed out and explained.

This duty generally falls to the bricklayer and mason, except in so far as roofing is concerned, when it devolves on the carpenter, plumber, and slater; and all these will be dealt with, respectively, in their proper places. The bricklayer, however, is often really responsible for the decay of the carpenter's work from damp; though it should be the business of the latter, when possible, to see that due precautions have been taken with the brickwork before he puts in the woodwork which it is his business to attend to.

Protection below Ground.—There are numerous methods of preventing the penetration of damp through the enclosing walls into apartments below the ground line:—

1. By building the walls of *greater thickness*, and setting the bricks in cement—a simple method, but often rather expensive; and, moreover, on valuable sites, a considerable quantity of room is sacrificed for this purpose, as compared with another mode of prevention which could have been used to greater advantage.

2. By *hollow dry-area walls* around the external faces, as illustrated

by the section Fig. 186. This also is disadvantageous, for the same reason as method No. 1; and, in addition, care should also be taken that the cavity is thoroughly well ventilated, so as to maintain a current of air always passing through every part of it. Moreover, while providing such free and ample ventilation, every precaution must be taken to prevent any vermin harbouring in this cavity, as well as the accumulation of any refuse therein. The open area should commence from the footings, the bottom being paved in cement, and its walls built battering, in cement, from the bottom; and it should be wide enough to allow of its being cleaned out, when requisite. The top should be covered over with York slabs well

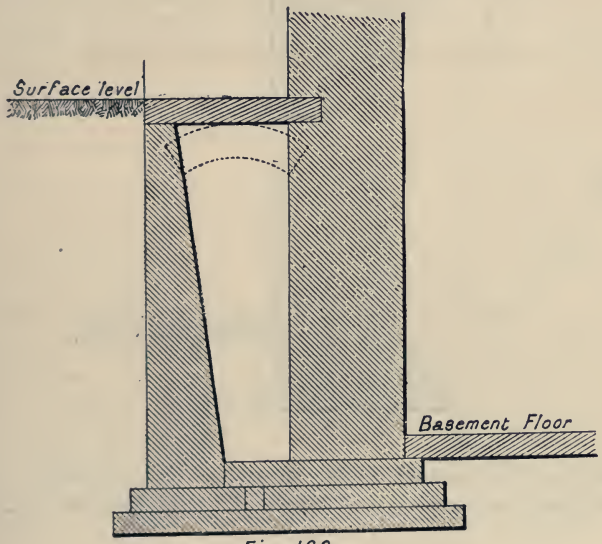

Fig. 186.

secured together; or it should be arched over, as shown by dotted lines, which also is often done, in addition to the slabs. Through ventilation should be secured by ventilators at the top and bottom, the holes of the gratings, of course, being made very small in order to keep out vermin.

3. By lining the inside with a *thin brick wall in cement*, with a small *cavity* left between it and the main outer wall, as shown in fig. 187. This also takes up room, but otherwise is a good remedy. It is usually adopted for thick rubble stone walls, which are sometimes tarred before the brick-lining is built up securely, and free from ventilation. This method has the advantage also of being applicable to rooms above the ground floor line. The heading and bonding bricks should have their ends (which go into the stone wall) well tarred before being built in.

4. Another method is to run *Hygean Rock asphalte*, while hot, within the vertical joints of the enclosing thick walls. This is usually done about half a brick or $4\frac{1}{2}$ inches from the external face, the first vertical joint inwards, longitudinally, being left open, as shown in fig. 188. The asphalte is poured in at every three or four courses, filling up the crevice, and forming a complete coating inside the wall. This is a cheap

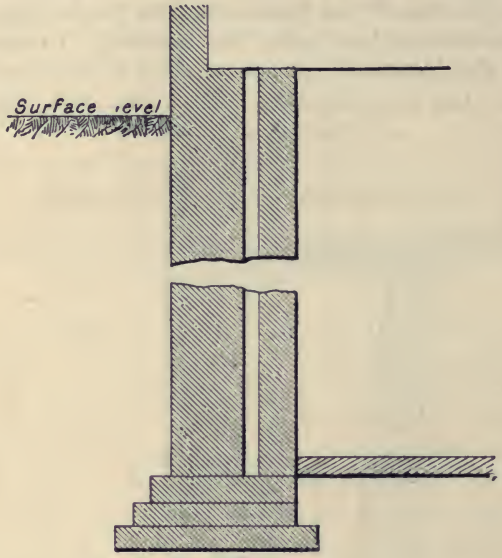

Fig 187.

method, but it is only applicable with advantage to brick walls; still, it is very effectual, and also very convenient and useful for the upper part of the wall.

English Garden Wall Bond

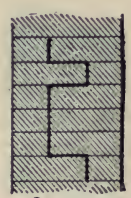

Section

Fig 188.

5. To face the wall externally with *blue-brick work*, built and bonded in cement. This has been proved to be a simple and effectual remedy against the penetration of damp.

6. To render the *external face over with cement and sand*, about one inch thick. This is another simple remedy, which can be used both above and below the ground floor line; the upper portion admitting of treatment ornamentally, without any great expense.

7. The outer faces of the basement walls can also be coated with *asphalte*, laid on hot, about three-quarters of an inch thick; which, though very expensive, is the most effectual method of preventing the penetration of damp. Seysell and Val-de-travers asphaltes are the best for this purpose, and should be laid on by the company's own men.

Protection above Ground.—The walls of rooms above ground-line are protected from damp by the following methods:—

1. The use of the *Hygean Rock composition* (as before mentioned).
2. The *cement rendering*.
3. *Blue brick* facing (also as previously explained; though the latter is not very bright and pleasant-looking to the eye).
4. Building the walls *hollow* with the "thick skin," as it is called, either inside or outside; the two being bonded together (*a*) by the use

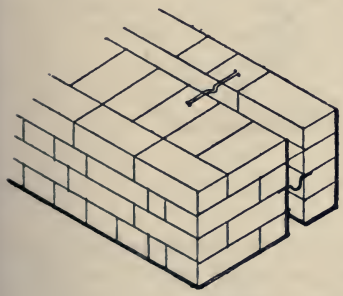

Fig 189

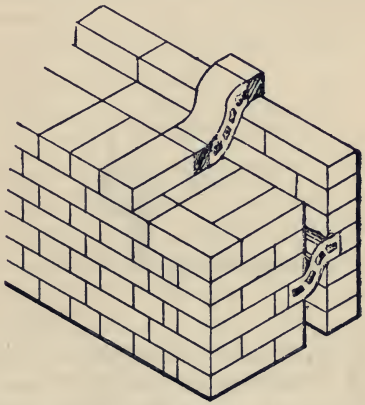

Fig 190.

of galvanised iron wall-ties (*vide* fig. 189); (*b*) by the patent vitrified bonding bricks, as shown in fig. 190. The outer skin (about $4\frac{1}{2}$ inches or a half-brick thick) is built up—with a 2-inch cavity, ventilated at top and bottom for the circulation of the air, which is a non-conductor—simultaneously with the inner or thicker portion, about five bonding bricks or ties being used to each superficial yard—about twelve inches apart in height, and from two to three feet horizontally. Thin strips should be used during construction, in order to keep the mortar from falling inside the cavity; or sand courses may be left at the bottom, to allow of its being cleaned out when finished; though this latter method is not so good, from a practical point of view, for the stability of the work.

It is, however, to be noted also that hollow walls are a source of trouble, wherever openings occur, especially at the heads; the jambs

being easily got over, as shown at fig. 191. The heads, or lintels over the heads, in hollow walls are unprotected against all possibility of wet falling on to their upper surfaces. The best way to guard against this source of weakness, in good work, is to lay thin sheet lead (formed into a gutter) over them, between the joints (*vide* fig. 192), and having a fall both ways from the centre of the lintel, so that the wet is carried and thrown off them by the gutter, which should project two or three inches beyond the end of the lintel.

It is better to have the thin skin at the outside, and the thicker (or main) walls inside; inasmuch as the penetration of damp is all the sooner stopped by the circulation of the air in the cavity, and there is then a thicker dry wall inside. This, in fact, is the strongest, best, most advantageous and economical system; as, with the thin skin inside, all

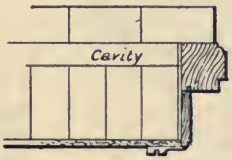

Fig. 191.

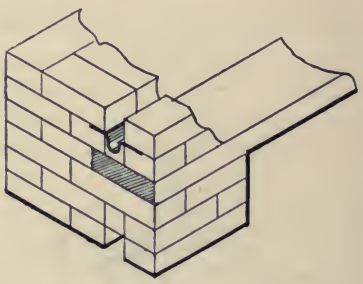
Fig. 192.

joints, roof, and other bearing timbers can only get a bearing of 4½ inches, on a half-brick wall, which is not sufficient, as the 4½ wall is not strong enough to carry the whole weight of the building; hence all such bearings have to be of increased length to go into the outer wall, which, though it is the thicker and stronger, is also more exposed to damp.

Bridging over the cavity at these points of support may be recommended as a remedy, to avoid that increased expense; but, obviously, that would be to do away with all or most of the benefit, for the attainment whereof the hollow wall had been employed; seeing that it would break the *non-conductor*, and the damp would be transmitted from the outside to the inside wall by the bridge.

5. The external face of the walls may be *slated* or *tiled*, to wood laths nailed to bond timbers on pads built in as the work proceeds. If slates be used this method gives the building too much of the appearance of a roof, and creates a dull and uniform monotony of colour. When tiles are used, which may be of a different and lighter colour, and varied in form, they can be treated ornamentally, which cannot be done with slates; and to obviate the use of wood battens and plugs thin Wright's breeze-

fixing blocks are built in, alternately with every brick course, having a slight projection on which the nib of the tile rests, while the tile itself is nailed to the blocks which are the "gauge" from centre to centre, two courses of blocks and one of bricks replacing two ordinary brick courses.

6. The outside of barns and other unimportant buildings are often *coated with tar* to keep out the damp.

Of the means used to stop damp where it has penetrated the walls of a building, Szerelmey's solution is one of the best, a coating or two of the solution (either applied internally or externally) often completely stopping it and rendering the wall water- and damp-proof.

Blundell's petrifying liquid is also a good remedy, and can be applied in various colours, which, having a glassy surface, can be readily washed. The walls can also be covered with Willesden paper, which is said to be water- and rot-proof; or they may be papered with laminated lead or tin-foil papers before the decorative work is applied. If the walls are very damp, it may be advisable to plaster the walls in Portland cement instead of the ordinary materials, and finish them in Parian for paint; or in other cases the external walls are battened and lathed as hereinafter explained.

Prevention of Damp rising.—The ascent of damp is guarded against by the use of damp-proof courses, of different materials, laid across the whole width of the walls, a little above the general surface of the ground, and under all timbers, wall plates, etc., which are liable to be affected by damp. The following kinds of damp-courses are employed in different parts of the country:—

1. *Blue brick damp-courses*; which consist of blue bricks, with open cross vertical joints, laid in cement, and with the two next courses of brick, above them, built in cement mortar. This is a most effectual method, besides being inexpensive, and raising the building at the same time—assuming that there can be no objection on the score of appearance.

2. *Slate and cement* damp-courses are made of two thicknesses or courses of good non-absorbent slates, bedded and jointed in cement, and overlapping each other at the joints.

3. *Asphalte* damp-courses of Val-de-travers, Seysell, or Limmer asphalte, are very effectual, though a slightly more expensive remedy; still they have the advantage of being hidden in the joint, whereas the blue bricks would be apparent and out of character. The asphalte should be laid on hot, and by experienced workmen.

4. *Anderson's*, *McNeill's*, and *Engert & Rolfe's* patent fibrous asphalte felts are another effectual remedy, and particularly convenient; because, as sold, they are ready to be laid by the ordinary workmen, being made in lengths and to the widths of ordinary walls. They are either laid in single courses, lapped at the joints, or double—*i.e.*, in two thicknesses.

5. *Cement and sand*, gauged strongly (as one of cement and one of sand) is sometimes used as a damp-course; and it is effectual, but requires time to set, before any heavy work can be built on it.

6. A composition of *tar, sand, and pitch* is a common and successful remedy; though it requires experience in the boiling, as it will only set properly when laid on hot immediately after it has reached a certain state after boiling.

7. *Lead* is sometimes—though seldom nowadays—used as a damp-course. It is expensive, because it must be stout; besides which it has the disadvantage of being affected and eaten away by cement or lime; and it will not carry very heavy weights.

8. *Hollow vitrified brick blocks*, to allow the circulation of such a non-conductor as air, are also another effectual remedy, and frequently used. They are laid on in two courses, breaking joint.

9. Callender's bituminous damp-proof sheeting is very effectual, as well as reasonable in price, and it can be applied in continuous lengths.

Prevention of Damp descending.—The descent of damp, in special cases, such as parapet walls and chimneys, is stopped by similar methods to its ascent, as explained above. The common method, however—which only checks, but does not prevent the descent of damp, in ordinary walls and other places where it penetrates or descends—is to throw it off by weatherings and projections. All *string-courses*, sills, copings, and projections should be weathered or splayed, and the underside "check-throated," so that the wet runs down, and being checked by the throat on the projection (as at × in fig. 193), drops off.

Copings of stone or blue or red bricks are also used at the top of walls for this purpose, and may be either weathered and throated, as fig. 193;



Fig 193

Fig 194

Fig 195.

Fig 196

Fig. 197.

saddle-back and throated, as fig. 194; rounded and throated, fig. 195; or bull-nosed or half-rounded, fig. 196. All these are effectual except the last; this does more harm than good, as, without the throat, all the wet is collected and literally poured down the face of the wall.

A *tile creasing*, as shown in fig. 197, is often also employed as a coping and projection to walls, and consists of two courses of tiles breaking joint, and built in cement, projecting from the wall line.

CHAPTER V.

BUILDING STONES AND STONE WALLING.

Stone as a Building Material—Sandstones—Limestones—Stone Walling—Limestone Facings—Sandstone Facings.

Stone as a Building Material.—It is only proposed, in this chapter, to draw attention to some of the chief points requiring attention with regard to building stones generally, after which a short account will be given of the nature and characteristics of the chief building stones in general, as against local use. Granite and other building materials, not mentioned elsewhere, will be found treated of in Chapter XXIII.

It will be patent to the student that, whereas hard-and-fast rules can be laid down for the guidance of bricklayers, to enable them to make good, solid, well-bonded work with a material of regular and standard size, no such rules can be made for the use of a material, such as stone, which is of no certain fixed size, and is subject to the varying influence of innumerable matters of both great and small importance. Therefore a great deal must necessarily be left to the judgment of the mason, who should thoroughly understand the principles, which he must endeavour, in more or less degree, to carry out, as far as possible, according to circumstances. He should never, under any circumstances, allow one joint to be exactly over another; but he can make the joint, in any position, over another solid stone, whether it be half or three-quarter bond. All he has to do—subject to judgment and discretion—is to break the joints; and, in addition to this, he must take care that every stone, excepting projections and weatherings, is laid on its *natural bed—i.e.*, on the bed on which it lay when in the quarry, before it was taken from the solid mass. This bed—except in very close, hard, uniform, and even-grained stones—can easily be distinguished, as all formation and stratification, shells, changes of colour, and nature in the stone, grit or other, are practically laid horizontally on the stone. Therefore such marks, indications, and peculiarities are generally found in lines approximately parallel with the natural or quarry-bed of the stone.

On the other hand, all projections, weatherings, and especially copings, should be *joint-bedded*; that is, the natural or quarry-bed must be placed vertically and at right angles to the horizon or bed of the course, which is necessitated by the fact that wet and frost will penetrate the bed of a stone, and lift it up and sometimes off altogether. Therefore it is best to tie the beds in, as it were, together at the joints by neighbouring stones, so that they cannot get away.

The mason should also take great care that the surfaces of all beds and joints are at true right angles, with the face of the stone or the direction of the superincumbent pressure of the weight above, so that the pressure on the stones is equally distributed over the whole area of the stone—unevenness tending to cause the angles to split off the stone, from the influence of gravity, making it take its proper bed and bearing under the pressure (as fig. 198), or sometimes the stone cracks (as in fig. 199).

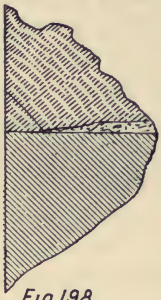

Fig. 198.

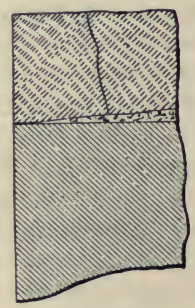

Fig 199.

Bonders and their uses will be dealt with later on, in connection with the subject of walling.

There are two classes of building stone in general use, called, from their respective composition, sandstones and limestones. *Sandstone* is composed of pure, clean sand, cemented together by carbonate of lime or of magnesia and other binding substances, while *limestone* is little more than pure carbonate of lime. The varieties of stone are of numerous colours, including red, blue, brown, white, and yellow, and their innumerable shades. The grain varies from fine to coarse, with beds which are oftentimes difficult to distinguish, some being close and some open, though their strength may be the same.

Sandstones.—Sandstones are used for paving, general building purposes, carving, or for heavy engineering works, on account of their great power to resist compression, some of the best qualities being capable of resisting a pressure of between 600 and 700 tons per square foot before they *crack* even, and more before being *crushed* completely. They are

hard, though free-working, and durable; they absorb from 8 to 10 per cent. of water; and their weight is from 120 to 170 lbs. per cubic foot.

A good sandstone should be of an even grain, and crystalline in texture. When chipped into clear water, and stirred about, it should not make the water muddy; and it should absorb no more than 10 per cent. of water when poured on to it, while for work requiring strength it should be capable of taking, at the very least, 350 tons per square foot in compression before fracture takes place.

The best and most well-known sandstones are as follows:—

Craigleith stone is the most durable in Great Britain, found near Edinburgh. It contains 98 per cent. of pure silica, with 1 per cent. of carbonate of lime. It is of a greyish colour, very hard, durable, and strong—some beds being three times as strong as Aberdeen granite—and of such a fine grain that it may hardly be called a grit. It takes a very fine arris, and never wears smooth. Its principal use is for steps, paving, etc., and heavy engineering works requiring great strength.

The *Derbyshire* sand or gritstones are a very useful and good stone, weathering well, carrying a fine arris and nice even-coloured face, especially the Burntwood and other fine Darleydale qualities, which have been proved to withstand a smoky atmosphere where other stones have decayed; and the coarser qualities, found near Matlock Bridge, have great powers of resistance to crushing, rendering them most suitable for pad-stones, engine-beds, and column-bases. Stone blocks of such a size as 8 feet square and 3 feet deep are often procured out of the best quarries.

Forest of Dean stone is found in Gloucestershire, among the coal measures. It is both soft and hard, according to bed, the best yielding a hard stone, of a fine grit, which can be quarried in large blocks.

Mansfield stone is found in Nottinghamshire, and of two kinds, respectively red and white in colour. It is a close crystalline gritted stone, quarried in large blocks, has a nice uniform appearance, is easily worked, weathers well, and is suitable for dressings, pavings, stairs, and ornamental work generally. Mansfield stone is called a *dolomite*, and contains almost equal quantities of the carbonates of magnesia and lime.

The *Yorkshire* stones are of many varieties, including Bramley Fall, Scotgate Ash, Parkspring, Robin Hood, Elland Edge, Howley Park, and Spinkwell; most of which are good hard stones, suitable for paving, dressings, pad-stones, and engineering work. They work and weather well, stand considerable wear, and are close and even in the grain, brown or blue in colour, and of numerous shades.

The Yorkshire quarries are worked by open workings, or by shafts, in a similar manner as coal, some of the beds being sandstones of the lower coal measures. The depth of stone varies from a few feet to over two hundred feet below the surface. The quarries produce "blocks" and

"flagstones"—the latter being converted into stills for chemical works, flagging for streets, kitchens, passages, etc.; while the thinner lifts are used as roofing "slabs," the small pieces of the flags being dressed into wall stones.

The *block stone* produces the thicker kinds of flagstone, and is sawn into slabs for use in staircases, chimneypieces, dressings, and monumental work; the waste or smaller pieces being converted into "setts" and "paviors" for streets.

Of the brown and blue varieties found, it must be understood that the latter is by far the better stone where strength is required, it being capable of taking a weight of 668 tons before cracking, and 728 tons before being crushed, whereas brown will only bear the pressure of 484 and 514 tons respectively, these results being obtained on 6-inch cubes.

Runcorn is a good, useful, strong, durable, red building stone, found near Liverpool, being free-working, and of nice open grit.

Cefn, a yellow grit stone, of fine grain, is found in Wales, and used for most building purposes.

Hollington is another good weathering sandstone, either red or white in colour, found in Staffordshire, and very often used for general building purposes.

Limestones.—Limestones, as a whole, are inferior as building material to sandstones generally, though Portland may be considered as excepted from that category. They consist of almost pure carbonate of lime, and are, of course, affected by the sulphurous and smoky atmosphere of large manufacturing towns, which gradually eats away the stone. Compared with sandstones, as a building stone, they are less durable; they weigh from 116 to 150 lbs. per foot cube, withstand a pressure of about 250 tons per square foot, and are much more easily worked, especially when freshly quarried and *green* with *quarry sap*.

The best of the limestones are dense and uniform, both in structure and composition, with a fine even grain, and crystalline texture; and moreover, they will weather well, and, especially in some atmospheres, are the most economical stone, being preferred for their uniform colour and facility of working. They are often coated with other substances, to preserve them, as will hereinafter be explained.

A good limestone should have most of the qualities enumerated above, absorb no more than 17 per cent. of water, and be free from any earthy or dull appearance. There are several classes of limestone, including the *Compact*, the *Granular*, the *Shelly*, and the *Magnesian*. The first of these is chiefly used for road material, pavings, etc.; wherefore it is unnecessary to refer to it, not being a building material.

Granular limestones, as the name implies, consist of grains of carbonate of lime cemented together by the same substance; and they belong

to the Oolite formation, those with large grains being called *Pisolites* or *Pea stones*, and those with small grains *Roe stones*, because they resemble the roe of a fish in appearance. They are of a brown or yellow colour, and, from their nature, rather absorbent, and liable to the attack of acid in a town atmosphere; though some of them are less so than others, and will weather well in ordinary positions. Among their number must be included several very good and commonly used building stones, viz.:—

Bath Stone is perhaps the best-known building stone in the country, being a free-working oolite, containing 95 per cent. of pure carbonate of lime, and of various kinds—including Box Ground, Coombedown, Monks Park, Corngrit, Corsham Down, Farleigh Down, Westwood Ground, and Winsley Ground—all similar in general appearance, and only to be correctly distinguished from one another by a skilled and practised eye. St. Aldhelm Box is the best weathering stone of the lot; and Corsham or Monks Park is the most suitable for external work, other than weatherings; while the other varieties are only fit for interior work, though they are good soft suitable stones for inside purposes.

The Bath Stone quarries are really stone mines, because they are worked partly underground, the depth of stone varying from 6 to 20 feet, running in fairly level beds, increasing in depth the lower they get. The quarrying is done by the use of pick and saw, without any explosive, a horizontal groove about 10 inches high and 5 feet deep being picked out next the ceiling of the mine, into which groove the quarryman puts a saw, working downwards to the bottom of the bed, nearly 4 feet down. Another cut is then made at a distance of 3 feet from the last, and directed towards it at the back, making the stone-block narrower at the back than in front. The block is then got by means of wedges inserted under the bed, at the bottom, and into the saw cuts at the side, and these being driven home, they burst the stone off at the back, and the block is brought out. The quarrymen then have a start into that bed or beds, the other stones being easily procured afterwards, and trimmed with axes and saws into the required sizes of blocks.

The colour of Bath Stone may be said to be light brown, creamy, or stone colour. It is of a nice, even nature, and good, when free from yellow or earthy beds, easily worked, and suitable, in one or other of its varieties, for most purposes—especially when coated with the *fluate* which the "Bath Stone Firms Limited" recommend as a means of hardening and preserving its face—so that, taking all things into consideration, it is a most useful building stone.

Portland, containing 95 per cent. of pure carbonate of lime, is, in very many ways, a splendid stone, of the Oolite formation, found in the island of Portland, in quarries with generally three different beds, in use for different purposes, as follows:—

The *roach* bed, the first good one found in the quarry, is a mass of fossils, thoroughly cemented together with pure carbonate of lime. The fossils are like a corkscrew in form, and only appear in this bed, which is of a light brown colour, very tough and strong, and of a very high resistance to the action alike of air and water; so that it is in great requisition for engineering works of all kinds, though not for ordinary building purposes, on account of the fossils and the holes in it.

The *whit* bed, of either a white or brown tint, comes next to the roach, and is a fine, open, well-cemented, hard, and crystalline stone, suitable for the best buildings, and capable of taking a good arris and smooth face, while it weathers excellently well. It is "roe"-like in appearance under a microscope, and hard to distinguish from the "base bed," an inferior quality found lower down in the strata.

Next to the whit bed comes the *bastard roach*; distinct from the true roach, which it resembles in appearance, though it never contains the "screw" fossil among its mass of fossils, and its cementing matter is so bad that it is altogether inferior; in fact, not fit to use at all for any purpose.

The *base bed*, coming next, is a similar stone to the whit bed, but not so good, being softer and not able to withstand the weather; though it is often substituted for the whit bed, from which it can hardly be distinguished.

Caen is a soft, creamy-coloured stone, used only for internal work, carving, etc., and is found in Normandy.

Chilmark, *Tisbury*, or *Wardour* stone is more of a sandy nature, found near Salisbury, and considered to be a good, durable, fair-working stone, which weathers well, and can, from certain beds, be adapted for internal staircases, not exposed to extraordinary wear, besides being suitable for general purposes.

Ketton is another good, useful stone of this formation, and one which shows the "roe-stone" grains very plainly. It is found near Stamford in three qualities, the hard, medium, and soft; the best of which is very durable, free-working, and suitable for all kinds of dressings and stairs.

Of the *Shelly* limestones, the only one of any note used for building purposes is the Hopton Wood (found in Derbyshire), which is a very hard stone, looking well on account of the fossils it contains. It is capable of taking a polish, and is suitable for steps, staircases, chimneypieces, and other ornamental work.

The *Magnesian* limestone formation supplies us with a few good stones, which are called Dolomites (as previously mentioned), the chief variety being *Bolsover* stone, found in Derbyshire, of a light yellow-brown colour, and of great durability. It is crystalline, and very even in texture, and was extensively used in the erection of the present Houses of Parliament.

Stone Walling.—In stone walls, the material should be bonded just the same, and for the same object, as in brick walls—*i.e.*, as regards breaking joint both vertically and horizontally; though this, for obvious reasons, cannot be done in rubble walls. Consequently such walls are weaker, and of necessity have to be thicker to be of the same strength as brick and other uniformly bonded walls. Moreover, rubble walls—the stones from which they are built having neither square beds nor joints—require a greater quantity of mortar to bed each irregular-shaped piece of stone, and as a result, there is more and unequal settlement in them on the drying of the mortar. This is a defect which cannot but have prejudicial results when rubble walls are faced with brick or stone, set with quare beds and joints, and, of course, less mortar.

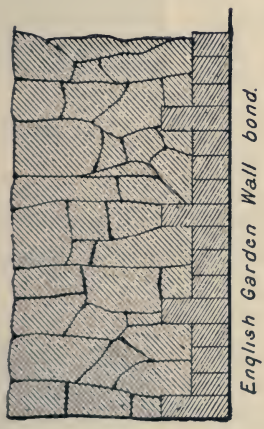

Fig 200.

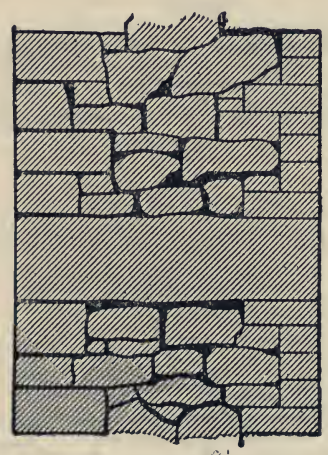

Fig 201

The facings or linings (whether of brick or stone) to rubble stone walls may be thoroughly bonded, as in fig. 200, which is a section of a brick-lined rubble wall; but this has little advantage as regards their strength as a whole.

On an average, no less than three bonders should be used to each superficial yard of stone facing to rubble walls, though the necessary number of such bonders varies from five in thin-coursed facing, such as shown in figs. 206, 207, 208, 209, and 210, to only one in large block-in-course work, as fig. 212. These bonders may either be what are called *throughs*, which go from face to back of the wall, or *three-quarters* bonders—the latter, I think, being preferable to the former on account of the unequal settling, which would cause the *through* bonders to split in two, especially in double-faced walls (as fig. 201), when they would take the form of lintels, supporting the part of the wall above, and forming

no uniform mass as it should be. Another disadvantage is that "through" bonders of porous stone conduct damp and moisture into a building.

The courses of stone-facing, in addition to special bonders, as previously

Fig 202

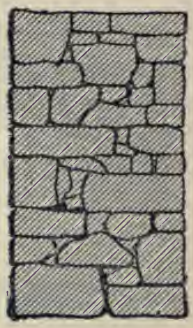

Section
Fig 203

explained, should not be all of one depth on the bed, where it is possible to have them of depths similar to brickwork—*i.e.*, with two or three courses of about $4\frac{1}{2}$ inches or more on bed to one of about 9 or 12 inches, and so on, in like principle and proportion.

Fig 204

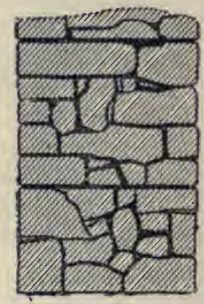

Section
Fig 205

The different kinds of stone walling or stone facing are—*Random rubble*, illustrated by figs. 202 and 203, in elevation and section; from which it will be seen that it is stronger and more solid when not faced, though weak under any circumstances.

Random rubble built up to courses, as in figs. 204 and 205, is little better than the last, though levelled up at every foot or two of height.

Squared or snecked uncoursed rubble, as figs. 206 and 207, is far superior in every way to either of the preceding, being built of stones which have had their beds and joints squared or snecked, and consequently require less mortar, with less moisture to dry up and cause settlements. In

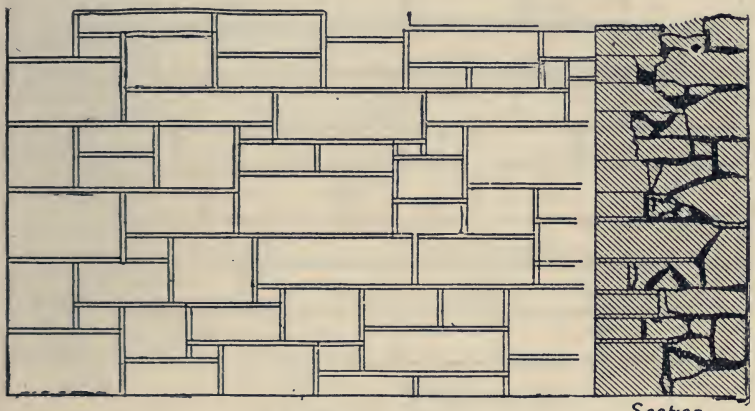

Fig 206

Section
Fig 207.

snecked or squared rubble, to ensure the best work, the jumpers, or large blockers rising above their neighbours, should not be more than 10 inches high, and proportionate to the size of the adjoining courses.

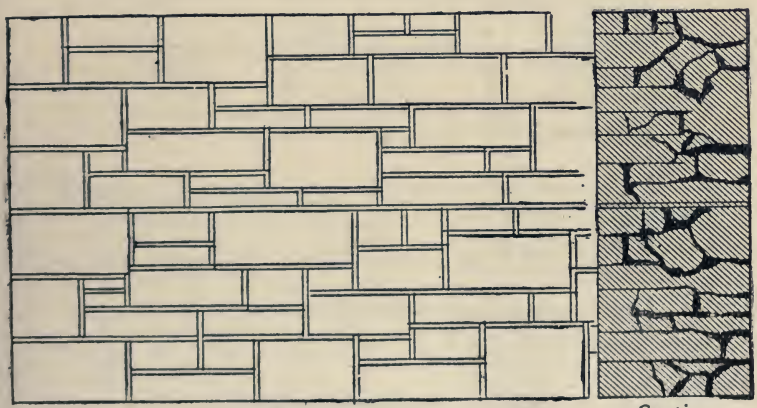

Fig 208

Section
Fig 209

Squared or snecked rubble built up to courses is illustrated by figs. 208 and 209, where it will be seen that this kind, like "rubble built up to courses," though of stones irregular in size, can be built up and levelled as a horizontal course every 12 to 18 inches instead of every course, or not at all.

Squared or snecked coursed rubble, which it will be seen demands that each rise of stone shall form a horizontal course of its own, is illustrated by fig. 210.

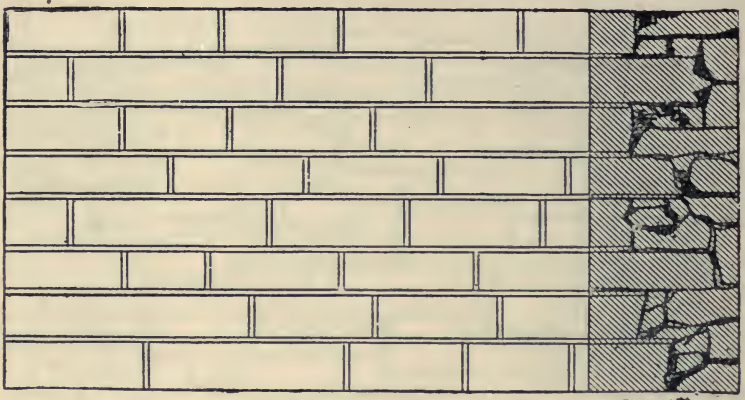

Fig 210

Ashlar, as shown in fig. 211, is the finest of all facing, being built on a regular system, and with finely chiselled, perfectly horizontal beds and vertical joints, so that, when set in the work, the joints show no more

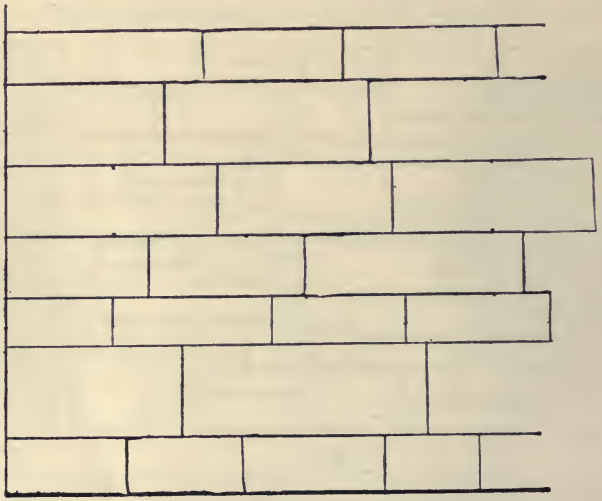

Fig 211

than $\frac{1}{8}$th of an inch; and good ashlar is never supposed to rise more than 9 or 10 inches in a course; and, in limestone or soft stones, each stone hould be no more in length than three times its height, or in depth $1\frac{1}{2}$

times to twice its height—*i.e.*, on the bed. Sandstone will take about half as much again—*i.e.*, $4\frac{1}{2}$ times its height for its length, and from 2 to 3 times for its depth.

Block in course, which really is large ashlar, or that which exceeds the limit in height, rising from 10 to 16 inches each course, is illustrated by fig. 212.

Limestone Facings (as shown in figs. 206, 208, 210, 211, and 212) may have the faces of the stones treated in various ways, as follows:—

1. *Axed*, by which is meant that the face is gone over with a mason's axe, leaving rough, irregular, coarse, vertical ribs or marks.

2. *Chopped*, which is a superior finish to the last-named, the ribs being much closer and finer.

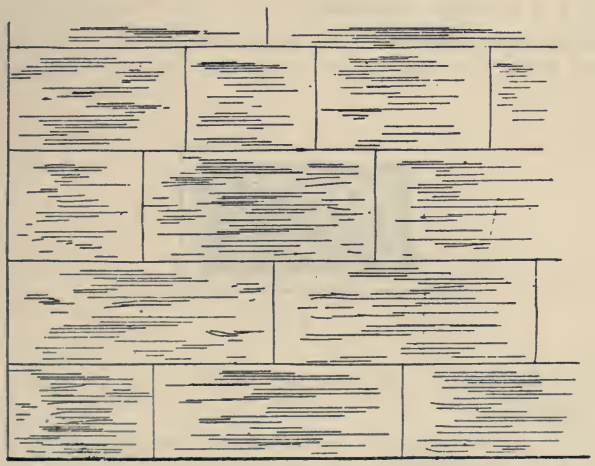

Fig. 212

3. *Rock-faced*, in which the beds and joints are squared, as in the others, but, from a line all round, the face is knocked off slanting from the four sides towards the centre to look rough and with a rock-like appearance.

4. *Dragged* is the finish made on plain limestone ashlar by means of a tool, toothed like a saw, which is drawn backwards and forwards across its face.

Combed is the term applied to the finishing off of moulding in limestones.

Sandstone Facings of a hard nature may be treated as follows:—

1. *Scappled, or scabbled, punched, or boasted*, which are terms applied to the rough labour employed on beds, and the rough squaring up of hard stones for engine beds, etc.

2. *Chiselled* work has the face worked over either on the straight or

skew with a chisel, the marks or "bats" often being as close as 8 to the inch.

3. *Tooling* is done with a broad "chisel," the strokes being parallel to the joints, and from 3 to 5 to the inch. (This is called "droved" work in Scotland.)

4. *Hammer-dressed* is the term applied to work done with a hammer with a chisel point, by which the face is roughly levelled, leaving indents where the chisel has been. It is also called "broached" work.

5. *Scutched* work is similar to the last, but more finely executed.

6. *Drafted and broached* is the term used for the work done to quoins, a draft or margin being chiselled or tooled round the face of the stone, and the panel enclosed thereby is hammered or broached down to give it a rough appearance.

7. *Drafted and diamond-picked or hammered* work is similar to the last, but the panel from its roughly chiselled face is "picked up" by a

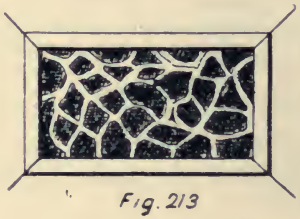

Fig. 213

number of small points in the form of a hammer, which is like "frosted" work on tombstones.

8. *Vermiculated* work is that used in large base stones; the face being first chiselled, and afterwards large deep holes are picked out, no mark of the tool being left, as in fig. 213.

9. *Rubbed, cleansed, or polished* work, as the name implies, has its face smoothly rubbed, after being chiselled down level or to the required shape.

10. *Pointed* work has its face first chiselled, after which the "chisel hammer" is driven along its face longitudinally with a long sweep whereas "scutching" is done with short strokes.

Polled work is the term applied to hard stones such as granite and whinstones, a large square short hammer being used to split and square up the stones.

Some stones, and especially limestones, in some atmospheres will never weather nor last without being coated over with some material There are numerous preparations which are recommended in order to prevent this decay, those containing a silicate of an alkaline nature being the most efficacious; though such simple things as paint, soft

soap, milk, or paraffin are frequently used, in a smaller degree, with a fair amount of success. The best remedies now in use may be said to be: (1) Szerelmy's, said to be a bituminous solution of a silicate, which is applied in two or three coats with a brush; and (2) Carbolinium Avenarius, a preparation made by Peters of Derby, which is said to preserve both stone and wood with success. The Houses of Parliament were coated with Szerelmy's solution.

The Bath stones class should be coated with the "fluate" recommended by the firms who supply the stone.

CHAPTER VI.

STONE DRESSINGS, JOINTS, AND STAIRS.

Plinths—Sills, Heads, and Jambs—Mullions and Transoms—Hoods or Labels—Strings and Cornices—Parapets and Balustrades—Quoins—Copings—Joints—Steps—Hand-railing.

STONE dressings are used for the ornamental finishings of a building, being worked to various details out of free-working stones; and they may be said to include the following different members (*vide* figs. 214, etc.):—

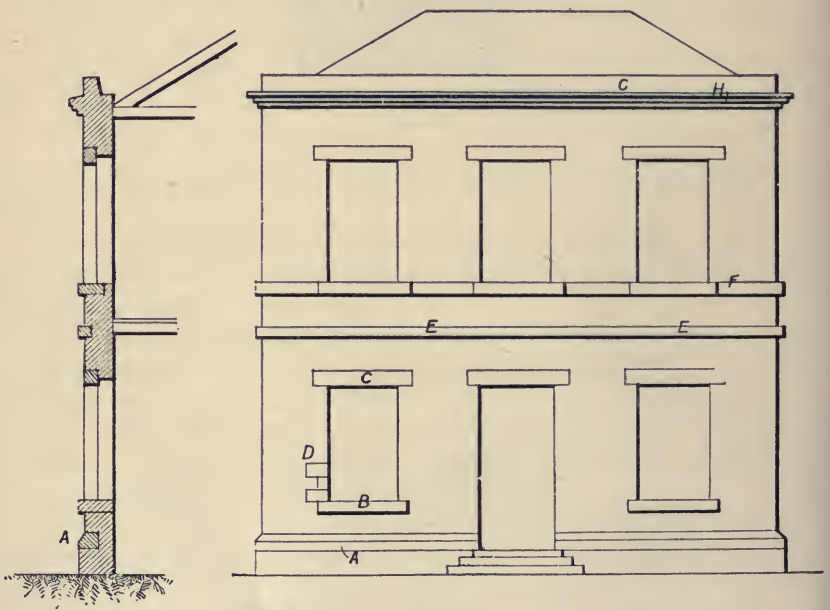

FIG. 214.

Plinths, the horizontal course A, on fig. 214, which can be either chamfered, as shown in fig. 215, or moulded, as fig. 216, a "set-off" generally taking place at this level.

Sills, as at B, on fig. 214, are the finish to the bottom of openings for windows, in contrast to steps for doors, their object being to throw off the water which naturally would collect on a flat surface. They can be plain,

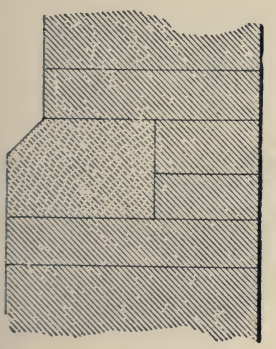

Fig 215.

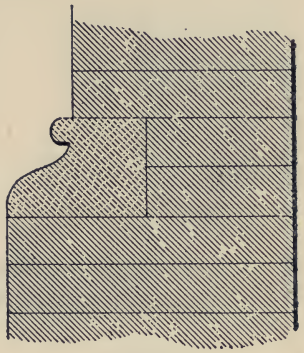

Fig. 216.

as shown in elevation and section in figs. 217 and 218, or moulded, as figs. 219 and 220. They should project not less than 2 inches beyond the wall line, and be *throated* (as at X) on the underside, to make the water drop down.

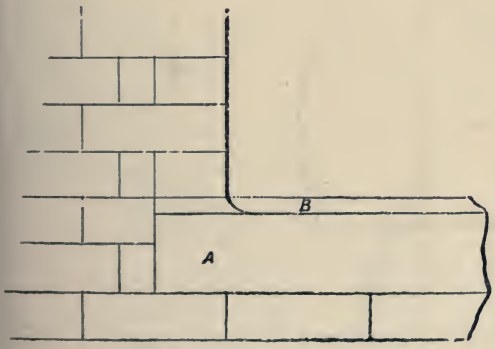

Elevation.
Fig 217.

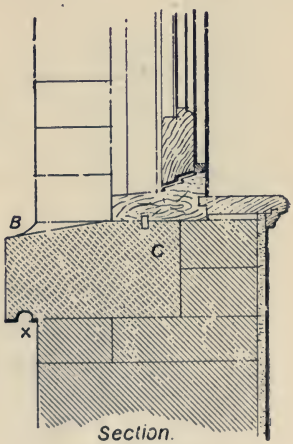

Section.
Fig 218

Sills are built into the jambs from 3 to 6 inches; the portion on which the first jamb, brick, or stone is bedded truly level as a bed to start from being called a *stooling*, or *seat* (as A on figs. 217 and 219); the weathering at B being stopped and worked up to it, and the moulding mitred and returned

and stopped, as on figs. 219 and 220. It is also necessary that sills be grooved, to receive the lower half of a metal tongue, of which the upper half is also let into the underside of the wood sill, to stop any draught

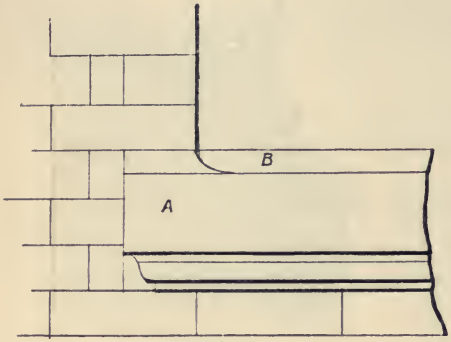

Elevation
Fig. 219

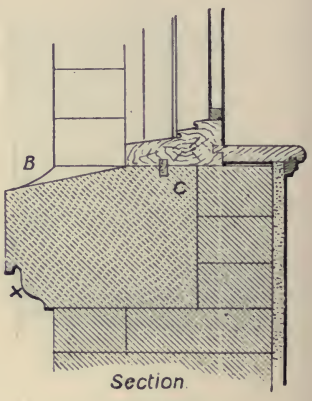

Section
Fig. 220

from getting between the beds, as at C, figs. 218 and 220; and stone sills are only bedded in mortar under the jambs and mullions to prevent cracking on the building taking its settlement; they are "pointed up" afterwards.

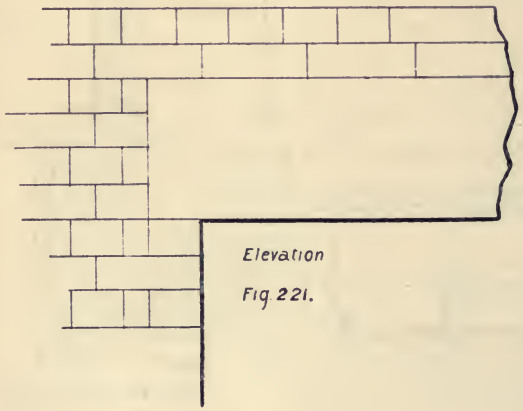

Elevation
Fig. 221.

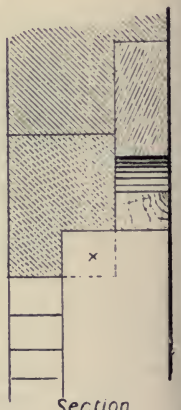

Section
Fig. 222.

Heads, as C on fig. 214, support the wall above the opening, and may be either plain and square, as figs. 221 and 222, moulded, as figs. 223 and 224, the moulding being stopped at the jamb, or stop-chamfered, as figs. 225 and 226—the heads in the preceding cases being revealed for the

head of the frame, as marked X in figs. 222 and 224, whereas fig. 226 is plain at the back.

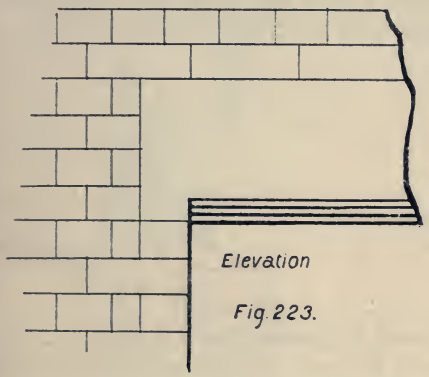

Fig. 223.

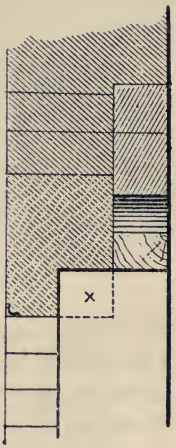

Fig. 224

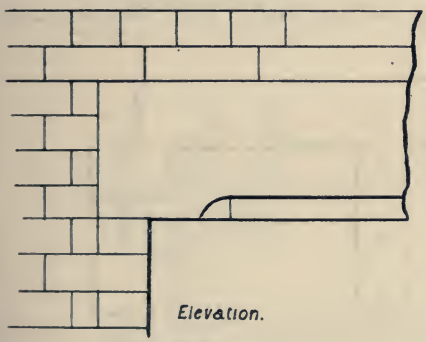

Fig. 225.

Fig 226

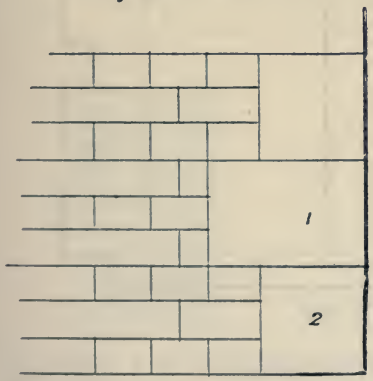

Fig. 227.

Jambs, D on fig. 214, are the finishings to the angles of openings, where

stone is used instead of bricks, each stone being made of such dimensions as will work in with the bricks without cutting. They may be either moulded plain or chamfered— as the heads; and those which are the wider on the face (as at 1, figs. 227 and 228) are called "out-bands," and the

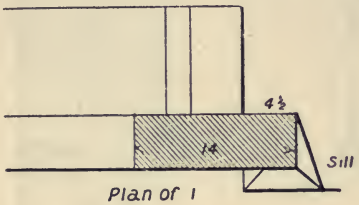

Plan of 1
Fig. 228.

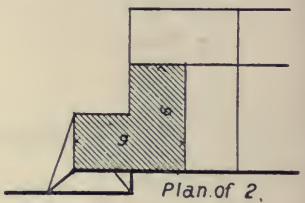

Plan of 2.
Fig. 229

narrower ones (as at 2, figs. 227 and 229) are called "in-bands," because they go inwards beyond the reveal, and are checked or revealed out, for the frame, as shown on plans (figs. 228 and 229). They can be moulded or chamfered on the edge.

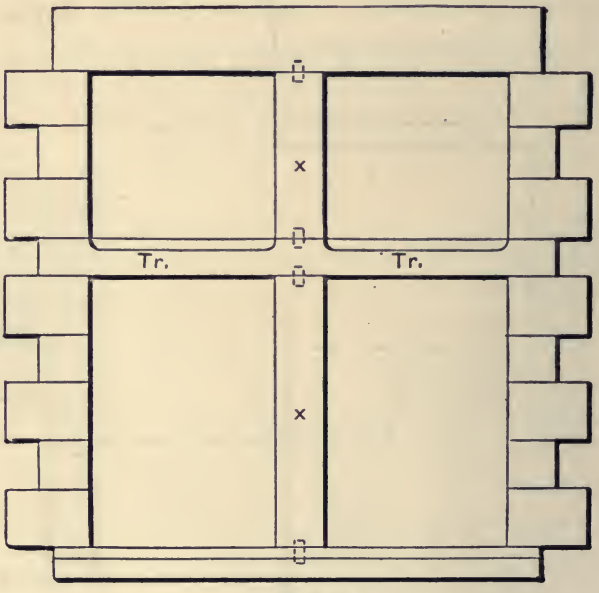

Fig 230

Mullions are the uprights between two lights of a window, as X on fig. 230; and they may be either square on plan, as at A, revealed, as B, or moulded and panelled, as C (*vide* fig. 231).

Transoms divide the window-lights horizontally, as Tr on fig. 230, being weathered on the top bed and throated underneath, as fig. 232,

and with stoolings, like sills, to give the perpendicular members a level bed to start from.

Hoods or *Labels* are mouldings, either worked on the solid head or of

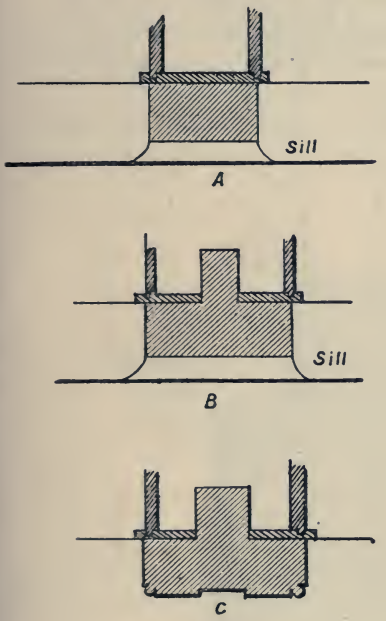

Fig 231.

Fig 232.

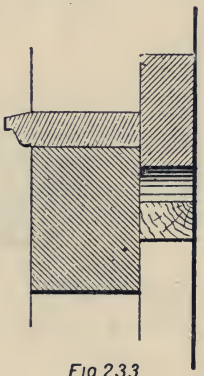

Fig 233.

thin stone moulded on the edge, as fig. 233. They are placed over window and door-heads to give them a greater effect.

Strings are longitudinal horizontal courses, either plain or moulded,

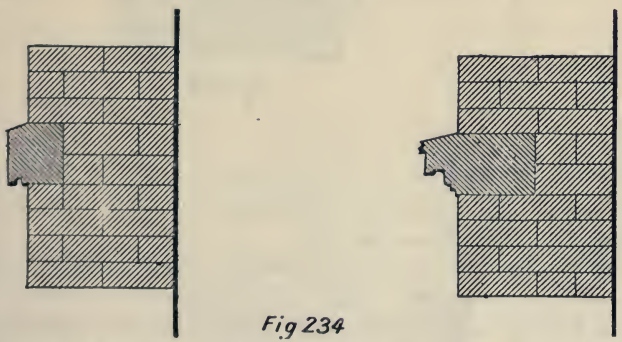

Fig 234

running round a building and dividing it in height, as it were, into floors, as E, fig. 214; or simply a continuation of the sills between openings, as F. Fig. 234 gives sections of a plain weathered and throated and a moulded string course.

Cornices are the longitudinal mouldings which go along the top of the building, as H, fig. 214, being weathered on top and more or less moulded, as fig. 235. When they are quite plain, and only used for supporting the gutter of the roof, they are called *eaves courses*.

Blocking courses are the top members or crown of a cornice, as G, fig. 214, and X, fig. 235; whereas a *frieze* is the plain part below, and the small moulding below that is called the *necking*.

Parapets are thin walls, at the eaves of a roof, behind which the gutters are formed; and they take the place of the blocking courses, where greater height is required.

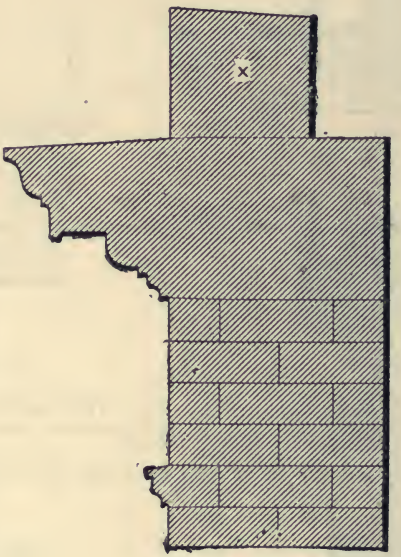

Fig 235

Balustrades are used for a similar purpose; but they are of a lighter and more ornamental appearance, consisting of turned balusters enclosed within a base and cornice, as fig. 236.

Quoins are the stones used at the angles of the building, being made to range with the brickwork. They vary in size from 18 inches to 14 inches on the one face by from 10 to 13 inches high, and the return face would be 9 or 14 inches wide, the stones being of the same size, but placed alternately to show a long face in front and a short one on the return, and *vice versâ*, as figs. 237 and 238. Of course, in stonework they are larger in size, according to the character of the building.

Plain-cut quoins are those shown in figs. 237 and 238.

Drafted and hammer-dressed quoins are of the same sizes, but with the faces worked, as previously explained in Chapter V.

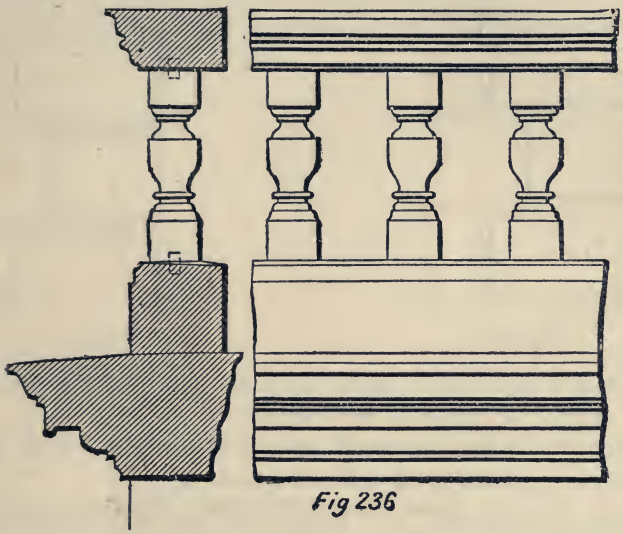

Fig 236

Drafted and diamond-picked, *rock-faced*, *vermiculated*, *tooled*, or *chiselled quoins* are similar in size and application, but worked in a different manner as the name implies (*vide* also Chapter V.).

Plan.
Fig. 237

Elevation.
Fig. 238.

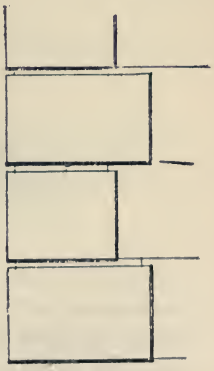

Fig 239

Rusticated quoins are as fig. 239, having a rebate sunk out of every alternate stone at the bed.

A chamfer on each joint or bed, forming a V joint between the two beds, is often substituted for the plain rebate, as fig. 240; or again, the joint may be moulded, as fig. 241.

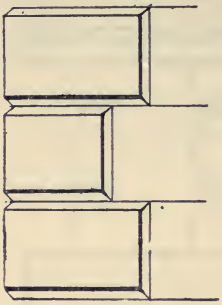

Fig. 240.

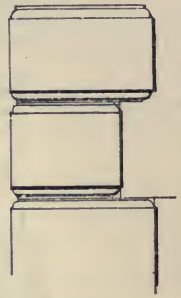

Fig. 241.

Birdsmouth and squint quoins refer to the irregular internal and external angles, as explained for bricks.

Scuntion quoins are the rough squared angle quoins used in rubble walling at the plumbings of internal openings.

Copings to walls, otherwise called *water tablings*, are explained in

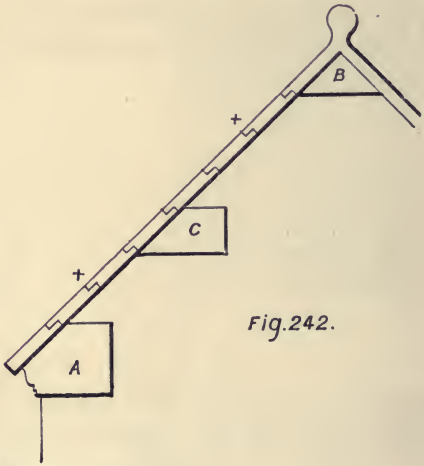

Fig. 242.

Chapter IV. (figs. 193, 194, 195, 196, and 197) under Brickwork; the same remarks and illustrations applying to stone copings, which, it must be noticed, are much extensively used; and especially up the sloping tops of gable-walls, as X, fig. 242.

The bottom stone, A, with the coping worked on it as shown, is called a *springer*; that at the top, B, the *apex*, being similar to a ridge; and intermediate stones, C, whereof the object is to give the coping a

firmer hold on the wall, are called *kneelers* or *knee-stones*. Fig. 243 is a section of the coping described as moulded, throated, and *feather-edged*, because it is weathered from a thick edge to a thinner one.

It is almost needless to remark that most of the above dressings are worked with labours similar to those explained in Chapter V.; so that

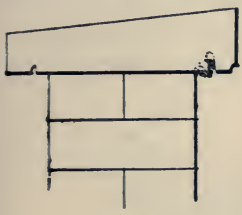

Fig 243.

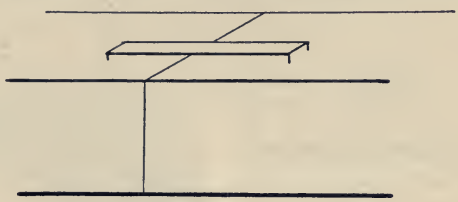

Fig 244

a special name given to a particular dressing is intended to convey to the student the manner of the labour that it has had upon it, as previously explained with regard to quoins.

Good masonry often requires that the joints be secured together by

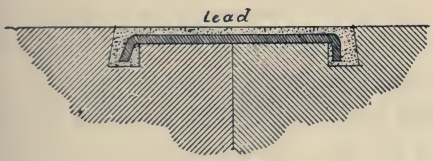

Fig 245



Section.
Fig. 246.

special means, so that the various members may be united into one mass, in length as well as in height. Longitudinally they are bound together by means of *cramps*, which are strips of galvanised iron or copper, turned down at each end into each of two adjoining stones and run in with molten lead, or "leaded in," as figs. 244 and 245.

Plan.

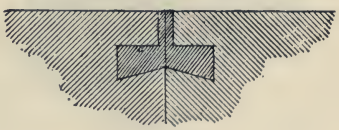

Fig. 247.

Lead dovetails or plugs consist of a wedge-shaped mortise cut into each stone at this joint, as fig. 246, and run in with lead, which binds the two stones together. Sometimes this dovetail is mortised out below the bed of the stones at the joints, as fig. 247, the lead being poured in through the hole from the top or bed-joint.

Rebated joints are suitable for copings to gables and similar work, a rebate being sunk out of each stone alternately, as fig. 248, one stone lapping, as it were, into the rebate of the other.

The stones are secured vertically by means of *dowels*, either of pebbles, slate, or copper, about 1 inch square, and of different lengths,

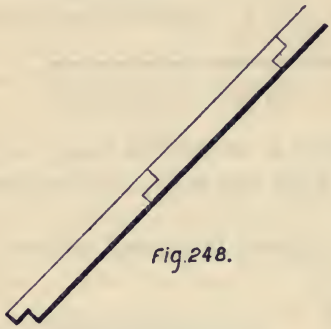

Fig.248.

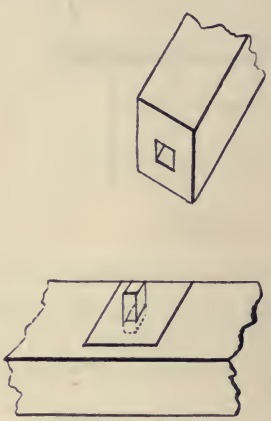

Fig 249

according to circumstances; one half or part being let into the top bed of the bottom stone, the other half going into a similar mortise on the bottom bed of the upper stone, as fig. 249. They are run in with cement to render them firm and to fix the dowels securely in the mortises. This joint is very suitable, and much used for securing mullions to sills, heads, and transoms at the stoolings.

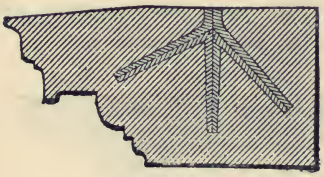

Fig 250

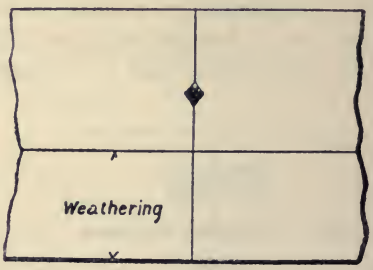

Joggle joints are used to connect stones in different positions, this form of joint being suitable for ashlar, as well as for cornices, strings, landings, etc. The simplest form of it is to cut a V groove roughly on the joints of adjoining stones, as fig. 250, and, when they are bedded up to each other, to run into the hole liquid cement, which sets hard, and connects the stones together. *Landings* are *joggle-jointed*, as in

fig. 251, the tongue, as it may be called, on the one stone being let into a groove of similar section on the other.

Tabled joints are little used, but they are formed by letting a wide projection of one stone into a sinking in another.

Cornices and other large projections often have their joints *saddled*, which is done to throw the water off the joints, being carried out by leaving a projection or stop on the weathering at the joint at each end of each stone, as fig. 252.

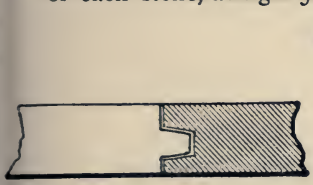

Fig. 251.

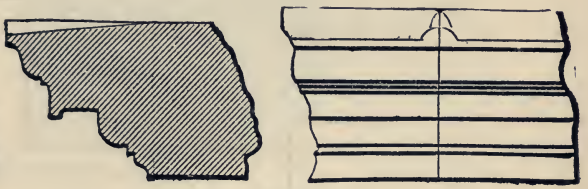

Fig 252

Dressings for *stone stairs* have the same names and terms (as far as they go) applied to them, as will be explained under "wooden stairs," Chapter XIX., to which the student is referred. But stone stairs, unlike wood stairs, are of simple construction, though they may be of the same various kinds.

Stone steps consist of solid blocks of stone, of various sections—square, as fig. 253, and spandril, as fig. 254—each being plain or moulded,

Fig. 253

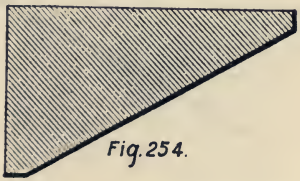

Fig. 254.

according to taste. They are supported by being built into the walls from $4\frac{1}{2}$ to 9 inches, according to the width of the stair and the projection of the steps, or the distance to which they hang out. Some kinds, however, are built with both ends into the walls, as in straight stairs similar to fig. 798 (Chapter XIX.).

Dog-legged stairs, as fig. 804 (Chapter XIX.), whether with or without winders, and *open*, or *geometrical* stairs, as explained by figs. 812, 815 (Chapter XIX.), are, of course, essentially hanging stairs, tailed into the enclosing staircase walls from $4\frac{1}{2}$ to 12 inches, as required, the landings also being treated in the same manner. Each step is supposed to assist in supporting those above it, and for that purpose, and for better work-

manship, they are jointed, as figs. 255, 256, and 257; the latter being a section of a moulded step, of which the end view, with the moulding returned, is shown on fig. 258.

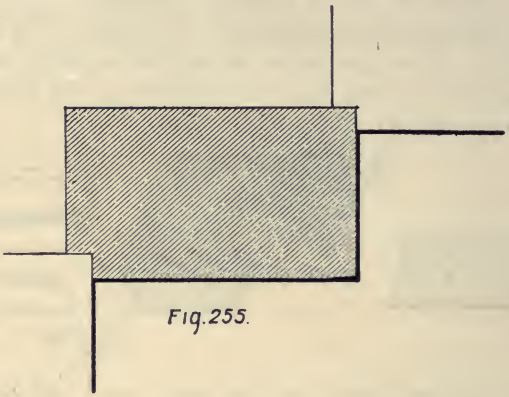

Fig. 255.

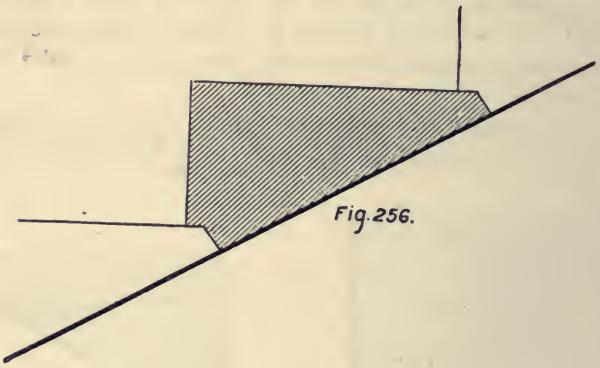

Fig. 256.

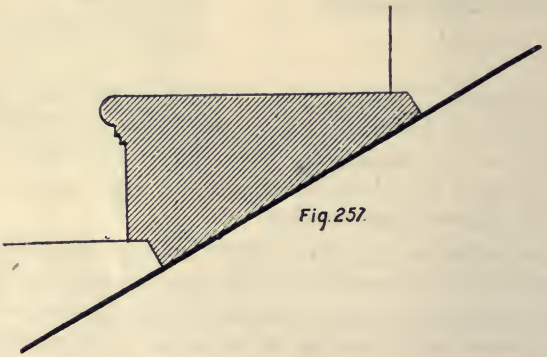

Fig. 257.

The soffits are generally left plain, with a rubbed face.

Circular stairs, or turret steps, are built up of steps of a form illustrated

by fig. 259, the wide ends being built into the wall and the rounded ends laid one upon the other, forming a sort of newel in the centre, from which all the risers radiate, appearing on plan as fig. 260.

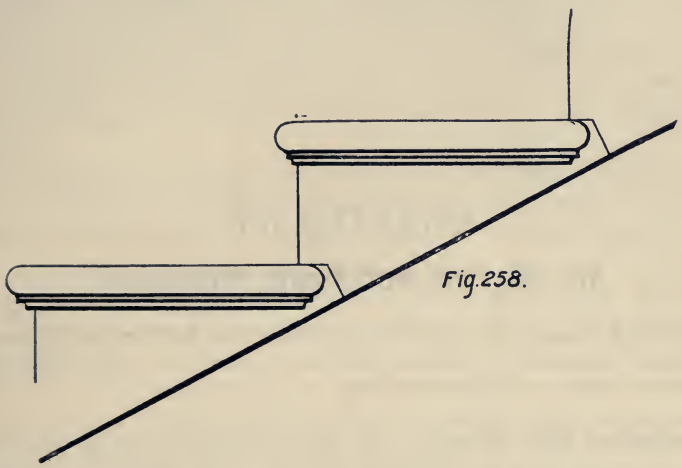

Fig. 258.

The handrailing of stone stairs is generally supported by wrought-iron bar balusters, about 1 inch square, mortised and leaded into the tread of each step, though sometimes they are secured by burning liquid sulphur, which sets very hard on cooling.

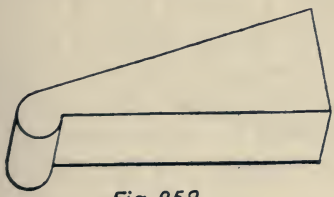

Fig. 259.

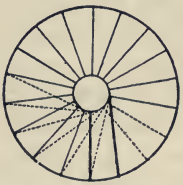

Fig. 260.

The newels may be of wrought or cast-iron, according to the amount and class of ornament required, mortised and leaded into the steps (like the balusters). The whole may be filled in with scroll-work or other ornament, to make it showy and light, according to taste. The tops of the balusters and handrail are connected by a thin wrought-iron core, which is sunk into the underside of the handrail, and secured by screws, making the staircase and its requisite accessories one connected mass.

CHAPTER VII.

WOOD FOR BUILDING PURPOSES.

Carpentry and Joinery—Wood in the Tree—Good and Bad Timber—Seasoning of Timber—Preservation of Timber—Deal or Fir—Elm—Oak—Teak—Mahogany—Walnut—Beech—Ash—Sycamore—Birch.

Carpentry and Joinery.—In one or other of its many and varied kinds and forms wood is the material which, in the building trade, almost exclusively, as it were, belongs to the carpenter and joiner, being the chief material to which their labours are devoted. It will, therefore, be advisable, before entering upon a detailed description of the various kinds, to explain the difference between the two trades above named; for, although practically allied, each uses either a different kind of wood, or different tools to work it, or deals with it in a different method or form.

Carpentry, generally speaking, is the term applied to the woodwork in the carcase of a building, including centres, floors, roofs, partitions, and other rough framings, which are required for construction, and are intended, figuratively speaking, to be the foundation for the other trades, including that of the joiner.

Carpentry, in other words, is the art of putting together or framing the rough materials which form the carcase of a building; whereas joinery deals with the completion of the building as regards interior finishing, convenience, utility, and adornment.

In the former, the principal tools required by the workman are the saw, axe, chisel, and hammer, with which—with the supplementary aid of nails, screws, and bolts—it is assumed that he can put together and fix the various framings of wood which are required, from time to time, to complete the skeleton of the building.

It must, however, be understood that the carpenter requires quite as good, and certainly as many tools, to fix in position the various finishings—whether they be doors and windows with their frames, dados, skirtings, or any other kind of moulding or framing—as the joiner uses in making,

moulding, and framing together, in the shops, those several framed finishings ready to be sent to the buildings for the carpenter to fix in their proper positions.

It must also be borne in mind that quite as much care is required in fixing as in making all kinds of joinery, especially in mitring and scribing the various mouldings, etc., together—all joints in joinery having to be made with the same nicety and regularity, whether those joints be made by the joiner in the shops, or by the carpenter on the building, in position.

The carpenter, in fixing, must, of course, be acquainted with the same varieties of wood as the joiner (a full description of joiner's woods will be given later on); but in ordinary carpentry, or framing together of the rough carcase of a building, the following woods only are met with, as a rule, though perhaps others may be used in special cases, the woods being mentioned here in their order of precedence, from the point of view of their utility:—

1. *Pine*, under which name are included balk-timber of different kinds, and fir, in planks, deals, battens, etc. These are what are called soft woods, and found generally in cold climates.
2. *Oak.*
3. *Elm.*
4. *Teak* and *Greenheart.*

These three are generally called "hard" or "leaf" woods.

On the other hand, the joiner requires a *plane* in addition to chisels, saws, hammers, etc., to complete his work, which includes the doors, windows, and other external and internal finishings of a building, whether required for comfort, utility, or ornament. His business is to join and put together the finishings; and the woods on which he generally labours are:—

1. *Pine*, but of a "kinder" nature and considerably better quality than that required for carpentry.
2. *Oak.*
3. *Mahogany.*
4. *Teak.*
5. *Walnut.*

These four latter woods, being hard, more beautiful, and much more expensive, are only used in best work.

Before proceeding to a full description of each kind of wood, with its varying characteristics, uses, etc., it will perhaps be advisable to deal with a few general points, including the growth of the tree, the main characteristics of good timber, and its defects, the means of seasoning and preserving it, and a few remarks as to the selection of good timber, and some of the peculiarities which are to be avoided.

Wood in the Tree.—All trees which provide us with material for the carpenter and joiner's use are what are called outward-growing trees—that is to say, those whereof the gradually increased size is brought about by successive layers, which might be said to be formed around the circumference of the stem or trunk, and close underneath within the bark. Each year generally adds one of these layers or rings, and consequently they are called *annual* rings; but each ring is, as it were, double, being made up of two distinct layers of a different nature and colour. The darker layer is more apparent in certain kinds of timber, and is usually a source of weakness in a varying degree; inasmuch as being, for the most part, composed of resin, it is of a soft nature, with very little power of resistance to either compression or tension; while, on the other hand, the lighter-coloured layer is that which possesses the greater tenacity.

The growth-processes, of which these annular rings are the result, are briefly as follows: The tree, during the autumn and winter, having been to all appearances dead, when spring comes round absorbs, by means of its roots, a considerable amount of moisture out of the soil; and this, in the form of sap, ascends the cellular tubes of the tree, and causes the leaves and signs of life to appear. As summer advances the leaves become stronger and of more substance, owing to the carbon extracted by them from the air; and as autumn again draws near the sap, in its more substantial state, begins to descend, leaving a layer of wood immediately under the bark; then the leaves, owing to the loss of nourishment, drop off. This action takes place each year, so that the age of a tree (in ordinary climates) can be ascertained by the number of its annular layers or rings. In cold climates, where of course trees do not grow so fast, the rings are not so thick, and the inner or "heart" wood is more compressed; so that timber of slow growth is considered to be of greater strength. The "heart" wood or "duramen" is the strongest, best, and most durable part of the tree, the outside or sappy part being considerably weaker, and practically unfit for use.

In addition to the annual layers or rings just explained, trees have what are called *medullary rays*, which are thin and generally broken lines, radiating from the centre or pith to the bark, and *vice versâ*, as fig. 261. These medullary rays or *transverse septa* are not very easily seen in some woods, but in some kinds of oak they are very apparent; and if the wood is cut obliquely they form a very beautiful *figure*, as it is commonly called, but also known as *felt* or *silvered grain*, from its light-coloured, and hard, polished appearance.

It may be as well to mention that trees generally should be felled in the middle of the winter, when the sap has descended and the tree is at rest. There is also a proper age for the felling of trees, as the young ones

are full of sap, and the old ones decayed at the heart; but only experience will enable one to judge of the proper time to fell, as the period at which a tree may be said to be at its prime varies from 50 to 150 years.

Good and Bad Timber.—The *characteristics* of good and the *defects* of bad timber may be dealt with simultaneously. Good timber should be cut from the heart wood of a well-matured tree, free from sap (of either white or blue colour), as well as from large loose or dead knots, shakes (whether they be cup, heart, or star shakes), rind-galls, and unevenness of colour. It should be regular, straight, and close in the grain, and when planed its shavings should be long and stringy; and it should shine when worked, smell sweet, and, when struck, give forth a clear sound; the fibres should be so straight and continuous that, when converted, very few of them would be cut through. The heart itself of a tree is much given to "shakes."

Wood is a conductor of sound, and the soundness of a log is often

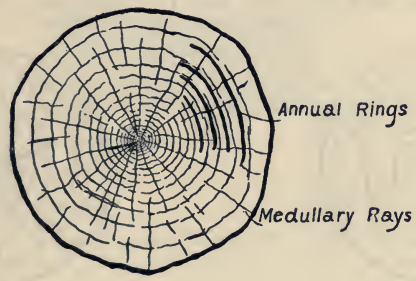

Fig. 261

ascertained by the way in which it transmits a "tap" from one end to the other. Failure as a sound conductor, or the transmission of a dull sound, indicates decay.

Sap is the most common defect in the timber of to-day, and is the result of the converter's desire to get as much bulk of timber as possible out of his tree, and being thus obliged to cut outside the circle of the hard or heart wood into the sap. Sap is, therefore, found at the sides or edges of the wood. Sap can either be of a blue or white colour; the one is as bad in the end as the other. They both lead to decay, and in varnished work cause a dark stain. There is no cure for it, and it must be cut away.

Knots, of whatsoever kind, whether hard, loose, or dead, are a source of weakness, as they break the continuity of the fibres; but they are not so serious a defect when hard and sound, except in the centre of a beam, or where great tensile strength is required. The presence of a large quantity of knots is always a serious defect in timber.

Cup shakes are those which encircle the pith and separate the annual

rings in a curved line, and, unless they are long and separate a large portion, they are not dangerous, *vide* fig. 262.

Heart shakes, the most common of shakes, occur at the centre of the tree, and radiate towards the bark, as fig. 263. These, of course, weaken the wood, and render it impossible to convert the tree into large-sized stuff.

Star shakes are similar to the last-named, but more numerous from the centre of the tree.

Rind galls are the result of the growth of the tree over a place where a branch has been improperly cut off. They usually take the form of irregular swellings.

Unevenness of colour.—This defect includes both "foxiness" and "doatiness," the former being a red or yellow stain, which betokens decay, and the latter a speckled stain foreboding the same thing, which is met with in American oak and beech.

Seasoning of Timber.—On the principle that prevention is always better than cure, we will deal first with the seasoning of timber, which is

Fig. 262.

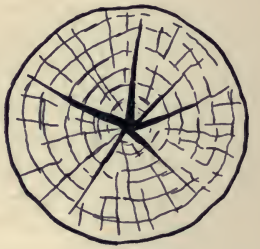

Fig. 263.

the next thing in importance to be attended to after the wood has been procured from a fully matured tree. The object of seasoning timber is to get rid of the sappy moisture which, as has previously been pointed out in these notes, is a great source of decay. This can be done by either drying up or driving out the superfluous moisture, a proceeding which of course reduces the weight of the timber. Tredgold maintained that the timber was not seasoned and fit for carpenter's use until it had lost one-fifth of its original weight; and for joiner's work he considered that it should have parted with moisture to the extent of one-third its weight before it was fit for best work.

There are several methods of attaining this end, the chief of which are as follows:—

Natural seasoning is a very simple procedure, and consists of stacking the timber, after it has been converted, edgewise on perches, so that, while the air can have free access all round it, the sun and wet can only touch the edge.

The method of operating is briefly explained thus: One length of timber is reared edgewise, and alternately from the sills of B and D (fig. 264), which should protect the bottom of the board from the damp

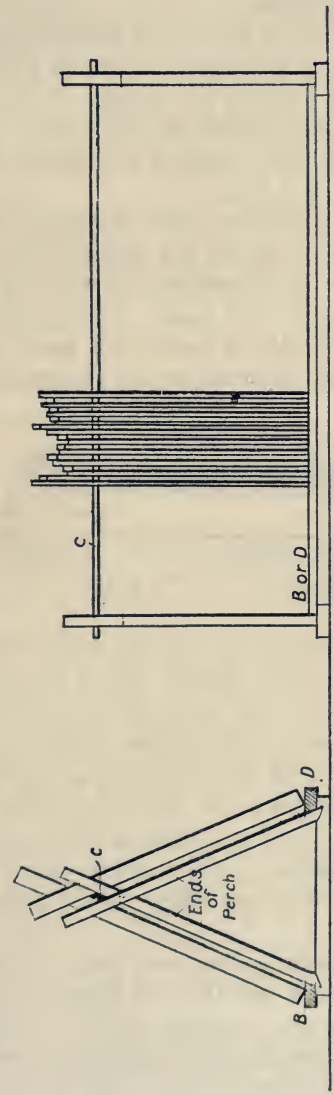

arising to the cross-piece C; by which means they are secured from moving at the top, and the air can circulate all round the wood, except just immediately over the cross-piece, without exposing the width, the greater surface, to the weather.

Floor-boards and other thin woods are sometimes stacked on the flat, on bearers raised off the ground, with a lath between each row of boards, thus (fig. 265). They are generally covered over, on the top only, with felt or other waterproof material.

In large yards the timber, of all sizes, is stacked under covered sheds, whereas it is best perched in the open, if in a shady position.

The seasoning process requires, for complete drying, about a year, for every inch in thickness, for converted and sawn oak or other hard woods, when perched or stacked under ordinary circumstances, and for fir and other soft woods about half as long.

Next to the natural seasoning comes the *water seasoning*, which is a simple method of washing the sap out, though this is generally applied only to logs. It consists of submerging the whole of the timber under either ordinary or salt water; the former being preferable, as the latter water has a tendency not only to harden the wood, but also to attract moisture when in the work, inasmuch as salt is generally affected by any

Fig 265 ½ Scale.

excess or variation of humidity in the atmosphere. The logs are kept wholly under the running water until the sap has had time to get washed out, then the logs are taken out, dried by the air, and cut to sizes; for unless they are dried before use they will be subject to dry rot.

Boiling and steaming, or *the hot-air method*, are similar: that is to say, in the one the sap is supposed to be driven out by the hot water, and in the other by the steam or hot air. They are all quicker processes than either water or natural seasoning; but they are certainly more expensive, and, moreover, they have injurious effects on the timber, by reducing its strength and elasticity.

It may be as well to mention that many kinds of timber require more than one seasoning, because each time the surface is planed, or anything is taken off, the wood is apt to shrink, as the air seems to harden the outside, and form a casing to the inside, and thus prevent its penetrating the wood under ordinary circumstances. This more particularly applies to floor boards and joinery, where the least shrinking is noticeable.

Preservation of Timber.—The object in preservation of timber is to save it from rot, whether wet or dry. There are many different ways and patented methods of trying to prevent these forms of decay; but, before

proceeding to explain them, it will be as well to say a few words on wet and dry rot.

Wet rot is really the decomposition of the wood, especially the sappy portions; and it takes place while the tree is standing, and also when the gases can escape; whereas *dry rot* occurs in the converted timber, and is generally brought about by fermentation, the result of confinement and lack of circulation of the air, which causes a fungus, similar to a cobweb, to encircle the wood and suck its very nature out, until it is reduced to a powder.

Wood is most subject to *dry rot* when in damp and warm situations, with no circulation of air. Ground-floor joists, with no ventilation, or with misplaced ventilation, are soon attacked by it. The ventilation should be placed where the air can circulate underneath the whole floor. The *corners* are generally ignored, and the result is soon apparent. The same result arises from timbers built into damp walls without a passage of air around them. Oilcloths also favour this form of decay, which is very difficult to get rid of. When once in a building it soon spreads all over. Dry rot, of course, renders timber dead as far as sound goes. A log may be good outside, while the inside is a mass of dry rot. This can be detected by the fact that it will not conduct a sound from end to end; or, in boring it, after the outside skin is penetrated, there is nothing but powder to resist the pressure.

The simplest method of preservation is, of course, to paint or tar the work, care being taken that the wood itself has previously been thoroughly seasoned, *or* the paint will keep the moisture in, and be itself the cause of decay. The same thing applies to *charring* the ends of posts, joists, etc., and *creosoting*. This latter is a process by which a mixture of oil and tar is forced (under pressure in tanks) through the pores of the wood. This is the most common, and perhaps the best, way of preserving timber which is required to withstand damp, especially sills and posts resting on or in the ground; but, at the same time, it is an objectionable method, because it makes the timber of a dark brown colour, almost black, and very greasy; and, moreover, the whole of the piece must be treated in the same way, so that nothing can afterwards be done to make it look respectable. It will take neither paint nor whitewash. In this respect it is that *charring* is far superior, though not so generally used, as it is only necessary to char that portion of the timber which is required to withstand more than ordinary moisture.

Among the patent processes the most common are :—

Burnet's, by which the timber is soaked in a watery solution of chloride of zinc, in the proportion of 4 gallons of water to 1 lb. of chloride of zinc. The advantage of this process is that it is colourless, and protects the heart; whereas the creosote is more greedily taken by the sappy part. This mode is very much used for wood-blocks for paving.

Boucherie's method consists of forcing sulphate of copper through the pores, but not in a tank, as in creosoting, the liquid being in this case poured into a hole at the top of the log, and the weight of the liquid coming from a tank above forces the other through. The disadvantage of this method is that the wood has to be cut into to allow the liquid to get a start.

Peters' (of Derby) *Carbolenium* is a mixture similar to creosote, which is put on the ends of joists. It can be applied with a brush before the joist is placed in the building; and it is said to be a great success. It is also used on all wall-plates and other members generally, whenever built within or into the walls.

Kyanising consists of injecting corrosive sublimate, dissolved and diluted with water, into the wood. It is said to be efficacious in preventing rot, and is especially used for seasoning railway sleepers, having an advantage over creosoting, in that it does not make the wood so inflammable.

Deal or Fir.—*Pine, red and yellow fir*, or "deal," as it is commonly though incorrectly called, is obtained from the northern pine, a fir-tree which is grown a little in Scotland, but chiefly in Norway, Sweden, and Russia. It is either of a red or yellow colour, very full of resin in quickly grown stuff, works easily, and is used for all ordinary purposes in this country, whether for joinery or carpentry. The ordinary trees are cut up into widths of 7, 9, and 11 inches, by $2\frac{1}{2}$, 3, and 4 inches in thickness, and in from 20 to 25-feet lengths, according to district; but the best and largest trees are converted into "balk timber," which commands a higher price, owing to its scarcity, and varies in size from 12 to 18 inches square, and up to 35 feet in length.

White deal, cut from the spruce fir, has not the strength and durability of the red or yellow kind; it is of a very dry fibre, full of loose dead knots, and only fit for painted work in common joinery.

Fir, of whatever kind, has very indistinct medullary rays, and the closer the annual rings the stronger it is; though, at the best, it has very little bearing strength, or power, or resistance, owing to the trees being felled before they have arrived at the age of maturity.

Balk timber is imported chiefly from the ports of Memel, Dantzic, and Riga on the Baltic; while the planks, deals, and battens—as the 11-inch, 9-inch, and 7-inch widths are respectively called—come from Norway, Sweden, Northern Russia, and Finland, countries where the coldness of the climate does not allow of the trees growing to a size suitable for balk timber.

Memel balk timber is of a coarse nature, neither of slow nor quick growth; and only suitable for carpentry and engineering purposes, owing to its coarse grain, and the large quantity of resin which it contains.

There are two or three qualities of this variety, and it is generally considered the strongest timber in the market, on account of its straight fibres and freedom from knots and shakes.

Dantzic balk timber is chiefly grown in Prussia, and is of a more knotty nature than Memel, though harder, cleaner, and closer in the grain; but it is nevertheless considered inferior.

Riga balk timber—almost unknown now in the market—is similar to the other two qualities, being of a very straight growth, comparatively free from sap, but rather shaky.

Norwegian planks, deals, and battens are distinguished by the blue stencil marks on their ends. They are either white or yellow, and not of a very first-class quality; being only fit for carpentry and scaffolding, though a large quantity comes into this country converted into floor boards, match-boarding, etc. Drammen and Christiania are the chief ports of shipment.

Swedish planks, deals, and battens are imported from Gefle, Soderhamn, Stockholm, and many other ports, and are distinguished by a red stencil mark on their ends. They are superior to Norwegian, the best qualities being very sound, even, and comparatively free from sap. They are used chiefly for carpentry, floors, etc.

Russian planks, deals, and battens are more of the red quality, far superior to either the Norwegian or Swedish, and used chiefly for joinery; being harder, brighter, cleaner, stronger, freer from sap and knots, and of a kinder nature to work. The Petersburg, Archangel, Onega, and Uleaborg (Finland) are the best kinds, and are distinguished by marks cut in the ends by a branding hammer.

Fir, of whatever kind, weighs on the average about 1 ton per 50 cubic feet.

The working stress of good Memel, per square inch of section, is about 12 cwt. in tension, 10 cwt. in compression, and 12 cwt. in bearing; compared with 10 cwt., 7 cwt., and 7 cwt. respectively for the ordinary inferior qualities of fir.

America and New Zealand both grow trees of the pine class, but the wood they produce is inferior to that from the Baltic in strength; though it is freer from knots and other imperfections, kinder in nature, of wider width, and more suitable for joinery and cabinetwork. The chief kinds are: the Canada red pine, which bears all the usual qualities, except that it is inclined to be knotty, and is not very wide. American yellow pine, though expensive, is an invaluable wood to joiners in this country, as it has all the good qualities of a joiner's wood, with a kind nature, bright, close, and easy grain, comparative freedom from knots, and can be procured in very wide widths, so that it is excellent for panelled work. It is not very strong or durable in this climate, but passable when painted.

Pitch pine is grown in the Southern States of North America, the best coming from the neighbourhood of Savannah. It is a very red wood owing to the large amount of resin it contains, and consequently is difficult to work, as the viscidity soon affects the joiner's tools. Its hardness makes it a valuable wood for wear, while some of it has a most beautiful appearance, which renders it suitable for best varnished work, It is heavy in weight, but very durable and strong, though subject to shakes and sap. Its annual rings are very conspicuous, its grain straight, and comparatively free from knots. On account of the resin it contains it will not take paint properly, nor yet creosote. It is imported in logs of 12 to 18 inches square, and can be procured in very long lengths, sometimes as long as 70 feet.

Oregon, *Quebec*, and *St. John's pine* are other names given to North American pine, distinguishing the districts whence it comes.

Kawrie pine, found in New Zealand, is a hard, pink-tinted wood, with a very close, even grain, free from knots and other defects. It can be procured in very wide widths, will take polish well, and is most suitable for table tops, cabinetwork, etc.

Elm comes from a British-grown tree of the same name, can be procured in wide widths, and withstands damp, though not alternate wet and dry atmospheres; its grain is very coarse and tough, shakes are almost unknown to it, but rotten holes are often met with; it is of warm brown colour tinged with purple, and the sap of a light cream. Elm is chiefly used for piles and similar work exposed continually to wet, and in damp situations, pump-planks, stable divisions and doors—the latter on account of the dislike that horses have to biting it; and its great resisting power renders it very useful for curbs, bumping-blocks, etc.

Oak.—The chief varieties of this wood are English, Stettin, Wainscot, and American. It is very hard, tough, close, and durable, and is used by both carpenter and joiner. It is of a light brown colour, has medullary rays in it to a conspicuous degree, in addition to the annual rings, which should be close and regular to denote the best quality.

The English variety is obtained from either the "stalk" or "cluster fruited" trees, the latter being the darker in colour, heavier, tougher, and more durable quality of the two. Both kinds are much used in this country, where strength and durability are the chief requirements, especially for window and door sills, wall-plates, roofs, steps, posts, fencing, etc. It is hard to work, especially when young and wet, being more of a carpenter's than of a joiner's wood, is very elastic, and can be easily bent when steamed.

Its weight is about 40 cubic feet per ton, and its compressive strength may be taken at 13 cwt. per square inch; bearing strength at 25 cwt., and tensile strength at 16 cwt. These results are based on the same standard, or working stress, as other safe quotients given in these notes.

The gallic acid which oak contains corrodes all iron with which it comes in contact; wherefore, screws, bolts, etc., to be used with it, should always be galvanised.

Stettin oak, so called after the port whence it is shipped, is at first sight similar to the English species, and is very often substituted for it, but it is not nearly so strong or durable. It is softer and easier to work, though inclined to be woolly. Loose dead knots and decayed pores are very often met with in it, and when it is wet and unseasoned it gives off a sour odour. It is imported in logs, and is employed for the same uses as the English.

American oak has a pink tinge in it, and is similar in texture to the last named, though sound, hard, tough, and elastic. It is used as a substitute for English oak.

Wainscot oak is chiefly shipped from the Baltic ports, Riga and Dantzic. It is imported into this country in logs cut "on the quarter." This kind of oak is grown chiefly in Poland and Austria, and is essentially a joiner's wood, being more expensive than the other kinds, and used only for best internal finishings. It is hard, of a light brown colour, with a close, compact, and even grain, though it is kinder in nature and less durable; knots are seldom met with in it, and it is the absence of knots that leads some people to note the difference between it and the best Stettin, which is, in fact, very much like it in most other respects. Wainscot is full of little pores, and sometimes white specks; the medullary rays are very conspicuous, if it is properly converted "on the quarter," and give it a beautifully figured appearance. The "Crown Riga" is often specified as the best quality. It is used for all kinds of joinery and cabinetwork, as well as for flooring, and will take polish well.

Teak is both a carpenter's and joiner's wood, found in Southern India and Burmah, where it is sometimes called the Indian oak. It is very straight in the grain, has no medullary rays, and is of a warm brown colour, tinged with yellow, in contrast to the purple tinge of elm. Teak is very brittle, whereas oak is tough. It has a peculiar smell, but does not corrode iron; it never swells, and is as strong as oak, free from knots, but subject occasionally to shakes at the heart. It is used for window-sills, treads to steps, bumping-blocks, and the best kinds of joinery. Railway companies use a great deal of it for carriage doors, on account of its non-liability to swell, and it is much used in shipbuilding. It will polish well.

Greenheart, found in the North of Southern America, is very often used as a substitute for teak, being much cheaper, and at the same time possessing the qualities of teak—viz., a fine, hard, and close grain, and great strength and resistance to crushing.

Mahogany is imported in very large square but short logs from Honduras and Cuba, the former being very much softer than the latter, and easier to work; in fact, some of it, called "Baywood," is very little

more costly to work than deal. In colour it is a light mixture of red, brown, and yellow; shiny, close, hard, and yet kind in grain, free from the general defects, but it will not weather, and is only used for joinery, table-tops, handrails, and internal best finishings. It will take a nice polish.

Cuba, or Spanish mahogany, is considerably harder than the last-named variety, darker and richer in colour, full of little pores and silvery specks—due to the presence of lime—which dull the joiner's planes. It is far superior to the other kinds, more expensive, harder to work, and is only used for the best polished work.

Walnut is of two kinds, Italian and American, very different from each other in quality and nature. The Italian is really a cabinet-maker's wood, though occasionally used in the best of joiner's work. It is much harder, closer, and of a brighter colour than the American. It is principally used for piano cases and best cabinetwork; while the American is made up into doors, windows, dadoes, and other best joinery finishings—the colour being a *dull* light mauve, though it is often called "American *brown* walnut," being imported from New York, while the "American *black* walnut" is imported from Quebec in Canada.

Beech, the only other wood which is really of any *great* use to the building trades, is a hard, close, light-coloured, and speckly wood, obtained from the English tree of the same name. It is chiefly used for sinks, drainers, etc., where its hard, non-absorbent properties are of advantage; and the handles of carpenters' and joiners' tools are made of this kind of wood.

Ash, an English-grown wood, is remarkable because it has apparently no sapwood. It is tough, though easily worked, and very durable in a continually dry atmosphere. It is of a brownish-white colour, and used chiefly by cabinetmakers, on account of its elasticity and flexibility, which render it unsuitable for building purposes.

Sycamore is a white or yellow-coloured wood, from the *plane* tree, found in the North of England. It is of a very compact, firm, and durable quality, and will not warp. Builders scarcely ever use it, except for patterns.

Birch is another hard, English-grown wood, being more of a builder's wood than either of the two preceding kinds, as it is often used for hand-rails, stair-treads, etc. It is of a light yellow, speckly colour, very close and even in the grain, and sound. It is much used in the manufacture of furniture.

CHAPTER VIII.

WOOD FLOORS.

Naked Floors and Floor-boards—Single Floors—Floor Joints—Double Floors—Framed Floors—Flooring.

Naked Floors and Floor-boards.—Wood floors are, practically speaking, made up of a skeleton framing, called "naked flooring," surrounded and supported by a brick, stone, wood, or iron enclosure, and covered by boards of different kinds, to form a close and level platform above an open space.

The floor-boards are of various and more or less intricate sections, but one and all could be used at the same time as a covering to each of the different kinds of naked flooring, without any real detriment to the strength of the floor as a whole, provided the various sections be each of a sufficient and the same thickness.

Naked floors are really of three classes, though there may be different ways of carrying out the principles which distinguish one class from another. The simplest and most common class are called *single* floors, consisting of common joists only placed 12 or 13 inches apart, or 15 to 16 inches centre to centre, forming a bridge from wall to wall to support the boarded floor of the room above and the ceiling of the room beneath. It is this that gives the name of *bridging* joists to those joists which in all classes carry the floor-boards. The other two kinds of naked flooring are called *double* and *framed* floors, each of which will be fully described in the course of these notes later on.

Single Floors.—Single floors are suitable for all spans up to 16 feet, though they must be strutted after the span exceeds 8 feet. They are the simplest, cheapest, and strongest kind of naked floor, consisting, as before noted, only of the bridging or common joists, spanning from wall to wall, and carrying the flooring above and ceiling beneath. These advantages are, however, accompanied by the following disadvantages, which sometimes, in special cases, predominate :—

1. The ceilings are apt to crack, on account of the sagging of the bridging joists, when in long lengths.

2. Wood being a conductor of sound, these joists, having no intermediate space between them, and carrying both the floor of the one room and the ceiling of the other, conduct the noises from one room to the other.

3. The joists, going from wall to wall, and having no other supports, distribute the load of the floor equally along the whole length of two of the enclosing walls, whether the wall is one solid mass or full of openings, in which case either the joists have to be carried by plates or lintels built in over the doors and windows in the wall beneath, or they have to be "trimmed" round them. Both methods cause weak points in the construction of a building.

The joists of the ground floors of buildings, when not above cellars, need not be so strong as for other floors, because dwarf sleeper walls, which reduce the spans, can be built on the ground to carry the wall plates which support and distribute the weights and pressure of the bridging joists.

Fig. 266, in plan and sections, illustrates a ground floor supported by simple naked flooring, consisting of bridging joists, B J, carrying the floor-boards from wall to wall, with intermediate dwarf walls to lessen the span and carry the wall plates, W P, to which the bridging joists are secured. The dwarf or sleeper walls both render the floor more rigid, and effect a saving of timber

A damp-proof course must always be put under the wall-plates, to prevent the damp arising; and it is better that these ground-floor wall-plates should be of oak.

It should be noted that the wall-plates, W P, on the outside main walls, are not built into the main wall, but supported on sleeper or dwarf walls; inasmuch as the building-in of all wall-plates into the carcase walls of a building is held to be objectionable, on account of the dampness of the walls soon causing them to rot. It is the best plan to put the joists on two rows of hoop-iron, so as to distribute the weight to the extent required in the walls, or to support the wall-plates on corbels or over-sailing courses projecting from the main walls, care being taken to anchor the ends of the joists to the walls by means of iron, so that the enclosing walls are tied together by the joists.

Where fireplaces occur in ground-floor rooms it is usual to build fender walls round them, as X on section A B, fig. 266, to carry the wall-plates, and thus save trimming, which will be explained later on.

When single naked floors are used above other rooms it is obvious that the only support the bridging joists can have is the enclosing walls; and consequently it is necessary that the joists must be stronger, in proportion to the distance between the walls which have to carry them.

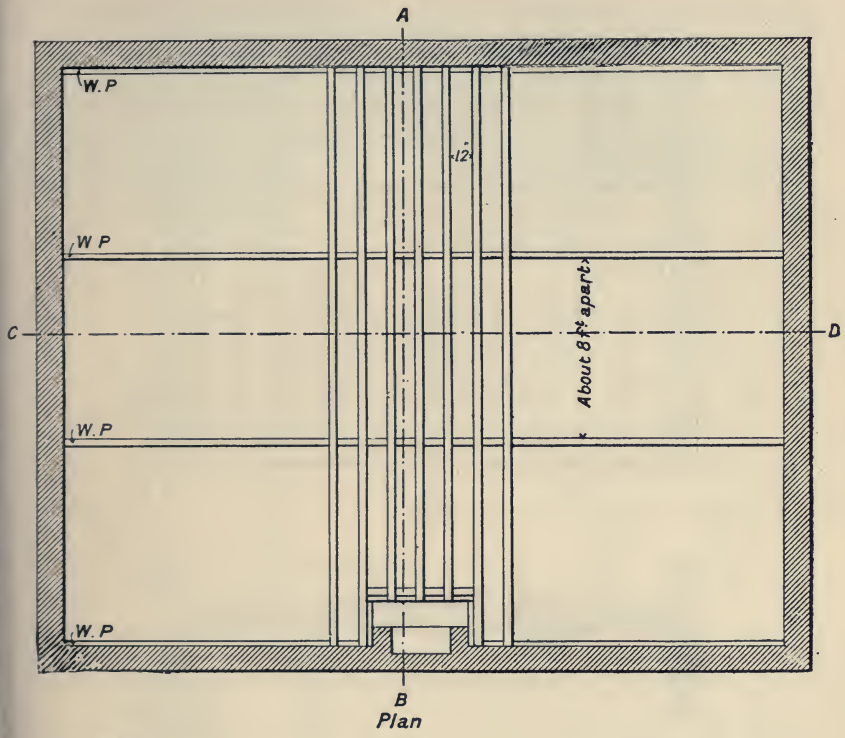

Plan

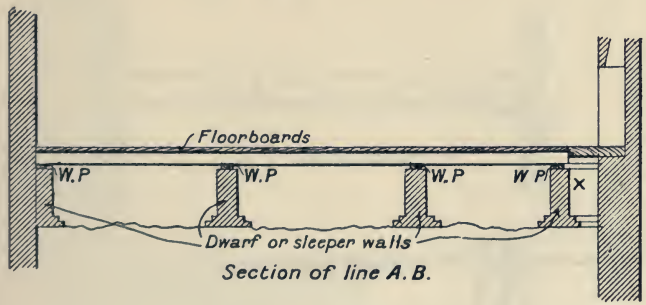

Section of line A. B.

Scale $\frac{1}{8}$th inch = 1 foot

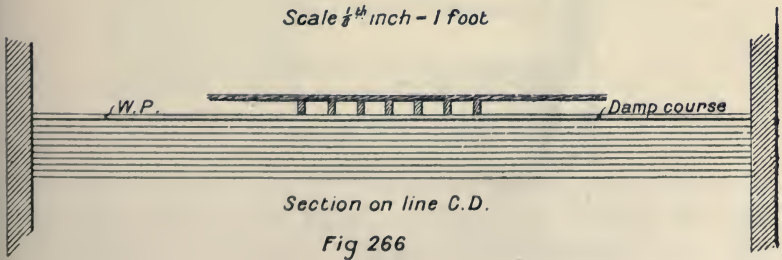

Section on line C.D.

Fig 266

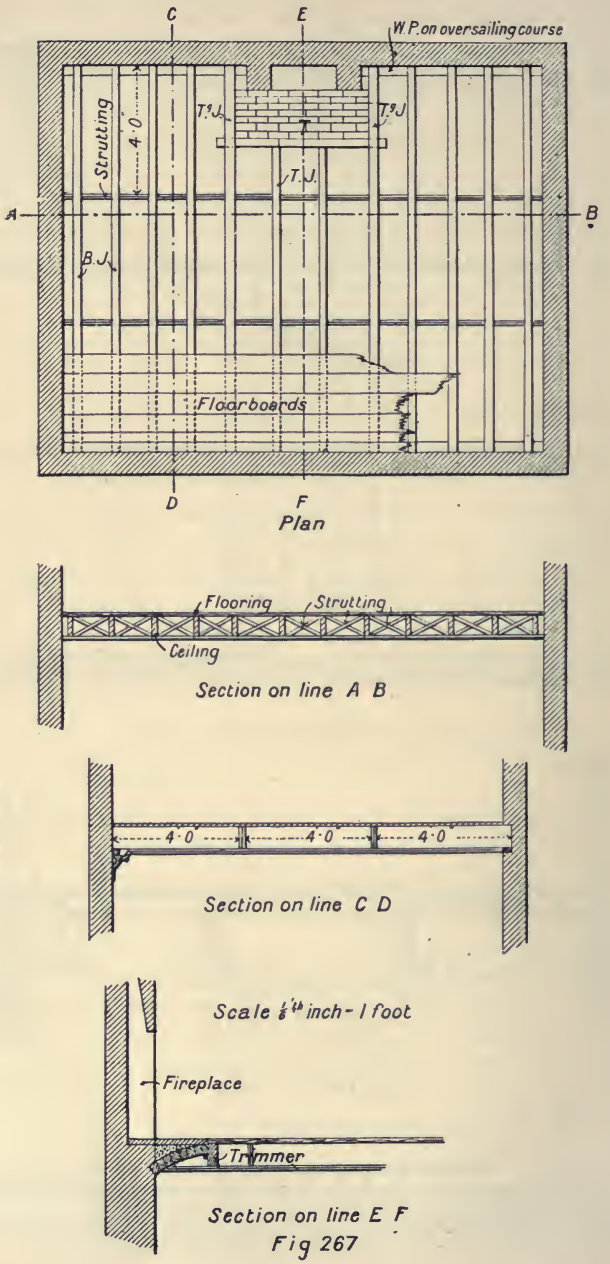

Fig. 267 illustrates, in plan and section, a single floor, carrying a boarded floor above and ceiling beneath.

It will be seen therefrom that the bridging joists span from wall to wall, a distance of 12 feet, and carry the floor above and the ceiling below.

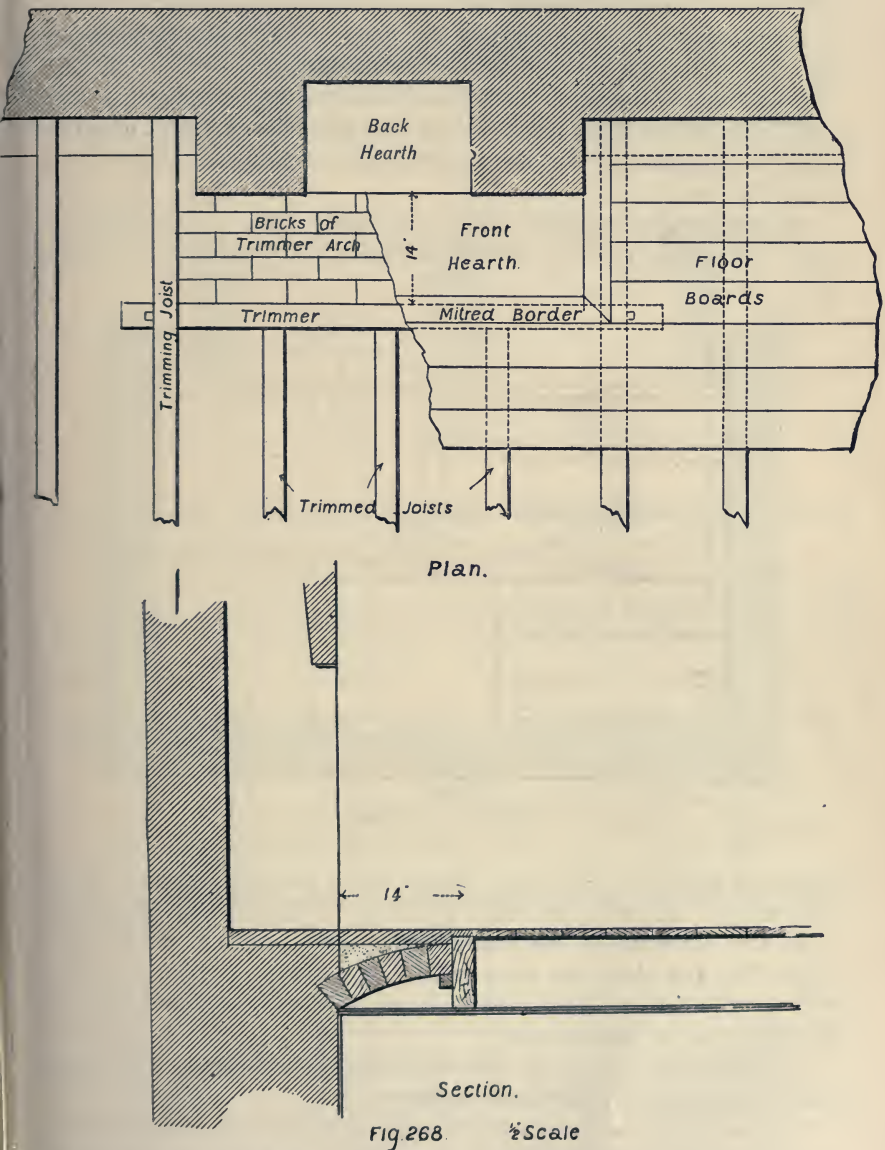

Fig 268. ½ Scale

The ends of the joists rest on the wall-plates, W P, which are either built in the walls, as shown on the right-hand side of section C D, or rest on two courses of brick oversailing, as on the left hand of the same.

When the cornices below allow of the wall-plates being put on projections, and not built in the walls, that is the best, as the joists can be nailed to them; but when this cannot be done, it is better—as wall-plates built in soon decay—to lay the ends of the joists on two rows of hoop-iron, instead of on the wall-plates shown on the right-hand side of section C D.

On account of the risk of fire to which the building would be exposed if the ends of the joists rested on or near the chimney breast, it will be noticed on the plan, fig. 267, that the joists are trimmed round the fireplace to avoid any such risk.

A joist, stouter in width, called a trimming joist, T J, is placed an inch or two away from the side of the breast; and at 14 or 18 inches

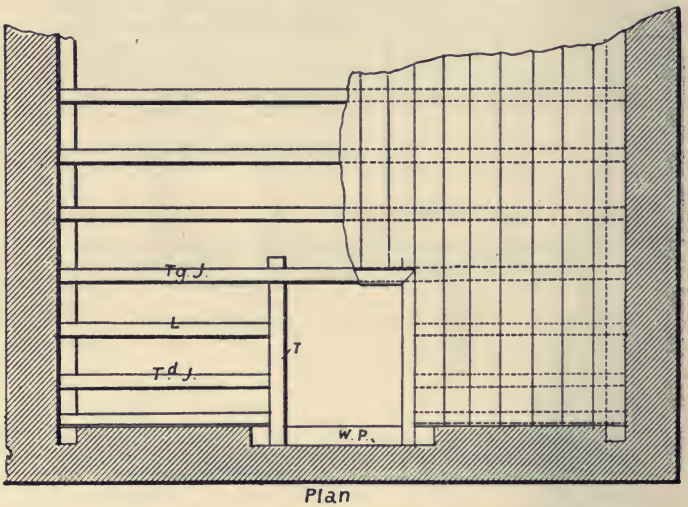

Plan

Fig. 269. ¼ Scale.

away from the face of this breast—according to the width required for the hearthstones—another joist, called a trimmer, T, is placed, running parallel to the face of the breast, and the ends of it are framed into the trimming joists, T J; and along the trimmer, in equal spaces of about 15 inches, from centre to centre, the trimmed joists are framed, with the other end resting on the supporting wall.

The plan and section, fig. 268, are intended to illustrate the explanation just given of *trimming* round fireplaces.

Fig. 269 will show the student how to trim round well-holes, trapdoors, and other openings, where the bridging joists run in a different direction.

efore proceeding to define and illustrate joints usually met with in single floors, it will be as well to explain one or two items which, though belonging to other kinds of floors as well, are connected with single floors.

Herring-bone strutting, *cross-nogging*, or *stemming*, is a means of strengthening and stiffening the bridging or common joists, and consists of small pieces of 3 × 1-inch or 3 × 2-inch stuff, fixed diagonally between the joists, as fig. 270.

There are two independent lengths in a row of it, as A A and B B, and they stretch from wall to wall, thus forming one continuous connection or support between the walls, and rendering each joist perfectly stiff—one row abutting on each side of the top of the joist, and the other at the

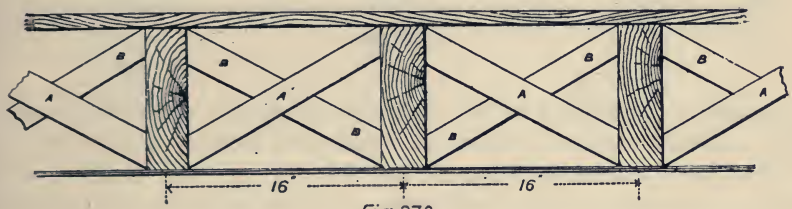

Fig 270

bottom thereof. A row of this strutting, consisting of two courses, should be inserted every 4 feet apart where the span exceeds 12 feet.

Solid strutting or stemming is an alternate method to the latter, and used in a similar way for the same, and it consists of a solid piece of wood the depth of the joist and $1\frac{1}{2}$ inches thick, let in between the joists in one continuous line from wall to wall.

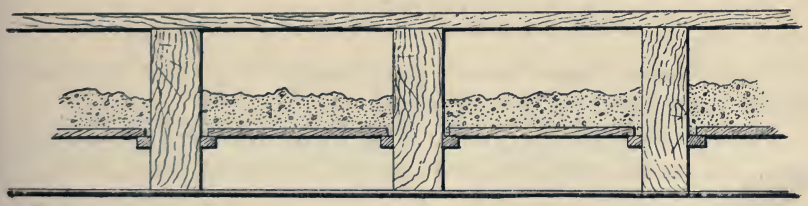

Fig 271

Pugging is supposed to be a remedy for the prevention of sound being conducted from one room to another by means of the floors. On each side of the joists $1\frac{3}{4}$ × $\frac{1}{2}$-inch laths are nailed from wall to wall; and resting on these laths, between the joists, the *sound boarding*, as it is called, is laid, to carry the mixture which is to deaden the sound. (See fig. 271.)

This mixture is laid on the boards to a thickness of about 3 inches, and it consists of either ordinary mortar, with an admixture of hay, or of sawdust or ashes, or of asbestos or silicate cotton in slabs.

Another method is to nail cedar-felt from joist to joist, as on sketch (fig. 272), and fill in the space with sawdust.

Some of these kinds of pugging cause the joists to rot, owing to the

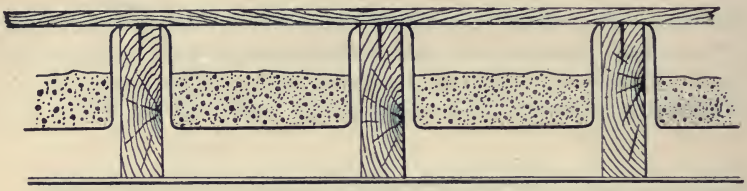

Fig 272

dampness of the mixture or the want of air-circulation which they entail; and, to obviate this, some floors are constructed specially with a view to prevent the conduction of sound; but they involve extra expense, and raise the building a very little higher. Some people would call the

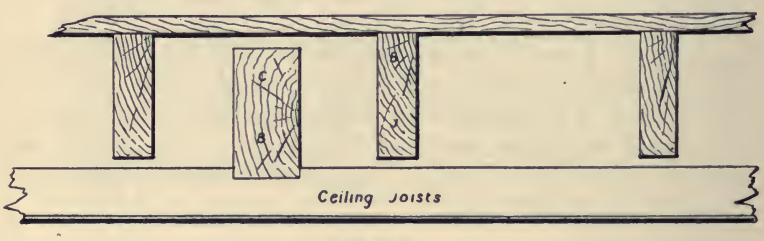

Fig 273

method a "double" floor; but this is not done for the purpose of strength, though it may be double in construction.

Fig. 273 shows ceiling beams, C B, inserted between the bridging joists, B J, placed about 8 feet apart, to carry the ceiling joists; which, it

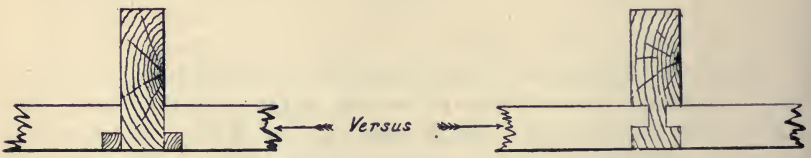

Fig 274

will be seen, make the ceiling independent of the floor and not liable to be affected by any vibration of the floor itself.

Floor Joints.—All joints in carpentry should be made in such a

manner that the timbers are weakened as little as possible by loss of wood; and wherever one bearing timber has to support others it is of great advantage, if possible, to nail fillets on to the sides of the timber, and notch the others over it (as figs. 274 and 275), to avoid weakening the one by the mortises to take the tenons of the other. The weaker method is shown on the right, and the preferable and stronger method on the left.

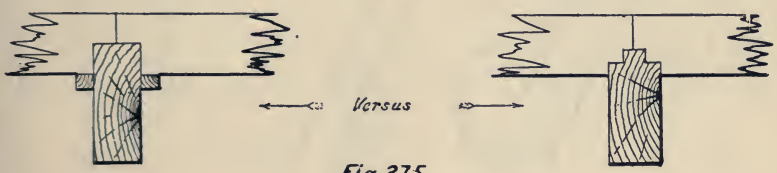

Fig 275

Wall-plates, when not of sufficient length to go the whole length of the wall, are connected by *scarfs* (fig. 276), a wedge-shaped piece being cut out of each end, so as to fit one another when connected; *and where they return at angles* the connection is then made by *halving*, or *bevelled halving*, the two ends, as shown in fig. 277.

The *halving* process consists of cutting a piece off the end of each plate, across their entire width, and to half their depth; while in the *bevelled halving* the remaining parts are bevelled alternately, to fit one another and prevent any displacement of the joint.

Fig. 276.

The *dove-tailed notch* is made by cutting halfway into each plate, with one side of each plate left straight and the other dovetailed, to prevent its being drawn out, as fig. 278.

The joists are generally spiked on to the wall-plates, or they are *notched* and nailed on to the plates (fig. 279).

Another method of attaining the same object is by *cogging*—though it is seldom used except for beams—when a "notch" is made in the underside of the beam, which fits on to a piece left on the wall-plate, which is similar to the cog of a wheel; whence the method is called "cogging" (fig. 280).

The only other joints met with in single flooring are those connected

Halving.

Fig 277.

Bevilled Halving

Fig 278

Fig 279.

with trimming, and they apply as well to double and framed floors as far as the joists are concerned.

The joint between the trimmer and the trimming joists is called a *tusk tenon*, and illustrated by fig. 281, where it will be seen that the tenon, T, with the horn, H, and tusk, K, are cut out on the trimmer and let into a similar mortise, with the bearing or shoulder, S, on the trimming

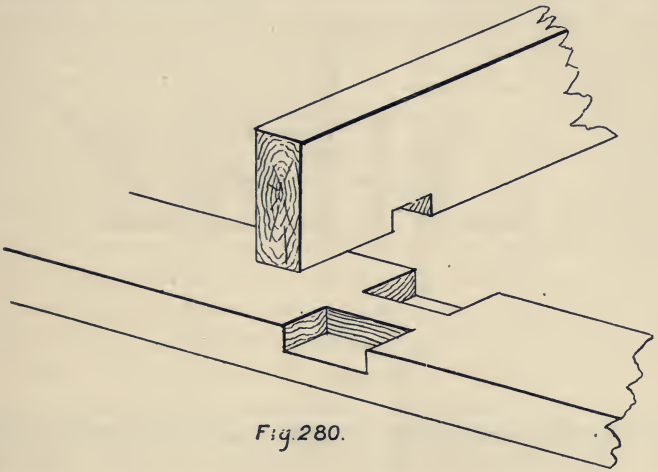

Fig. 280.

joist. After they have been tightened up together, *in situ*, a pin, P, is driven through a mortise in the tenon, T, as shown on the plan, fig. 282.

The trimmed joists are framed into the trimmer by means of a joint similar to the last, only without the tenon being pinned, as shown in fig. 283.

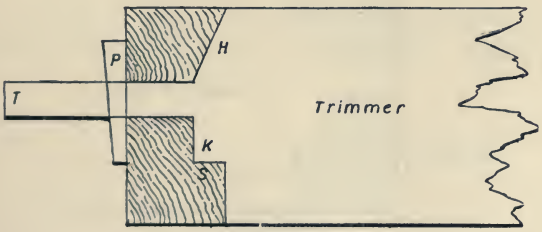

Fig. 281.

Single naked flooring can be made quite strong enough for ordinary purposes over spans up to 16 feet, the strength of the floor depending chiefly on the depth of the joists, the safe strength and depth of which can be ascertained by "halving the span in feet, calling the quotient inches, and adding 2, which gives the depth required in inches." For example: the span being 10 feet, 10 feet ÷ 2 = 5 inches; 5 inches + 2 = 7 inches; therefore the depth must be no less than 7 inches, and the

width $2\frac{1}{2}$ or 3 inches, according to circumstances; although little depends on the width, which is usually either 2, $2\frac{1}{2}$, or 3 inches. Trimmers and trimming joists of course need to be stronger, and it is usual to add 1 inch in thickness for them, or $\frac{1}{8}$th of an inch for every trimmed joist which need only be the same as the common or bridging joists.

Double Floors.—*Double* floors are used for spans of over 16 feet,

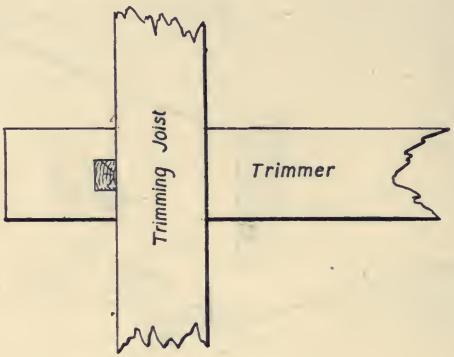

Fig. 282.

to reduce the bearing of the bridging joists; for which purpose large beams called *binders* are placed—at intervals of every 10 feet, at most—between two of the walls and resting on the other two.

Double floors have the advantage of stopping the passage of sound, and rendering the bridging joists stiffer, so that the ceilings are not so liable to crack; and they also act as a tie to the walls of the building.

Fig 283.

On the other hand, they are more complicated in construction, which is always a defect; and, moreover, they raise the building and add expense thereby.

It should always be borne in mind that, as the "binders" collect the weight of the floor off the "bridging joists," they must be supported by solid masonry, brick, or ironwork—not placed over openings, as can be done with the ordinary joists. This is sometimes an advantage, especially

where the walls beneath are full of openings. In such cases the "binders," carrying, as it were, the whole weight of the floor, can be placed over solid

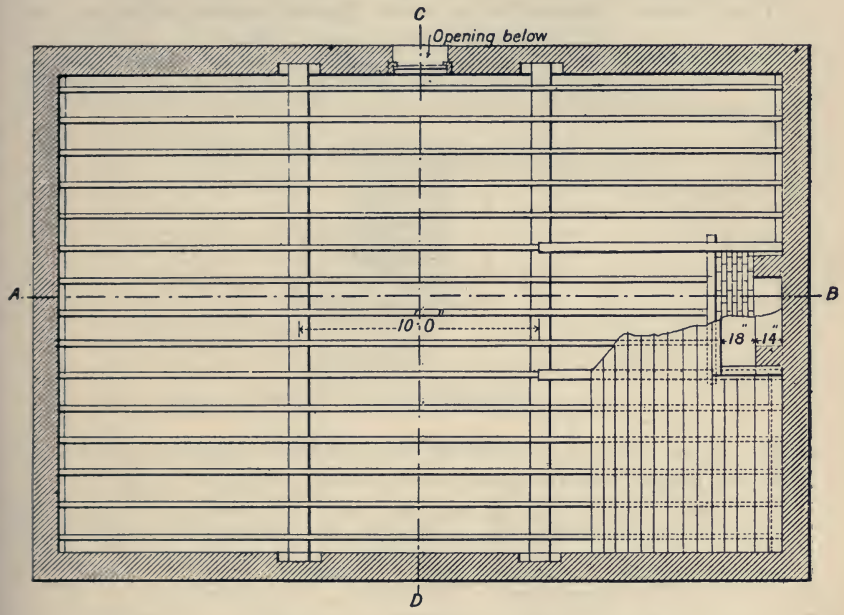

Plan

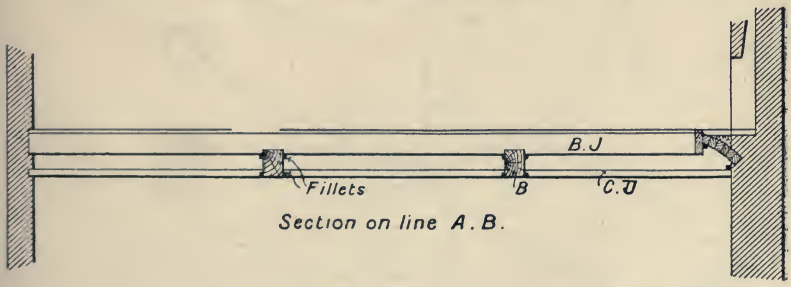

Section on line A. B.

Scale $\frac{1}{8}$th inch - 1 foot



Section on line C D

Fig 284

parts, sometimes specially designed for them; and the weaker parts above the openings can be left without any weight at all on them.

In fig. 284 the plan and sections are illustrations of a double floor.

The space between the binders is called a *Case Bay*, and that between the binder and the wall a *Tail Bay*.

The "binders" should rest on stone templates on the walls, in a little

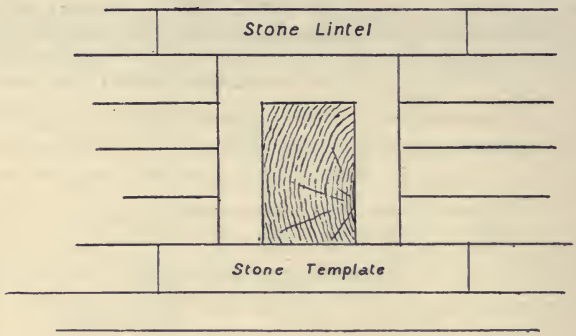

Fig 285. 1" Scale

recess, as fig. 285, so that the air can circulate round the wood, as to build any timbers into the damp walls is always conducive to rot.

The joints used in this flooring are similar to those last described for

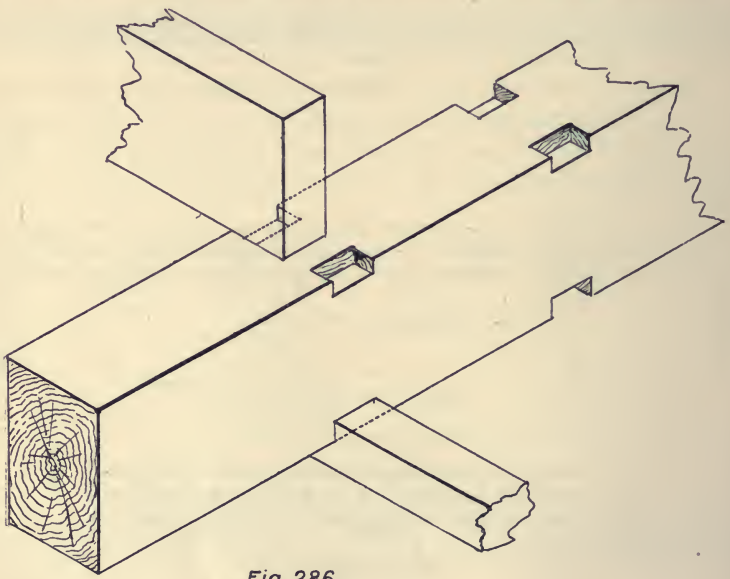

Fig. 286.

single floors, the only addition being that whereby the bridging joists, etc., are fixed to the binder. The joists are generally notched on, as fig. 286; but this is a bad way, as the notches, being cut out of the "binder," weaken it to a great extent.

The better plan is, as before explained, to nail fillets on the sides of the binder and notch the joists, instead of the binders which carry the joists and the floor, as fig. 287.

Sometimes the ceiling is put on the underside of the bridging joists where the height of the rooms below will not allow of special ceiling joists; in which case the "binder" is planed and moulded to prevent its being so

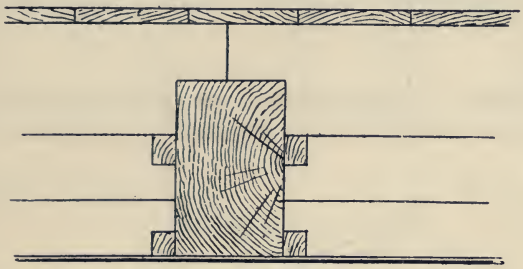

Fig. 287. 1" Scale.

great an eyesore, and it has to be notched for the bridging joists, or they are cut away where they take the bearing, a process which in no way weakens the framing (*vide* fig. 288).

The *chase-mortise* is also a joint that is employed in this kind of floor. It consists of a tenon cut on the ceiling joist and put into the

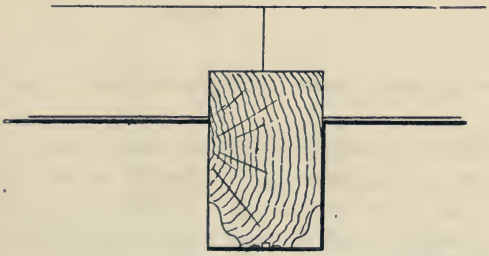

Fig. 288. 1" Scale.

mortise which is cut out of the fixed "binder" with bevelled slide into it, as shown in fig. 289. This joint is very handy in cases where the "binders" (or mortises) are so placed that the tenon cannot be fixed in as usual. It is also used when the space allotted to the depth of the floor will not allow of the ceiling joists projecting below the binder.

Binding joists are only required for spans above 16 feet, unless under exceptional circumstances. The best way to impress on the memory the sectional dimensions required for the different spans is to take 5 inches wide and 8 inches deep as the standard for 10-feet spans, and to add

1 inch in depth and $\frac{1}{2}$ an inch in width for every additional 2 feet. Thus we should have the following dimensions:—

8	inches	deep	by 5	inches	wide,	suitable for 10-feet	spans.
9	,,	,,	$5\frac{1}{2}$	,,	,,	12	,,
10	,,	,,	6	,,	,,	14	,,
11	,,	,,	$6\frac{1}{2}$	,,	,,	16	,,
12	,,	,,	7	,,	,,	18	,,
13	,,	,,	$7\frac{1}{2}$	,,	,,	20	,,
14	,,	,,	8	,,	,,	22	,,

Framed Floors.—"Framed floors" are used for spans of 24 feet and over, and consist of girders placed 10 feet apart, in addition to the binders,

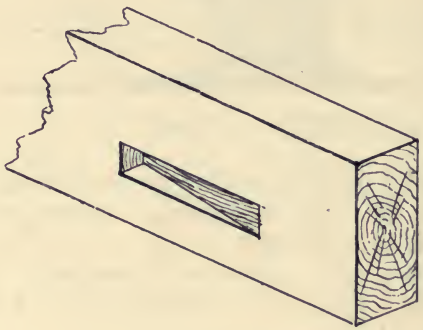

Fig. 289.

bridging and ceiling joists known in connection with other kinds of floors (*vide* fig. 290).

To save repetition, it may be said that framed floors have the same objects, advantages, and disadvantages, as double floors—but of course in a higher degree—and the same rules apply to both.

It should be borne in mind that two binders should never be tenoned into the girder at one place, as that would almost cut it in two, and weaken it too much; but they should be placed *hit and miss* fashion as X. (See fig. 290.) The method of jointing is shown in the sections A B, C D.

A better way to secure the binder to the girder, without cutting into the latter, is as fig. 292. An iron stirrup is hung over the girder, with a shoe on each side, to receive the binder. The stirrup is secured to the girder by a bolt at the head.

The girders of framed floors must necessarily be stronger in proportion than binders; and taking 13 inches deep by 11 inches wide—for a 20-feet span—as a basis (by the same rule as that for binders), adding 1 inch in

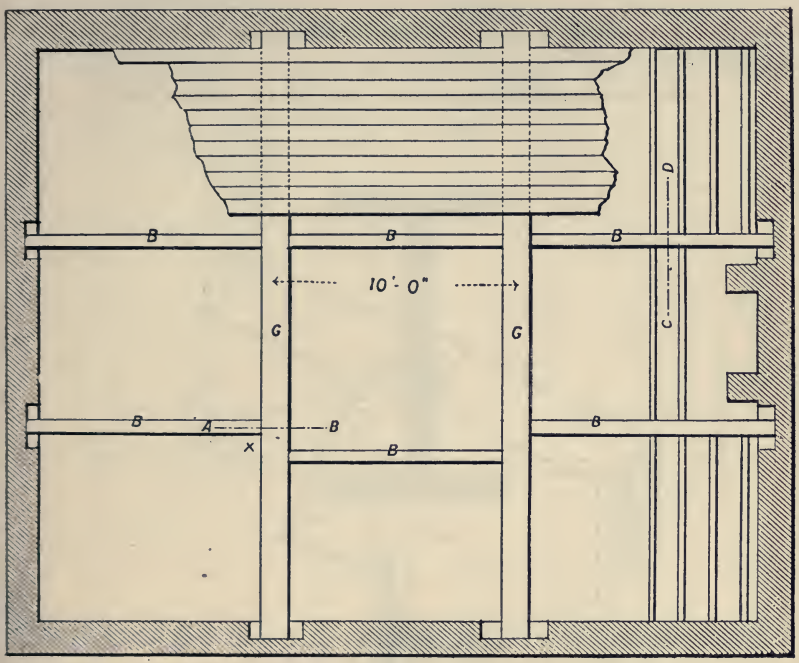

Plan.

Fig. 290. ½ Scale

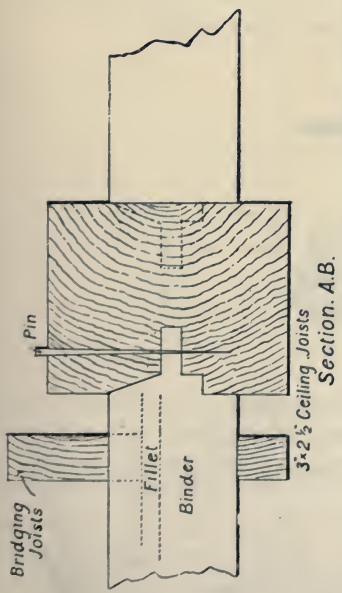

Section. A.B.

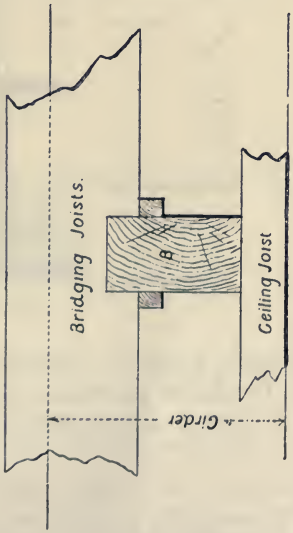

Section. C.D

Fig. 291 1' Scale.

depth and $\frac{1}{2}$ an inch in width for each additional 2 feet in span, we have for—

20	feet	span	a girder	13	inches	deep by 11	inches wide.
22	,,	,,		14	,,	$11\frac{1}{2}$	,,
24	,,	,,		15	,,	12	,,
26	,,	,,		16	,,	$12\frac{1}{2}$	,,
28	,,	,,		16	,,	13	,,

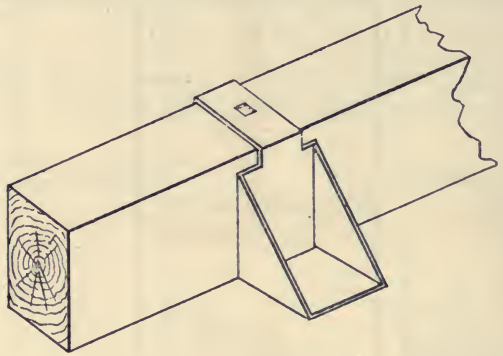

Fig. 292.

Ceiling joists are generally of uniform size—viz., $3\frac{1}{2}$ inches deep by $2\frac{1}{4}$ inches wide, and are fixed 12 or 13 inches apart; and they should have a bearing, whether on a wall or to a beam, at every 8 feet.

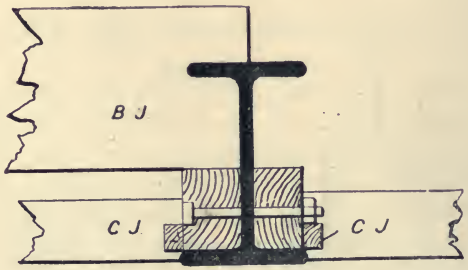

Fig. 293

Iron binders and girders of different sections, in place of wood, are now used, chiefly for double and framed floors; the bridging and ceiling joists being fixed to wood plates bolted to the flanges of the wrought-iron binders, as fig. 293.

In framed floors the binders, with the wood bridging and ceiling joists, are placed between the top and bottom flanges of the girder, and connected with angle irons bolted to the flange of the girder, as fig. 294.

Wooden beams, binders, and girders are often *flitched* to strengthen them—that is, they are cut in half, and reversed with a thin wrought-

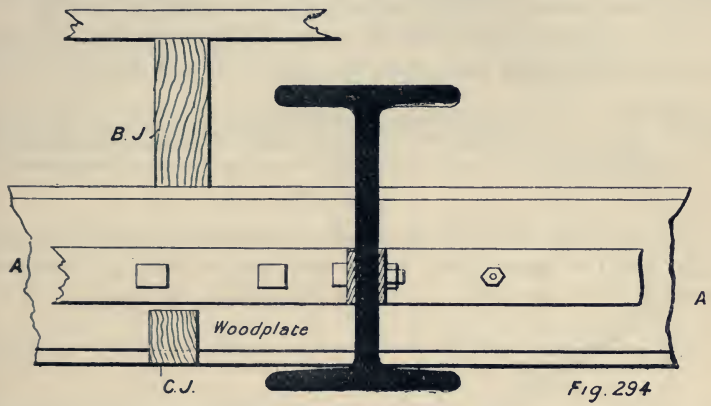

Fig. 294

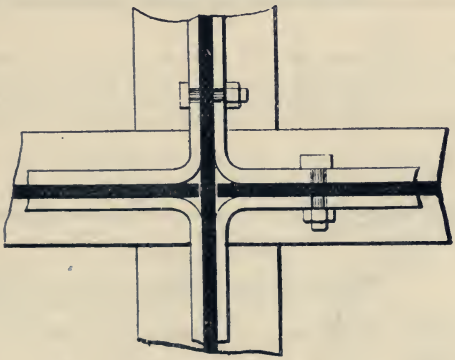

Sectional Plan at A. A

iron plate between them, as fig. 295, the three being bolted together transversely, as shown in the section.

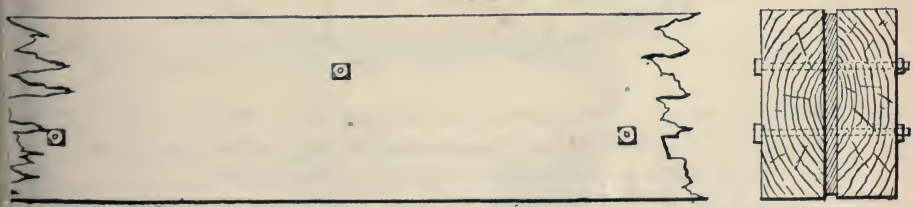

Fig 295

Or, they are, in exceptional cases, *trussed*, as fig. 296, by a king truss, or by a queen truss, as in fig. 297.

The beam or girder is cut in half, and reversed as the last, but instead of the flitch plate a framed truss, composed of wrought-iron abutments and hardwood struts, is bolted between the two halves, as shown.

Another, though inconvenient, method of trussing is as figs. 298 and 299, which explain themselves, the shoes, Z Z, and stays, Y Y, being of

Fig. 296

cast iron, and the rods, X X, being of wrought iron to resist the tension. In this case the beam is not cut in two, but the rods go through it, as illustrated. The strength of the truss depends on the length of the struts



Fig 297

from the beam, and consequently the stronger it is made the more inconvenient and unsightly it becomes. This is on the same principle as that often seen when thin boards are strengthened to carry flower-pots by

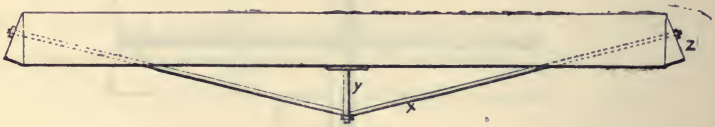

Fig 298

strutting underneath, and tying tight a piece of string from each end of the board over the strut.

Flooring.—*Flooring* is the covering of the naked framing, and

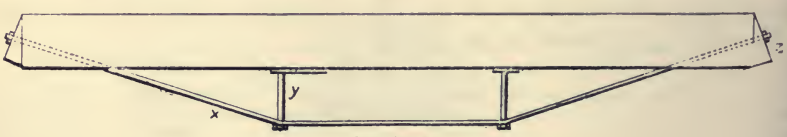

Fig 299

consists of one or other of the many different kinds of floor boards from 1 to 1½ inch in thickness, nailed (on each of their edges) on to each of the bridging joists in either single, double, or framed floors.

The different kinds of joints for flooring boards (which should always be rebated or grooved so that a greater thickness of floor-board is left on the top side where it will be worn) are as follows:—

Straight or plain jointed (fig. 300), in which the joint of each board is straight and plain.

Grooved and tongued, where one edge of the board has a tongue and the other a groove (fig. 301).

Grooved and tongued with hoop-iron tongues, in which both edges of

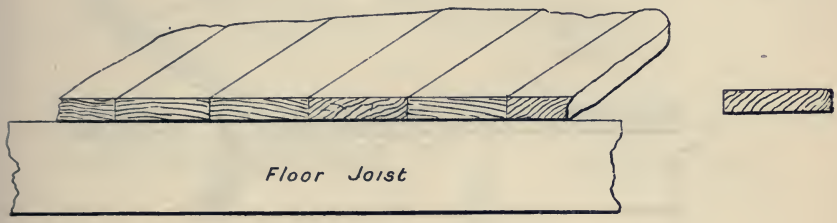

Fig 300

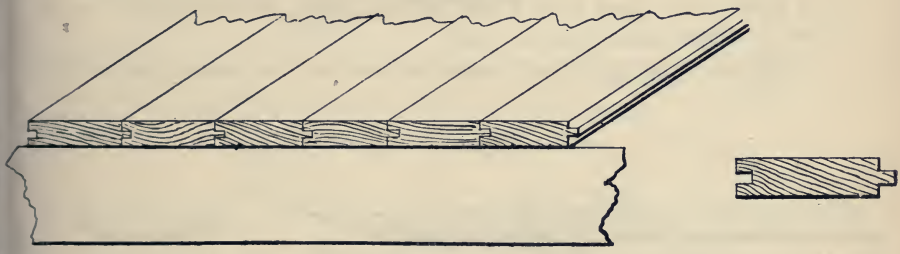

Fig. 301.

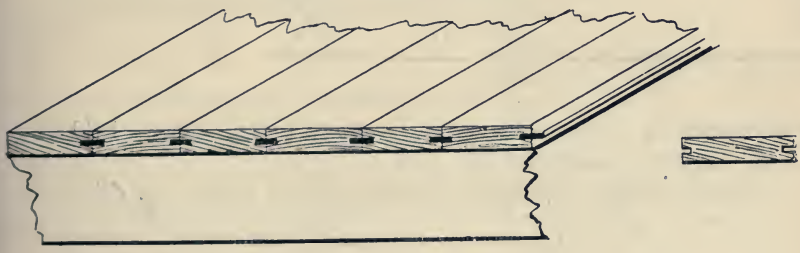

Fig 302.

Fig. 303.

the board are grooved and an iron tongue inserted, half in each board (fig. 302).

Rebated, with the edge of each board rebated out alternately top and bottom (fig. 303).

Rebated, grooved, and tongued (fig. 304), a combination of figs. 301 and 303.

Rebated and filleted, in which each board is rebated out on one face

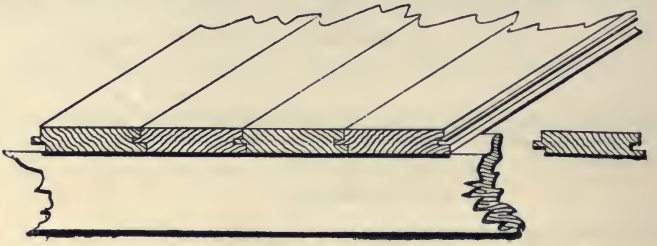

Fig 304

each side, and a loose fillet is laid on the joists and overlapped by the rebate on each board (*vide* fig. 305).

Secret-nailed, by which each board is nailed on the tongue to the joist

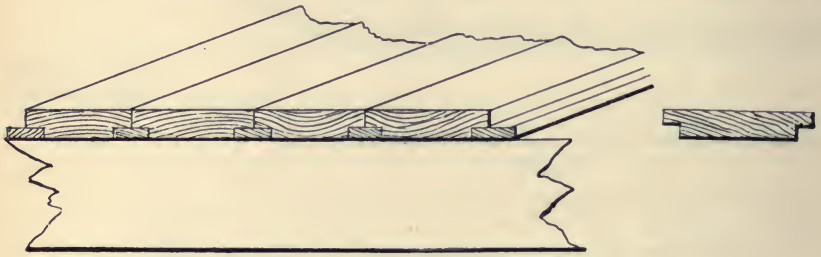

Fig 305

and covered by the top of the other (grooved) board, which is held down by its (tongued) predecessor (fig. 306).

Dowelled, where small oak or other hard-wood dowels are driven into

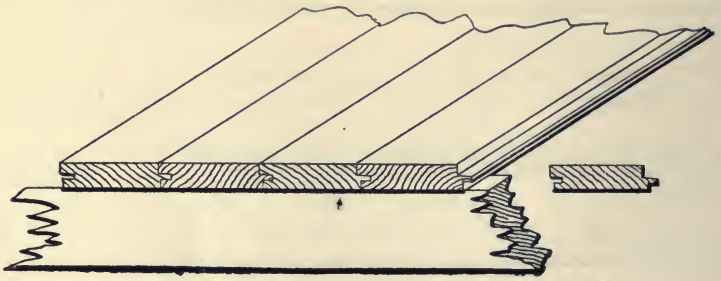

Fig 306

the edge of the fixed board and the other is cramped up to it, so that the dowel enters both boards and keeps them together (fig. 307). They are secretly nailed obliquely between the dowels.

Fillistered are similar to fig. 303, "rebated."

Ploughed and tongued are the same as grooved and tongued (fig. 302).

A new method of secret fixing has lately been invented. It consists

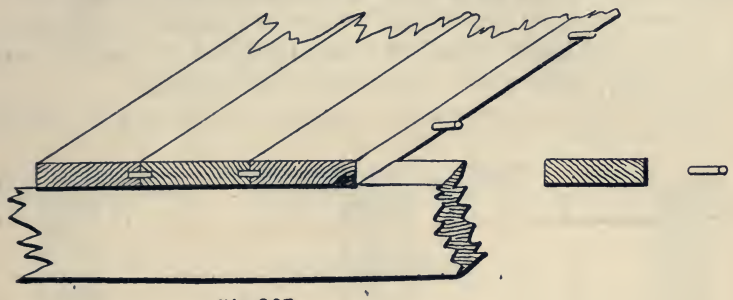

Fig 307

of shouldered brads, one point of which is driven into the joist by hammering the shoulder, and the board is driven down on to it, as in fig. 308.

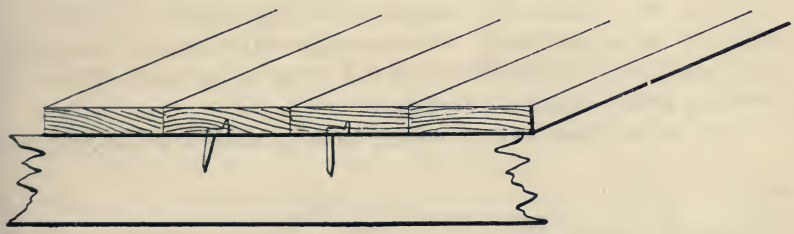

Fig. 308

Headings are the joints of the boards crosswise—*i e.*, where they are not in sufficient lengths to go the length of the room, and have to be in two or more lengths. They may be either square or bevelled, as figs. 309 and

Fig. 309

Fig. 310

310, or cross-tongued, as fig. 311, or tongued, as fig. 312, or rebated and tongued, as fig. 313.

Floor boards are usually laid in "uniform" thicknesses of from 1 to 1½ inches, and in from 3½ inch to "batten" or 7-inch widths. They

should, under any circumstances, have their edges shot—*i.e.*, truly planed, so that they can be "dogged" or "cramped" up tight to each other before being nailed; or they are laid folding in common work, as fig. 314.

In good work the nails should be punched below the general surface of the floor, the boards planed off to one level, and the nail-holes stopped up with putty, before a floor can be said to be complete.

Double floors may sometimes mean that the flooring or floor-boards

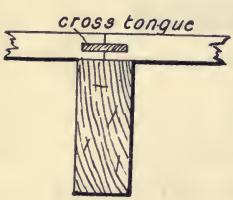

Fig. 311.

Fig. 312

Fig. 313.

are laid on the joists in two thicknesses, generally $\frac{3}{4}$, or $\frac{7}{8}$, and 1 inch thickness, the bottom thickness being straight-jointed, and often laid diagonally across the joists; while the other—either grooved and tongued, or of some other special section—is laid on in the ordinary way above the *sub-floor*, as the bottom one is called.

The various kinds of floors having been explained to the student, it only

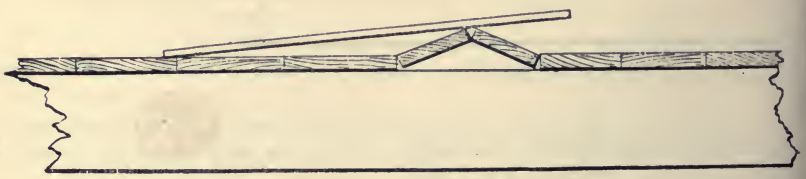
Fig. 314.

remains to say that the principle of wooden beams and girders is antiquated, bad from its elaborate framings, risks to fire, and the sagging and uncertainty of the large-sized members. It has been superseded by iron or steel for binders and girders, the latter being considerably superior in forming a rigid mass, its comparative impunity from fire, etc., but care should always be taken to leave a space between the floor-boards and top of the iron or steel joists for gaspipes, etc.

CHAPTER IX.

PARTITIONS.

Partitions Defined—Framed or Quartered Partitions—Trussed Partitions.

Partitions Defined.—A partition* is a skeleton wood framing, used instead of a wall to divide one room from another. It is only suitable for use above the ground-floor, so as to be free from the effects of damp. The principal advantages which partitions possess are, that they save space, and being light in weight, can be raised upon a floor; whereas a brick partition wall must either rest on another wall beneath, or be built on girders, which entail additional expense. Against these advantages must be set off the facts that partitions are inflammable, conductors of sound, and very apt to prove a harbour for vermin.

There are really two kinds of partitions—the ordinary *framed* or common *quartered* partition, and the *trussed* partition. Before proceeding to explain and illustrate each one separately, it will be advisable to make a few remarks on partitions generally.

The general rule is to build up partitions resting upon the floors, which is in itself bad construction, because as soon as the floor sags or moves the partition goes with it, causing the plaster cornices to crack and come away from the ceiling above, unless that is connected to the partition itself, instead of underneath the joists of the floor above, which should run from wall to wall independently of and parallel to the partition itself; or the continual additional weight of the partition on this floor causes the part immediately underneath the partition to sag more than the other part of the floor, which results in the cracking of the ceiling below.

A better plan is to hang the partition either from the floor above or from the roof. These are made purposely stronger than otherwise needed, in order to carry the additional weight, and render the partition tolerably rigid; but the best and proper way is to build the head and sill of the partition into the main walls wherever practicable, so that if the one goes the other goes with it; and, in addition, to brace them towards the walls

* Called in the North of England a *stoothing*.

or bearings, so that any weight that comes on the head of the partition is thrown, by means of these braces, on the walls.

Partitions may be lathed and plastered on each side; but sometimes they are *bricknogged* in addition—*i.e.*, the spaces between the quarterings are spaced out to suit the bricks, and being $4\frac{1}{2}$ inches thick, are filled in with brickwork; or otherwise in thinner partitions the bricks are laid on edge.

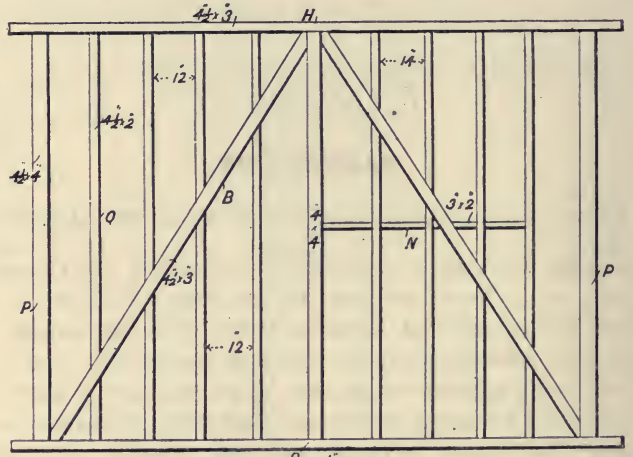

Fig. 315.

In other cases the partitions are temporarily boarded up on each side, and the interstices filled up with concrete, generally composed of breeze and cement. Sometimes, however, the outsides of the partition are

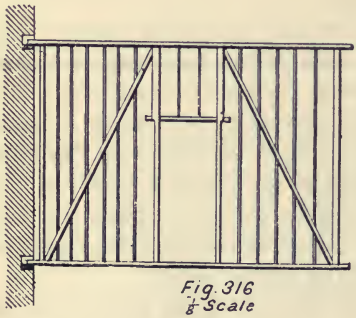
Fig. 316
$\frac{1}{8}$ Scale

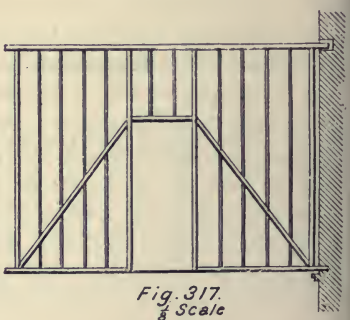
Fig. 317.
$\frac{1}{8}$ Scale

covered with inodorous felt, and the spaces filled with sawdust, before the plastering is done.

Framed or Quartered Partitions.—An ordinary *framed* or *quartered* partition consists of head H, sill S, posts P, studs or quarters Q, and nogging pieces N, and generally, though not always, braces B (see fig. 315).

The partition is $4\frac{1}{2}$ inches thick, the head and sill $4\frac{1}{2} \times 3$ inches, posts $4\frac{1}{2} \times 4$ inches, studs $4\frac{1}{2} \times 2$ inches, braces $4\frac{1}{2} \times 3$ inches, and nogging or stemming pieces 3×2 inches.

If a doorway is required in the partition it is framed either as fig. 316 or as fig. 317.

1" Scale

Fig 318

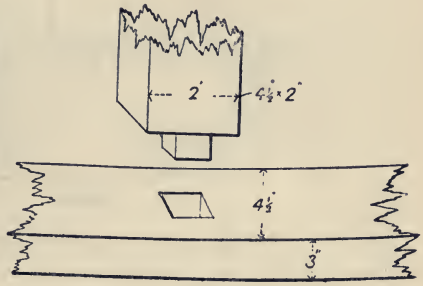

Fig 319

The joints used in framed partitions of the ordinary kind are very simple, and as follows:—

The joint at head or sill with the posts, being an ordinary mortise and tenon, as in fig. 318; S S being the shoulders, T the tenon, and C C the cheeks. The tenon—as, in fact, all tenons should be, as a rule—is in width one-third of the thickness of the stuff, so that it has no less than one-third (or its width) on each side of the mortise.

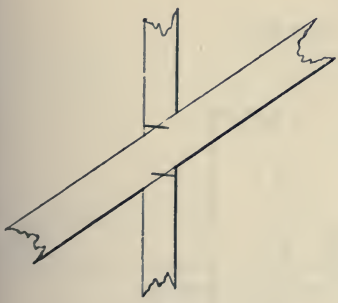

Fig 320.

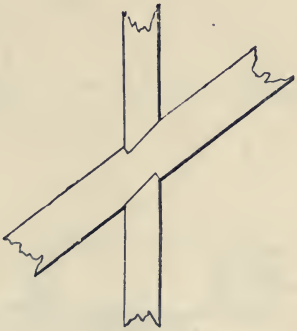

Fig 321.

A *stub* tenon is the name given to the joint between studs and sill or head, the tenon only being for the purpose of keeping it in position, and going into the mortise about one inch (fig. 319).

The joint between studs and brace should be as fig. 321, but it is usually as fig. 320.

The junction of the brace, post, and sill is very simple, being as

fig. 322. But where the brace is framed into a doorpost (as fig. 317) it is done as fig. 323.

The joist between doorhead and post, where the brace does not spring

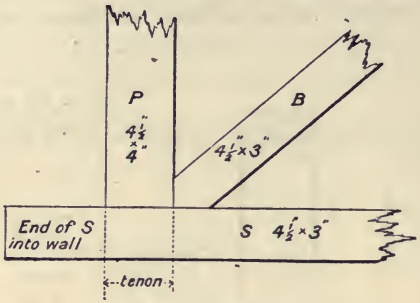

Fig 322

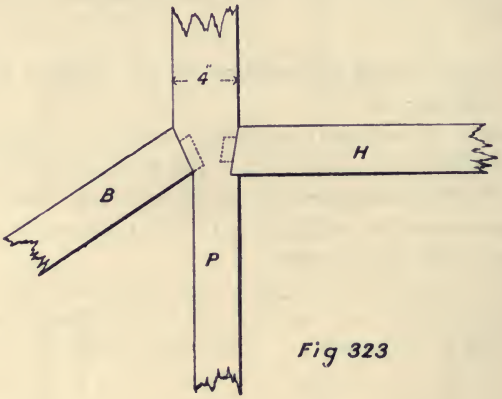

Fig 323

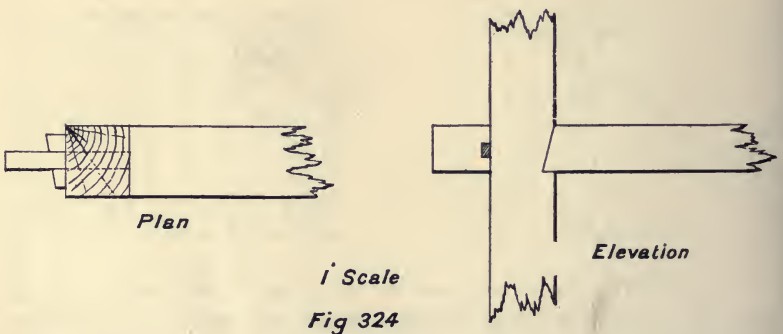

Fig 324

from it, as fig. 324, is similar to the *tusk-tenon* between trimmer and trimming joist.

Where partitions have to be built on floors, and cannot rest on stouter

joists (as fig. 325), they are supported by bearers framed between two joists (as fig. 326), about 4 feet apart.

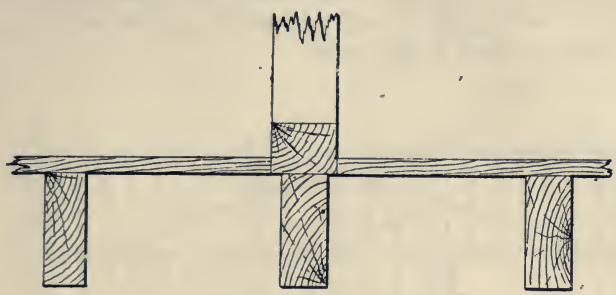

Fig 325 1 Scale

Sometimes they rest only on the floor-boards, as fig. 327.

It should be borne in mind that the studs are fixed from 12 to 14 inches

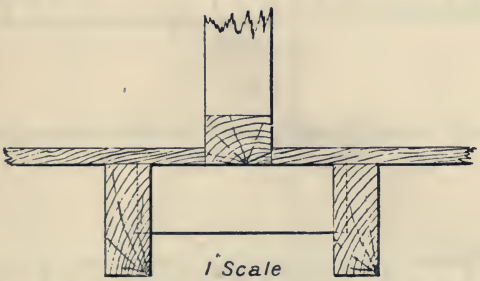

1 Scale

Fig 326

apart, or from 14 to 16 inches centre to centre, on the same principle as joists, ceiling joists, rafters, and other bearing timbers.

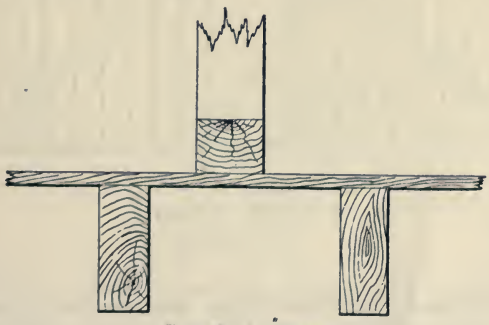

Fig 327. 1 Scale

Trussed Partitions.—*Trussed* partitions are those which have to carry a floor above, or they have some other work to do, requiring more

than the ordinary strength of "framed" partitions. They are similar to roof trusses in construction, but oblong instead of rectangular, and of two kinds—*king-post*, as fig. 328, to suit side doors; or *queen-post*, as fig. 329, where the doorway comes in the centre.

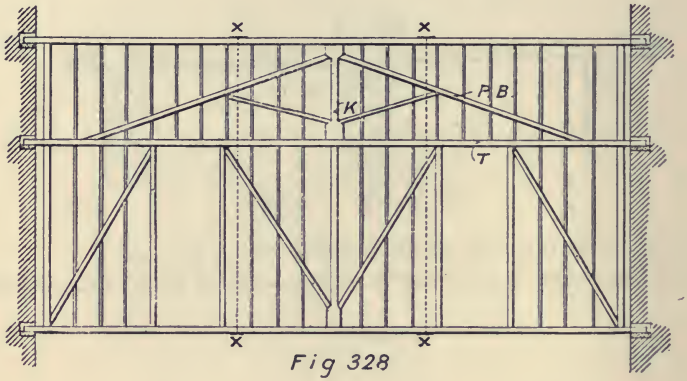

Fig 328

They are really framed trusses, filled in afterwards with studding or quarters.

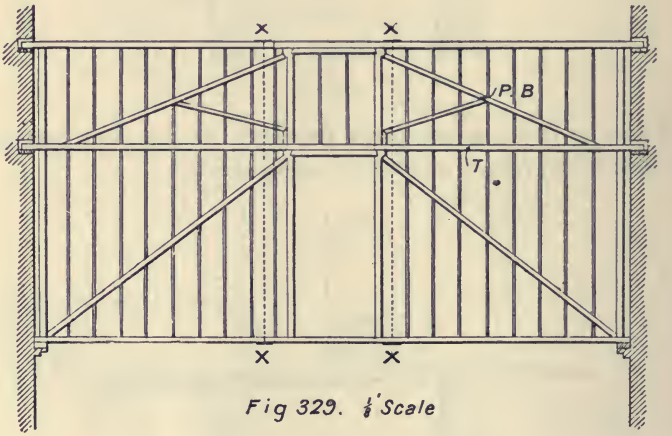

Fig 329. ½" Scale

The joints employed other than those used in the ordinary partition, as explained, are those of the principal members of the truss, as between principal back, and intertie, T, in both trusses, which is done as fig. 330;

King and principal back, etc., as fig. 331.

The queen-post, etc., joint should be as fig. 332.

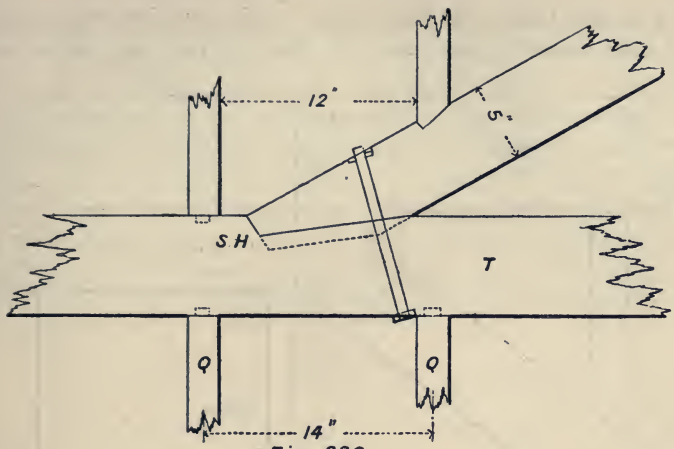

Fig 330

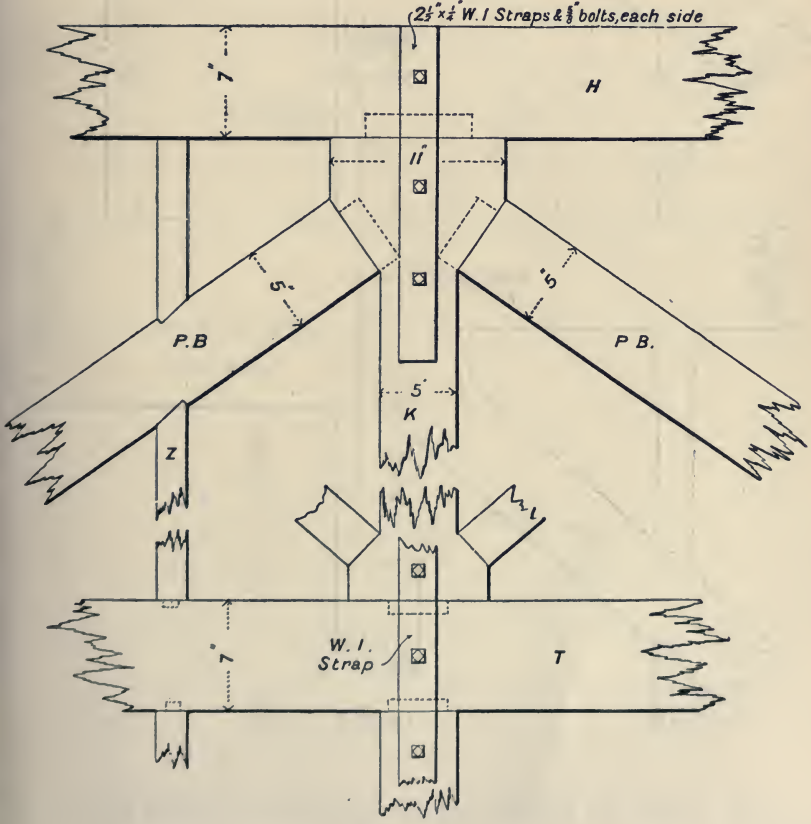

Fig 331.

It is as well to bolt the head and sill of the complete truss together in one or more suitable places, as X X, figs. 328 and 329, when possible,

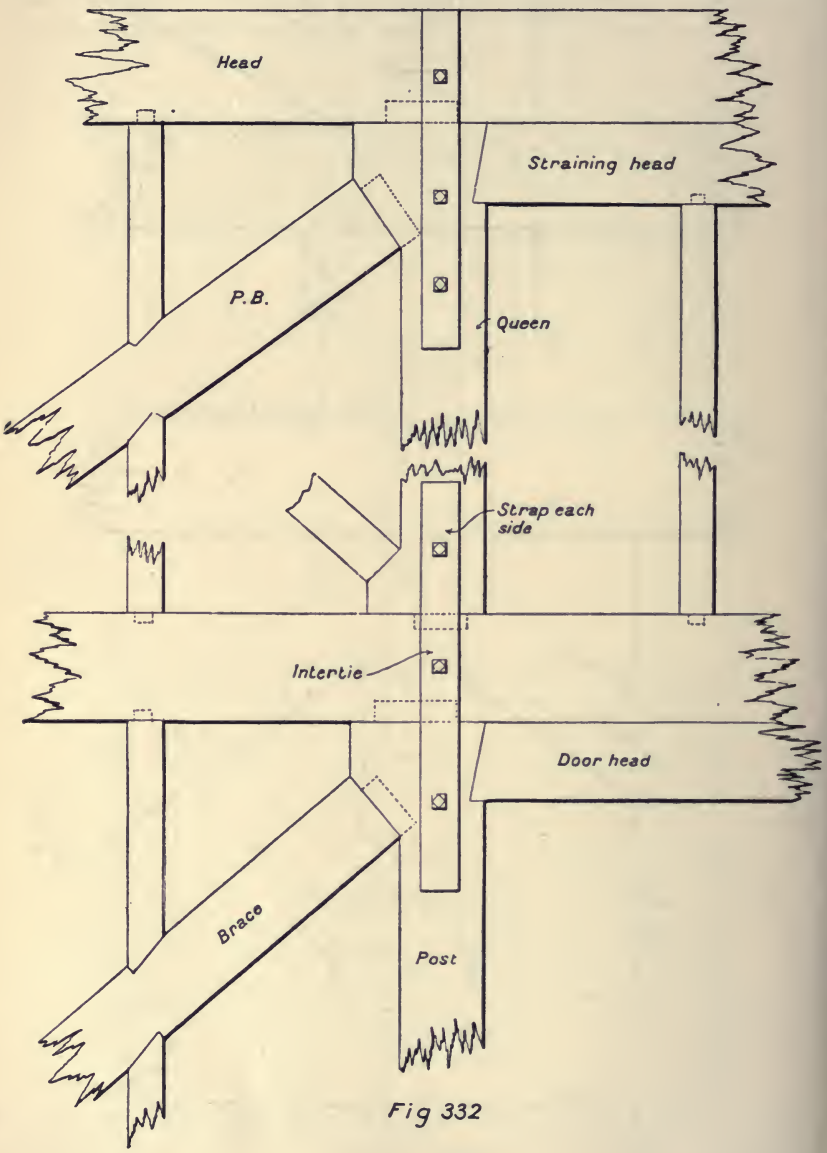

Fig 332

in order to make the partition one complete framing, though made up of different parts.

All braces, where practicable, should incline (or abut) at an angle of about forty degrees.

Partitions of ordinary span, and carrying only their own weight, are generally understood to be $4\frac{1}{2}$ inches thick; but, wherever they are of greater span, they should be, say, 1 inch thicker for every 10 feet; and, of course, where they have to carry floors or roofs, they must be of special thickness to meet the requirements, and, moreover, must be trussed in one way or other, as the circumstances will allow—either between head and sill or between intertie and head. The latter is the usual way, owing to the presence of doors and other openings, which take up so much of the height of a partition.

CHAPTER X.

ROOFS.

Local Adaptation of Roofs—Couple Roof—Couple-close Roof—Fished Joints—Scarfs—King-post Roofs—Queen-post Roofs—Wood and Iron King-trusses—Wood and Iron Collar-truss—Queen Flat-truss—Mansard Roof—Details of Roofs.

Local Adaptation of Roofs.—A roof is a framing which covers the top of the whole building, as a protection against the elements. In different countries, having different climates, and being subject to different kinds of weather, it is of course necessary that the roofs of buildings should be designed and constructed so as to meet those variations of climate. For instance, the northern countries of the world have steep-pitched roofs,

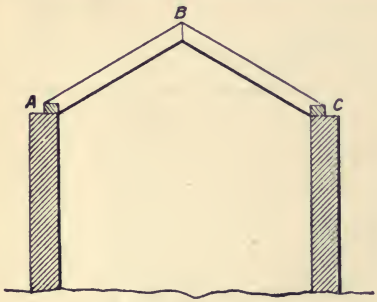

Fig 333

Fig 334

to throw off the snow and prevent the water from sucking-up between the laps of the different materials used as a covering; while in hot countries, where there is little, and that very heavy rain, the roofs are constructed on the flat. Therefore the framing of wood-roofs must be suited to the weight requirements of the covering which it has to carry, according to the climate.

Lead, zinc, copper, stone, or asphalte coverings are generally laid on flat roofs; slates on pitches of about 30 degrees from the horizon; and tiles or wood-shingles on a 45-degrees pitch.

Before proceeding to deal with each roof separately on its own merits it may not be out of place to give the student an idea of the origin of the different kinds.

The first and simplest form of a roof is as fig. 333, from which, supposing the rafters are, as it were, hinged at A, B, and C, it may be imagined

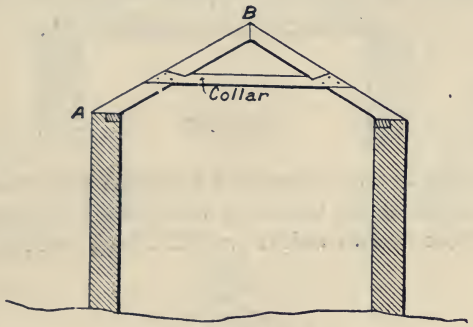

Fig 335

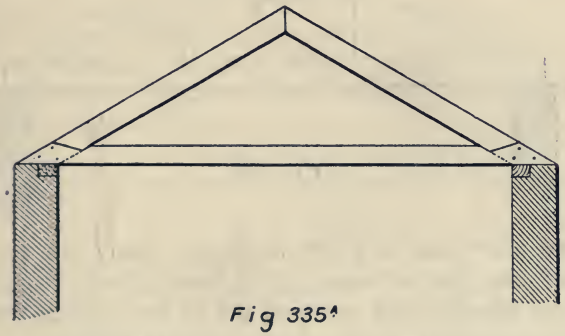

Fig 335A

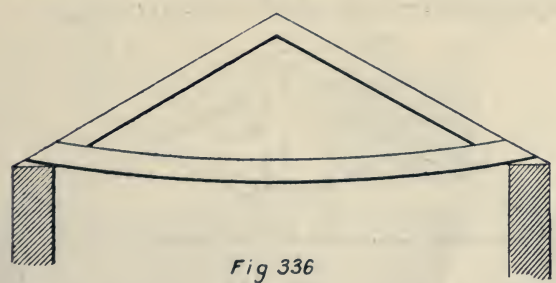

Fig 336

that as soon as the weight on the rafters exceeds a certain maximum, the walls will be pushed out by the extra weight or thrust brought down on them by the rafters (see fig. 334).

To obviate this, the collar first, and afterwards the "tie," were added as a means of tying in the rafters: first, by the collar fixed part of the way

between the wall-plate and ridge, A and B, as fig. 335; and then, as the length of the span and rafters increased, it was found necessary to tie in the feet of them, as fig. 335, by means of the tie-beam.

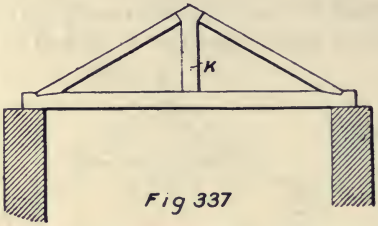

Fig 337

The next difficulty encountered, as the spans were increased, and consequently the length of the tie-beams, was that the tie-beam was apt to sag in the middle from its own weight over such long bearings (see fig. 336);

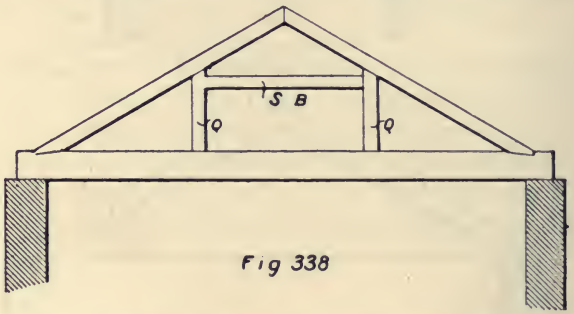

Fig 338

to counteract which the king-post in shorter spans, and two queens in longer spans, were put in to sling up, as it were, the tie-beam to the ridge or apex of the rafters in the one case, and to the straining beam—which did duty for two apexes—in the other, as figs. 337 and 338.

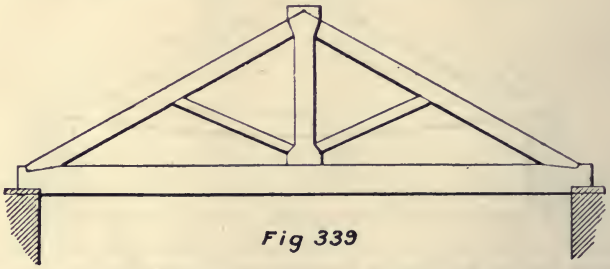

Fig 339

The last defect to be remedied was the sagging of the rafters between the wall-plate and apex; and this was done by means of struts, S S, so named because they "strut" up the rafter from the king-post or queen, as the case may be (*vide* fig. 339).

The above description will explain the origin of the different members of the ordinary truss; and as spans and trusses increase, and their consequent defects arise, so indefinite additional ties and struts are added to the frame to counteract them.

Some kinds of roof-trusses are a combination of wood and iron, the rafters and struts generally being of wood, and the suspenders and ties either of iron or wood, according to circumstances.

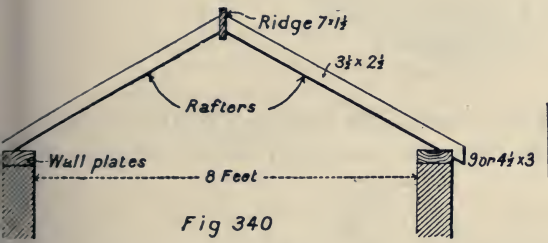

Fig 340

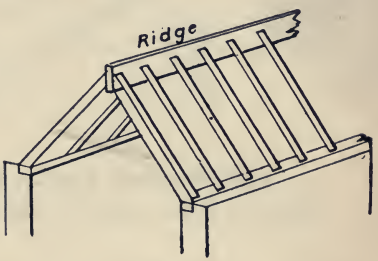

Fig 341

Couple Roof.—The couple roof—the simplest of the whole series—consists of the following parts—viz., wall-plates, bedded on the walls, and running longitudinally; and two rafters, raised from each wall-plate to the pitch required from the wall-plate line as horizon. At the apex or meeting-place of these two rafters the ridge is fixed, running longitudinally, and generally parallel to the wall-plates or walls (*vide* figs. 340 and 341).

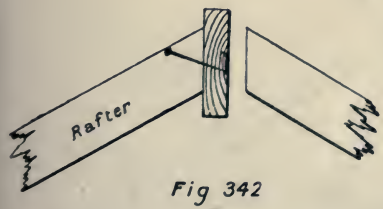

Fig 342

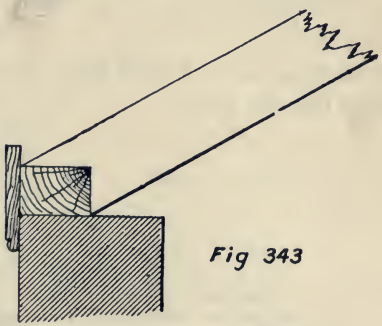
Fig 343

This form of roof is only suitable for spans under 10 or 11 feet, the rafters being spaced 12 inches apart, and usually $3\frac{1}{2}$ inches × $2\frac{1}{2}$ inches in section. The ridge is generally 7 inches × $1\frac{1}{2}$ inches, and the wall-plates 3 inches deep and either $4\frac{1}{2}$ inches or 9 inches wide, on bed, according to circumstances.

The joints required in its construction are very simple, and can all be made by the use of the saw; that at the ridge being as fig. 342, and that at the junction of the foot of the rafter and wall-plate being as fig. 343 or

fig. 344; the former being used where there is an outside eaves-gutter, and the latter where there is a lead gutter between two roofs meeting at the wall-plate from opposite directions. Fig. 345 shows the mode of connecting the rafters and wall-plates for overhanging eaves.

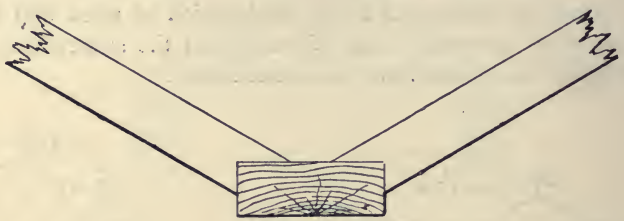

Fig 344

Couple-close Roof.—The "couple-close roof" is a step higher than the last, and consists of rafters, ridge, and wall-plates, with the addition of

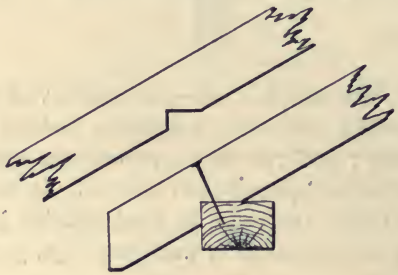

Fig 345

a tie fixed to the foot of each rafter, which often does duty for a ceiling joist (see fig. 346).

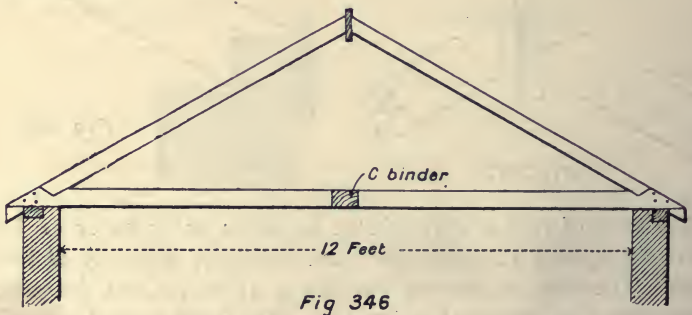

Fig 346

These roofs are suitable for spans up to 12 or 14 feet; but after they exceed the 10 feet it is necessary that the rafters should be made $4\frac{1}{2}$ inches $\times$ $2\frac{1}{4}$ inches. The tie is usually the same size as the rafter, and the joint between them called a *dove-tailed halving*, as fig. 347, half the

thickness being cut off both rafter and tie to a dove-tail pattern, which, when in position, prevents one pulling away from the other.

Collar Roof.—It must be always borne in mind that rafters must have a support at intervals of every 8 feet, or they will sag; and if the space

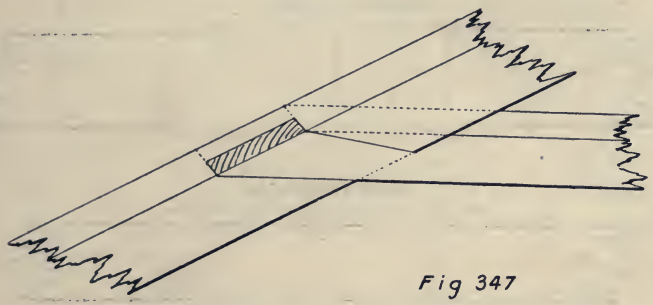

Fig 347

between ridge and plate exceeds 8 feet, additional support, in the form of a purlin or collar, must be placed between them (*vide* fig. 348).

This leads us to the "collar" roof, suitable for spans up to 16 or 17 feet, and designed to meet the requirements just alluded to. It has also the advantage of giving more height to the ceilings of the rooms, etc.,

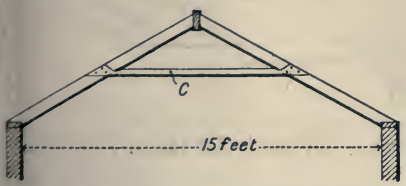

½ Scale

Fig 348I

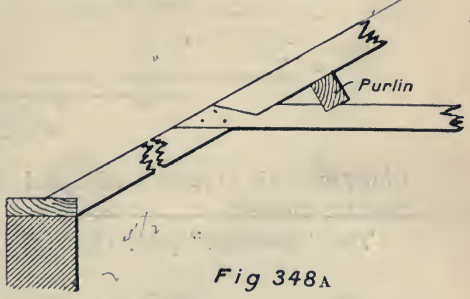

Fig 348A

Fig 348B

immediately under the roof, where a tie, as in the "couple-close" roof, would be too low and in the way.

The joints in this form of roof are precisely similar to those last named; but the roof itself, as a whole, is considerably inferior in construction, because, there being no tie at the foot of the rafters, the weight of the roof is apt to cause them to spread, pushing the walls out, and lowering parts of the roof in consequence. The rafters and collars are

$4\frac{1}{2}$ inches by $2\frac{1}{2}$ inches in section, and spaced 12 inches apart, or 14 to 15 inches centre to centre, as in all other framings; but these collars are not always used to each rafter, one being framed to every sixth or seventh rafter, and a *purlin*—a longitudinal beam running parallel between plate

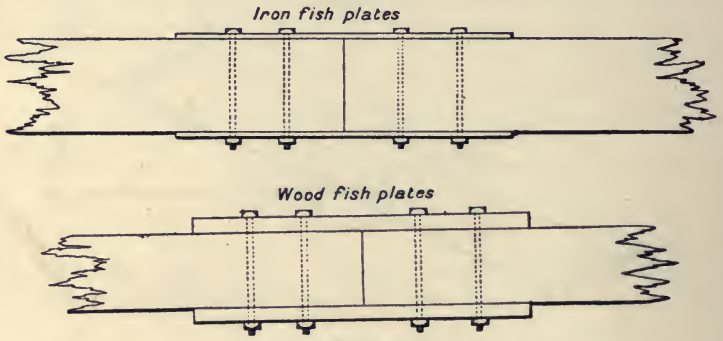

Fig 349

and ridge—being placed between collar and rafter (as fig. 348 A), and supporting the rafters between each of its bearings on the framed collars.

The purlins and ridge are jointed in their length by bevelling, fished

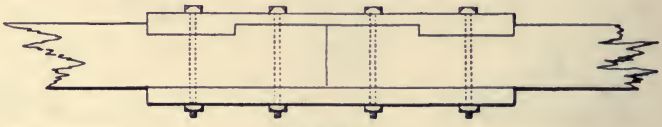

Fig 350

oints, or scarfs to resist tension and bearing, the particular strain to which they are subject.

The "bevelled" joint (fig. 348 B) is the simplest in work and most

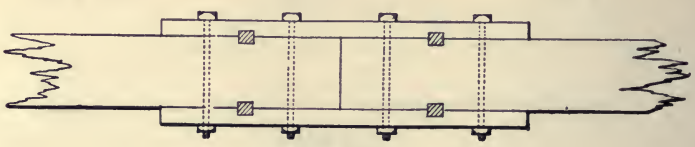

Fig 351

common in use, though for obvious reasons it can only be employed over bearings on walls or trusses.

Fished Joints.—*Fished* joints are not often used, on account of their awkwardness, and their weakness in comparison with the expense which they entail. They are, practically speaking, "butt" joints, whereof the ends are kept in position by fish-plates of wood or iron, fastened

generally to each side of the beams, and connected together by through bolts (fig. 349).

The bolts should be placed "hit-and-miss" fashion, so that plates and beams are only cut once in the length of their fibres. This form



Fig 352

of joint, when in tension, causes all the strain to be thrown on the bolts; and as these often become loosened by the shrinkage of the timbers, they then press and crush the fibres, which results in the yielding of the joints.



Fig 353

To obviate this as much as possible, the joints are *tabled* in both iron and wood alike, as fig. 350; or *keyed*, as fig. 351. Each of these methods, while conferring a benefit, also creates another defect, by decreasing the section and consequent strength of the timbers themselves.

Fig 354

These forms of joints are also suitable for lengthening posts and other upright timbers subject to compression; but, for such purposes, it is better that they should be fished on all sides, to prevent any movement laterally.

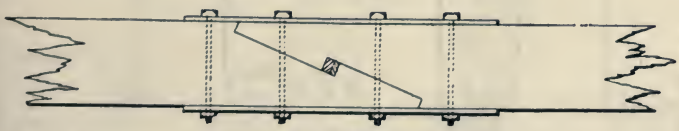

Fig 355

Scarfs.—"Scarfs," as used in joints, to lengthen purlins and ridges—*i.e.*, to resist tension—are, as a rule, made as fig. 352; or fig. 353, which is slightly more intricate; though fig. 354 is still better, as it can be tightened up by means of the wedges or keys, X.

Still, this is not really complete without the fish-plates, to allow the tightening to be done properly, as fig. 355, which may be said to be the best scarf to resist tension.

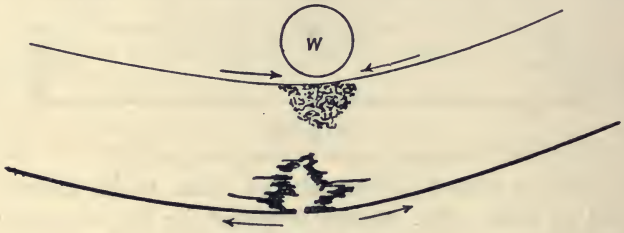

Fig 356

While dealing with "scarfs"—though a little out of place—it may be as well to explain, so that the difference can be noted, those that are designed to resist compression used in perpendiculars, posts, etc.,

Fig 357

Fig 358

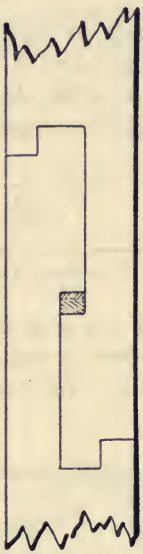

Fig 359

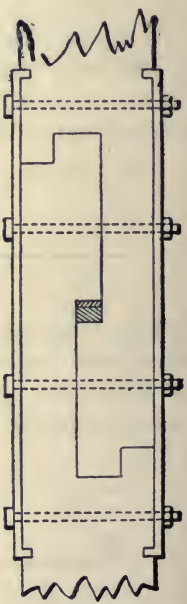

Fig 360

and that used for bearing timbers subject to cross strain, where the top fibres are in compression and the bottom in tension, as fig. 356.

The principle of scarfs for tension is a keyed *bevel*, while that for

compression is a keyed *butt* joint, as square as possible, so as to distribute the weight all over its area.

Fig. 357 represents the simplest form of scarf used in posts, though this may be improved by checking, as fig. 358; and still more by

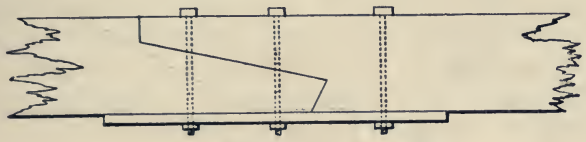

Fig 361

wedging or keying, as fig. 359; and, further still, by fish-plates and a little tabling, whether in iron or wood, as fig. 360.

The joint to resist cross strain, applicable to breastsummers, girders, binders, joists, and other bearing timbers, is as fig. 361; the square butt joint, X, resisting the compression in the top fibres, while the oblique

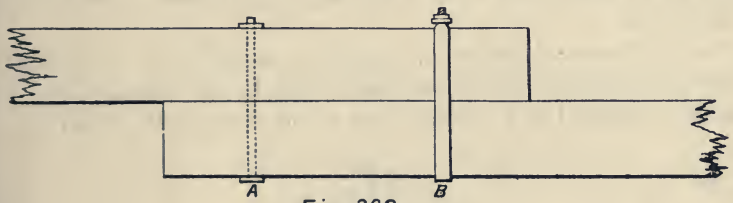

Fig 362

butt and the fish-plate and bolts resist the tension on the bottom fibres.

Before leaving the subject of joints in longitudinal and other bearing timbers we must not forget the *lapped* joint, though it is the least workmanlike of joints, and rarely used except in rough work. It consists



Fig 363

in lapping one length of timber over the other, as fig. 362, and securing them together either by means of bolts, A, or straps, B.

Wall plates are scarfed, as in fig. 363, though they may be bolted together in addition.

King-post Roofs.—The "king-post" is the next roof which circumstances, as it were, bring before the carpenter, and to his help into the bargain, as has been explained earlier in the course of these notes.

This form of roof is practically the beginning of all "trusses," which are complete framings in themselves, spanning from wall to wall, and doing duty for the cross walls, in that they support, in their turn, the ridge and purlins, which require a bearing every 8 or 10 feet. Trusses

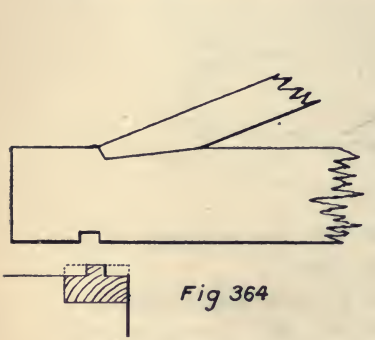

Fig 364

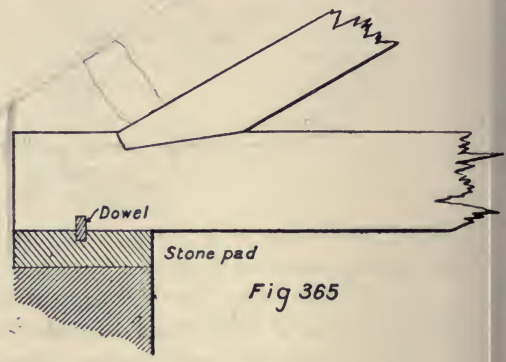

Fig 365

should be no more than 8 or 9 feet apart, and have a 9-inch bearing on each wall.

The tie-beams of trusses are generally *cogged* on to wall-plates, or wood-templates about 30 inches long, built in the walls, as fig. 364; or, another method is to dowel them on to stone pads, as fig. 365.

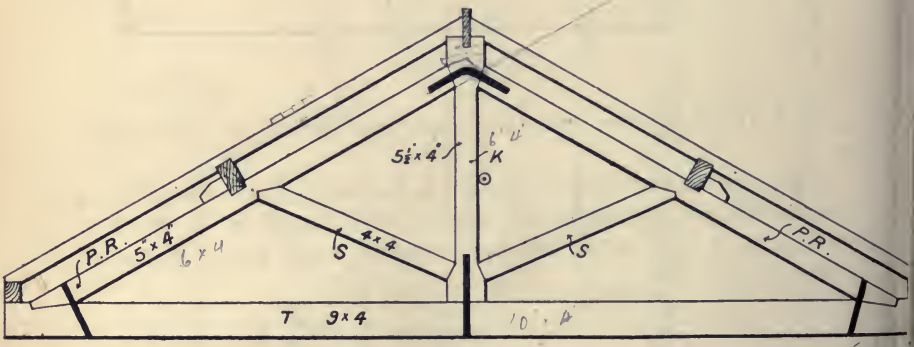

Fig 366 1" Scale

Fig. 366 represents a king-post roof-truss. P R is the principal rafter, 5 inches deep and 4 inches thick; T the tie-beam, 9 × 4 inches; S the struts, 4 × 4 inches; and the king-post, K, is $5\frac{1}{2}$ × 4 inches at X; but, as it has to be cut out to give a bearing for the struts and principal rafter, it really comes out of 9 × 4 inch stuff, being 9 inches wide both at top and bottom, reduced between to $5\frac{1}{2}$ inches, as shown.

A very simple way to familiarity with and recollection of the safe sizes of the various members of a king-post roof is as follows: Divide

the span by 5, and call the quotient inches, which is the required thickness; the struts should be always square, and middle of the king-post a little wider than its thickness; and the setting out of the bevels will then give the actual size of the stuff from which it is to be cut. Assuming 9 inches and 5 inches as the standard depths for tie-beams and principal rafters for 20 feet span respectively, add 1 inch to each for every 5 feet additional span. Should the dividing process give the answer with a half-inch, it is usual to take it off for slated roofs, which incline at an angle of from 26 to 30 degrees, or about "one quarter pitch" —that is to say, the ridge is a quarter of the span in height above the

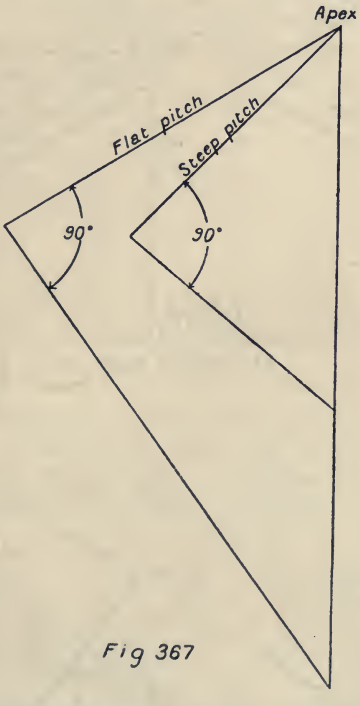

Fig 367

tie-beam; but for tiled roofs add 1 inch for the odd parts, as tiled roofs have more weight to carry, and they are usually inclined at an angle of 45 degrees, being what are called "half-pitched" roofs.

Flat-pitched roofs are not so strong as those that are pitched higher. The nearer to the perpendicular that wood is fixed the stronger it is. This is shown by the fact that the horizontal thrust of a pair of rafters is proportionate to the length of the oblique line drawn, at right angles from the foot of the rafters, to the perpendicular dropped from the apex. See fig. 367, where it will be seen that the flatter the roof is the longer the oblique line.

The joints of a king-post truss, in fact, all consist of mortises and tenons entering but a short distance into the timbers; and they have all bevelled shoulders, which ought, wherever possible, to be at right angles to the incline of the roof.

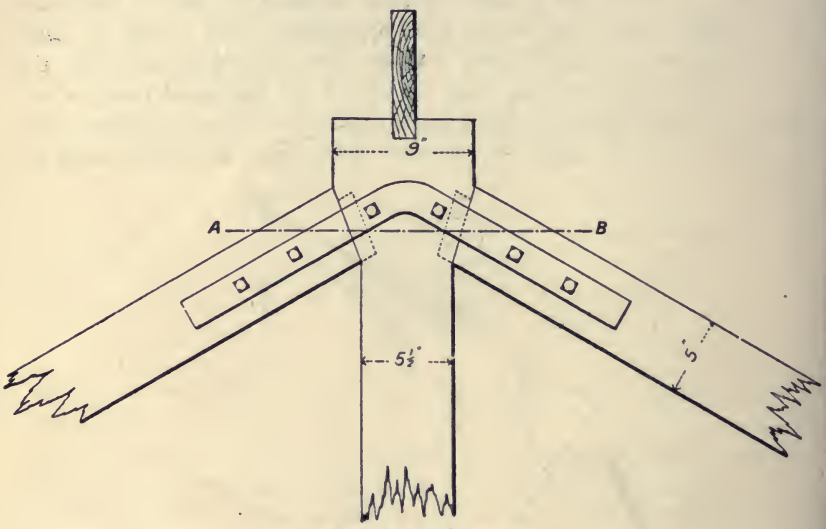

Fig 368. 1" Scale

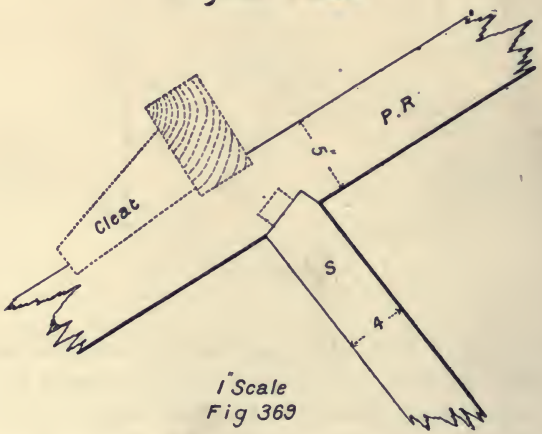

1" Scale
Fig 369

Fig. 368 is the joint between king-post and principal rafters at the apex supporting the ridge, a pair of $2\frac{1}{2} \times \frac{3}{8}$ inch wrought-iron straps, bolted from side to side, completing the joint; or in practice a through-bolt from A to B will answer the same purpose, though not so good.

Fig. 369 explains the joint between the strut and principal rafter carrying the purlin. This requires no ironwork.

Fig. 370 is an elevation, and fig. 371 a section, of the joint between king-post, tie-beam, and struts, which should explain itself.

The truss is either tightened up to what is called a "camber" by means of the stirrup-strap, with the gibs and keys or cotters, as shown,

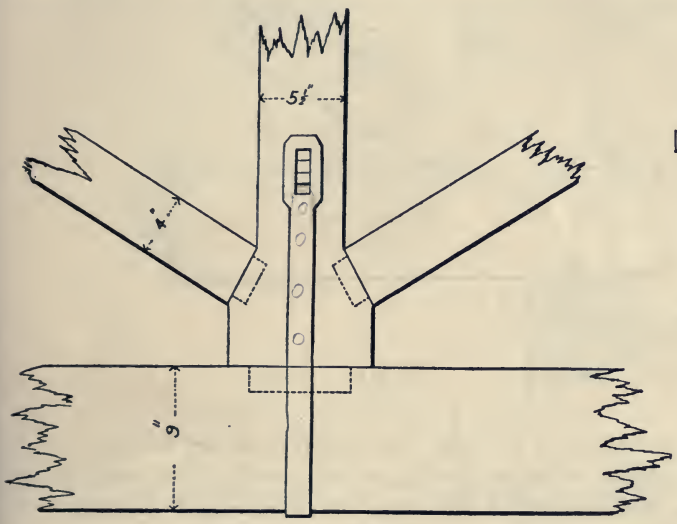

Fig 370 1" Scale

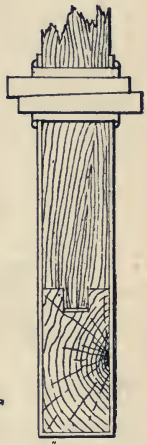

1" Scale
Fig 371

or by a bolt which goes up through the centre of the tie-beam into the king-post, where a nut is let in through a hole to tighten it up.

The *camber* is the rise (about ½ an inch in every 10 feet) given to the centre of the tie-beam; so that when the roof settles, the tie-beam may

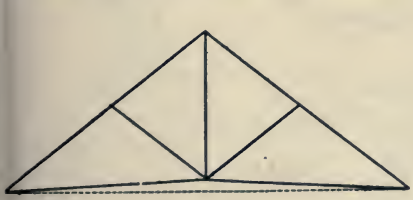

Fig. 372.

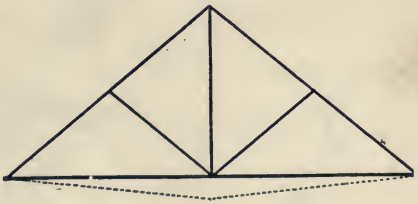

Fig. 373.

stay at its level, instead of dropping below it (*vide* respectively figs. 372 and 373).

The joint between the tie-beam and the foot of the principal rafter is called a *butting* joint, being as fig. 374; which is completed either by a $2\frac{1}{2} \times \frac{3}{8}$ inch wrought-iron heel-strap encircling the joint, as shown, or by a bolt put obliquely through the centre of the tie-beam and rafter. The mortise and tenon are similar to fig. 375. Instead of this "butting"

joint, a *bridle* joint is sometimes used (see fig. 376), which will show that bridle joints are really the converse of the butting joint or a mortise and tenon, when applied to other framing.

They are not very often used, though they are another form of joint.

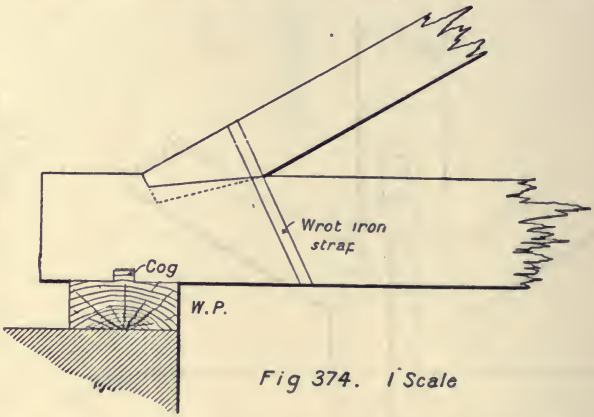

Fig 374. 1 Scale

The bridle should never be more than one-fifth of the thickness of the timber, on account of the weakening of the cheeks, which would be very liable to be wrenched off if they were not considerably more than the bridle in thickness.

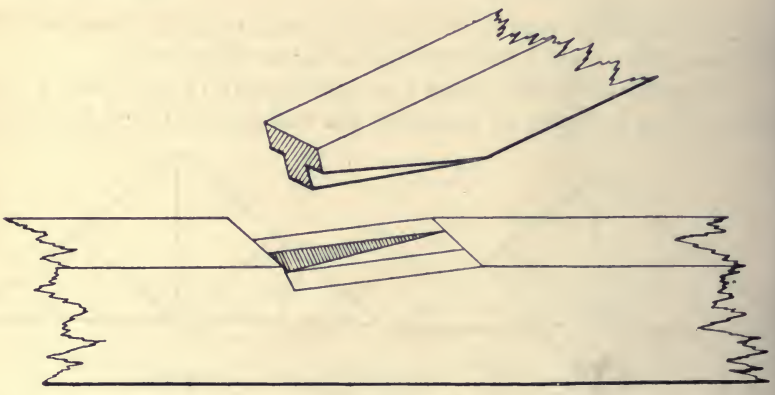

Fig 375

Sometimes king-post roof-trusses are constructed with the tie-beam in two thicknesses, one notched to each side of the foot of the principal rafters and king-post, as in fig. 377.

The other joints are the same as in the ordinary truss, with the exception that the ridge is boxed lower down into the king, so that the top of the common rafters is level with the top of the principal rafters (fig. 378).

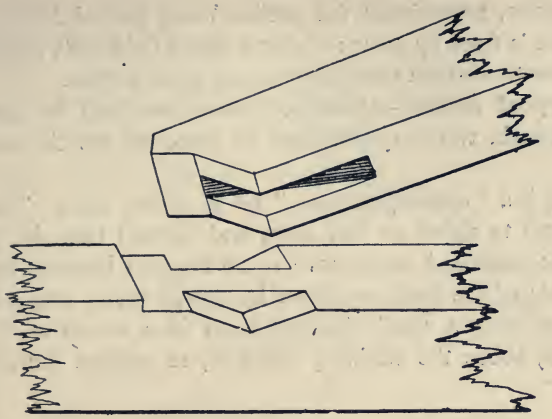

Fig 376

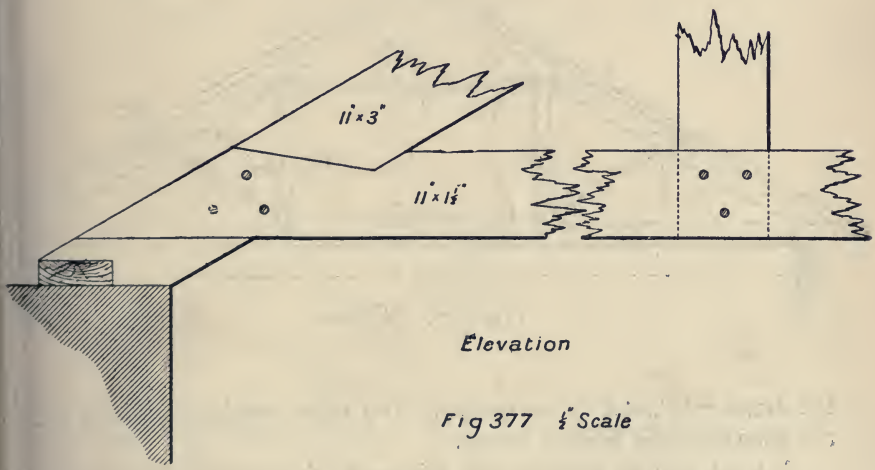

Elevation

Fig 377 ½" Scale

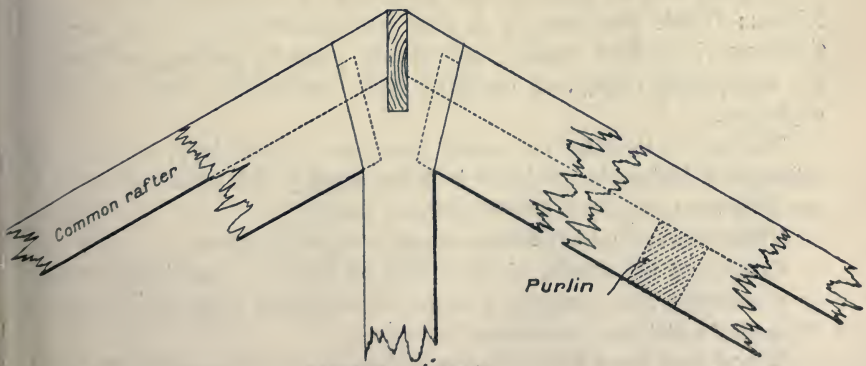

Fig 378 ½" Scale

This, of course, necessitates the purlins being framed into the principal backs, which is done by means of a tusk tenon (*vide ante*, fig. 281).

King-post trusses are suitable for spans up to 30 feet.

Queen-post Roofs.—*Queen-post trusses* are used for spans over 30 feet, and contain two perpendiculars to brace up the tie-beam spanning the walls.

Fig. 379 is a "queen-post truss" for a 32-feet span. The same form is suitable up to about 42 feet span, and beyond that size *princesses*, or intermediate posts and struts, have to be inserted between the "queens" and the heels of the roof, as shown by dotted lines; and it is sometimes necessary to frame a small king-post truss (also shown on the figure by dotted lines) above the straining beam St, to support the ridge. S S is

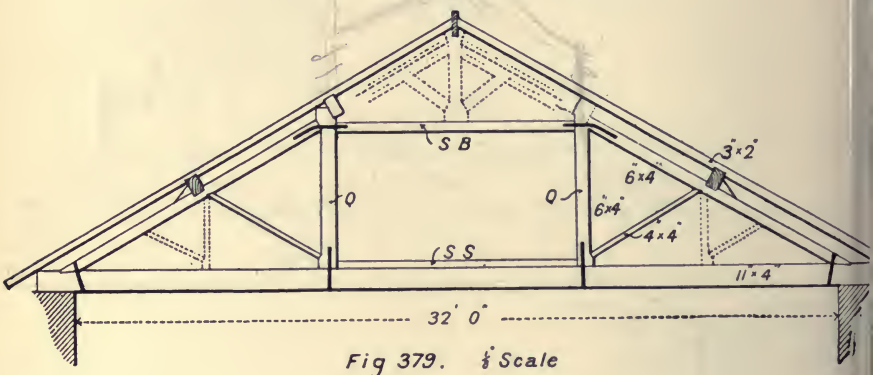

Fig 379. ⅛" Scale

the straining sill, and Q the queens. The other members are known by the same names as in other trusses.

A good rule to ascertain the thickness of queen-post trusses is as follows: Divide the span by 8, and the quotient will be the required thickness (in inches), making up for odd parts by adding another inch for heavy-tiled roofs, and omitting such fraction for slates, as before explained.

Taking the tie-beam for 32-feet span at 11 inches deep, and principal rafters at 6 inches, by adding 1 inch for every 5 feet additional span, we can arrive at their depth for the different roofs.

The struts and middle of the queens are usually square.

Coming to the details of the joints, we find they are similar to those for a king-post roof; except, of course, those at the head and foot of the "queens," which are as shown on fig. 380.

Wood and Iron King-trusses.—Fig. 381 is an illustration of a wood-

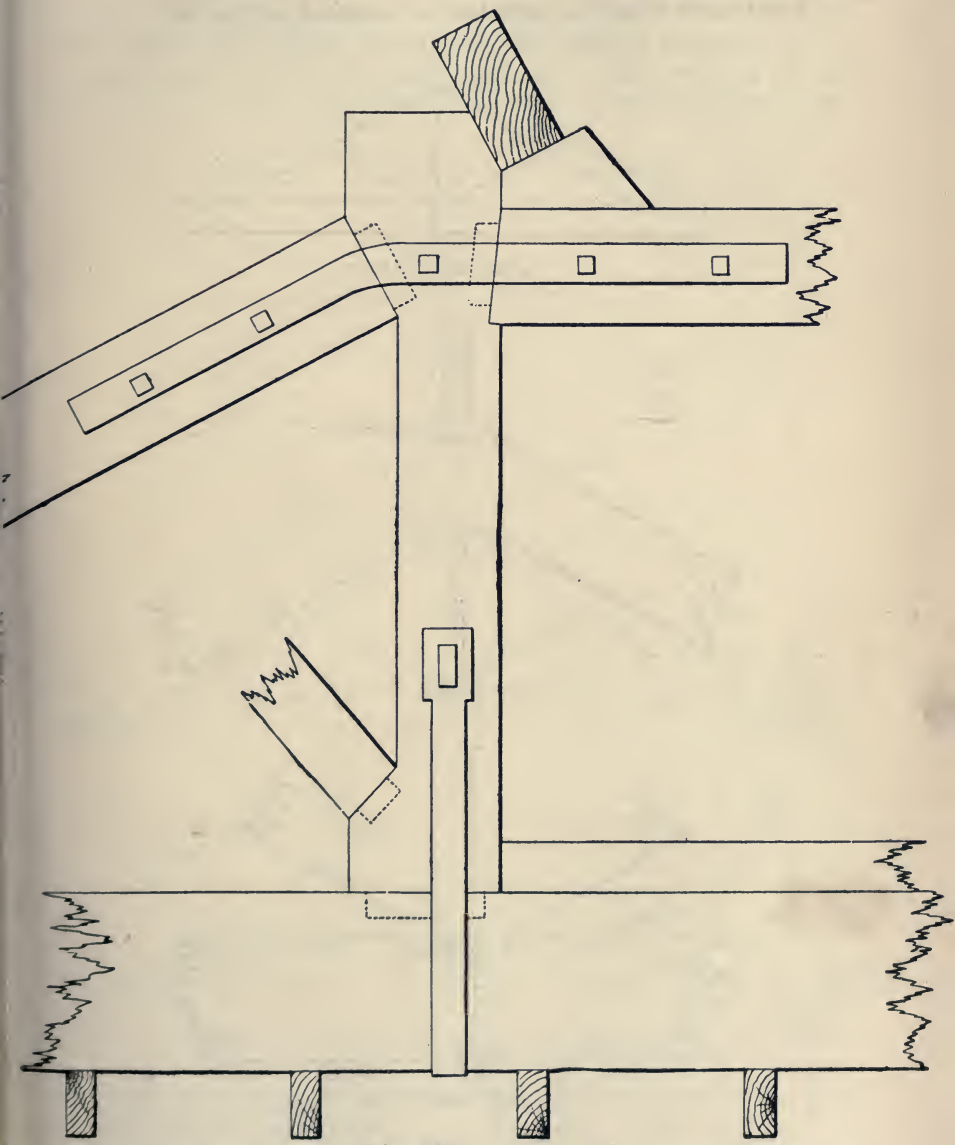

Fig 380

truss, with an iron king-rod, the joints of which are explained in detail on figs. 382 and 383.

From these it will be seen that a wrought-iron king-bolt, $\frac{3}{4}$ inch in

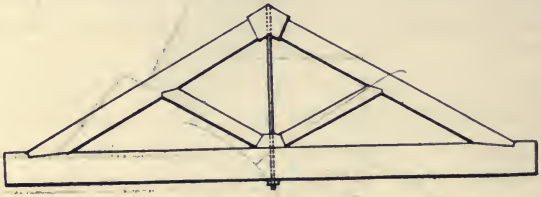

Fig 381. . $\frac{1}{8}$" Scale

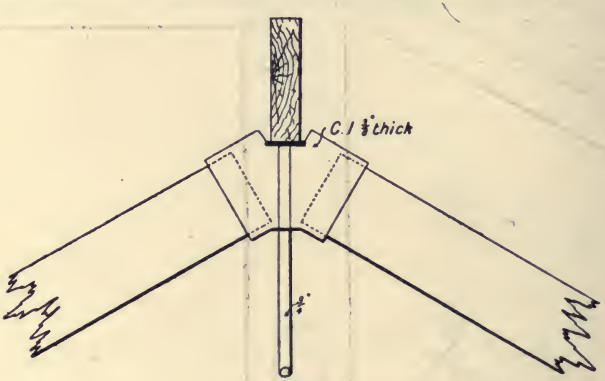

Fig 382

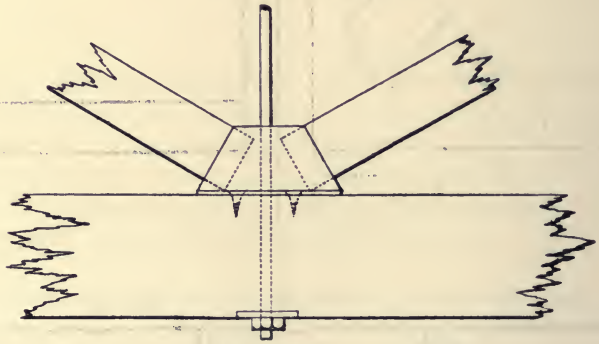

Fig 383 1" Scale

diameter, slings up the tie-beam to the apex, where a cast-iron head receives the principal rafters into sockets on either side of the king-rod; which goes through the hollow cast-iron work, and is bolted up from above the apex to the bottom of the tie-beam. The struts are likewise received

by cast-iron sockets, screwed on to the top of the tie-beam through which the king-rod is placed.

Sometimes, to save expense, a plate is fixed on the underside of the tie-beam and bolted through, to secure the shoe-plate for the struts.

Sometimes the struts butt against each other round the king-rod, as fig. 384; from which it will be seen that there is nothing to keep them

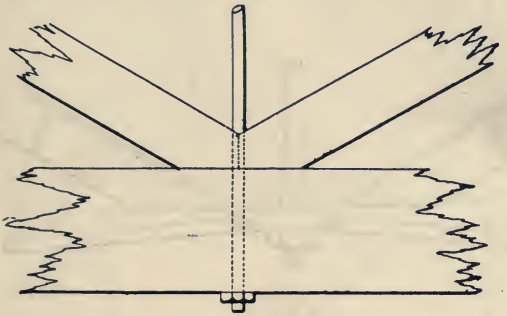

Fig 384 1" Scale

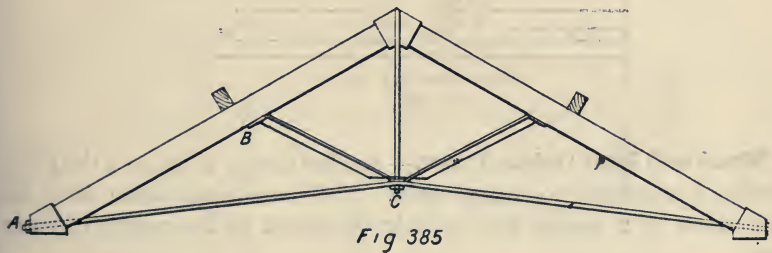

Fig 385

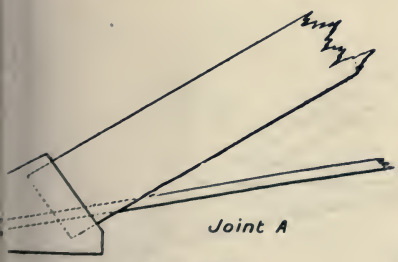

Fig 386

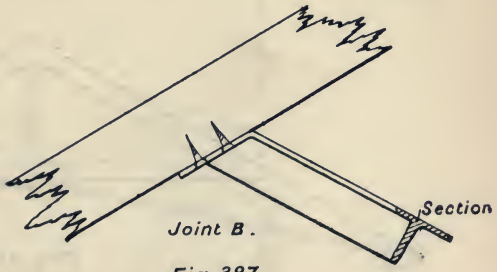

Fig 387

in position, laterally, except the spikes which fix them to the beam. This is called a *strut and beam* joint.

Another form of this kind of roof-trussing, with wood and iron, is as fig. 385; which is all iron except the principal backs, wrought-iron being used for struts, ties, and king-rod, and cast-iron for heel and head sockets.

The details of joints and construction are :—

Fig. 386 represents joint at A.
Fig. 387 shows the joint at B.
Fig. 388 that at C.

Therefrom the student will see that wood struts could be substituted for the Tee irons, if thought advisable; and the tie-rod could be forged out to a sufficient width to give them a bearing on each side of the king-rod.

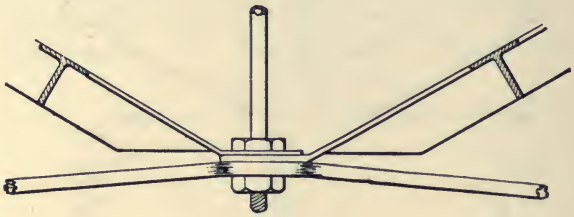

1" Scale
Joint C.

Plan looking up
Fig 388

Wood and Iron Collar Truss.—Another form is as fig. 389, the joints of which it is needless to enlarge upon. The student can make them out from others of a similar kind already illustrated in the course of these notes.

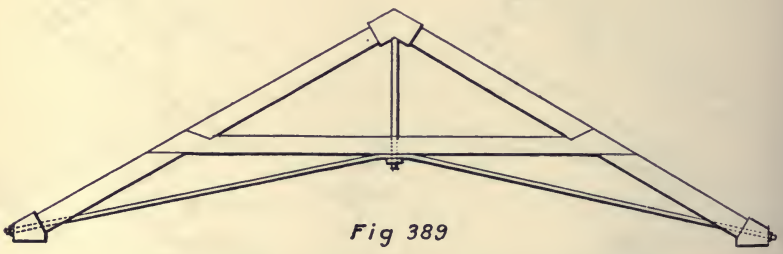

Fig 389

Queen Flat Truss.—The next form of roof to which the student's attention should be drawn is the queen-post roof, used as a flat roof over the straining beam; the only points new to the student being the suspension-rod in the centre, and the beam and strut joints under the straining beam which carries the bearers of the flat to be boarded and covered with lead or zinc (fig. 390).

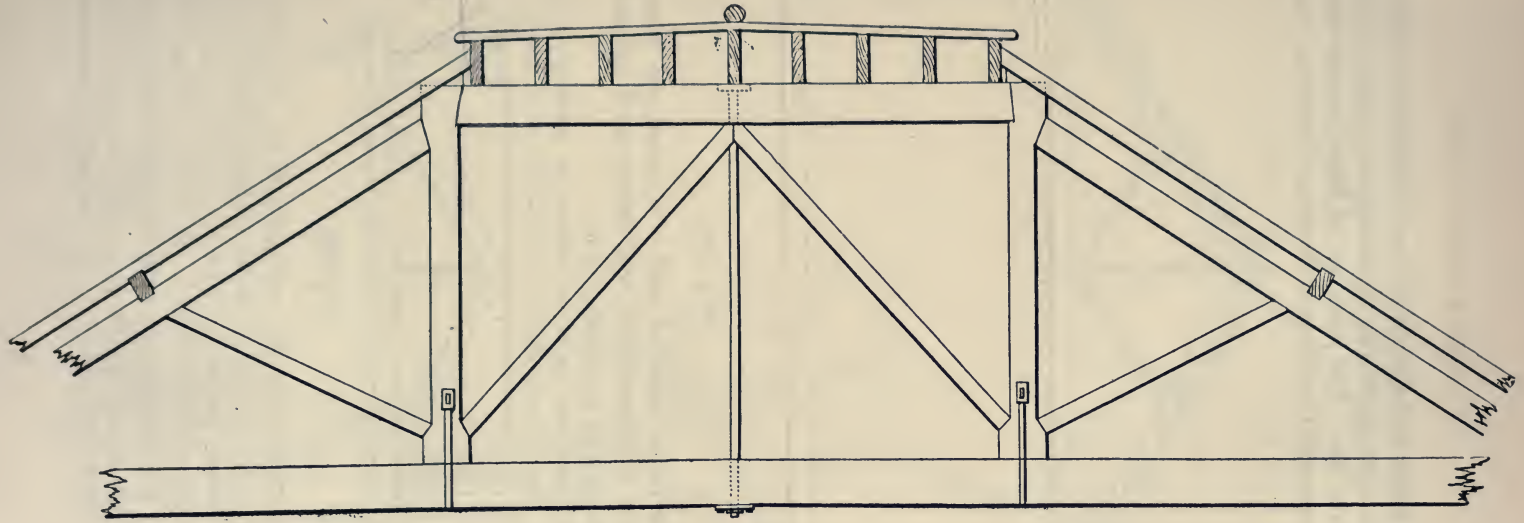

Fig 390

Mansard Roof.—The Mansard roof (invented by a Frenchman of that name with a view to utilising the roof spaces as much as possible) is a roof similar to fig. 391. The joints are all known to the student, and it only remains to be said that this form of roof can be very much strengthened

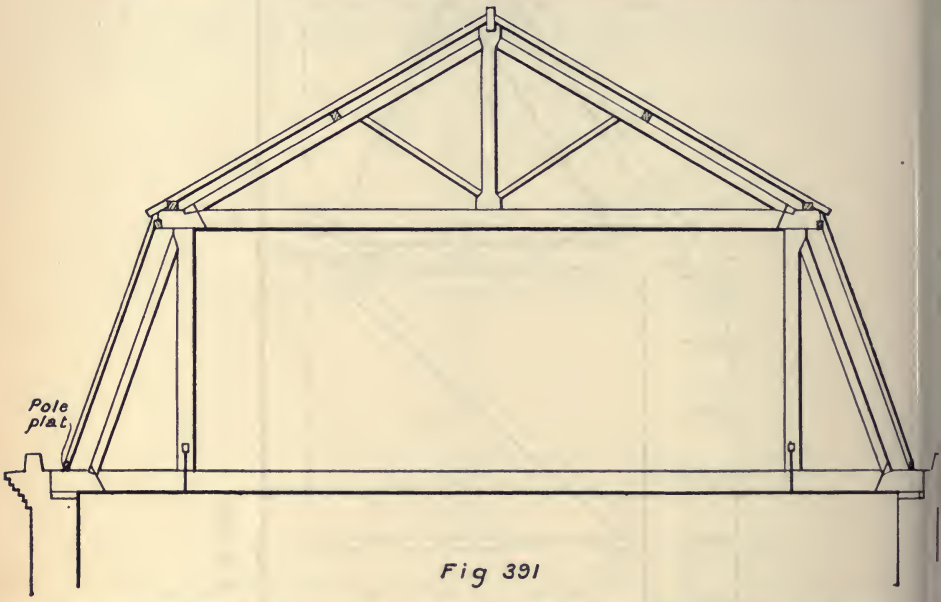

Fig 391

by the tie-beam being made the head of a bolted and trussed partition below, especially if queen-trussed with intertie built into the enclosing walls, or a partition with no openings in it.

Occasionally cases crop up where trusses are necessary, but cannot be

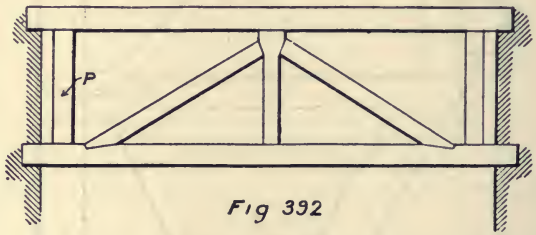

Fig 392

used for various reasons, and the cross-walls are too far apart for ordinary purlins; recourse then has to be made to trussed purlins or ridges, but sometimes the ordinary purlins are *flitched* to give them additional strength (*vide ante*, fig. 295), or *trussed* (as figs. 296 and 297, Chapter VIII.).

Another way is to build up an ordinary framing, as fig. 392, the joints of which have been already illustrated in different places, or under preceding headings. Here, the wall posts, P, are called *puncheons*; and the

framing may be either of the king or queen-post class, according to circumstances and the bearings between walls. The dimensions of the timbers also follow the ordinary rules.

Fig 393

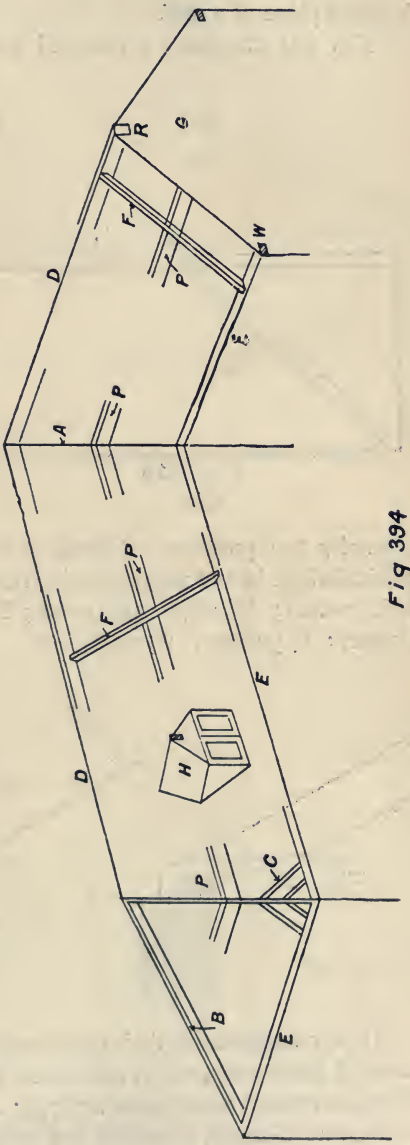

Fig 394

Details of Roofs.—*Hips* are the external angles made by the junction of the roof and its return round the ends, where the end walls are not carried up to the underside of the rake of roof to form *gables*, as fig. 393.

Valleys are the converse of hips, and *jack* rafters are the short rafters which run between the hips or valleys and the wall-plates.

Dormers are gables on a small scale, or vertical windows placed on the inclined plane of a roof.

Fig. 394 illustrates a returned roof, with hips and a valley, showing

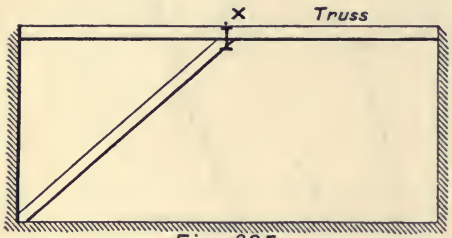

Fig 395
Plan

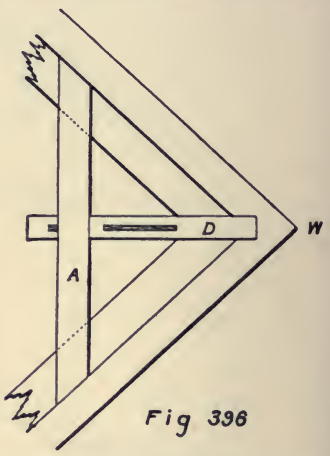

Fig 396

generally the positions of some of the parts hereinbefore described, as particularised in the accompanying reference—viz., A, valley; B, hip; C, jack rafters; D, ridge; E, eaves; F, common rafters; G, gable; H, dormer; P, purlins; W, wall-plate.

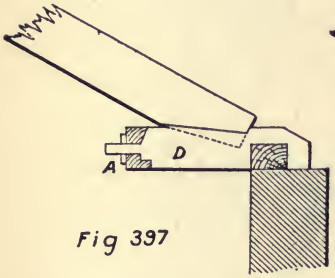

Fig 397

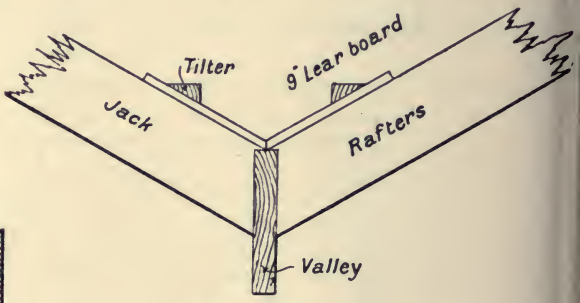

Fig 398

Hips, on account of their great length, are sometimes made the principal rafter of half-trusses, which are bolted with angle irons to the king-posts of the main trusses, as at X, on fig. 395; and they are framed at the external angles into *dragons*, D, which are halved over the angle of the two wall-plates, W, and "tusk-tenoned" into an *angle-brace*, A, which stretches from wall-plate to wall-plate, forming an equilateral triangle with them. Fig. 396 is a plan and fig. 397 a section explaining the foregoing details.

Valleys are treated in a similar way, but being internal angles, have often to be covered with lead, which means boarding as a foundation, as fig. 398.

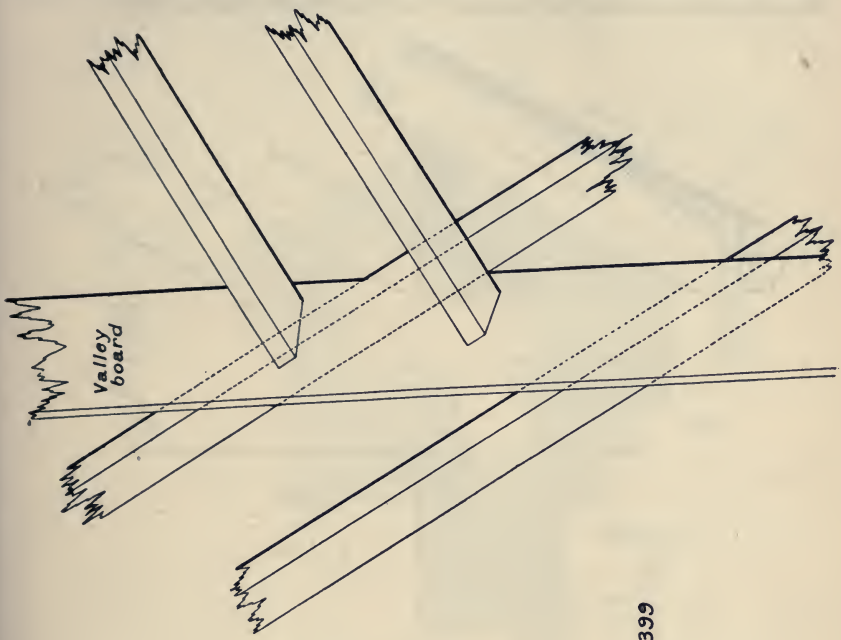

Fig 399

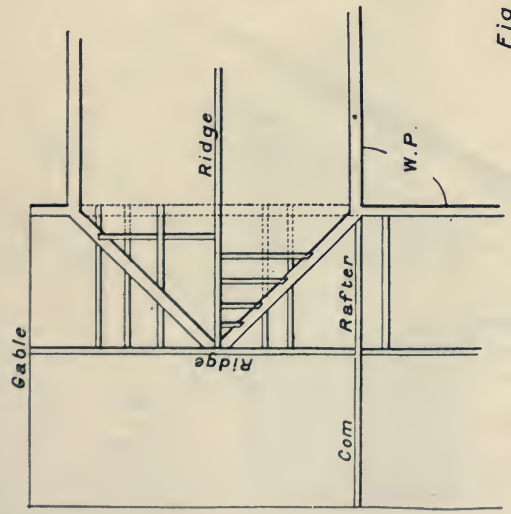

Instead of valley-rafters one roof is sometimes run through, and a valley board put on it, from which the short or jack rafters spring to the ridge, as fig. 399.

The *eaves* of roofs are at the feet or bottom of the rafters, where all the rain-water is collected into cast-iron gutters, hanging over the walls, from which it is taken by cast-iron downpipes to the drains below.

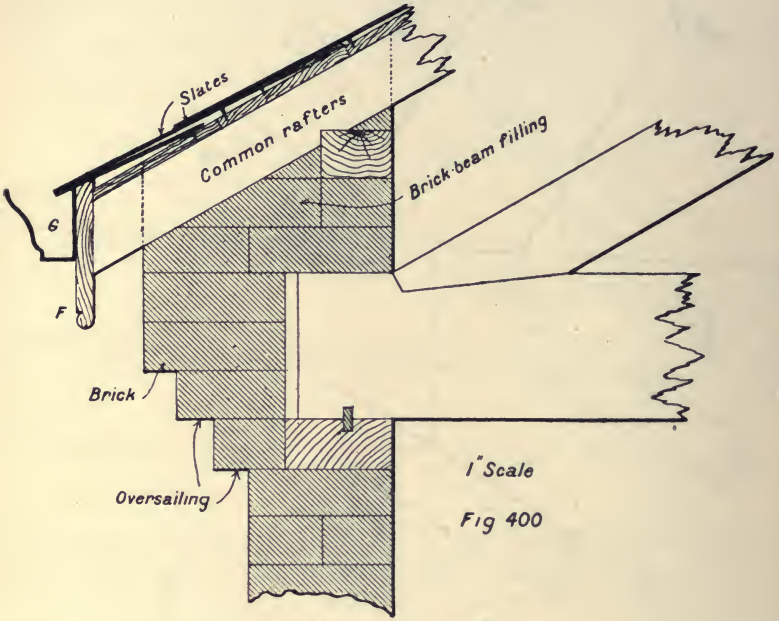

Fig 400

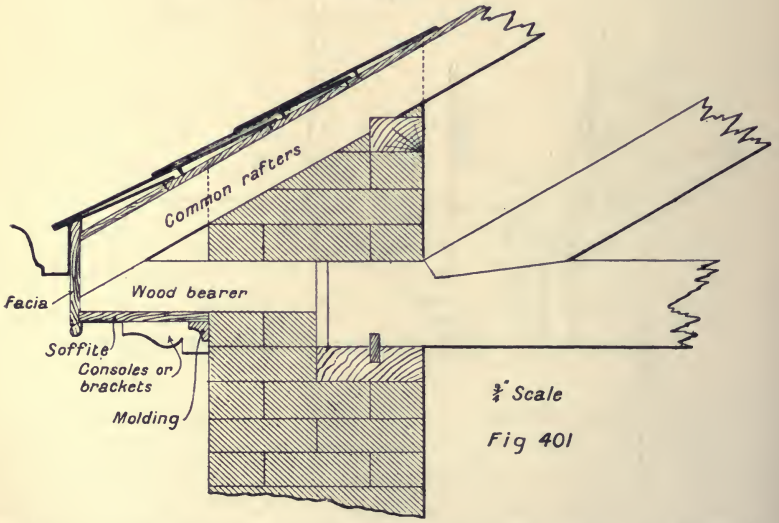

Fig 401

Fig. 400 represents an overhanging eaves with a fascia, F, fixed to the feet of the rafters, for carrying the cast-iron moulded guttering, G; while fig. 401 shows the same fixed to a wood cornice.

Fig. 402 represents a cast-iron half-round gutter, fixed by wrought hanging irons to the wrought and cut rafter feet; these irons can also be fixed on the top of the rafters, but they are awkward if the gutter should

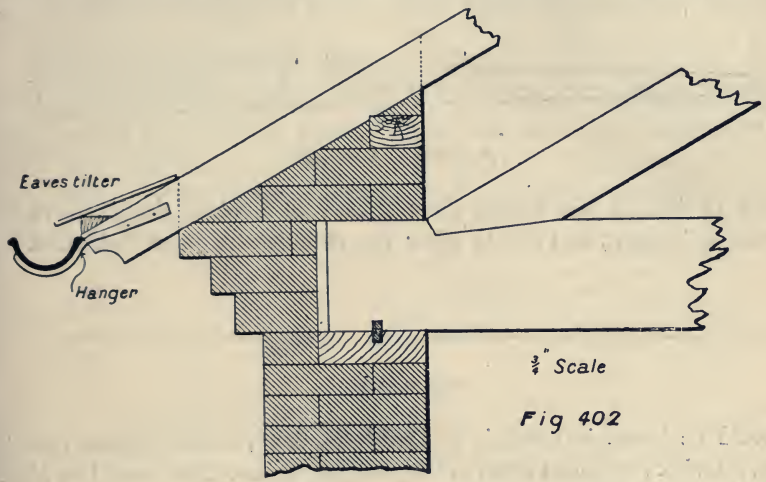

Fig 402

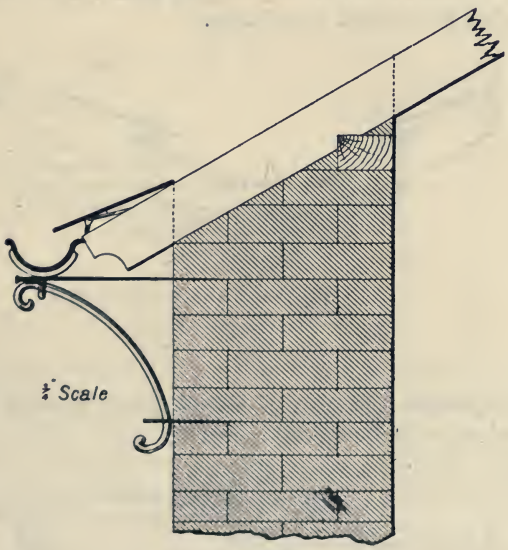

Fig 403

afterwards have to be altered, necessitating taking off a few courses of the slates or tiles to get at them.

Fig. 403 represents the same, but the gutter is carried by wrought-iron brackets, fixed to the walls, which looks clumsy in work.

Gutters—i.e., those boarded and lead-lined—are laid either behind

parapets and chimneys, or between M roofs. They should never be narrower than 9 inches at the bottom or starting-point, should rise about 1½ inches in no more than 10 feet lengths, at the outside, and between

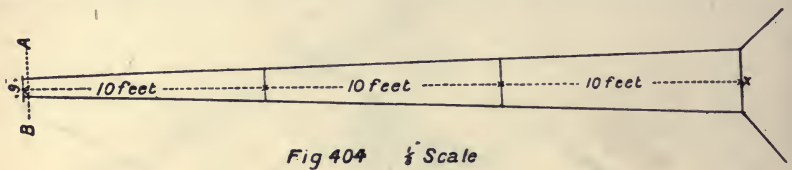

Fig 404 ½" Scale

each 10 feet, or less length, there should be a 2-inch drip, to give the water an impetus, and also to allow the plumbers to joint their lead. It

Fig 405

should be borne in mind, in arranging the drips, etc., of gutters, that the sun interferes with lead when in long lengths, so that drips should be placed within the 10-feet limit where practicable.

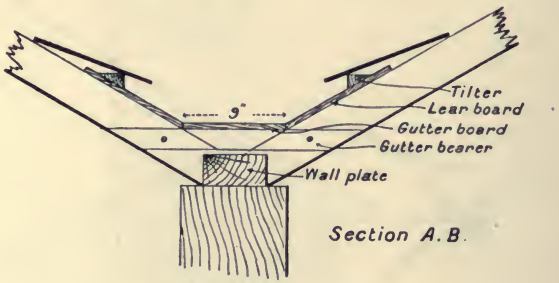

Fig 406

Fig. 404 represents the plan of a lead gutter between two roofs, M, and fig. 405 a longitudinal section.



Fig 407. Section C.D.

Fig. 406 is a cross-section of such a gutter, and fig. 407 an enlarged longitudinal section through a 2-inch drip.

It is always better to nail a feather-edged fillet on the face of the drip,

to make the angle the more obtuse for dressing the lead over, as fig. 408. Moreover, care should always be taken that the boards carrying the lead are laid in the direction of the fall, and *not* crosswise.

The *lear-boards* and tilter are also fixed at the top return, X, fig. 406, as at the sides.

Cesspools are sunk boxes, placed at the lowest points, to collect the water previous to discharging it, through a pipe fitted to the bottom of the cesspool, into the rain-water pipe, or, better still, into a head connected to the downspout (fig. 409). The heads allow of the lead bend to the cesspool being open at both ends and accessible, which is a great convenience when

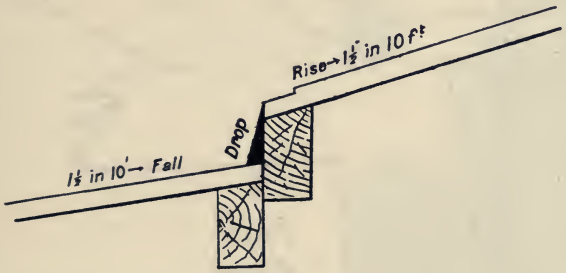

Fig 408

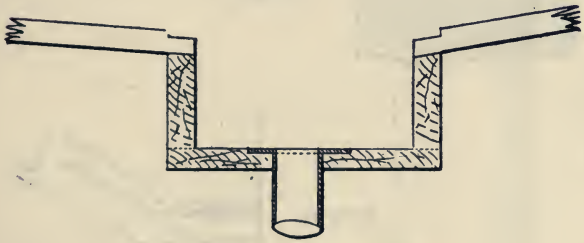

Fig 409. Section of Cesspool

they get stopped up with leaves—a very common occurrence. It is more convenient to have spout *troughs* through the walls from cesspool to head, when circumstances will allow of it.

The position of these cesspools has to be regulated, of course, to suit the elevations of the building and the position in which the downpipes can be placed.

The angles of cesspools, as well as the bottoms, should be dovetailed together to make a satisfactory and good job, though they are often only tongued together. Their size varies, of course, according to circumstances, the standard being 12 inches square and 9 or 10 inches deep.

Lead Flats.—The same rules apply to lead flats as to gutters, the falls of which are regulated by the bearers, which, of course, are stronger according to the increased bearing.

The rolls, etc., necessitated by the widths of lead or zinc will be dealt with in Chapter XIV., on Plumbing and Zincwork.

Gutters behind parapet walls or chimneys are under the same rules with regard to falls, etc., as last described, and are constructed similar to figs. 410 and 411 respectively.

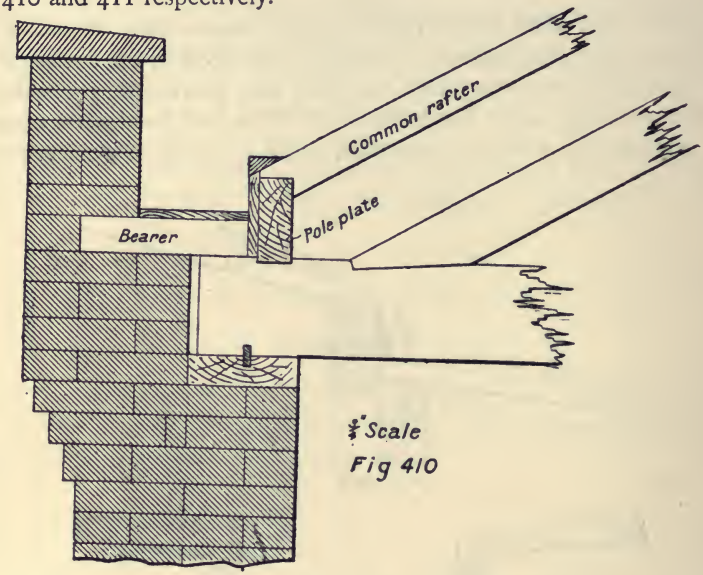

Fig 410

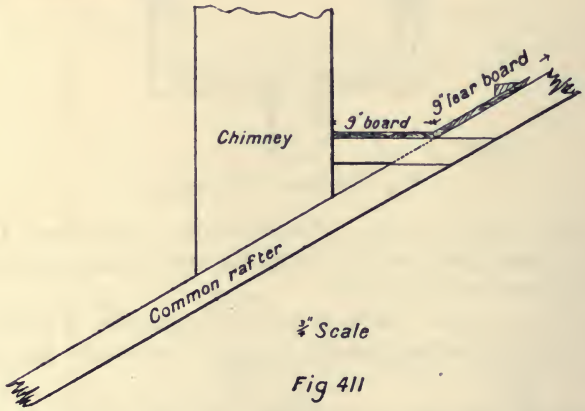

Fig 411

Gutters, owing to their rise up between the roofs, etc., increase in width consequent on the greater distance between the eaves of the roof as they get higher up (see fig. 412); and they must be shown to increase in width on all plans accordingly.

All leadwork in gutters or flats, where traffic would gradually wear it away, should be protected by *snow-boards*, which consist of arched

bearers, across the gutters, supporting laths or lattice-work no more than $\frac{3}{16}$ inch apart, running longitudinally with the fall. The bearers must be arched when laid across to allow the water to pass, and the spaces between

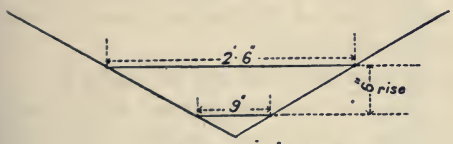

Fig 412. ½ Scale

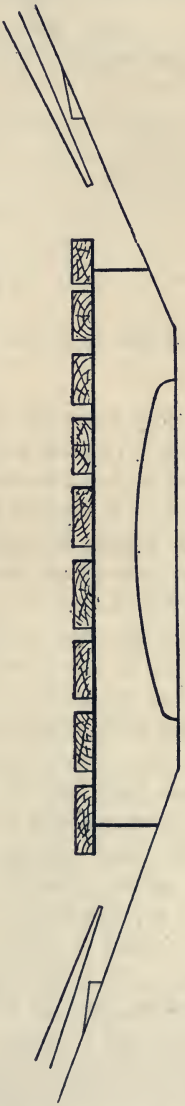

Fig 413

the laths should never be more than $\frac{3}{16}$ inch in width, as snow will get through wider interstices, freeze, expand, and upset the laths, besides *forcing* the water under the drip or drop, and causing a backing up, and consequently letting the water within the roof when the thaw sets in (*vide* fig. 413).

CHAPTER XI.

IRON AND STEEL.

Pig Iron—Cast Iron—Cast Malleable Iron—Wrought Iron—Rolled Girders and Joists—Steel.

It is only proposed to deal with the subject of iron and steel from a builder's point of view, and not as would be required for an engineer or ironfounder, a brief *résumé* being given of the various points of which the student is required to have some knowledge.

Pig Iron.—Wrought and cast iron and steel are all made from *pig iron*, extracted from the natural ore by the smelting process, which consists of heating the ore in a furnace, after it has been crushed into smaller particles, and then roasted or dried.

When in the furnace limestone is added to the prepared dry ore to extract its impurities, and a hot or cold blast passed over the aggregate, resulting in the molten metal leaving the lighter and more fusible impurities at the top, and sinking itself to the bottom, whence it is run into long channels with branches formed in sand. called the "sow and her pigs,' which gives this iron its name.

This "pig" or unpurified cast-iron is divided into the *foundry* and *forge* qualities, distinguished by the combination and amount of the carbon each in the first instance contains, the resulting cast-iron having a proportion of from 2 to 6 per cent., while steel should only have from 0·15 to 2·00 per cent., and good wrought-iron should be practically free from it.

Carbon, although it plays such a very important part in iron and steel, is considered a foreign matter, the effect which it has on the different metals depending on the nature of its combination. When it is in *chemical* combination in cast-iron it produces a white, hard, and brittle metal, only fit for the commonest uses, such as sash-weights.

On the other hand, a *mechanical* mixture, in which particles of carbon appear as black specks, giving it a grey appearance, produces superior metals, that of a light grey colour being hard and brittle, and suitable for

heavy castings, while the dark grey is weak, and only used for light ornamental work; but a medium quality in colour gives us a strong and durable metal, of weight-carrying properties, capable of resisting considerable pressure.

Cast Iron.—White cast-iron is made from forge and grey from foundry pigs, each of which is remelted and run into the moulds formed in sand according to requirement.

Good cast-iron should be of uniform toughness, with an even surface and straight edges, to show even shrinkage, while a *fracture* of the best quality should be clean and bright, of a bluish-grey colour, and free from any air or sand-holes, the presence of which can easily be detected in the mass by the hollow sound given when the metal is hammered.

All angles of castings should be gradual, to prevent uneven shrinkage,

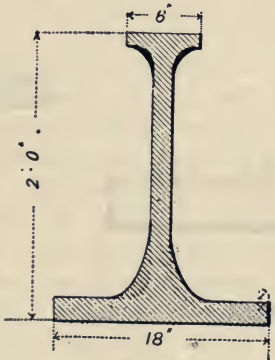

Fig 414
Scale 1"

as a thin portion will naturally cool much faster than a thick one; and where these two are adjacent their junction must be gradual, so that the thin part shall not set first and act as a check on the other, and cause cracks. This point is of especial importance in castings for girders and cantilevers, on account of the great difference there is between the power of cast-iron to resist compression and tension, the former being 38 tons per square inch, and the latter about 8 tons ultimate strength.

The "safe" load is about 8 and 1½ tons per square inch respectively, or nearly in the proportion of 1 to 6; and when it is considered that both flanges of a girder are subject to the same amount of stress, the top one of compression and the bottom of tension, it is obvious that their respective sectional areas, to resist their strains, must be in the proportion of 1 to 6, otherwise there would be either a waste of metal or lack of strength in one or the other.

Therefore the section of a cast iron girder must be as fig. 414, the

bottom flange having six times the area of the top one; while the *web*, as the vertical portion is called, must make a gradual junction between the two at top and bottom.

"Girders," it will be understood, are bearers having supports at both ends, while a "cantilever," as fig. 415, has only one end fixed; and consequently the strains on the flanges are the reverse of those of girders (as will be explained in Chapter XXIV.), necessitating also the reversal of the section in cast-iron cantilevers, which should be, therefore, as shown in fig. 416.

Cast Malleable Iron.—"Cast malleable iron" results from the extraction of a proportion of the carbon out of cast-iron by means of embedding the casting in oxide of iron, and reheating it in an annealing or softening

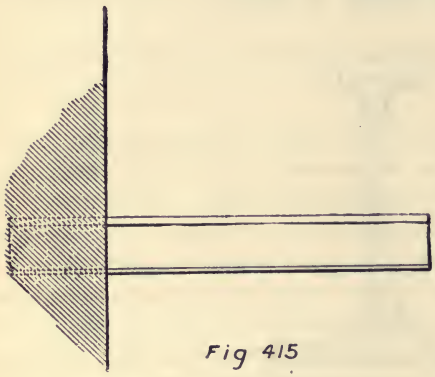

Fig 415

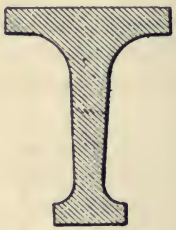

Fig 416

Fig 417

oven. This kind of iron combines the qualities of wrought and cast-iron, and is used for intricate work in wrought-iron specialities, being welded to the *wrought*-iron plainer portions, which cannot be done with cast-iron.

Wrought Iron.—"Wrought iron," which has now, to a great extent, superseded cast-iron, except for ornamental purposes, is the product of "Forge Pig," the resulting metal containing not more than 0·15 per cent. of carbon. The excess of carbon, it is obvious, must be extracted from the iron, the usual processes being as follows:—

The pig iron is first *puddled* or melted clear of any fuel, but with other substances (containing oxygen) to take out the remaining carbon; and when this is done the metal is collected and cooled into lumps, which are then *shingled* or placed under a heavy hammer, by which the iron is consolidated, and all other foreign matters are crushed out.

The *bloom*, as it is called, resulting from this hammering, is then rolled, while still hot, into *puddled bars*, which are the first and lowest quality of wrought-iron. As manipulation improves the tenacity and strength of wrought-iron, these puddled bars are cut up, piled, heated, and

rolled as before; forming the *merchant bar*, or second quality of wrought-iron; and a repetition of this process produces the *best bar*, B, or third quality; while *Best-Best*, B B, and *Best-Best-Best*, B B B, are the outcome of further repetitions—each such operation having the effect of giving the iron a more uniform fibrous nature.

Good wrought-iron is of a very tough, fibrous, weldable nature, capable of elongation, under certain weights, with little proportionate contraction of area—varying from 10 to 20 per cent. according as it is across, or with the fibre of the metal. It has also the power of *elasticity*, or going back to its original size and section, after the weight has been removed; though it can be *fatigued* by a continuance of that weight, which is said to cause a *permanent set*; meaning that the iron then stops at the position to which the load has drawn it, and this is said to be its *limit of elasticity*, extending to one-half its ultimate strength. It should be capable of bearing 24 tons per square inch, ultimate tensile strain, and about 20 tons of compression and shearing; equivalent to safe loads of about 5 and 4 tons respectively. These two powers of resistance are so much more nearly equal in wrought than in cast-iron, that top and bottom flanges of a girder may be made alike, with little waste of material or forfeiture of strength.

Rolled Girders and Joists.—Therefore girders or joists are rolled to sections, as fig. 417; and, in addition, they can be built up (in wrought iron) to any size, section, or design; because the iron can be welded, riveted, bent, rolled, or otherwise worked to any form, which cannot be done with cast-iron on account of its brittleness.

The surface of the *fracture* of good wrought-iron, under a weight applied *slowly* and *gradually*, should be stringy in appearance, as if every little fibre had held out to the last on its own account, some with greater success than others; while the fracture under a *sudden* shock would be of a more crystalline nature, its coarseness or fineness indicating its quality; the same deductions being drawn from the fine or coarse strings of a gradual fracture.

Iron contracts or expands $\frac{1}{150000}$ of its length for every degree (Fahrenheit) of temperature; and this must be taken into consideration in designing large wrought-iron structures.

Phosphorus is said to make wrought-iron *cold short—i.e.*, not capable of being bent and worked, as it should be, when cold; while the presence of sulphur has the opposite effect, rendering it *hot short*.

Steel.—*Steel* has a tensile strength of 32 tons per square inch, ultimate or breaking weight, and the same of compression with shearing at 24 tons—each of which, it will be noticed, exceeds the power of resistance of wrought-iron, which it has superseded; the kinds generally used for buildings being Siemens-Martin and Bessemer Basic—the former usually preferred on account of its greater toughness, though the latter rolls into

more shapely joists, and has bye-products valuable to the manufacturer. This difference is not worth considering in ordinary buildings, and moreover the Bessemer Basic is a trifle cheaper.

Steel contains from 0·15 to 2 per cent. of carbon, the amount being regulated either by addition to wrought or extraction from pig-iron, as hereinafter explained. It has the strengths previously mentioned, with greater elasticity, and combines most of the useful characteristics of both cast and wrought-iron ; in addition to which it can be hardened or softened, which is called *tempering*,—the former being done by reheating and *sudden* cooling, and the latter by reheating at a lower temperature and *gradual* cooling.

The various kinds of steel are made as follows :—

Tool Steel, as the name implies, is used for all kinds of instruments, including knives, and other cutting tools. It is the product of "cementation," which consists of the cutting up of pure wrought-iron bars and heating them with charcoal at a high temperature, forming *Blister Steel* —so called because of the blisters made by the process on the face of the iron. It is then reheated and rolled, forming *Spring Steel*; while the *single* and *double shear steels* are the results of further cementations, after which the metal is hammered together by a large "tilt" hammer.

Cast Steel includes the following different methods, the resulting materials being used for cutlery, railway rails, and wheels, armour, boiler plates, etc. :—

The *Bessemer* process includes the melting of pig-iron with other fluxes, to produce pure wrought-iron, to which the required carbon is added in the form of "Spiegeleisen."

The *Siemens* process substitutes Mokta ore for the Spiegeleisen ; while in

The *Siemens-Martin* method, wrought scrap iron is added, to give the required carbon.

The resulting metal is then rolled, according to Whitworth's patent, to compress the mass and get rid of the holes contained in all cast-steel. These last processes make the steel which is usually rolled into girders, etc., for building purposes.

Mild steel can be made by the above processes, but contains from 0·2 to 0·5 per cent. of carbon only, and is superior to wrought-iron.

Wrought-iron and steel, by the equality of their different powers, have a great advantage over cast-iron, which they entirely supersede for most work in which the structures are subject to both tension and compression, alternating in the same flanges, especially in continuous girders, etc. (as explained in Chapter XXIV.).

When wrought-iron or steel girders meet from different directions over columns they must be grouped together by angle plates, bolted to the webs of each girder, so that they can assist each other to make up for their small bearings, which should scarcely ever be less than 9 inches

for weight-carrying joists, girders, etc. Figs. 418 and 419 illustrate what is required at such junctions over columns.

To guard against corrosion, which gradually reduces their strength, these metals may be variously treated, by being:—

1. Boiled in tar;
2. Plunged into oil when red-hot, or coated with boiled oil;

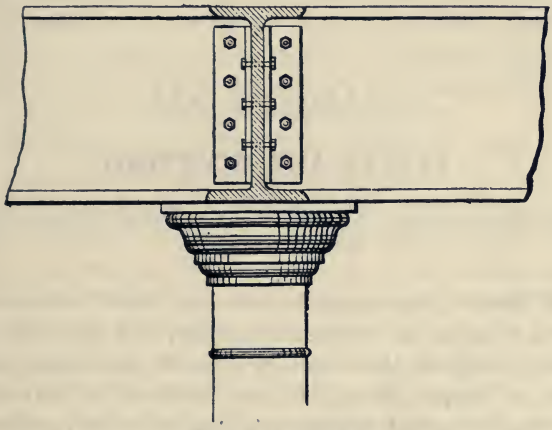

Fig 418. 1 Scale

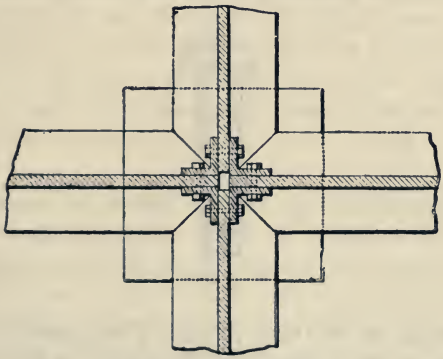

Section thro' Webs
(looking down)
Fig 419

3. Galvanized by a covering of zinc; or
4. Painted with oxide of iron instead of lead-paint, in order to give them some protection from atmospheric and other influences, which tend to injure them, and bring about deterioration of strength; and just lately it has been found that by adding a small proportion of aluminium to the steel in the manufacture the corrosion, to which it is greatly and prejudicially subject, can be considerably reduced.

CHAPTER XII.

RIVETS AND RIVETING.

Riveted Work—Hand Riveting—Machine Riveting—Forms of Rivets—Size of Rivets—Methods of Riveting.

Riveted Work.—Riveting is the means by which "first-class" wrought-iron and steel framings are connected together, and especially girders built up of several members, the common class of work being connected by bolts in lieu of rivets. It can be done by hand or by machinery, and consists of circular tapered wrought-iron pins, as it were, similar to fig. 420, with heads of various patterns, which are driven when hot into holes

Fig 420

concentrically made in the two pieces of wrought-iron or steel to be connected together. The rivets should be made of the very best (B B B) wrought-iron, the Staffordshire and Yorkshire qualities being the most suitable, as they are capable of withstanding an ultimate *shearing strain* (to which rivets are subjected) of about 25 tons per square inch, with a contraction of area of from 40 to 50 per cent., and elongation of 20 per cent., before a permanent set takes place.

Good rivet-iron should admit of being doubled up, when cold, without showing any signs of fracture; and the heads, when hot, should be capable of withstanding hammering down to almost a flattened thin surface before cracking at the edges, and they should allow of a hole

being punched through them of nearly their own diameter without cracking round the hole.

Inasmuch as the entire strength, and consequently the successful adaptation to its work, of the structure or girder often depends *wholly* at certain points on these rivets—which have to transmit unaided a complete series of great and heavy strains from one plate or member to another, which they are connecting together—it is absolutely necessary that the best rivet-iron should always be used, and fully up to the specification on which the calculations for the girder or framing have been based; and it is also necessary that the operation of riveting should be performed in the best, soundest, and most workmanlike manner.

Hand Riveting.—The method of proceeding in "hand riveting" is as follows: A gang, of two boys and three men, is set on to each job, the boys having to heat the rivets in a portable smith's forge adjoining the work, and to hand them up in buckets, when hot, to one of the men who stands under the plates to be connected up. This single-handed man—having previously knocked out of the rivet-holes a punch with which he has tested them for position, so as to see that the holes in the plates coincide properly and are concentric—pushes up the red-hot rivet through the holes, and places his hammer on its head underneath. On the pin of the rivet coming through the hole, and when the man underneath has secured his iron to its head, one of the two men who are at the top of the plates then hammers the tail of the rivet down, so that it fills the holes completely. It is to be noted, that it cannot be driven downwards again through the plates, because of the man's iron below; and, as the plates should previously have been hammered close together, the metal shank cannot be squeezed between the plates, and so keep them apart afterwards.

This being done, the second man at the top then places an iron die over the red-hot iron, which has now been compressed within the holes, and the other hammers it down, so that the die forms the upper end or other head of the rivet. The rivet-heads may be of various patterns, as hereinafter explained. The whole of this process only lasts a few seconds, and on the iron cooling it contracts and pulls the plates together by means of the ends of the pin of the rivet, as the sketches will explain.

Machine Riveting.—"Machine riveting," of course, has to be done in the shops at the ironbuilder's yard or works; so that only certain parts, though often the majority, can be riveted together, by machines, which work on similar lines to the process of hand riveting, but have the advantage of making both ends of the rivet at the same time, while the very great pressure, oftentimes from 50 to 60 tons, compresses the iron and fills up the rivet holes so much better than when done by hand; and consequently, when the rivets cool and contract, they have greater power

to pull the plates together. Indeed, cases have been known where the pins of machine-riveted work have been so tightly fitted in the holes, that when the heads have gone, or been removed, the pins have kept the plates together; and, moreover, the pins have even had to be "drilled out," when required, because they could not otherwise be got out. Hence it will be seen that machine riveting is far superior and better than that *clenched* by hand; and not only that, but the work is done so much cheaper by machinery.

The employment of bolts and nuts, to connect ironwork together, such as plates, is not to be compared, in point of strength and efficiency, with

Fig 421

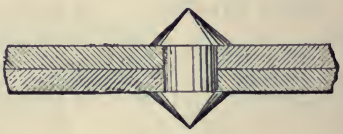

Fig 422

rivets, which pull the plates together in themselves, when they cool, after having been hammered down, whereas bolts can only be screwed up to the plates, so that the tightness of the connection and the perfection of the work depend solely on the thread of the bolt and nut.

Forms of Rivets.—The different classes of rivets are distinguished by their different-shaped heads, and the different modes of riveting by the order in which the rivets are placed, and the number of rows of them. Among the different kinds of rivets the chief are as follows:—

Fig 423

Fig 424

Snap rivets, as fig. 421, have hemispherical heads, which are formed by the die, and are sometimes called *button* or *cupended* rivets.

Hammered, *conical*, or *staff* rivets, as fig. 422, are made by the hammering of the red-hot iron to the required shape, as shown, no die being used for these.

Pan rivets are similar to fig. 423, and *counter-sunk* rivets to fig. 424; these latter being used where the plates must take a truly level bearing, which would not be possible with heads which project. The holes for these rivets are always drilled with a splayed shoulder within the plates, as the illustration explains.

The holes in the plates may be either punched in or drilled, the

latter being the better mode, because, while ensuring much greater accuracy in the setting out of the pitch, they are cleaner, as will be seen by a comparison of figs. 425 and 426; and they also do not injure the fibres of the plates by the sudden shocks and hammering. Drilled rivet holes also make stronger and better connected work, so that the rivets need not be so large as for punched work.

Size of Rivets.—The rule for proportioning the size of the rivets in punched holes, as laid down by Sir W. Fairbairn, is: For the diameter of the rivets, double the thickness of the plate under $\frac{1}{2}$ inch thick, the larger plate always being taken as the basis for their diameters; in plates above $\frac{1}{2}$ inch thick the diameter of the holes should be $1\frac{1}{2}$ times the thickness of the larger plate.

The holes are made slightly larger than the rivets, which expand when hot; and they are set out to different *pitches*, by which is meant the distance from centre to centre of the holes, the numeral used (as 4-pitch) denoting the number of diameters of the rivet from centre to centre.

Fig 425

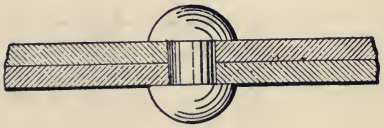

Fig 426

The common pitches are 4 or 5 diameters, equivalent to from 4 to 6 inches, according to the size of the rivets. In the outside row no rivet should be placed nearer than its own diameter to the edge of the plate; and punched holes should be farther away from the edge of the plate than drilled ones, because they weaken the plate more.

Methods of Riveting.—Riveting, as before noted, is distinguished by the order and number of the rows at the joint required to transmit the whole strain from one plate to the other, through the medium of the rivets themselves. *Lap* joints require only one set to convey a strain from plate to plate; while *fish* joints require two sets, the one to transmit the strain from one plate to the fish-plate, and the other set to take it from the fish-plate to the other long plate. Thus, two single rows at a *fish* joint would be called a *double* row at a *lap* joint.

Fig. 429 illustrates quadruple *zigzag* riveting on a lapped joint, similar in section to fig. 427, while it would be called "double zigzag riveting" if the joint were fished similar to fig. 430; so that single, double, triple, and quadruple riveting differs for lap and fish joints, and others of similar character, and care must always be taken to describe them properly, according to the nature of the joint.

Lap or *lapped* joints, as fig. 427, consist of two plates overlapping one another, to be riveted together.

Fish or *fished* joints are as fig. 430 in section, which should explain itself after the previous remarks, and what has been said on fished joints in carpentry.

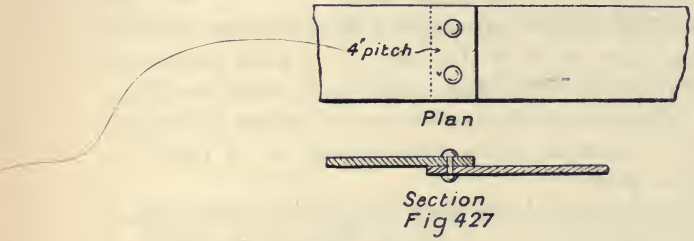

Fig 427

Jump joints, in riveting, are for compression when they are employed, which should be very seldom, as the strength of the connection depends more on the butting surfaces of the plates than the rivets; and, whether these surfaces be planed or not, the very act of riveting the joint has

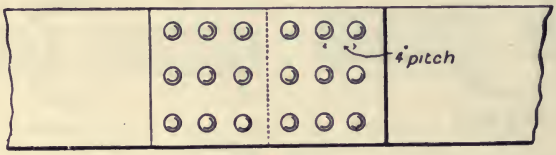

Fig 428

a tendency to twist them, so that the weight is not, as it should be, evenly distributed over the butting surfaces; and where the rivets have not been calculated to take the whole strain the joint fails.

All riveted joints should be calculated and designed so that the

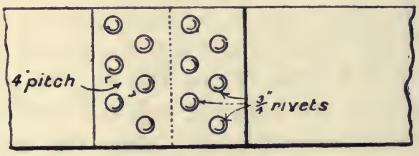

Fig 429

rivets can, if necessary, take the whole strain successfully, whether it be of tension or compression, in the length of the girder, stanchion, or framing.

Double riveting, and other kinds, superior in the number of the rows, may be either *chain* or *zigzag* in form, as figs. 428 and 429 respectively;

the "zigzag" being considered better than the "chain," because the holes, being alternate, do not take so much out of the continuity of the fibres of the plates. For example, in fig. 429, only one hole, as it were, is taken out of one continuous fibre; whereas if it were "chain" (fig. 428), two holes would be taken.

Section
Fig. 430.

The strength of a solid plate being taken at 100 single riveted joints, by way of comparison, may be taken at 56, double at 70, and chain riveting at 85.

CHAPTER XIII.

IRON ROOFS.

Iron *versus* Wood—Wood Members—Iron Trusses—Strains on Truss Members—Joints and Connections—Dimensions.

Iron *versus* Wood.—The student will have noticed (in Chapter XI.) how the use of iron tends to supersede that of wood in roofs originally designed and executed in wood; and as excellence in the production of wrought-iron of various forms increased, so it gradually displaced wood in the construction of roofs, first taking the parts of various members of the different trusses, for which it was in many ways the more suitable material, until now it has almost completely taken its place for the roofs of such buildings as stations, warehouses, factories, and similar constructions of a plain, substantial character, and where no ceilings are required; whereas, in trusses for the roofs of domestic buildings, the difficulty of dealing with them in a simple, practical manner precludes the exclusive use of iron—though it must be pointed out that iron is still used for the trusses only in all buildings, seeing that the purlins must necessarily be of wood to receive the rafters, which must also be of wood, for the purpose of securing the roof-boarding or laths which carry the slates or other external coverings. These wooden members—or, rather, the longitudinal parts of roofs, such as purlins or ribs, and ridges, to which the covering framing is secured—are supported in their respective positions by angle-irons and other similar means, which are, in their turn, secured by bolts or rivets to the principal rafters, etc., of the iron trusses.

Before proceeding to deal with the iron trusses themselves it will be well to fully explain this part of the subject.

Wood Members.—The ridge is generally treated as in fig. 431, being let into a special casting fitted and secured to the apex of the iron truss; or it is held up between two short pieces of angle-iron, also secured to the truss, as fig. 432.

The purlins, or ribs, which support the common rafters—or to which, when placed closer together, the boarding itself is affixed—are secured by

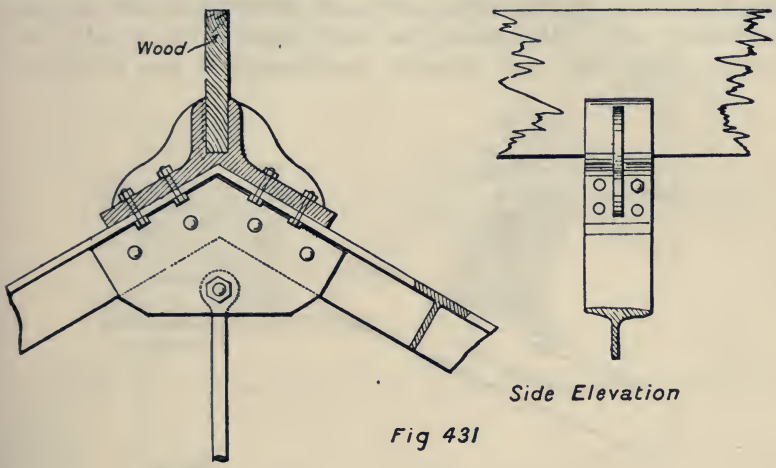

Fig 431

coach screws to angle-irons, as fig. 433, bolted to the back of the principal rafter, just as cleats assist purlins on wooden trusses.

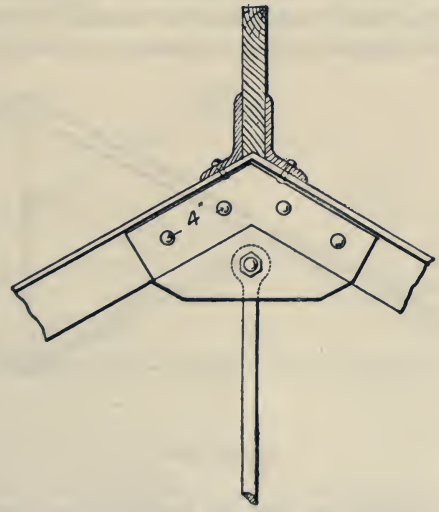

Fig 432

Iron Trusses.—Iron trusses have a lighter appearance than wooden trusses, though they can be made much stronger, according to requirements, both wrought and cast-iron being employed in their construction in

the first instance. The cast-iron is used for the members in compression, as rafters and struts; while wrought-iron is, of course, used for ties and suspension rods, whether *kings*, *queens*, or *princesses*, as they are called in wooden roofs. As cast-iron was very fragile—liable to snap under sudden shocks, etc., and otherwise troublesome—it was in course of

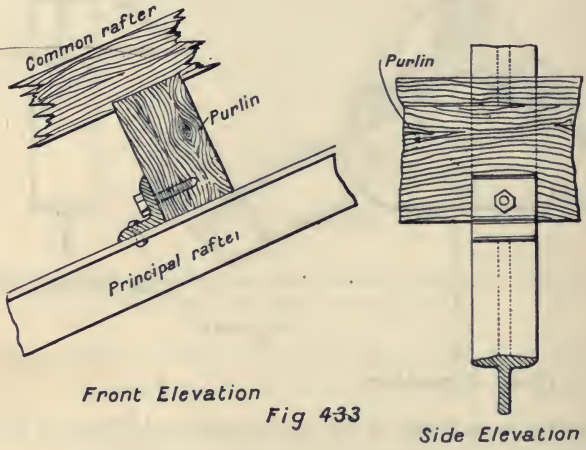

Fig 433

time displaced by wrought-iron, which has the advantage of being almost equally as strong to resist compression as tension—a great point in some members which are liable to both compression and tension, almost touching

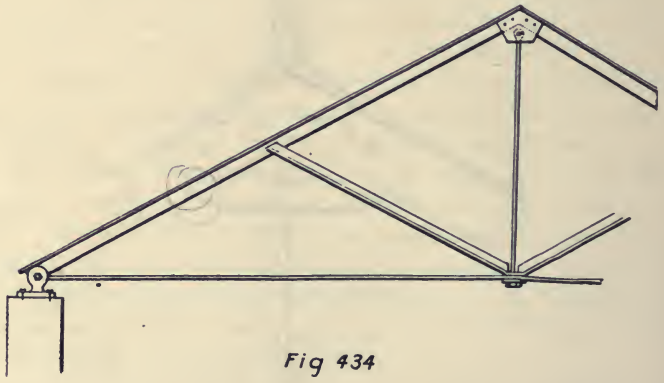

Fig 434

each other, as it were (as will be explained in Chapter XXIV. on "Strains"), so that now iron roof trusses, with the exception (and that not always) of the shoe, connecting the truss to the bearings on the supports, are completely built up of wrought-iron.

When iron trusses first came into vogue they were made of similar

form to wooden trusses, as in figs. 434 and 435—which, it will be seen, are identical with "king" and "queen"-post wooden trusses—but subsequently it was found out that these old lines of principle could be deviated

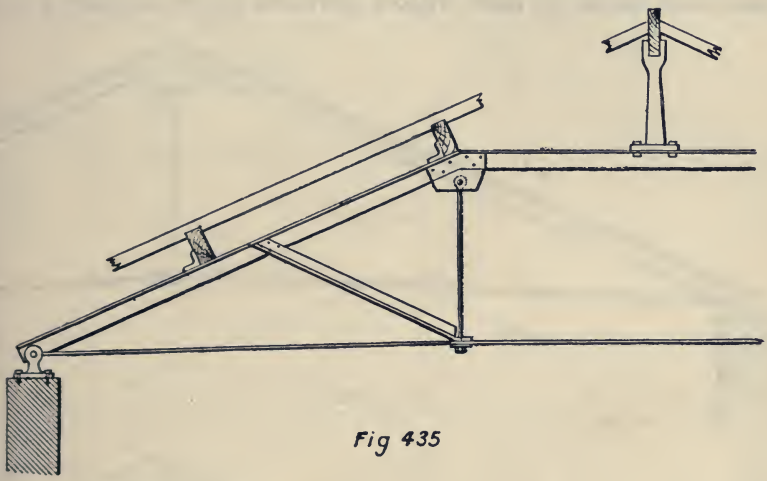

Fig 435

from with advantage, causing a saving of labour and material without any loss of strength whatever. Among the various novelties in form then and afterwards introduced were trusses similar to figs. 436 to 441; or they were oftentimes made of circular form—*i.e.*, with a circular roof formed by

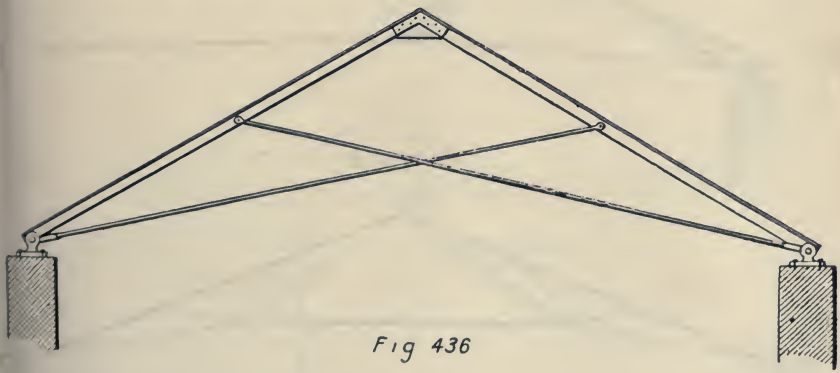

Fig 436

a circular principal rafter, the framing to support it being on lines following one or other of the triangular-shaped trusses hereinbefore illustrated.

Strains on Truss-members.—In the study of iron roofs it helps the student considerably to have a knowledge, however slight, of the different strains, whether of tension or compression, which the members are generally subjected to; and with that end in view the writer would suggest

that the following simple comparison be employed to distinguish one from the other—viz., if a rope can be substituted for the piece of iron, then it may be taken for granted that that member is in *tension*; whereas, if such substitution cannot be made without detriment to the structure, it is in

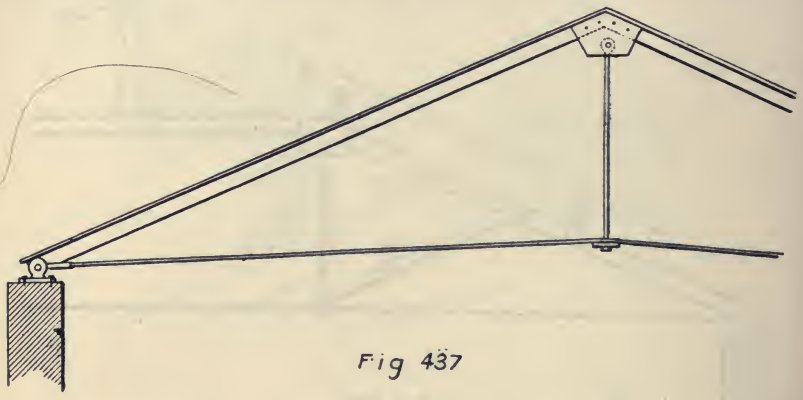

Fig 437

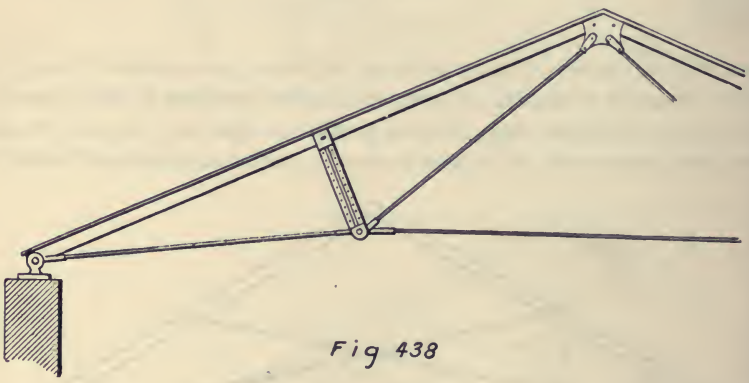

Fig 438

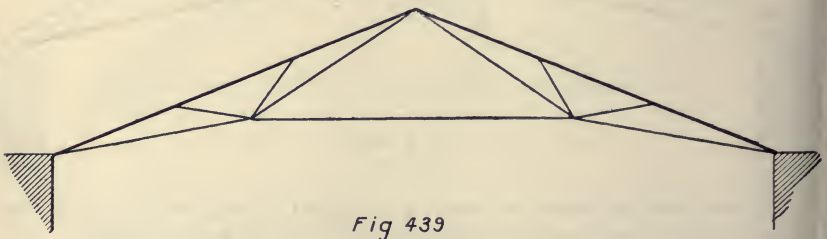

Fig 439

compression. This being ascertained, rods must be used for tension, and T's for compression, generally.

With this knowledge the student should be perfectly able to apply he principle of the following illustrated explanations of the ordinary joints

to whatever ordinary roof is required. It would be an endless undertaking to point out the peculiarities of all joints of the many forms of iron roof-trusses, so that an exposition of the principles must suffice once for all.

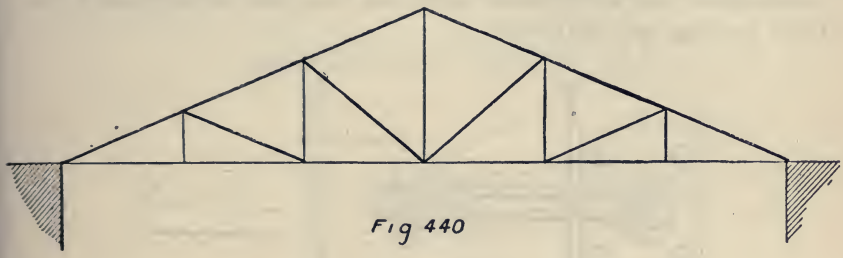

Fig 440

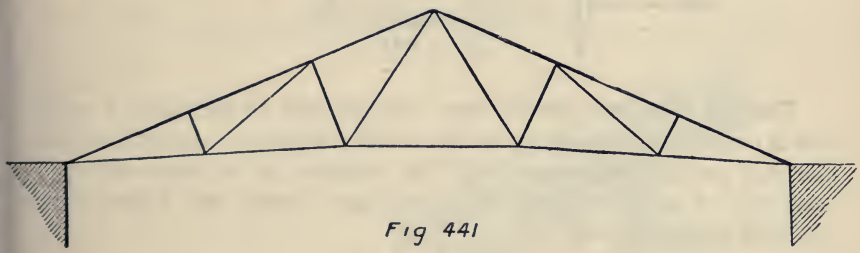

Fig 441

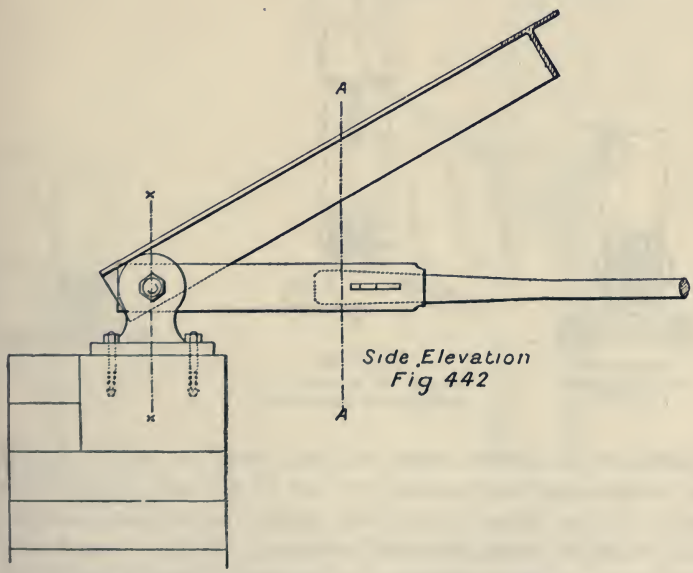

Side Elevation
Fig 442

Joints and Connections.—The foot of the truss is collected together and connected to the supports by means of a cast-iron shoe (as figs. 442 to 445), which, it will be seen, is a flat-bedded casting, with, as it were, two

jambs, cheeks, or posts rising from it, and between these cheeks (as they may be called) is placed the web of the T-shaped rafters ; the remaining space, between the web and the two cheeks, being filled up with thin wrought-iron bars, which extend within the truss, and in their turn, figuratively speaking, grip the tie-rod.

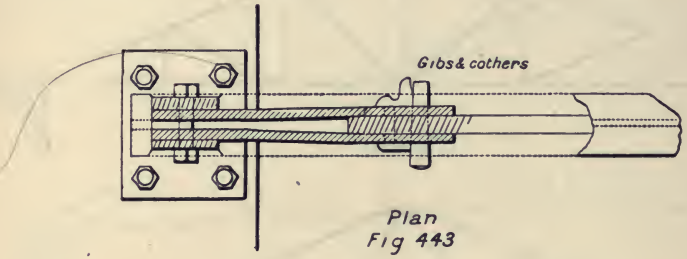

Plan
Fig 443

Through these two cheeks, bars, and the web of the rafter, a pin or bolt is placed and screwed up at the outside, forming a complete connection and perfect attachment of all the members to the shoe—which is itself secured to the supports by *ragged* bolts, leaded into a hard stone pad built within the wall.

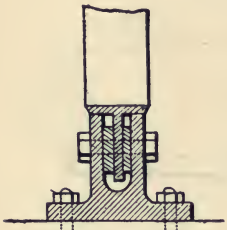

Section xx
End Elevation
Fig 444

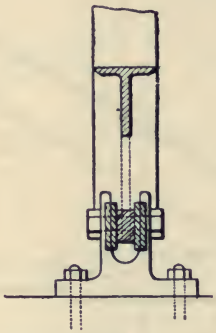

Fig 445
Section on A.A. Fig 12
& Elevation of shoe behind

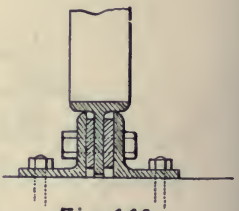

Fig 446

Sometimes, in common roofs, two angle-irons are bolted on each side of the wrought-iron bars enclosing the web of the rafter, being themselves secured to the pad-stones in the same manner as the cast-iron shoes (see fig. 446, which is a front sectional elevation). In large trusses, the contraction and expansion of the iron, as affected by the temperature, must be taken into consideration ; wherefore the shoes are made with a sort of ribbed base, which rests on oiled rollers, working on the bottom side of an iron box built into the wall to receive the shoe or chair, as it is sometimes

called. This method, of course, supersedes the use of ragged bolts, and is shown in sectional elevation at fig. 447.

Where the shoe or chair has to be supported on columns, it is connected, as shown in fig. 448, to the abacus or square plate on the top of the cap of column.

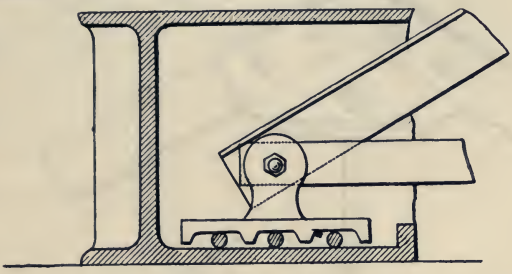

Fig 447

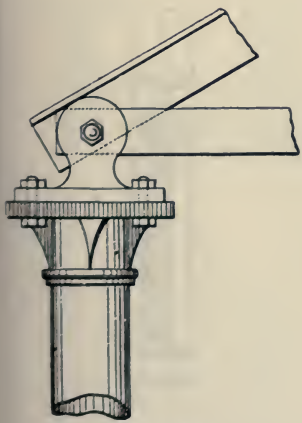

Fig 448

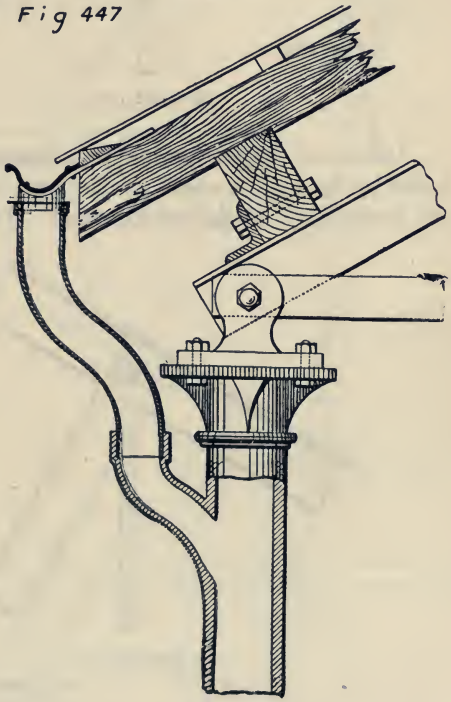

Fig 449

If there happens to be an outlet of an eaves-gutter next to a column in a roof of this description, the water must be made to run down the inside of the column as the downpipe, the water being conveyed to an inlet-hole specially cast on the column by means of a "swan-neck," as fig. 449.

The rafters at the apex and the suspension rod are connected together by thin cover plates on each side of the web of the rafters, gripping the suspension rod below the rafter apex, where there is a space, as fig. 450.

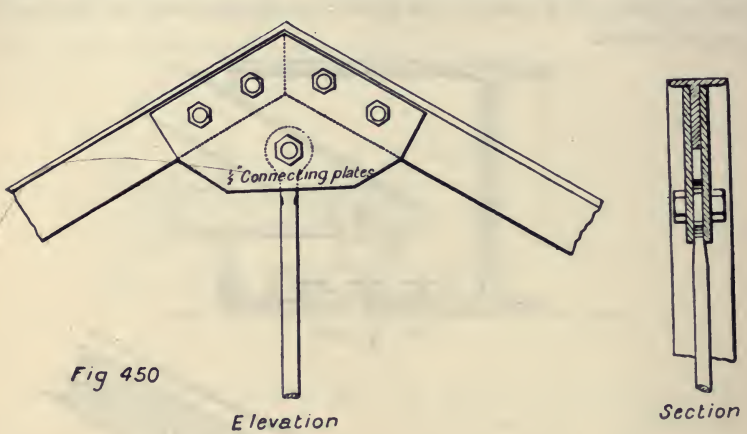

Fig 450

A strut and suspension rod are connected to the rafter by a joint, illustrated by fig. 451; the web of the strut being attached on one side, and the flattened eye of the rod the other. The three are connected together

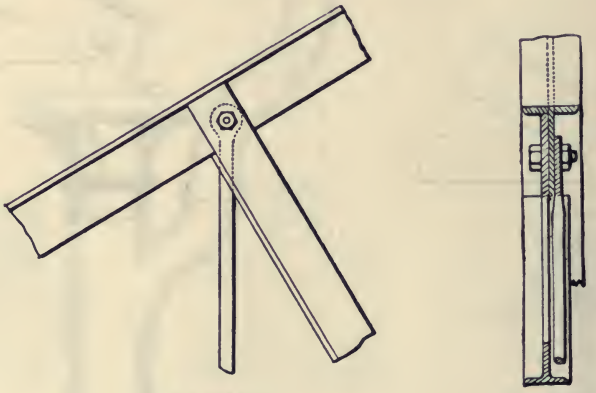

Fig 451

by a bolt, and the flange of the strut is cut off close up to the underside of the web of the T rafter.

Struts, from their great tendency to bend, when in long lengths, under heavy weights, have often to be built up of various *blocked* members, as figs. 452 to 455, in lieu of plain T-iron, which is used under ordinary circumstances. They may be either straight or bulged, the latter being

preferable, but more troublesome (*vide* figs. 453 and 454). The ends of the rods are forged out from the round, to grip the two plates of the strut enclosing the flattened tie-rod, as shown in the enlarged section (fig. 455).

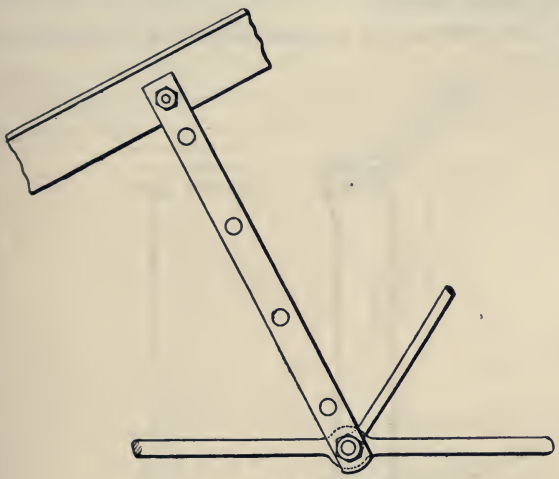

Front Elevation
Fig 452

Fig 453

Fig 454

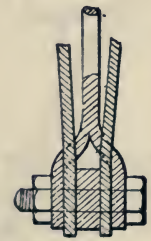

Fig 455

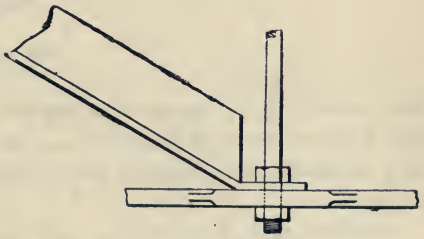

Fig 456

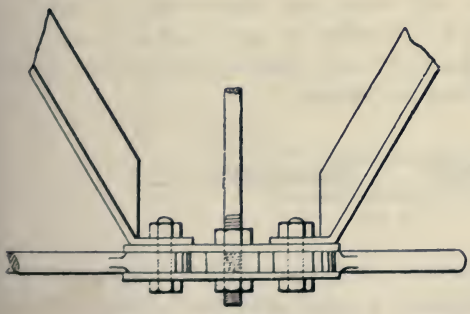

Fig 457

A single strut, of ordinary T-iron, is connected to the tie-rod, as in fig. 456; the web of the strut being cut off and the flange bent over the

bulged tie-rod, the suspension rod going through both, and being bolted up underneath. If the flange of the strut is cut off at the top joint between the strut and the rafter, the web is cut off at the bottom joint between the strut and the tie-rod, and *vice versâ*.

The joint at the foot of the centre suspension rod and struts, when of T-

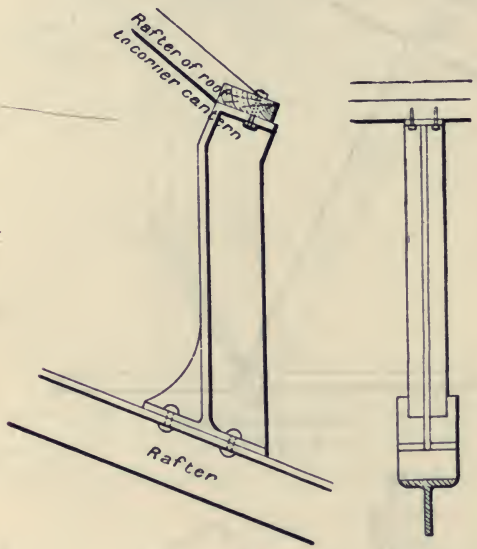

Fig 458

iron, is as fig. 457, fig. 452 also applying to this joint, with a little modification, when the strut is built up. As it is usual to camber the tie-rods, they are made in two lengths, and connected at this joint as the illustration explains.

Louvres and *lanterns*, on iron roofs, are constructed by cast-iron supports, secured to the top of the T rafters to carry the roof framing, as fig. 458, the wall-plate being fixed by coach screws through holes drilled on the top of the casting, as shown in elevation.



Fig 459

When tie and other rods have to be jointed in their length, they are treated as fig. 459, which illustrates a coupling-screw, X being a minus-thread—*i.e.*, within the circumference, and the other a plus-thread—*i.e.*, projecting beyond the circumference. It will be seen that the turning of the hexagonal coupler draws each rod inwards or pushes it outwards, the

threads being different at each end—the one a right-handed, the other a left-handed screw.

Diagonal, or cross-ties, are used for tying several roof trusses together to resist a strong wind, driving at their end, and having a tendency to make them overturn. Fig. 460 illustrates their use, one end being fixed to the foot of one truss at X X, from which it runs up to the ridge of Z. Such cross-bracing is requisite for wood and iron roofs with gable ends alike.

Iron roof trusses are usually placed about 7 feet apart, the same distance

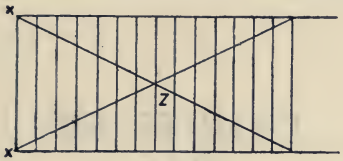

Fig 460

generally being between the suspension rods, measured along the tie-rod, and also between the struts to the rafters.

The rise of iron roofs (which are generally covered with light materials in weight) is from $\frac{1}{5}$ to $\frac{1}{4}$ of their span; the tie-rod cambering from $\frac{1}{40}$ to $\frac{1}{15}$ of its length.

Dimensions.—The following table gives the safe and economical sizes of the various members of strut and tie wrought-iron roof trusses, of different spans, spaced 6 feet 8 inches centre to centre :—

Span.	Diameter of parts of *Tie-rod.*	Diameter of *Suspension rods.*			Dimensions of	
		King.	*Queen.*	*Princess.*	*T struts.*	*T rafters.*
Feet.	Inches.	Inches.	Inches.	Inches.	Inches.	Inches.
20	$\frac{3}{4}$ and $\frac{5}{8}$	$\frac{3}{4}$	$\frac{5}{8}$	—	2 × 2 × $\frac{3}{8}$	$2\frac{1}{2}$ × 2 × $\frac{3}{8}$
25	1 and $\frac{7}{8}$	$\frac{7}{8}$	$\frac{3}{4}$	$\frac{5}{8}$	2 × 2 × $\frac{3}{8}$	$2\frac{3}{4}$ × $2\frac{1}{2}$ × $\frac{3}{8}$
30	$1\frac{1}{8}$ and 1	1	$\frac{3}{4}$	$\frac{5}{8}$	$2\frac{1}{2}$ × $2\frac{1}{2}$ × $\frac{3}{8}$	$2\frac{3}{4}$ × $2\frac{1}{2}$ × $\frac{1}{2}$
35	$1\frac{1}{4}$ $1\frac{1}{8}$ 1	1	$\frac{3}{4}$	$\frac{3}{4}$	$2\frac{1}{2}$ × $2\frac{1}{2}$ × $\frac{3}{8}$	3 × $2\frac{3}{4}$ × $\frac{1}{2}$
40	$1\frac{3}{8}$ $1\frac{1}{4}$ $1\frac{1}{8}$	$1\frac{1}{8}$	$\frac{7}{8}$	$\frac{3}{4}$	$2\frac{1}{2}$ × $2\frac{1}{2}$ × $\frac{5}{8}$	$3\frac{1}{2}$ × 3 × $\frac{1}{2}$
45	$1\frac{3}{8}$ $1\frac{1}{4}$ $1\frac{1}{8}$	$1\frac{1}{4}$	1	$\frac{7}{8}$	3 × 3 × $\frac{1}{2}$	4 × $3\frac{1}{2}$ × $\frac{1}{2}$
50	$1\frac{1}{2}$ $1\frac{3}{8}$ $1\frac{1}{4}$	$1\frac{1}{4}$	1	$\frac{7}{8}$	3 × 3 × $\frac{5}{8}$	4 × $3\frac{1}{2}$ × $\frac{5}{8}$
55	$1\frac{5}{8}$ $1\frac{1}{2}$ $1\frac{3}{8}$	$1\frac{3}{8}$	$1\frac{1}{8}$	1	4 × 4 × $\frac{1}{2}$	5 × $4\frac{1}{2}$ × $\frac{5}{8}$

CHAPTER XIV.

COVERINGS FOR ROOFS.

Lead Work—Lead on Roofs—Zinc Work—Zinc on Roofs—Slates—Forms of Slates—Fixing of Slates—Tiles—Fixing of Tiles—Special Forms of Tiles

Lead Work.—Lead is a material of a soft, heavy, highly fusible, and extremely flexible nature, used as a covering to flat roofs, and as a means of rendering slated and tiled roofs watertight; being, on account of its flexibility, highly adapted for all angular and similar joints in roofs, where the brittle nature of tiles and slates renders them useless. It has no strength whatever, and is the product of an ore which is *smelted* down to a molten state, and rolled into large sheets, or made into pipes and cast-pigs which are beyond the province of this chapter.

The sheets may be either cast or milled, the former being heavier in weight, thicker, and harder; but, on account of its irregularity in thickness and liability to flaws and sandholes in the casting, it is of little service to the plumber, except in very heavy work and the covering of exceptional church roofs.

Milled lead is rolled out, as the name implies, into thinner sheets of a more uniform thickness and denser nature, and it is in this form that lead is mostly used by the builder or plumber for roof-coverings and similar work, in which it can be "bossed" up as required. Its quality is described by its weight per superficial foot, the qualities most used being 4, 5, 6, 7, and 8 lbs. per foot in weight; and, to give the student an approximate idea of its thickness, it may be mentioned that 7 lbs. milled sheet lead is a little under and 8 lbs. a little over $\frac{1}{8}$ inch in thickness.

Except in very exposed positions the following weights are suitable, and generally used for the nature of work specified: 4-lb. for soakers; 5-lb. for flashings; 6-lb. for valleys; and 7-lb. for gutters, flats, hips, and ridges.

It should always be borne in mind that the sun has great power over

lead, drawing it away, as it were, so that leadwork should never be securely fixed, but always free to move. Before proceeding to enter fully into the details of the various positions in which lead is used it will be advantageous to enable the different parts to be identified on a roof plan.

Lead on Roofs.—Fig. 461 represents a plan of a roof, and will show most of the positions in which lead is used on a roof, the letters on the plan referring to the following members: A, a ridge; B, a hip; C, a valley; D, a flat; E and F, gutters between two roofs; G, gutters behind

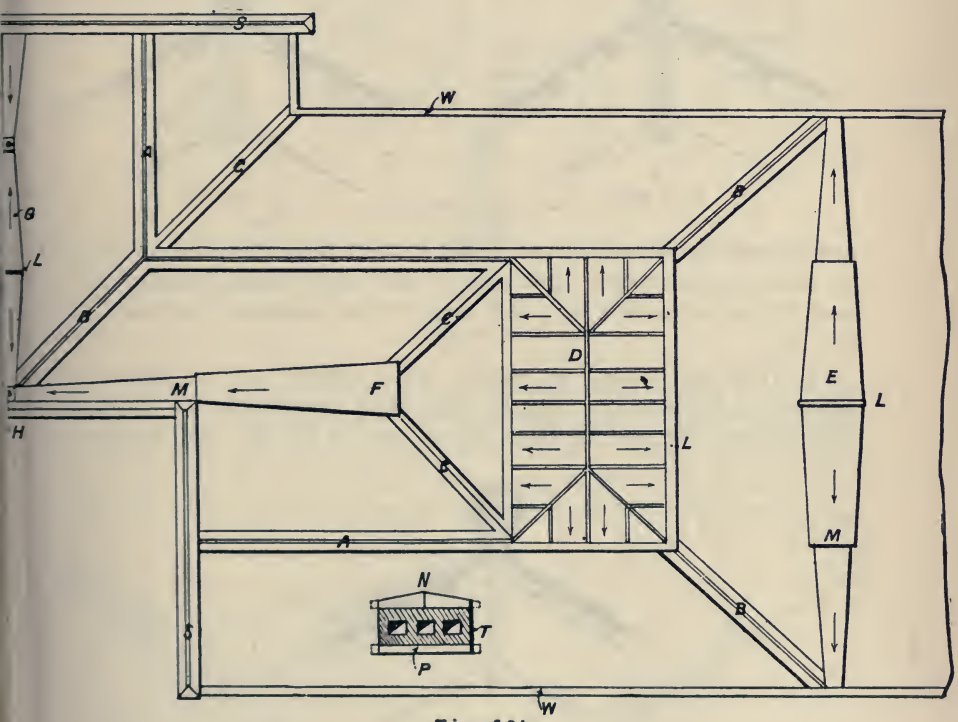

Fig 461

a parapet; H, a cesspool; L, a roll; M, a drip; N, a gutter behind a chimney; P, an apron in front of a chimney; Q, the parapet wall; R, the top of cornice; S, a gable where the flashings and secret gutter would be used; T, a step-flashing on the side of a chimney; V, junction of flat and roof; W, an iron eaves-gutter.

Following this key plan, we have, first, the *ridge* A, which is treated as fig. 462, a wood-roll $2\frac{1}{2}$ inches in diameter being secured by double-shouldered spikes to the ordinary ridge as shown; or nailed to a bevelled fillet secured to the ordinary ridge, as fig. 463, the object of which is to

enable the plumber to be the better able to dress the lead under the roll, in order to form a key, so as to prevent the sun from drawing it off.

In practice, the bottom of the roll should be no less than 2 inches above the top of the ridge to allow for this key; and the wings or sides of the lead covering should extend 7 inches down the roof over the slates. The lead is put on in 7 or 8-feet lengths, with a 6-inch lap at the joints,

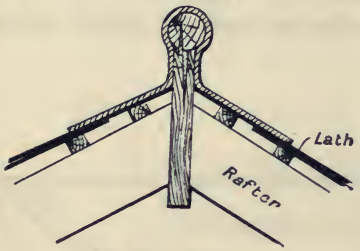

Fig 462

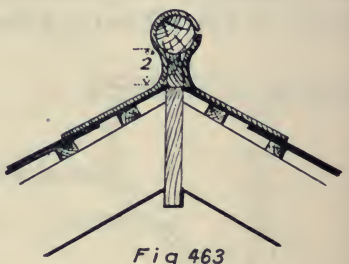

Fig 463

and fastened down on the top (so that it has freedom to move elsewhere) by round-headed copper spikes, or by lead tags about $1\frac{1}{2}$ inches wide, fixed by copper nails, 2 or 3 feet apart, to the woodwork underneath, as fig. 464.

B. *Hips* are treated in section in a similar way to ridges, the difficulty at the junctions with the ridge being got over by the hips being dressed down first, and the ridge lapping over, as fig. 465; and the foot of

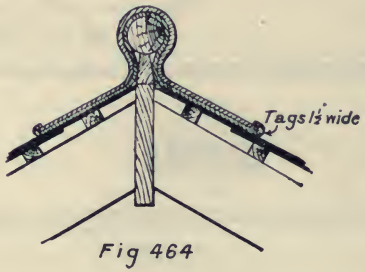

Fig 464

the hip is bossed, as shown at the foot of the same figure, the roll itself stopping several inches off the eaves, and being rounded off for the lead to be dressed over as illustrated.

C. *Valleys* are internal angles, as opposed to hips, which are external. Fig. 466 represents a section of a valley; 5 inches of lead should be visible from the edge of the slate to the centre or angle of the valley, to allow a person to walk up them without breaking slates, and the lead should go 6 inches under the slates, and be nailed by copper nails, always over the tilter, and just turned up the roof, as shown. They are put on in 7 or

8-feet lengths, and, where a joint occurs, the bottom piece is copper-nailed 6 inches under the upper piece, which is dressed over similarly to fig. 467. A saddle-piece is used at the top, next the ridge, just as for hips, the valley-piece going 6 inches under the saddle-piece.

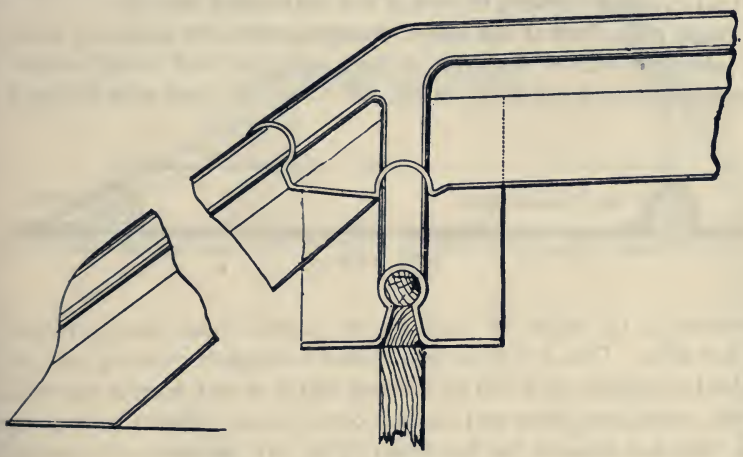

Fig 465

D. *Flats*, as the name implies, are roofs with small pitches which have to be covered with lead (or zinc), as slates and tiles are wholly unsuitable and ineffectual. The boards on which the lead is to be dressed should be laid "with the fall," so that there may be no projections and sharp edges across the fall to cause the lead to wear; and for the same reason they

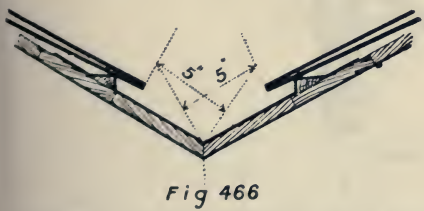

Fig 466

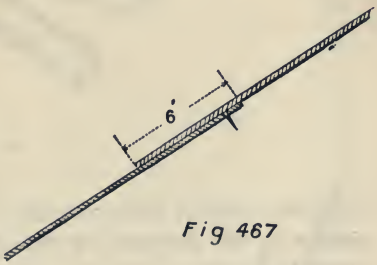

Fig 467

should be also of such thickness that there is no possibility of their warping.

The boards being laid according to the above principle, and to a fall of 1½ inches to 2 inches in 10 feet, and as the lead should never be in more than 10-feet lengths at the outside, and that only in exceptional cases —7 or 8-feet lengths are the best, and also the most economical, as the lead sheets are only 7 feet 9 inches wide, sizes above that length having to

be cut lengthwise—the rolls to joint it are fixed at certain distances apart, usually 2 feet 10½ inches from centre to centre, or about 32 inches apart, so arranged (for economy) that two widths can be cut without waste out of the width of a sheet 7 feet 9 inches wide; it is also unadvisable to have the lead in larger surfaces, in view of the sun's power over it.

These rolls, fixed at the above distances apart, are used as a basis for the joint, one side of the sheet of lead going over and being secured by copper nails to one roll as X, on fig. 468; and the other side is lapped to



Fig 468

a distance of 1½ inches on the flat, over another sheet already treated as the first side. This, it will be seen, makes a complete covering, and allows the lead to expand, as it will be noticed that it is only fixed at one side, as X, the other being loose and dressed over the roll to keep it in position. The ridge and hips, on the flat shown in fig. 461, are treated in exactly the same manner; the mitres being dealt with as fig. 469, one sheet lapping

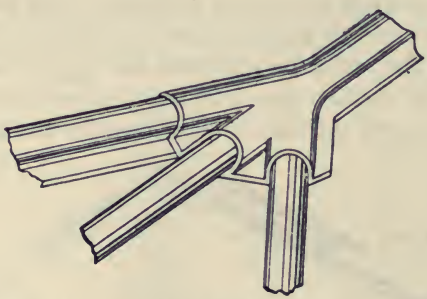

Fig 469

over the complete joint, covering up the other different sheets in a manner similar to the sections on fig. 468. The ends of the rolls are bossed similarly to hips.

The nose, or eaves, of the flat, on to the roof, is worked as fig. 470, the under-piece (called an apron) being dressed and copper-nailed into a rounded rebate worked on the boards across their grain, so that the top piece of lead may not be tilted up by the under-piece.

E and F. *Gutters* between roofs and behind parapets, as G, are subject to similar rules to the last-named with regard to falls and the lengths of the sheets of lead between drips M, or drips and rolls L;

the widths being regulated by the width of the gutters, which increase in width in their ascent, as explained in the chapter devoted to "Carpentry."

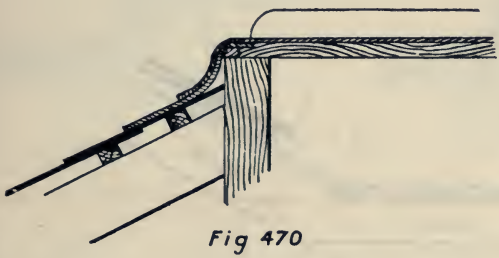

Fig 470

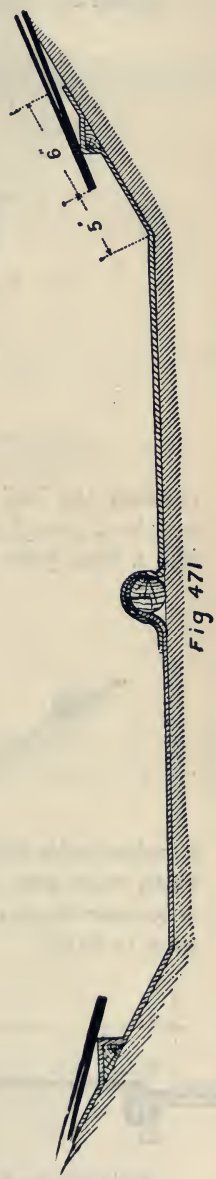

Fig 471

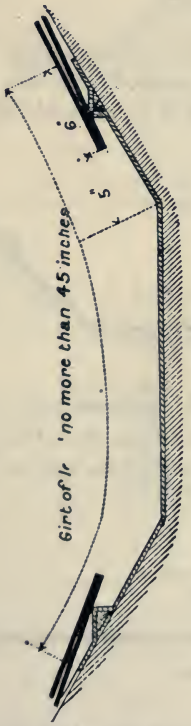

Fig 472

Fig. 471 represents a section of a gutter between two roofs, where the width of gutter precludes the lead being used in one width, as fig. 472.

It should be here pointed out that a gutter should always be 9 inches wide on the flat at its lowest point, increasing in width as it rises.

G and N. Fig. 473 is a section of a gutter behind a parapet wall or

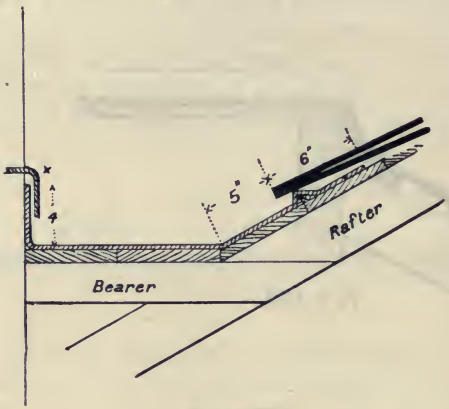

Fig 473

chimney, the lead being turned 4 inches up the wall at X, and covered over by a *cover-flashing* 5 inches wide, wedged with oak or lead wedges into a brick joint or stone groove. It will be noticed that the lead goes

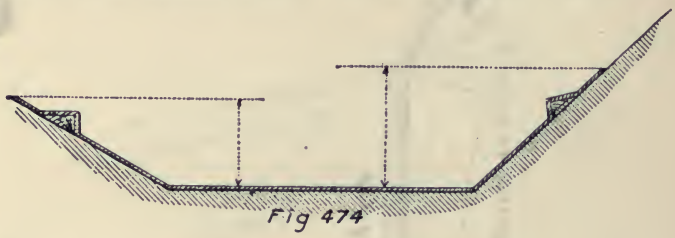

Fig 474

6 inches under the slates; but this should be increased to 9 inches in flat roofs, where snow would lodge, as the flatter the pitch the less height there is between the top of the gutter and the top of the lead, as fig. 474, for the snow to lie in.

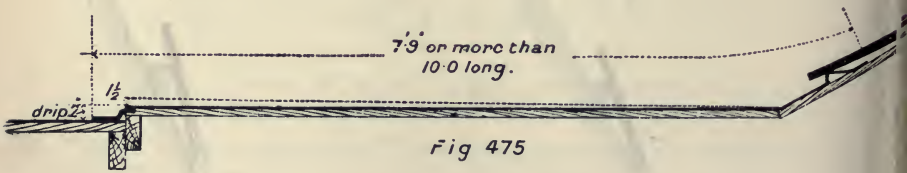

Fig 475

Rolls are used across gutters falling both ways to joint the lead and to divide them as a ridge does a pitched roof.

Fig. 475 gives a longitudinal section of a gutter, starting from a pitched

roof, downwards through one drip, which may be treated either as figs. 476, 477, or 478.

H. *Cesspools* are boxes formed at the bottom of gutters, to collect the

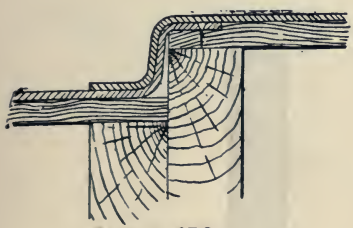

Fig 476

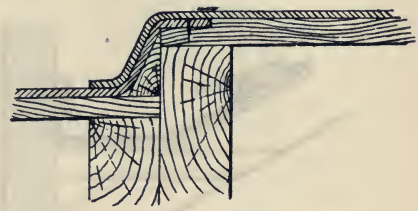

Fig 477

water previous to discharging it through a pipe from a hole in the bottom to the head or downpipe. The best way to treat them is as shown by

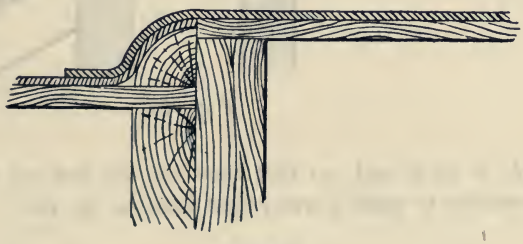

Fig 478

fig. 479, which needs no explanation ; except to say that where the angles, sides, and bottom of the box cannot be bossed in one piece they must be

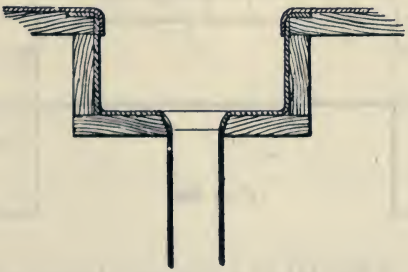

Fig 479

soldered—i.e., copper-nailed and covered with solder (a composition of lead and tin) laid on while hot to adhere to and connect the adjoining lead.

N and P, a gutter and an apron. Fig. 480 gives a section through a chimney, showing the gutter at the back, and an apron flashing in the front, both of which should be not less than 6 inches longer than the width of

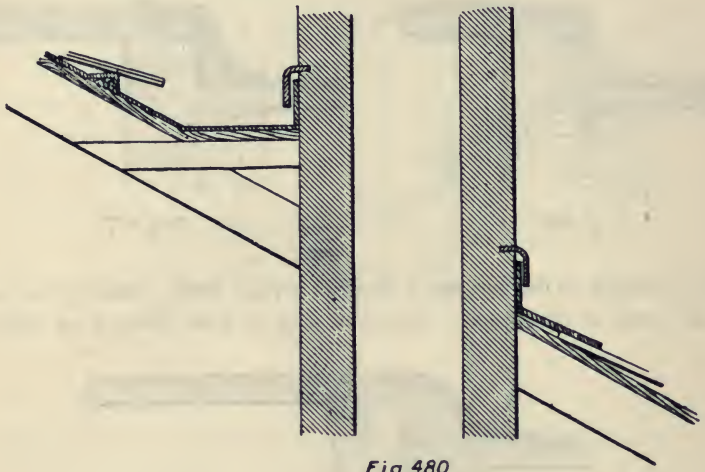

Fig 480

the chimney, at each end, so that they can be laid on one slate, and covered by another to make a water-tight joint, as fig. 481.

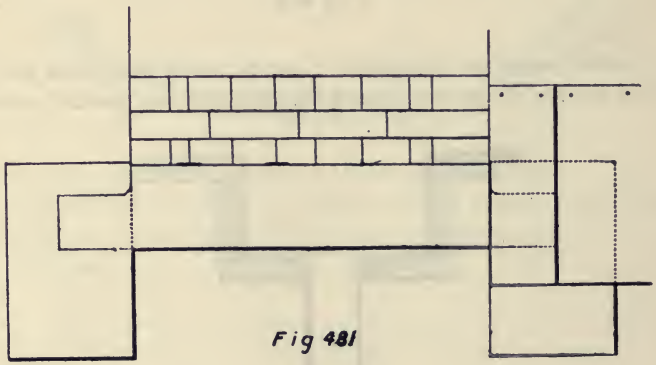

Fig 481

The elevation of the side of a chimney, showing a *step flashing*, is as fig. 482 These step flashings are more ornamental than the plain cover flashing, fig. 483; and they are either cut out in one piece 5 inches wide to work in with the brick joints as fig. 484, or each is put on as a separate step, as fig. 485; their object, and that of other flashings, being to cover the up turns of gutters, as shown by X, on fig. 473; or of *soakers*, as

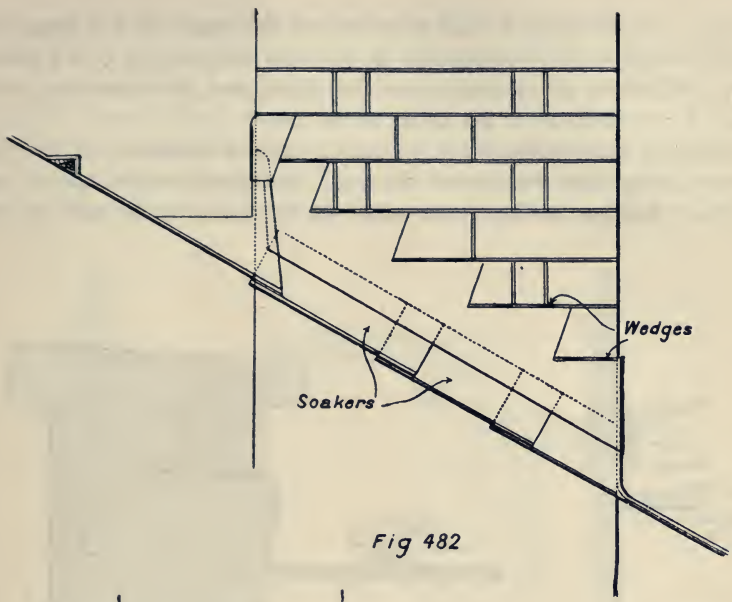

Fig 482

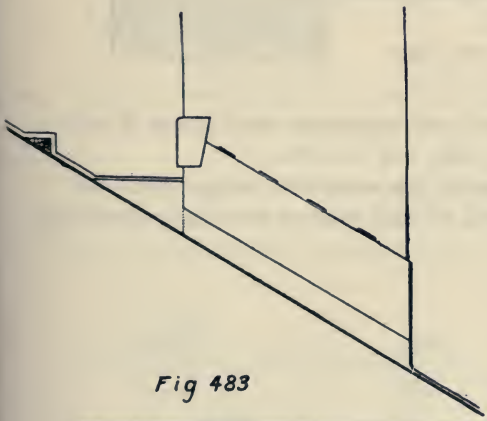

Fig 483

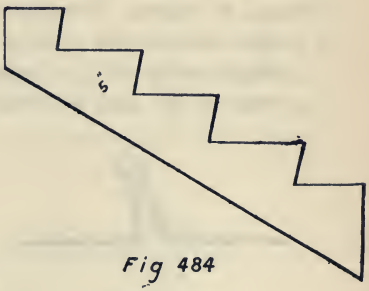

Fig 484

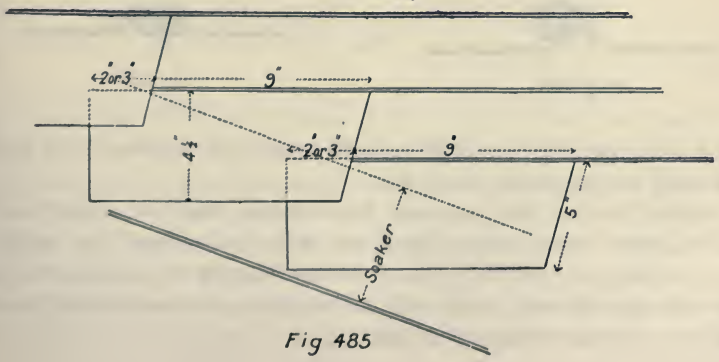

Fig 485

fig. 482; a *soaker* being a small piece of lead the length of the gauge and lap of a slate or tile (as explained in the next chapter), by 6 or 7 inches wide, 3 of which go on and under the slates, and the remaining 4 are turned up the chimney or the gable, as fig. 486.

Flashings must always lap at the angles round a chimney—*i.e.*, the step or side flashing must turn round the angle, on to and over the apron; and the cover flashing of the gutter must do the same to the step or side

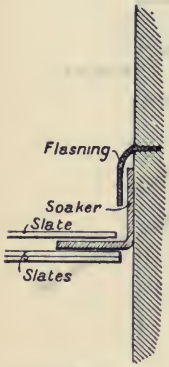

Fig 486

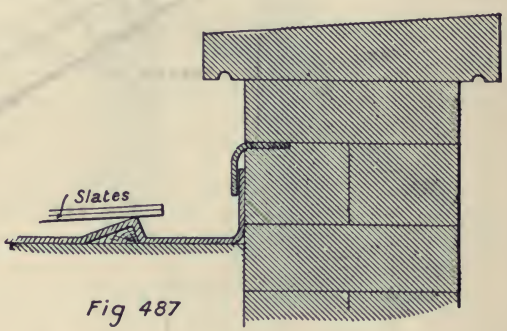

Fig 487

flashings, as shown. *Secret gutters* are sometimes used, in lieu of *soakers*, up gables covered with copings, as fig. 487 in section.

A *tingle*, as fig. 488, is a substitute for wood-rolls, though little used.

A *welt*, as fig. 489, is a folding of lead used to joint lead, where rolls

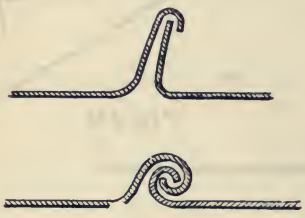

Fig 488

Fig 489

are not used, and it is especially suitable for vertical lead-work, the under-piece being copper-nailed, as shown.

Soldered or lead dots are used for securing lead on vertical or flat surfaces, where neither rolls, tingles, nor welts can be used, the mode of procedure being as follows: a hole is scooped out of the boards, the lead dressed in and screwed down, and the hollow is afterwards filled up and rounded over with solder, as fig. 490.

A *raglet* is a groove cut in masonry to receive the turn in of lead; and when this is done on the top of blocking course, and over flat surfaces, the lead is "burnt in"—*i.e.*, the "turned in" is secured by running molten lead into the groove or raglet.

A *bottle-nosed drop* is as fig. 491, from which it will be seen that the upper board projects sufficiently to protect the turn-up of the lower gutter and the top gutter is dressed over so as to form an apron. This

Fig 490

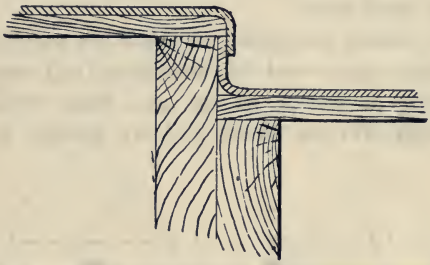

Fig 491

mode has the disadvantage of the lead apron being easily turned up, an objection which is obviated by treating the drips as in figs. 476, 477 and 478.

Zinc Work.—Zinc is a very thin, light metal, used for roof-covering on a cheaper scale, being about one-third of the cost of lead. It is used for gutters, valleys, soakers, and flashings, in common work, in like manner

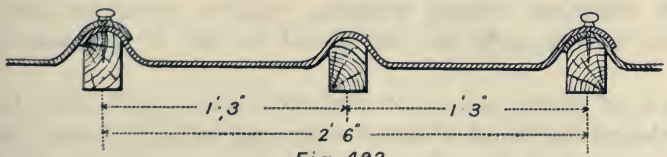

Fig 492

to lead; but it is chiefly as a cheap covering to flat and iron roofs of stations and other large erections that it is valued and mostly used. Zinc is very fusible and tough, and can be easily bent backwards and forwards without cracking. Moist air, when it does not contain acid, forms a coating over it of oxide, which protects it; but sea and town atmospheres, tainted with acid, soon destroy it.

Zinc is sold in sheets, the qualities of which are distinguished by *gauges*, varying from 1 to 26, and weighing from 1 to 60 ounces per foot,

superficial. The qualities most used for building purposes are from 14 to 20 gauge; more generally the former, which weighs about 18 ounces per superficial foot.

Zinc on Roofs.—The simplest form in which zinc is used as a roof-covering is in corrugated sheets, about 30 inches wide and 7 feet long, the ordinary kind having corrugations every 3 or 4 inches. The sheets are laid from purlin to purlin, placed about 30 inches apart, for the purpose, lapped on to the corrugations at the longitudinal joints, as well as at the transverse joints, up the roof; and they are secured to the woodwork by round-headed screws with washers, the joints being connected by very small bolts.

The Italian corrugated zinc roof has much wider corrugations—namely, 15 inches apart—and the sheets are laid over rafters with rounded tops, appearing in section as fig. 492, from which it will be seen they lap alternately over the rafters, and are secured by mushroom-headed screws

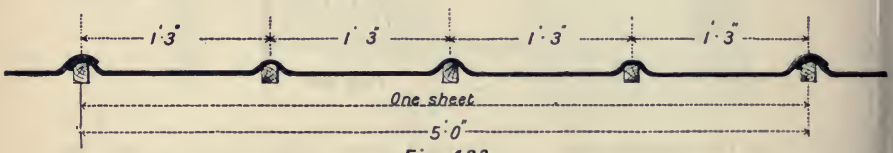

Fig 493

to the same rafters. Fig. 493 is a representation of Braby's *Italian* pattern.

Flats are covered by zinc, as illustrated by fig. 494, in which the expansion and contraction (which is greater in zinc than in lead) is provided for. No solder nor external fastenings whatever should be used; and, to ensure the best work, the zinc should be laid by experienced men only.

Zinc is, of course, laid on boarded roofs with 2½-inch drips, to joint the zinc lengthwise, which is treated as figs. 495 and 496, shown in section and elevation; and these drips should be at intervals of every 7 feet 6 inches, or thereabouts. Roofs with falls exceeding 12 inches in 8 feet need no drips, and the sheets are jointed by folds, as fig. 497. The wood rolls, not rounded as for lead, are fixed, as in fig. 498, 2 feet 10½ inches centre to centre, so that the zinc between them may be in one sheet, the joints being made in the rolls, as in figs. 499 and 500.

The ends at the bottom and top of capping are treated as figs. 501 and 502, and the flashings against walls are dealt with as in fig. 503.

Zinc may be treated in a very ornamental manner, as well as used for ordinary work and flat roofs. The embossed work on the Hotel Metropole,

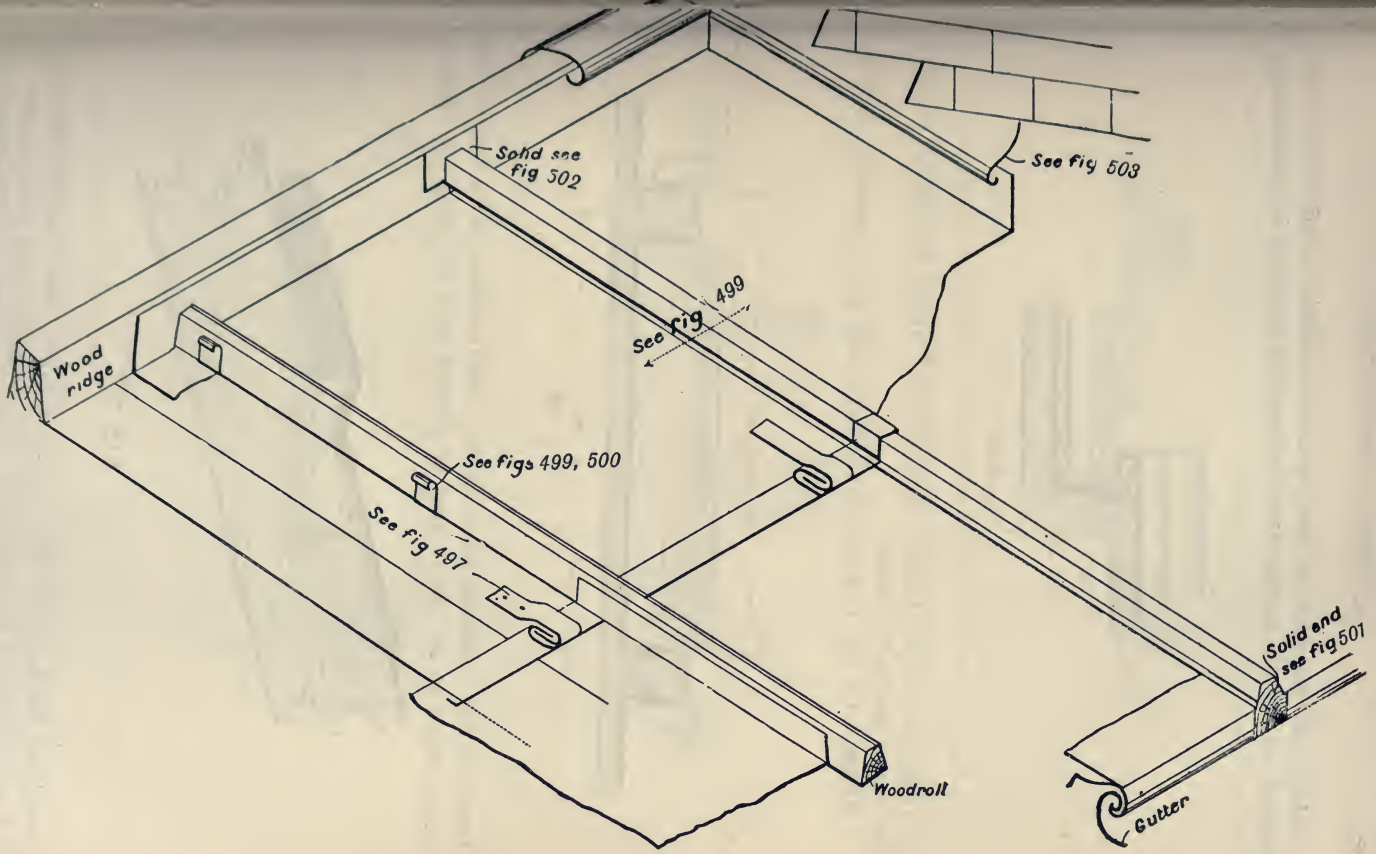
Solid see fig 502
See fig 503
See fig 499
Wood ridge
See figs 499, 500
See fig 497
Solid end see fig 501
Woodroll
Gutter

Fig 494

London, was executed in zinc by Messrs. Braby; and it should be pointed out that the system of zinc roofing here explained is as advised by

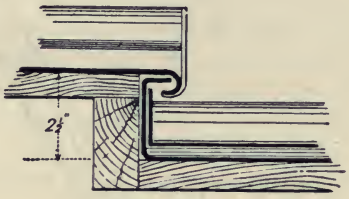

Fig 495

that firm, who are the English agents for the "Vieille Montagne," the best and purest zinc in the market.

Slates.—Of the two materials—slates and tiles—generally used in

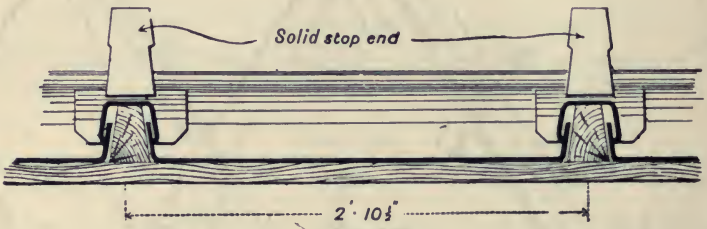

Fig 496

towns for roof-coverings, slates are the more common, being cheaper and better suited to the flatter kind of pitched roofs (of about 30 degrees)

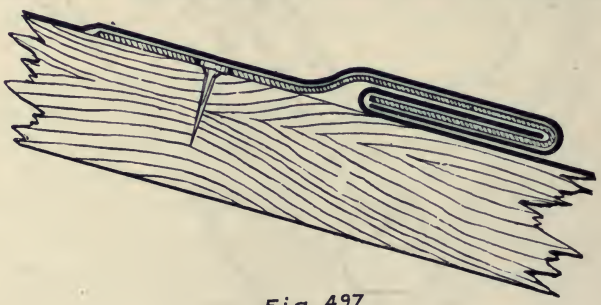

Fig 497

which are less expensive than the steep ones. Slates are the production of an argillaceous or clay-formed rock, so fine-grained and compact that it splits readily into extraordinarily thin slabs of various sizes, which are

formed into slates for roof-coverings, while the greater thicknesses are converted into shelving and slabbing for other purposes.

A *good* slate should be hard and yet tough, of very fine grain and

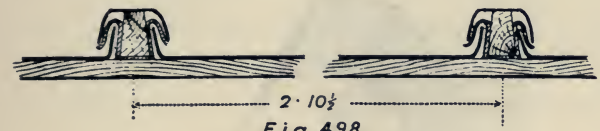

Fig 498

uniform colour, thin and very non-absorbent, so much so that a good dry slate, after standing 24 hours in water halfway up its height, should not have drawn up and absorbed any moisture above the water-line. Another

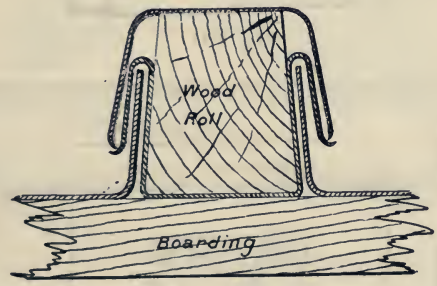

Fig 499

sign of good quality is to be able to breathe on the slate without bringing forth any clayey odour, which would be a sign that it will not weather.

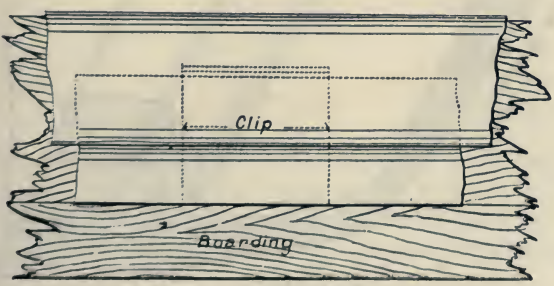

Fig 500

Wales and Westmoreland produce most of the slates used in this country, the latter being of a green colour—thicker, rougher, and much heavier than the Welsh. The latter are mostly of the same good quality,

and remarkable for their thinness and smoothness, the best being from Penrhyn and Port Dinworic, the colours of which are alike. Of the many varieties the chief are distinguished by their colour. A Bangor slate is of

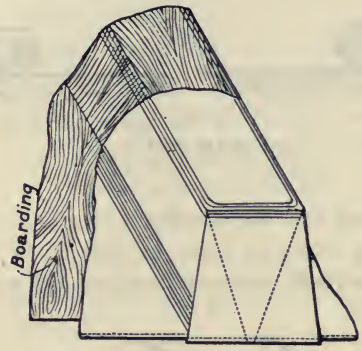

Fig 501

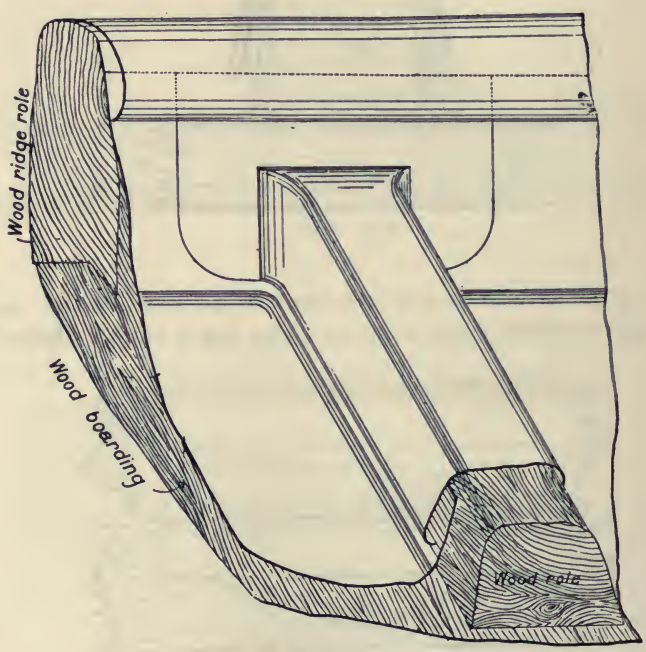

Fig 502

a purple colour, while a Penrhyn slate may be either blue, purple, or green. Portmadoc produces a blue slate, and Whitland Abbey those of a green colour, which are thicker and softer than the other kinds.

Stone slates are found at Colley Weston and Naunton, while many of

the Yorkshire stones can be split fine enough for roofing purposes. A stone slate is a non-conductor of heat, while the ordinary kind of slate is a good conductor of heat.

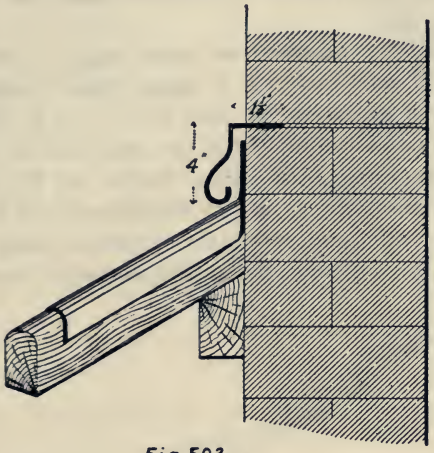

Fig 503

Forms of Slates.—The chief sizes in use (with their names) are as follows:—

Imperials . .	30	inches long by	24	inches.
Empresses . .	26	,,	,,	15	,,
Princesses . .	24	,,	,,	14	,,
Duchesses . .	24	,,	,,	12	,,
Marchionesses .	22	,,	,,	11 or 12	,,
Countesses .	20	,,	,,	10	,,
Viscountesses .	18	,,	,,	10	,,
Ladies . .	16 or 14	,,	,,	10 or 8	,,
Doubles . .	13	,,	,,	10 or 7	,,
Smalls				below the latter.	

Fixing of Slates.—Slates are fixed, by two nails each, to the roof boardings, or to the longitudinal strips of wood (called *laths* or *battens*) running along the roof across the rafters. Of the two the latter is preferable to the boarding. The nails are either of galvanized iron, zinc, or copper.

The *back* of a slate is its upper surface or face, while the underside is called its *bed*. The *head* is, of course, its upper and the *tail* its lower edge. That part of the slate which is visible, when fixed on the roof, is called the *margin*, its depth being called the *gauge*.

Lap.—The *lap* of a slate is the distance that the top slate projects

or laps over the second one beneath it (as fig. 504); and this word is used in conjunction with the name of the slates, of course, to denote the kind of work which is required to be done.

Thus we specify that Duchess or Countess slates are to be used, *laid to a* $2\frac{1}{2}$ *or* 3*-inch "lap."*

Gauge.—Sometimes, however, the word *gauge* is used for the same object; as *laid to such and such a gauge*, which depends on the lap, though more chiefly on the size or kind of slate to be used. Given the lap and the name or size of the slates, the gauge can be found by calculation—*i.e.*, from the length of the slate deduct the lap, and half the remainder (because the slates are in two thicknesses) will be the gauge. In laying slates to a specification calling for "Countess slates laid to a $2\frac{1}{2}$-inch lap," for instance, the first thing a practical man—not having the gauge at

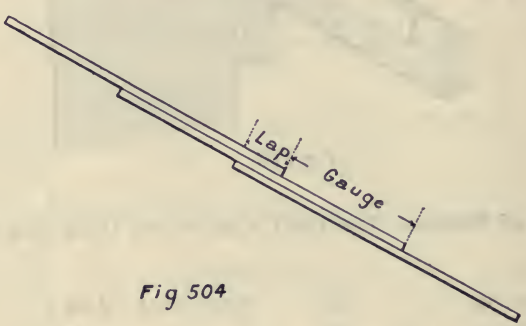

Fig 504

his fingers' end, as it were—would do, would be to calculate the "gauge." Thus: From 20 inches (the length of a Countess slate) deduct $2\frac{1}{2}$ inches = $17\frac{1}{2}$; half of that difference will be the gauge—*i.e.*, $8\frac{3}{4}$ inches. This last-named figure is the guide by which the slater "holes" his slates for the nails, and fixes his battens to the rafters, or marks his line for the nailing along the boarding. Good work, in slating, should have the tails of all slates perfectly horizontal, and the vertical alternate joints ranging in straight lines from eaves to ridge.

The first proceeding of a slater is to square three sides of the slates, the head being left rough, and then to hole them for the nails, which may be done either at the head or in the centre. When nailed at the head, the two nail-holes are pierced at a distance of about 1 inch downwards from the head, so that the tail of the second slate, when laid on above it, covers their position by 2 or 3 inches, which is the difference between two gauges and the length of the slate, less the distance the nail-holes are pierced from the head of the slate.

Centre-nailed slates do not have their holes exactly in the centre, but at the distance of the sum of the gauge and lap above the tail. Thus, the

holes of Countess slates laid to a 3-inch lap would be: $8\frac{1}{2}$ inches (the gauge) plus 3 inches (the lap) = $11\frac{1}{2}$ inches, above the tail, or thereabouts; so that the nails may clear or miss the head of the slate below.

Centre-nailed slates resist high winds very much better.

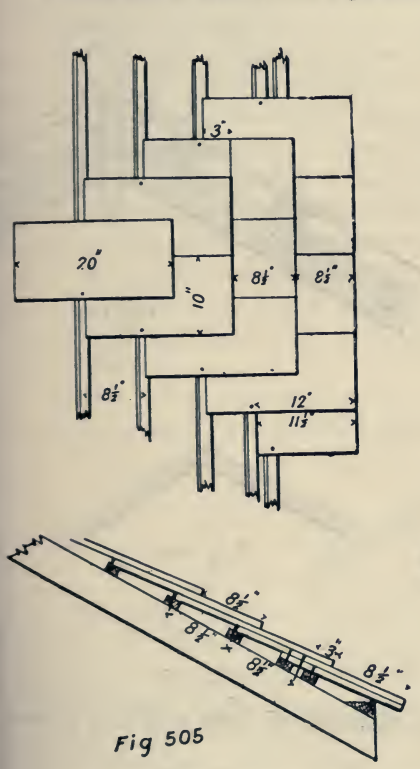

Fig 505

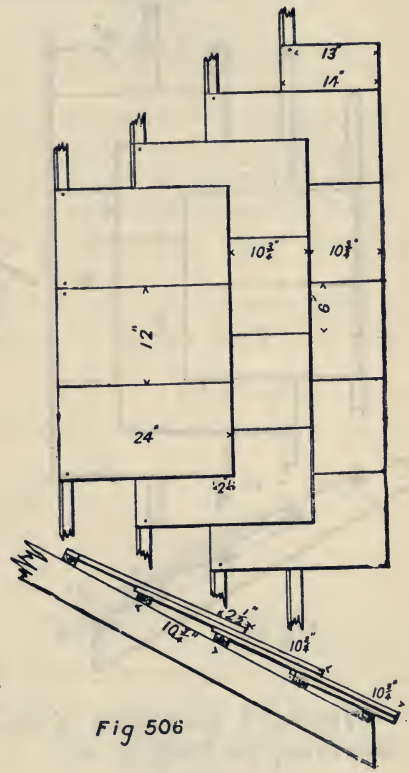

Fig 506

Fig. 505 gives a section and plan of *Countess* slates laid to a 3-inch lap and centre-nailed; while fig. 506 gives the same particulars of *Duchess* slates "laid to a $2\frac{1}{2}$-inch lap and top-nailed"; and fig. 507 those of 16 × 8 inches *Ladies'* laid to a $6\frac{1}{2}$-inch gauge and nailed at head.

From the above sketches it will be noticed that there is a different-sized slate at the bottom (at the eaves), shown by dotted lines; this is called *double eaves*, and its length is a little more than the sum of the lap and gauge, so as to allow for the nail-hold above. It should also be pointed out that, in centre-nailed slates, this involves the placing of two battens together at the bottom for eaves, whence, it should be noted, all slating starts, and is worked or laid in courses upwards.

Slates are bonded by *half-bond*, as the plans indicate, this necessitating a half-slate at the gables, etc.

Ridges have also a *double* course at the top, as fig. 508, surmounted by either a plain ridge, as fig. 509; slate ridge and roll, as fig. 508; or ridge-roll and crest, as fig. 510.

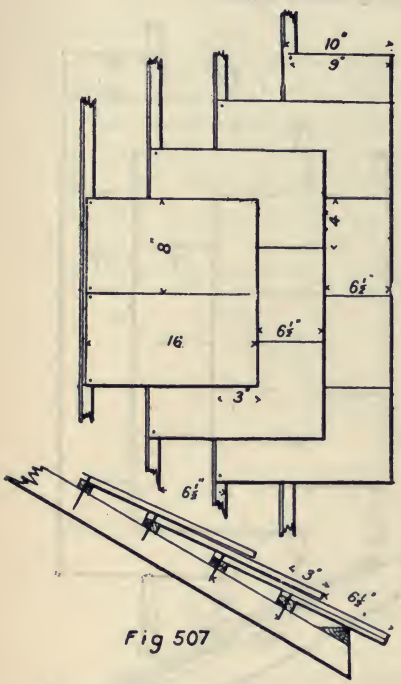

Fig 507

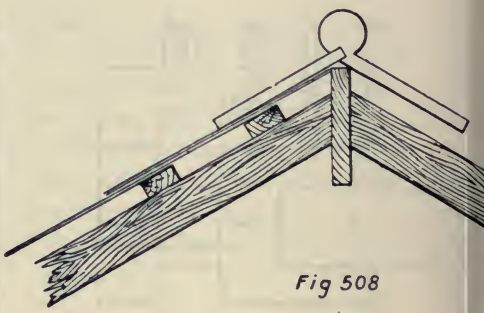

Fig 508

Fig 509

Torching is the pointing of the underside of slates with hair mortar, used to stop the driving of snow.

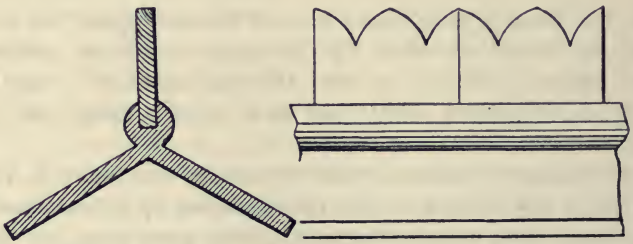

Fig 510

Full torching is the filling up of the space between battens with mortar on the underside.

Shouldering is bedding the heads in mortar to tighten the nail hold and prevent the wind penetrating.

Rendering is the filling up of the space between battens or boarding to bed the slates down.

Open slating is used for open sheds and inferior work, to save slates, each slate being from 1½ to 4 inches apart, instead of butting up to each other in the courses.

Bedding is the setting in mortar of the top of the bed of one slate or tile on the back of the one beneath it.

Cement-filleting, an inferior substitute for lead or zinc soaker flashings, is the filling up with cement-mortar of the angles on roofs where they abut up to vertical parts, such as dormers, gables, chimneys, and other roofs, so as to prevent the damp running down the walls at the edge of the slates.

Verge-pointing is the pointing up of the sides of the slates running up gables over which they project.

Slates may be cut or laid to patterns, in order to give the roof a more ornamental appearance; but such alterations must not interfere with either lap or bond.

Tiles.—Tiles, as compared with slates, are a more expensive roof-covering material, not only from their composition and manufacture, but

Fig 511

also on account of the extra trouble and battens they require for their smaller size. They also require that the roofs be of a steeper pitch, and no less than 45 degrees rise from the horizon, for the reason that any less pitch is subject to the liability of making the tiles absorb the rain instead of throwing it off. Again, the roofs for tile-coverings must be constructed of greater dimensions and strength, on account of the greater weight of the tiles, as compared with slates.

Against these disadvantages of tiles must be set their greater ornamental appearance, and their action as non-conductors of heat, and also their colour; these are all great considerations in their favour, even although they are sometimes, when absorbent, apt to hold the wet.

Tiles are made of a strong clay which has been specially mellowed, and beaten when half dry to prevent warping, and they are all of one size, 10½ inches long, 6¼ inches wide, with 2 nibs or projections at the shoulder or top edge, on the underside or bed, as fig. 511, to hold them up over the battens, and they should be curved slightly, to make them fit over each other the better.

There are several kinds of tiles for roofing besides the plain tiles, but they are all made out of the same material. A good tile should be hard, well burnt, well shaped, non-absorbent, of good colour, and with a glazed

or vitrified face to prevent vegetation. The best tiles are made at Ruabon, in Wales, though they are also largely made at Broseley and Madeley Wood, in Staffordshire. They can be of innumerable colours, from red to blue and yellow.

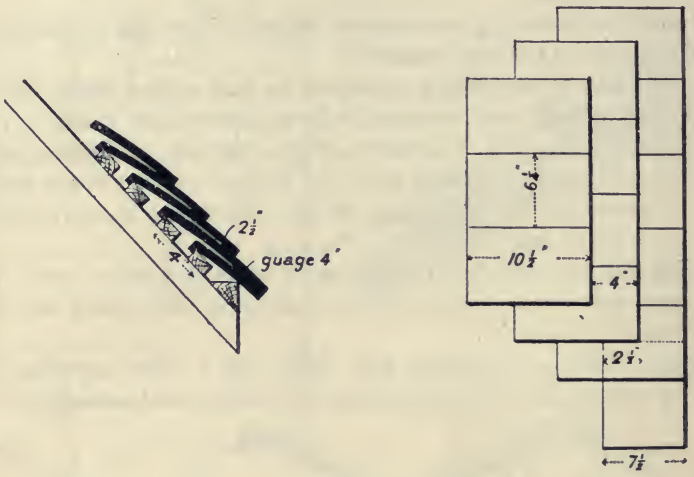

Fig 512

Ridges, hips, and valley tiles are also made of clay, to the required pitches; and the former to almost any design.

Fixing of Tiles.—Tiling is subject to the same rules and regulations as slating, in regard to lap, gauge, bond, battening, double eaves, etc., so hat it is needless to repeat those details.

Fig 513

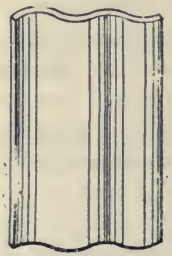

Fig 514

Fig. 512 is a plan and section of a few courses of plain tiling laid to a 2½-inch lap or 4-inch gauge. The tiles are generally secured merely by the lugs over the battens; but in very exposed positions they are sometimes nailed, though this is very expensive, besides which the tiles must be made with holes for that purpose, in the process of manufacture. Special tiles

are made for double eaves and ridges, to save cutting; and "tile and halfs" for gable ends, where, for purposes of bond, half-tiles would otherwise have to be used; and these being only $3\frac{1}{2}$ inches wide, they would

Fig 515

make very imperfect work, which is obviated by the use of "tile and half."

Special Forms of Tiles.—*Pantiles* are peculiar-shaped tiles, used

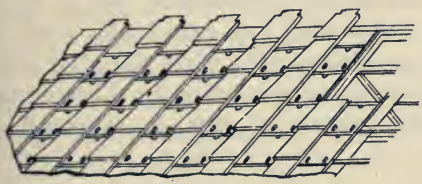

Fig 516.



Fig 517

in some parts of the country for roofs, but now only for common work. Fig. 513 is an illustration of one tile.

Corrugated tiles are similar to the last, but with more hollows or corrugations, as fig. 514.

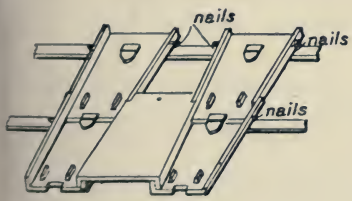

Fig 518

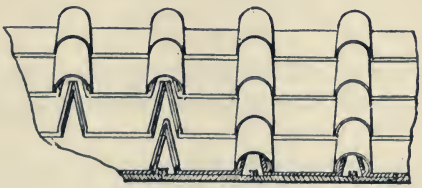

Fig 519

Wade and Cherry's are a patent tile of ornamental appearance, similar to fig. 515, rebated at the head, on the top side, and on the underside at the tail.

Taylor's patent tiling, as figs. 516, 517, and 518, consists of channel and capping tiles of special patterns, which fit over one another in alternate rows, from eaves to ridge, as shown. It should be noted that the same

tile can be used as channel or capping tile by being reversed. They have a very novel and pleasing ornamental appearance.

Italian tiles are illustrated by figs. 519 and 520, which explain themselves, and give an idea of their effective appearance in work; though it will be seen that they are anything but well adapted to our snowy climate.

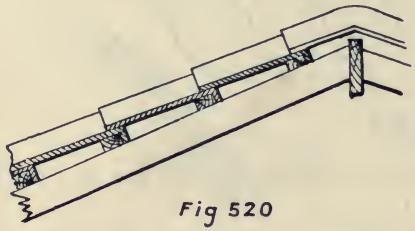

Fig 520

Fig 521

The plain tiles are often banded with ornamental tiles, as fig. 521, which break the monotony of a plain-tiled roof considerably; and these bands are sometimes laid in blue-coloured tiles, while the plain are red, and *vice versâ*; but this is unadvisable, on account of the different nature and properties of the different varieties of tiles to withstand wet, frost, etc.

CHAPTER XV.

FIREPROOF FLOORS.

Essentials of Fireproof Construction—Brick Arches—Concrete Floors—Special Systems.

Essentials of Fireproof Construction.—The highly inflammable nature of wood as a material used in the construction of floors, and the risk to life which it entails, has of late years received particular attention from the architectural and building world; the object of course being to design a floor which can be said to be entirely free from inflammable material, and proof against the attacks of fire in all its varied forms.

Wood has naturally been shunned—except, of course, as a covering, for the sake of comfort—while stone is known to be a most treacherous material under the influence of heat, as it will crack and give way without warning when least expected.

Cast-iron, too, is most unreliable, in fact, dangerous in the extreme; inasmuch as it cannot resist sudden shocks of any kind, which are especially present in cases of fire, when the iron, after having been heated by the flames, is suddenly cooled with cold water from the hose, which makes it crack immediately, entailing the total collapse of the whole structure generally.

Wrought-iron is certainly not so treacherous; but still it is dangerous, on account of its liability to twist and expand under intense heat, thrusting the walls out.

Hence it is always advisable to encase iron parts of structures with some material which is itself really fireproof, before the work can be said to be "proof against the effects of fire." The only materials which can be said to possess these requisite properties are—fire-clay in any burnt form, concrete of cement, and breeze, or other similar agglomerates, as well as plaster of various kinds.

Brick Arches are the simplest and most effective fire proof material, though only suitable for small spans, except where the height of the space which they and their rise occupy is of no consequence. In large spans,

and where this is a consideration, their success and usefulness are diminished by the insertion of encased structural parts of iron, whether cast, for columns, or wrought, for girders, whereby the floor-space is cut up into sections, and filled in by arches springing from the encased wrought-iron girders. The spandrils of these arches are levelled up to the crown with cement-concrete, whereon the ordinary floors are constructed. The only objections which can be raised against brick arches, apart from the supplementary ironwork, are that they are heavy and complicated, and take up too much room, besides being expensive; but these are held to be serious if not fatal objections; and they are considerably intensified by the insertion of iron girders, which, whether cased or uncased, render the floor very complicated in construction, and dangerous, unless the girders are tied together by rods, etc., to withstand the thrusts caused by the arches themselves.

Fig 522

Concrete Floors.—Consequently, recourse has been necessary to other, lighter, and more simple methods, which will give as much security as possible from the ravages of fire. Thus, the mode of construction that has been settled upon as being most free from complications, and the cheapest, is that of concrete areas, supported by iron joists embedded within the thickness of the concrete itself, which need not be very deep in floors of ordinary spans; and this is an important consideration, as the thicker the floor the higher the building must be to give the same amount of space.

Where the span necessitates the employment of binders, or girder, to support the iron joists which uphold the concrete areas, care should be taken that these additional members are enclosed or surrounded by a casing of fire-clay, concrete, or other non-inflammable material, to protect the iron.

A great advantage of these and other kinds of concrete or fireproof floors is that a new building, so far as internal arrangements are concerned, can be constructed from floor to floor without so much trouble to secure the placing of wall over wall, and in similar constructive details; though

of course the floor must be made strong enough in itself to allow of such liberties.

As before explained, a concrete floor composed of breeze, slag, brick-dust, or other non-inflammable materials, mixed with cement in such proportions as the situation and character of the work call for (usually in the proportion of 4 or 5 to 1 of cement), is the best form of fireproof floor. It is illustrated by fig. 522, the iron joists being fixed about 2 feet apart; after which a temporary wood platform is built underneath it, to support the concrete until it has set hard; and this is fixed below the bottom of the joists, so as to allow of the concrete encircling the iron, as shown.

Dennett's system
Fig 523

Special Systems.—The principles of concrete floors having been explained, and the various points to be considered and guarded against thus brought to the notice of the student, it only remains to set forth the different systems which have been invented and introduced of late years; those which conform to the principles already laid down being, of course, the best. The following is a list of the chief British systems in use:—

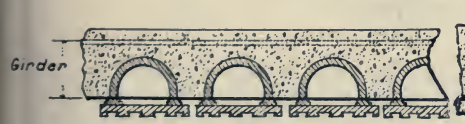

Fawcett's System
Fig 524



Fox and Barrett's System
Fig 525

Dennett's, as illustrated by fig. 523, will be seen to consist of iron girders and concrete arches of various spans, not exceeding 12 feet, and rising no less than 1 inch per foot. The matrix of the concrete is gypsum, which has been proved to retain coherence even when burnt or drenched with water, or both in succession.

Fawcett's, consisting of iron girders, 2 or 3 feet apart, the interspaces being filled in with earthenware pipes of hollow arched section laid diagonally, on which a 6-inch layer of breeze and cement concrete is laid, is illustrated by fig. 524.

Fox and Barrett's, as fig. 525 explains, consists of iron girders, spaced at intervals every 20 inches, between which wood strips are placed, and the whole covered with concrete, rising above the girders, as shown.

Hornblower's consists of hollow fire-clay tubes, of wedge-shaped form, springing from blocks of similar material encircling wrought-iron girders bedded in concrete about 26 inches apart, as fig. 526, the top being levelled over the same as shown.

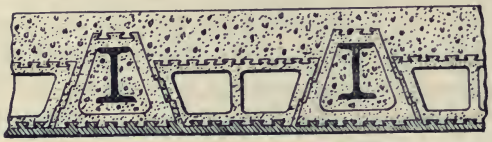

Hornblower's System
Fig 526

Homan and Rogers' patent, as fig. 527, is made up of iron girders, between which are placed special bricks, which may be glazed or ornamental on soffit; and the top is filled up with concrete, the same as the other methods.

Section of bricks Longitudinal Section
Homan & Rodger's System
Fig 527

Lindsay's patent is of two kinds, as illustrated by figs. 528 and 529; the former consisting of wrought-iron or steel joists, spaced 18 inches apart, and laced together, as it were, by wrought-iron rods or strips passing over and under each one alternately, as shown; the whole of the iron

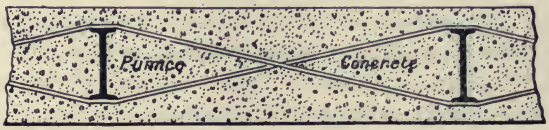

Lindsay's system with I Girders
Fig 528

being then encased in what is called pumice concrete, which is really made of breeze and cement, being much lighter than the ordinary mixture.

The other method, very much used for goods-sheds, etc., as fig. 529, will be seen to consist of wrought-iron troughs, riveted together over the

whole area, and the top spaces are filled with the usual concrete and levelled for the floor in the ordinary way; and for the purpose of covering the underside, which is very necessary to render it complete, cast blocks

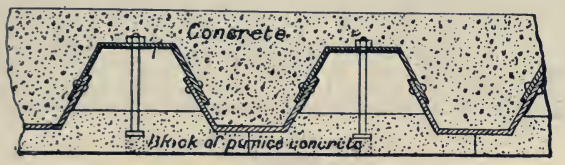

Lindsay's System with trough girders
Fig 529

of breeze or pumice are bolted up to the underside, as shown on the illustration.

Measure's patent is similar to Fox and Barrett's, with the distinction

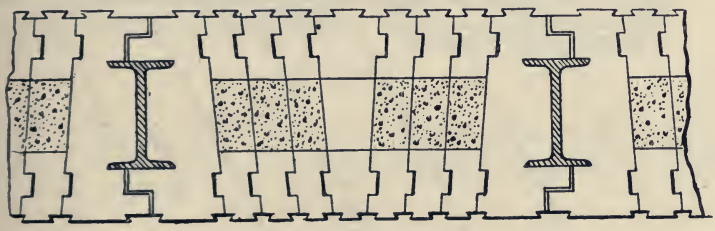

Northcroft's System
Fig 530

that the girders are spaced 3 or 4 feet apart, and T-irons, about 9 inches centre to centre, span them from flange to flange, and support the usual concrete.

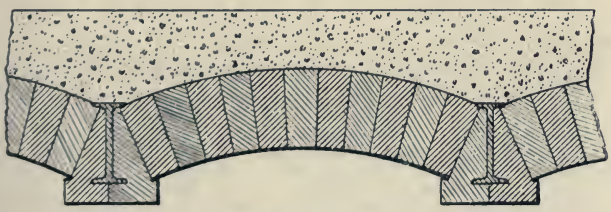

Whichcords System
Fig 531

Moreland's system consists of wrought-iron girders, supporting curved intermediate girders, at right angles to the main girders, and covered over with corrugated iron, on which the concrete is laid and levelled up as before.

Northcroft's consists of two layers of flat arches, of special wedge-shaped bricks, resting on similar skewbacks, supported by wrought-iron

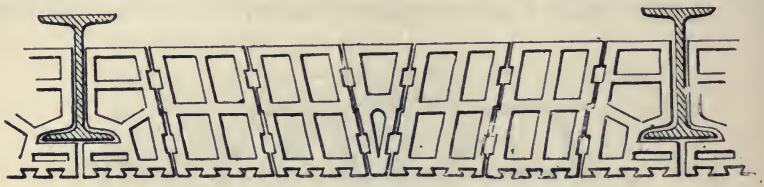

Doulton and Peto's
Fig 532

joists, as fig. 530, the spaces above and between the arches being filled up with concrete.

Whichcord's method consists of solid fire-clay arches springing from

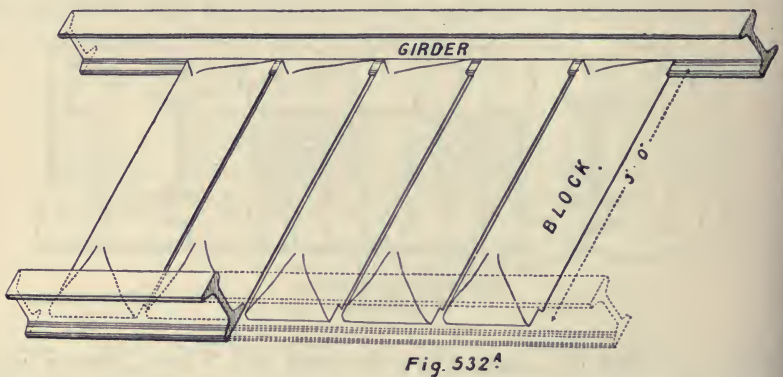

Fig. 532A

fire-clay springers, enclosing the wrought-iron girders as fig. 531, and filled up with concrete.

Doulton and Peto's variety, as fig. 532, consists of fireproof hollow-

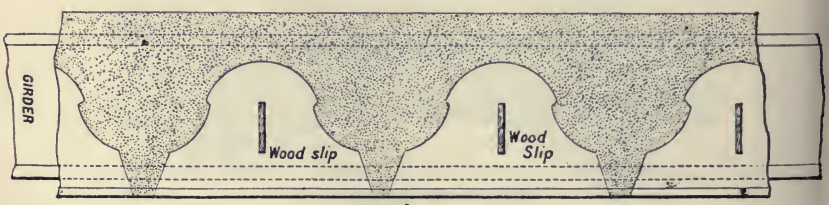

Fig. 532B

keyed blocks, which encircle the lower parts of the girders, as well as form a strong light floor of simple construction.

The *Adamant Company's* system consists of blocks of concrete and adamant cement placed from joist to joist, as figs. 532A and 532B, and

covered over and levelled with ordinary concrete suited to the locality. The girders can be placed 3 feet apart, and the blocks are cast with a

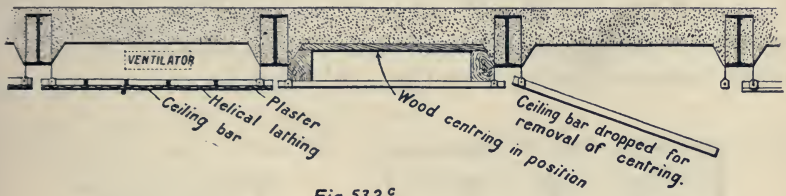

Fig. 532c

wood strip on edge embedded in them, in order to be the better able to resist tension.

Banks's patent, fig. 532c, completely protects the steel work—which

Fig. 532d

is a distinct gain; and there are other advantages, such as its ready application to existing floors and its ventilating space, which the illustration sufficiently explains.

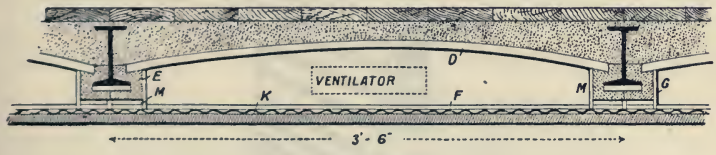

Fig. 532e

The "*Carlisle*" fireproof floor, fig. 532d, consists of two tubes forming an arch between the joists, which have to be bolted together to resist the



Fig. 532f

thrust successfully; they are covered with concrete in the usual way, and provide in themselves a space for ventilating and other purposes.

Potter's system is somewhat similar, fig. 532e; but the lintels are in one piece, requiring no bolts.

Picking's, fig. 532F, is almost a combination of the last two, as the illustration explains.

Pease's patent, figs. 532G and 532H, a very ingenious arrangement, consists of sheet iron or steel tubes, so constructed that a cup, as it were, is formed to carry the concrete as a centre; at the same time the whole is bound into a solid mass; these tubes, which can be used as long as 12

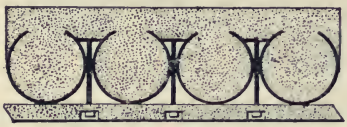

Fig. 532 G



Fig. 532 H

feet, rest on the flanges of the girders, and as a protection to the underside slabs can be hung up by bolts, as fig. 532G.

There are many other similar floors in use, which are perhaps equally as good as those hereinbefore enumerated; the general disadvantage of most of them is their disposition to conduct sound from floor to ceiling, necessitating the use, very often, of counter-ceilings, with an intermediate space, which is the best non-conductor. It will be noticed how most of them endeavour to attain this end in the floor itself.

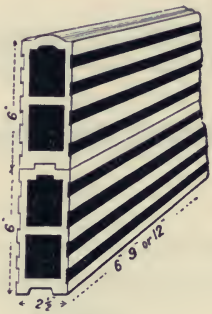

Fig. 532 J

The floor-boards above these systems are fixed to dove-tailed wood fillets, or Wright's patent breeze dove-tailed blocks, embedded in the concrete, and made level as the ordinary joists, similar to fig. 533; while the wrought-iron members, unprotected underneath, are, or should be, covered with patent wire-wove material, which keeps up the concrete casing, and forms a key for the plastering for ceilings and ornamental beams.

Fireproof partitions are constructed with tubes on Pease's principle, or by hollow blocks, as fig. 532J, which are light, and made that they lock

together, forming a solid mass—this is Picking's arrangement; and Banks has a patent consisting of steel X-shaped standards, with a double row of helical lathing, fig. 532K and fig. 532L, plastered similarly to the ceilings in his patent floor.

Wood-blocks are generally used as the covering on fireproof floors, the surface of the concrete being floated over with Portland cement and sand, and rendered perfectly level.

The blocks may be of any regular thickness from $1\frac{1}{4}$ inches up to

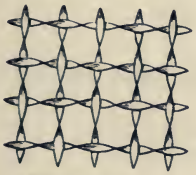

Helical Lathing
Fig. 532K

Plan Hollow Partition.
Fig. 532L

$2\frac{1}{2}$ inches, the ordinary kind being from 9 to 18 inches long and about 3 inches wide; and it is absolutely necessary that they be truly square, so that when laid they fit together well. Moreover, it is most important that they are thoroughly dry, and they should not be brought on to the building until the cement screed or bed is quite dry, and they are actually required for use. Very often good dry blocks are brought into a building which cannot be really dry; and whilst they are waiting to be laid, they absorb the moisture of the building and surroundings, with the result that they swell, and in this condition they are laid, and as soon as they and

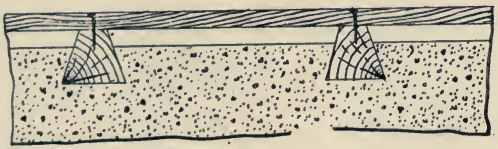

Fig 533

the building get dry they shrink, and show large cracks, and in many cases they even rise up.

A wood-block floor can be laid to designs and patterns in any kind of wood, and they are kept down in their positions by a solution containing pitch, resin, and other patented mixtures, which are of a sticky nature when hot, and on cooling are so cohesive that they keep the blocks and screeding together.

There are several patent systems of laying these blocks, the general principle being to form keys or dovetails—this end being attained by a triangular sinking or groove made in the edges of the blocks, close down

to the bottom, so that the solution on the bed can be pressed up into the grooves formed between the blocks. This dovetail keying is also formed by small iron channels embedded in the cement screeding. Another idea is to keep down the blocks by dowelling them together, and Stockholm tar is used to make them adhere to the cement bed.

In hospitals and other similar buildings teak or other hard-wood ordinary floor boards are secretly nailed directly on to the cement screed itself without the fillets shown in fig. 533.

CHAPTER XVI.

JOINTS AND MOULDINGS IN JOINERY.

Joinery Defined—Framed Joints—Angle Joints—Dovetails—Scribing—Mouldings—Match Boarding—Affixing Joinery Work.

Joinery Defined.—The term "joinery," applied in a general sense, includes all the finishings to the carcase of a building, whether they be external or internal, such as doors, windows, stairs, skirtings, skylights,

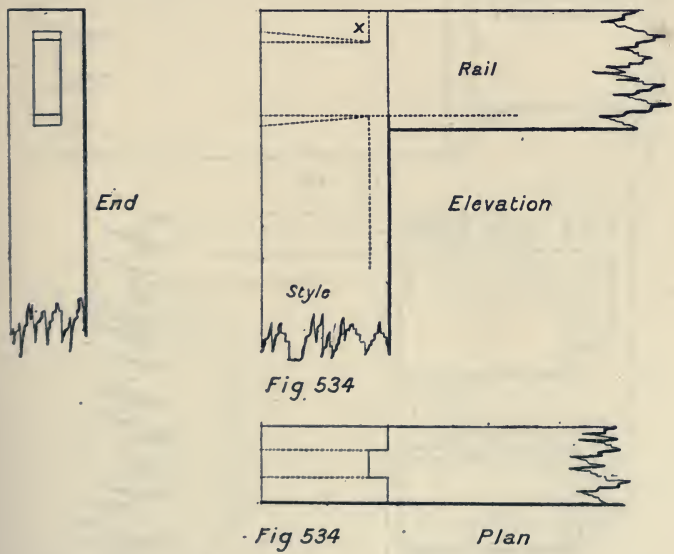

Fig 534

Fig 534

lanterns, dadoes, and other panelling,—in fact, it may be said to include everything which is planed and wrought up to a nice smooth and often ornamental face, and framed together in such a workmanlike and precise manner that it is difficult to discern the joints unless helped by the different grain and colour of the "stuff," as the wood is called.

It is intended to devote most of this chapter to a description of the various joints, mouldings, and terms which are used in this particular

branch of building; but the principal and most common joints, etc., will be again pointed out to the student when they are met with in the different kinds of joiner's work which will be dealt with in the course of these lessons.

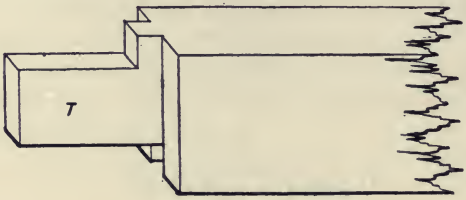

Fig 535

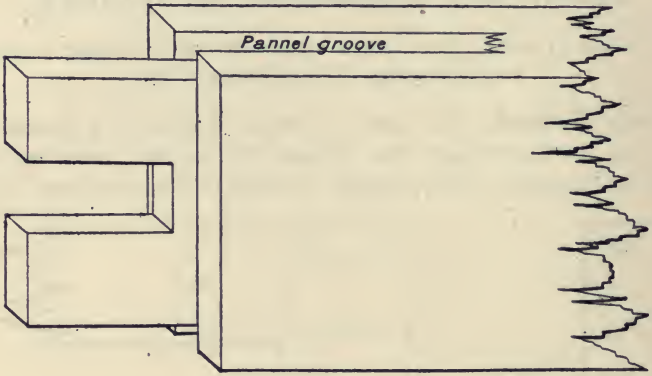

Fig 536

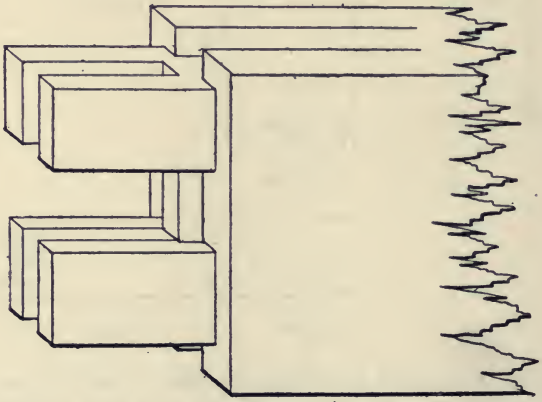

Fig 537

Framed Joints.—The *mortise and tenon* is the chief and most common of all joints used in joinery framing. All rails of doors, for instance, are tenoned through the styles and wedged up tight, as fig. 534, the tenon usually being one-third of the thickness, and with a haunch left

on as at X, to fill up the panel groove on the styles and strengthen the joint. This is the origin of the term *haunched* tenon, a sketch of which,

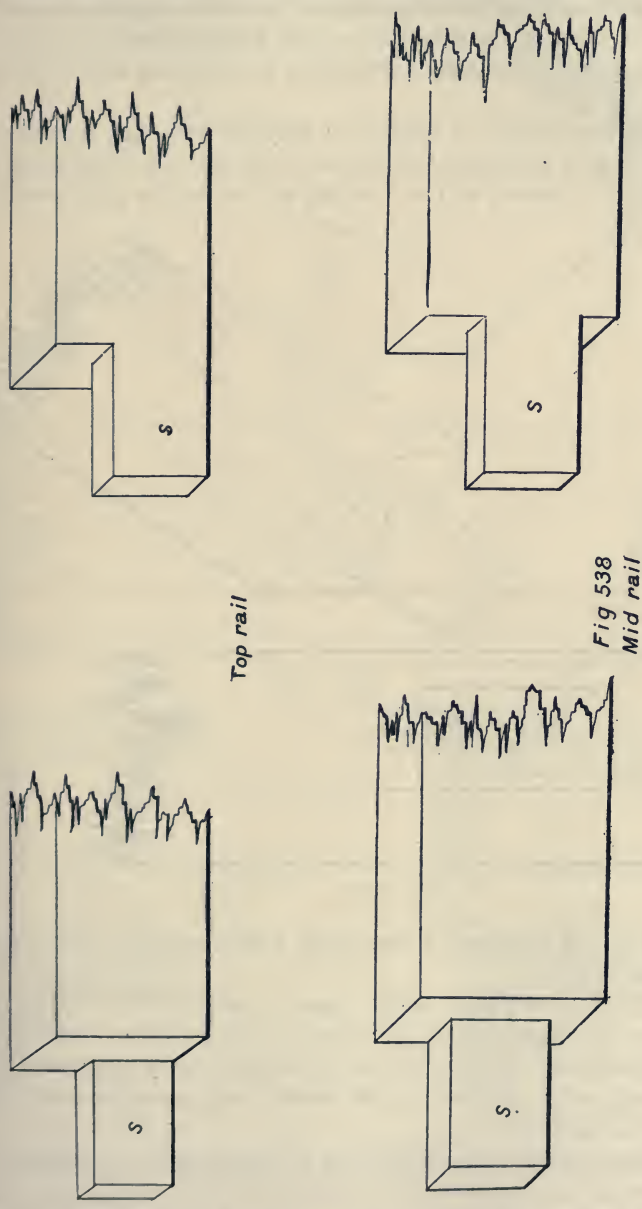

Fig 538

as it is on the rail before being wedged up into the styles (as shown on fig. 534), is given (fig. 535).

On wide rails, such as lock or middle and bottom rails, this tenon is in two parts in its depth, as fig. 536 ; and where doors are more than 2 inches thick, or where provision has to be made for a mortise lock, which, when let into the centre of the style, at lock rail height, completely cuts away a central single tenon, the tenons are double in thickness, and called *double tenons*, as fig. 537.

A *bare-faced* tenon is a tenon with only one shoulder, S, used chiefly in framed ledged and braced doors, where the rails are not so thick as the styles by the thickness of the boarding nailed on the rails between the

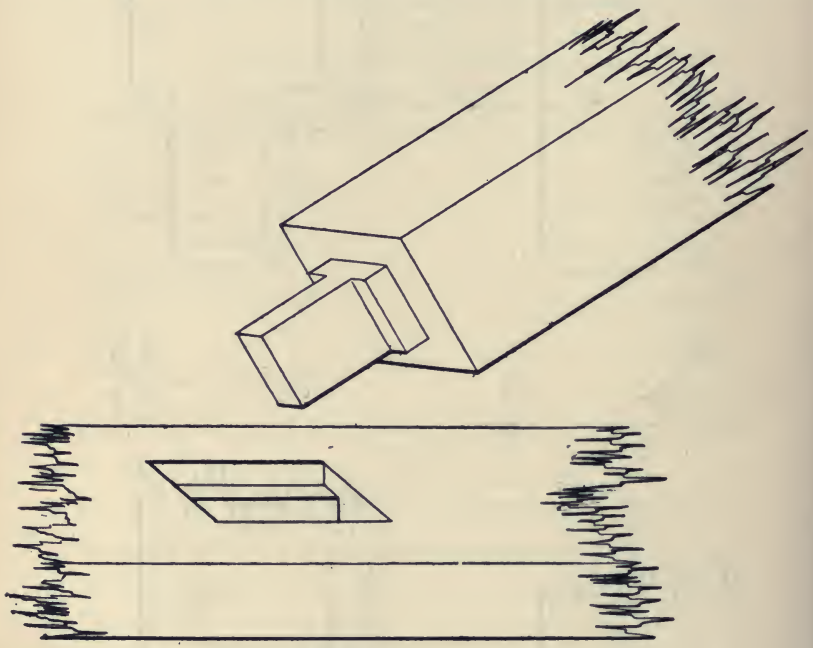

Fig. 539

styles. Fig. 538 illustrates a bare-faced tenon, one view being given of each side.

Stump tenons are those which have a projection on each side of them to go into mortises part of the way of the principal mortise. They were designed to give the tenons on the thinner stuff greater strength, and to hold into wider mortises on the wider. Fig. 539 represents a stump tenon and its mortise.

A *housed* tenon is a tenon let into a mortise with the section of the stuff let into the mortise to the depth of half an inch, as fig. 540.

Angle Joints.—*Tongued angles* are used for internal angles of dadoes, skirtings, grounds, casings, etc., as fig. 541.

Mitred angles are made by simply cutting half a right angle alternately off the two pieces, to be joined by nails at an external angle, as fig. 542.

Mitred and tongued angles, a combination of the two last, are as

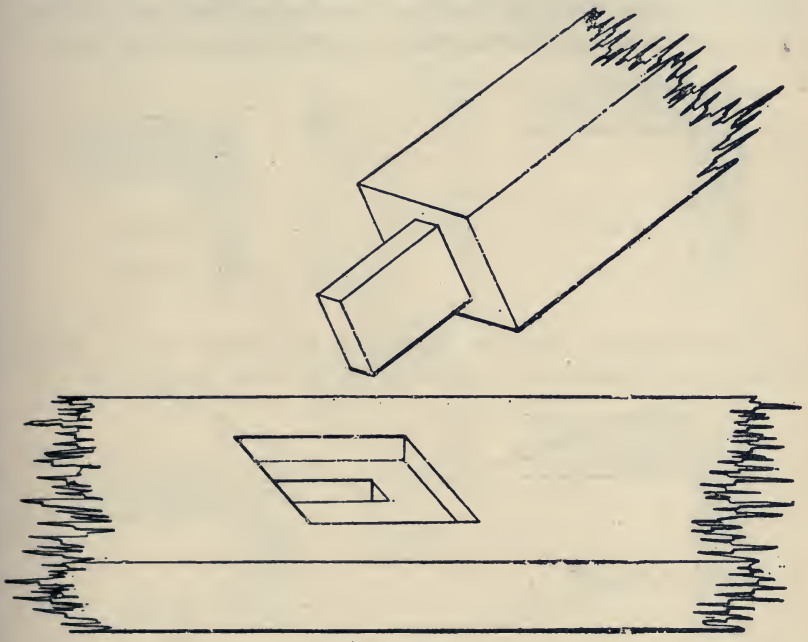

Fig 540

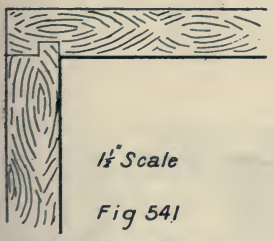

Fig 541

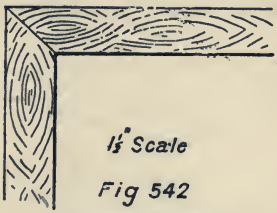

Fig 542

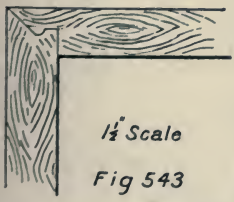

Fig 543

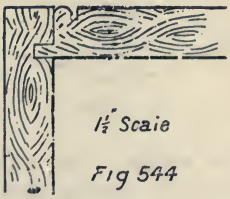

Fig 544

fig. 543, and are only used in best work, at the external angles of dadoes, pilasters, etc.

Beaded and tongued angles, illustrated by fig. 544, are angles or joints of an ornamental as well as necessary character.

Return-beaded angles are suitable for all external mitres where wear and tear would soon fetch the arrises off in soft woods. Fig. 545 shows one on wood framing, casings, etc., and fig. 546 one as fixed to angles to plastering on wood, brick, or stone walls, to which they are fixed by plug, as will be explained hereinafter, this being called a *staff* bead.

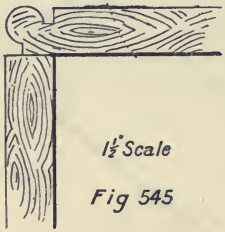

Fig 545

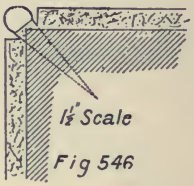

Fig 546

Where the two pieces of framing to be joined are of different widths or thicknesses the "mitred angle" is made as fig. 547.

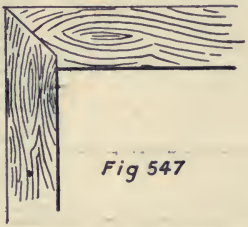
Fig 547

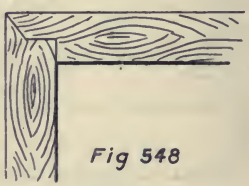
Fig 548

Another form, of very good construction, is as fig. 548.

Keyed mitred joints are not often used; but it is as well that the

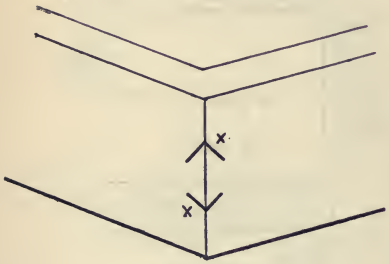

Fig 549

Fig 550

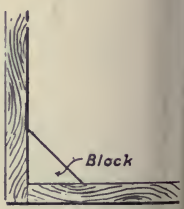

Fig 551

student should know what they are. Fig. 549 is a view of the angle of one, X X, being hardwood-slips let into the mitres.

Housed joints are as fig. 550, by which the whole thickness of the cross-framing is let into the other about half an inch.

Glued and blocked joints are really butt or lapped joints secured by blocks glued to each piece of wood in the internal angle (fig. 551).

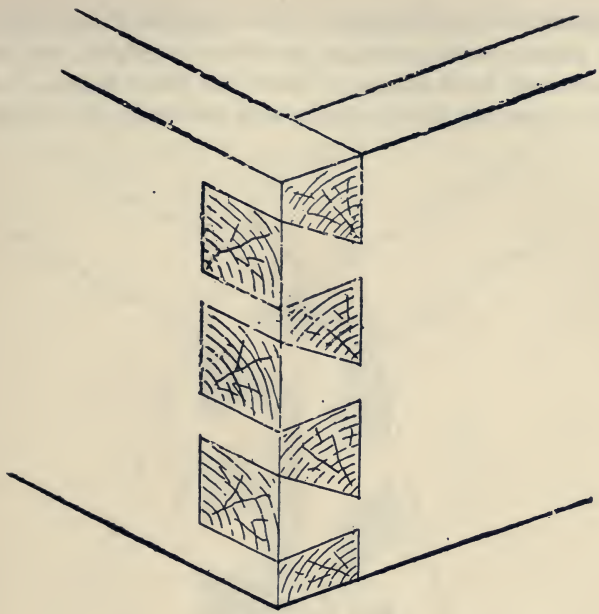

Fig 552

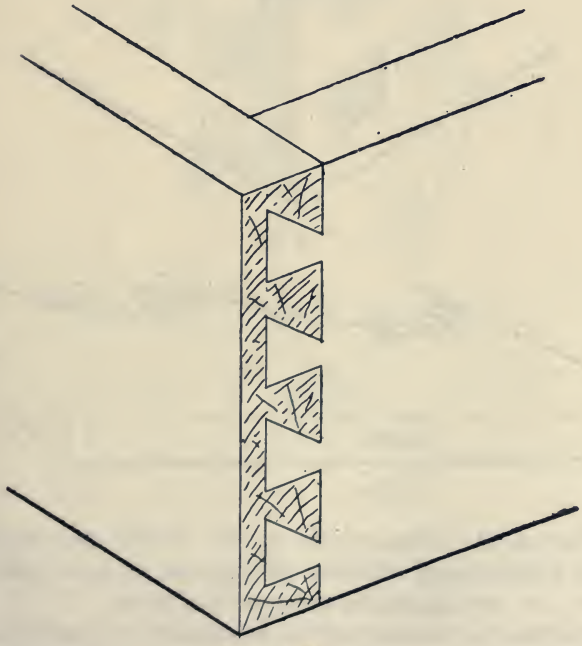

Fig 552ª

Dovetails, the most common of the intricate and strong joints, are used for cisterns, square casings, or curbs to skylights, and the corners of drawers and other fittings. There are three kinds: the *common*, as fig. 552; the *lap*, as fig. 552*a*; and the *secret* or *mitred*, the most

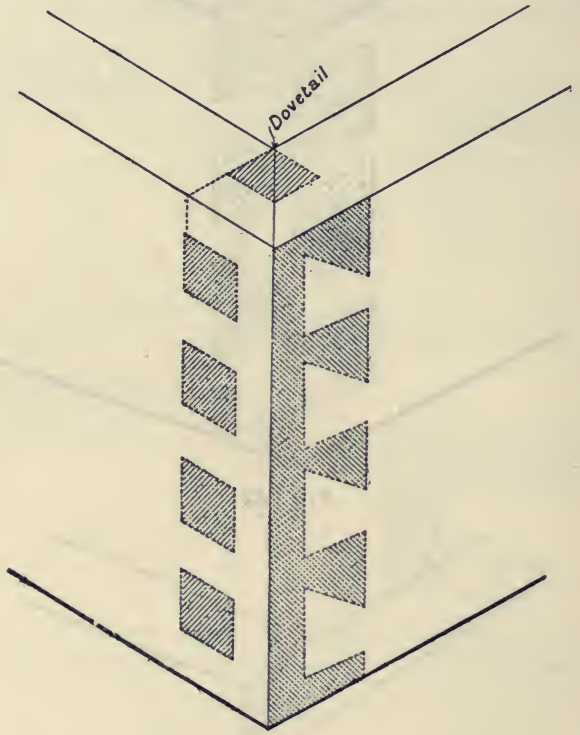

Fig. 552*b*

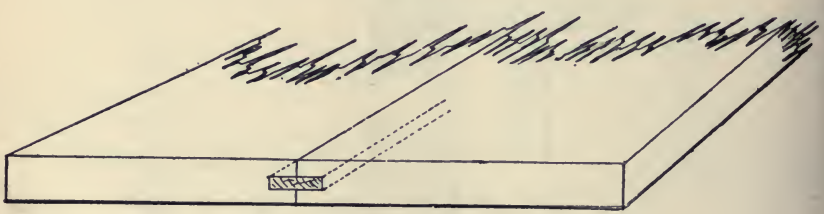

Fig 553

troublesome of the three, as fig. 552*b*. It will be seen that they consist of wedge-shaped alternate cuttings out of each piece, the projections of the one fitting the holes on the other.

Cross-tonguing is the method of joining two or more boards longitudinally, a loose tongue being glued and let into a groove on each

board, as fig. 553. This loose tongue is sometimes called a *slip feather*, and is made of wood across the grain. *Long* (the opposite to cross) tongues have the grain of the wood in the direction of their length.

Clamping is the method by which the ends of several boards are

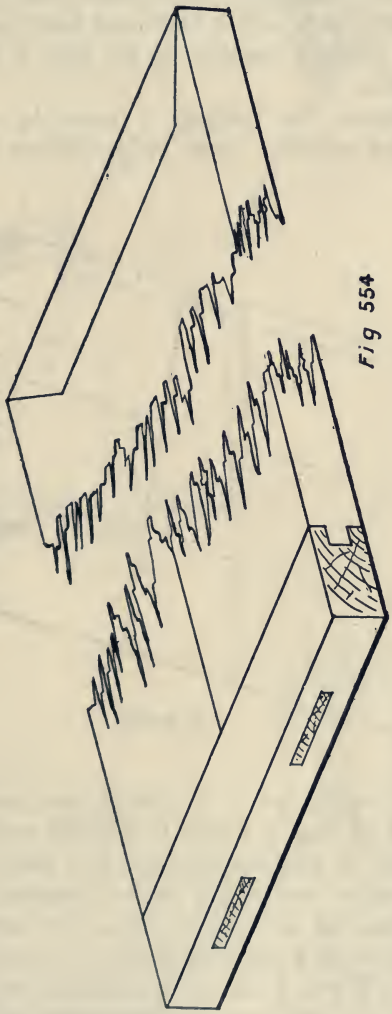

Fig 554

fastened together, as shown on the left-hand of fig. 554; while the right-hand side of the same figure illustrates *mitre*-clamping, by which the cross-grain end of the ordinary clamping is obscured.

Keying (fig. 555) is a means of securing several boards together by a flush key, let in at the back in lieu of a projecting ledge, where

the latter would be inconvenient on account of a level face being required on each side. This is often used in the North for wide door casings.

Keyed joints are also used to connect circular with straight or two pieces of circular wood, such as door frames, etc. A shallow mortise is cut out of each part, and a hardwood key (in the form of the letter I) connects the two together, as fig. 556, X X being wedges to tighten up the joint.

Fig. 557 illustrates *Fox wedging*, a means by which tenons are secured into shallow mortises, where wedges cannot be driven in from the other side.

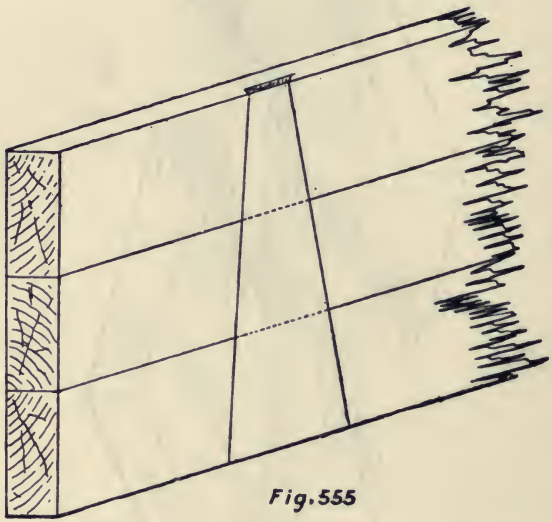

Fig. 555

Scribing is the cutting, out of the face of one moulding, a hole of the contour of another to form a joint. It is chiefly used in joints of sash-bars, internal angles of moulded skirtings, etc., and really is a moulded mortise cut into another moulding to receive a moulded tenon of the same section as the mortise, but in a converse form. For instance, in fig. 558, it will be noticed that on A a moulded mortise or notching is cut out, with the ovolo hollow, as it were; and on B, which we will call the tenon, the cutting has the ovolo convex or projecting to fit and fill up the hollow on A.

A *scribed housing* is a housing made to the contour of the moulding it is going to receive (fig. 559).

Other kinds of joints, principally used for flooring, will be found fully illustrated and explained in Chapter VIII.

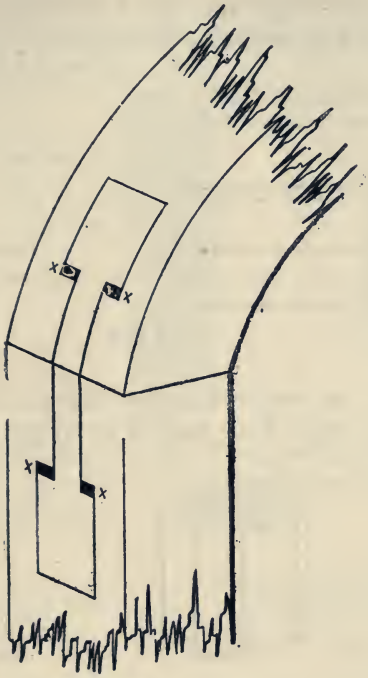

Fig 556

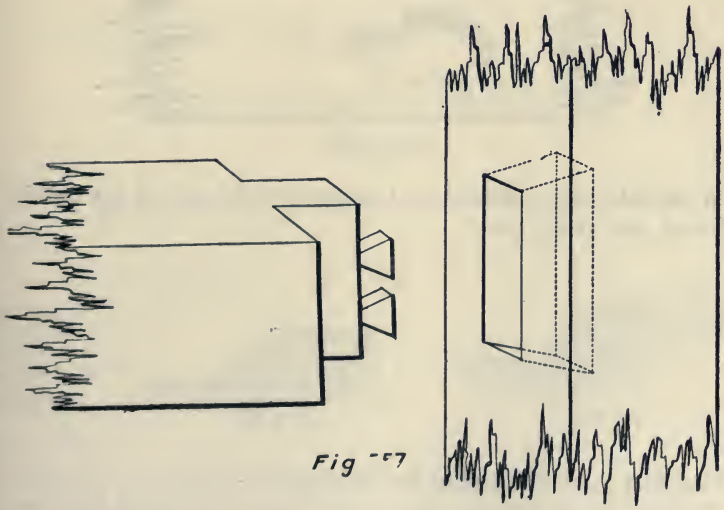

Fig 557

Mouldings.—Mouldings are a series of sinkings and projections of various forms—mostly parts of circles, ellipses, etc.—worked on the edges

of the wood to produce light and shade by shadows, and give it an ornamental and showy appearance. They are of two kinds—*stuck* and

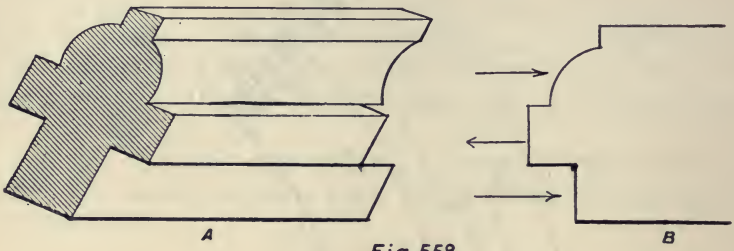

Fig 558

planted, or *laid in*; the former denoting that the moulding has been worked on the solid edges of the stuff, as in fig. 560; and the latter that

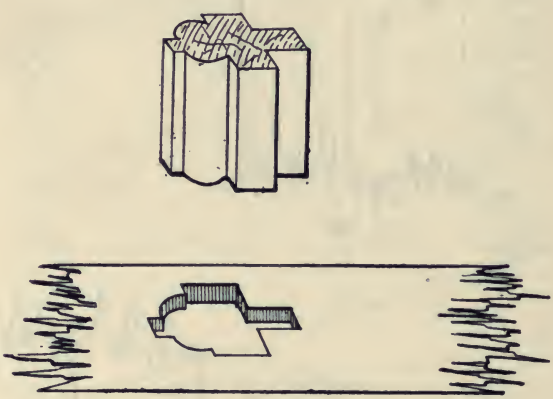

Fig 559

it is a separate slip, moulded and attached to the side of the framing by brads and glue, as fig. 561.

Fig. 560



Fig 561

Fig 562

The chief parts of moulding are as follows :—

The *bead* (fig. 562) is the most useful, being often utilised for covering joints, etc., and as a nosing to round off edges, when it is called a "rounded nosing."

The *quirked bead* has a sinking on one side, as fig. 563, and the *double quirked* has one on each side (see fig. 564). They are required to give a limit produced by the shadow.

Fig 563

Fig 564

Fig 565

The *return* or *staff* head—"return" being the joiner's term, and "staff" the carpenter's term—fig. 565, is used for exposed angles, where arrises would soon be knocked off.

Fig 566

Fig 567

The *cocked* bead—named after its projection from the face line—is as fig. 566.

Cocked bead and fillet is as fig. 567.

Fig 568

Where several beads are placed together they are called *reeding* (fig. 568).

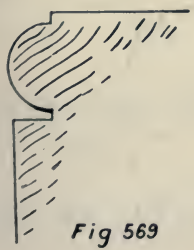

Fig 569

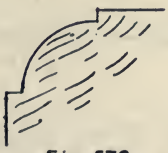

Fig 570

The *Torus* is a bead with an extra fillet (fig. 569).

The *Ovolo* is a quarter of a circle with a fillet on either side, as fig. 570.

It can also be a part of an ellipse or any other circular figure. A sash bar is formed by a "double ovolo," as fig. 571.

The *Cavetto* is the reverse to the ovolo (fig. 572), hollow in form.

Fig 571.

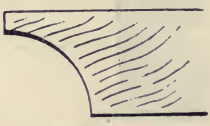

Fig 572

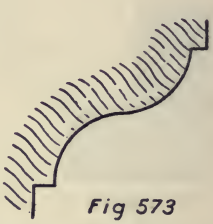

Fig 573

Ogee, or the "Cyma recta" mouldings, are made up of parts of two circles which touch one another, as fig. 574.

Cyma reversa, or the reverse ogee, as fig. 573, explains itself.

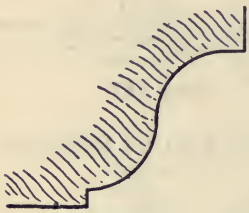

Fig 574

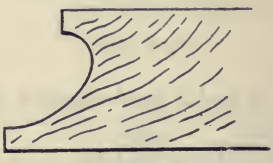

Fig 575

The *Scotia*, a moulding chiefly used for bases, is similar to fig. 575.

Mouldings are often made up of two or more of the above forms grouped together, when they are known or distinguished by the combined name. Thus fig. 576, consisting of a *quirk ovolo* (any moulding can be

Fig 576

Fig 577

quirked by the addition of the sinking on one side) and a *bead*, is called a *quirk ovolo and bead* moulding.

Bolection mouldings are those which are rebated out at the side, and project above the face of the panelling it is intended to ornament (fig. 577).

Chamfering is the taking off of the arris or sharp edge of any angle, as fig. 578, the angular groove formed by the meeting of two chamfered angles (fig. 579) being called a V joint.

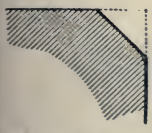

Fig 578

Fig 579

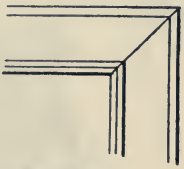

Fig 580



Fig 581

Mouldings, etc., are united at internal angles, as in fig. 580, stopped at ends (fig. 581), and returned at extreme angles (fig. 582), when the contour of the mould is exposed to view.

Match Boarding.—This is an arrangement of boards matched and put together with grooved and tongued joints, and their edges "shot" or

Fig 582

Fig 583

planed truly, so that a fine joint can be made. Match boarding, otherwise called *cleading*, is of several kinds, the chief of which are:—

Plain matched boards (fig. 583).

Beaded-one-side match boarding (fig. 584).

Beaded-both-sides match boarding (fig. 585).

V-jointed match boarding (fig. 586).

Fig 584

Fig 585

Fig 586

Affixing of Joinery Work.—Joinery work is fixed to either *plugs*, *grounds*, or *backings*.

Plugging is done by means of wood wedge-shaped plugs, which are driven into the vertical joints of the bricks, and cut off to a level face, to which the other woodwork is secured by nailing (fig. 587).

Grounds are used in better work, being wrought and splayed to form a key for the plaster. They are nailed to plugs in the cross-joints, as

fig. 588; or to wood or breeze bricks, fig. 589; or to elm pads, fig. 590; which the bricklayer builds in the cross-joints for the carpenter to fix to.

The grounds are "framed" (that is, dovetailed) at external, and tongued at internal angles, in the very best work. To doors and windows

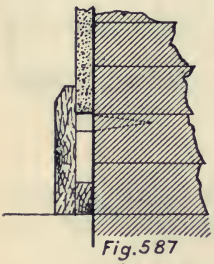
Fig. 587
1" Scale

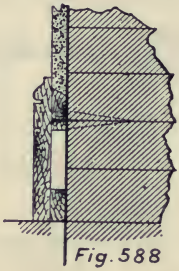
Fig. 588
1" Scale

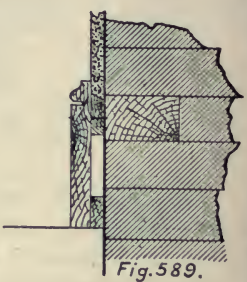
Fig. 589.

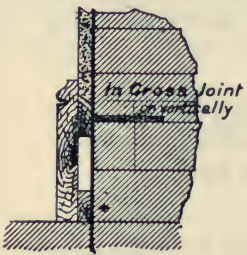

Fig. 590

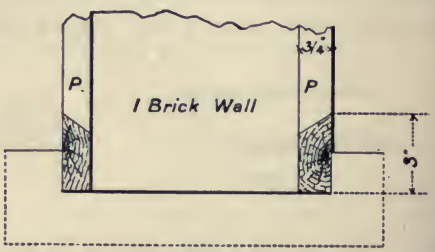

Fig. 591

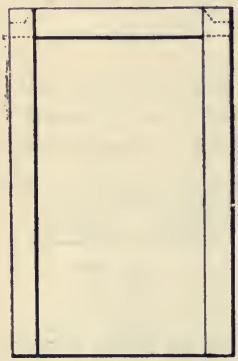
Fig. 592

Fig. 593

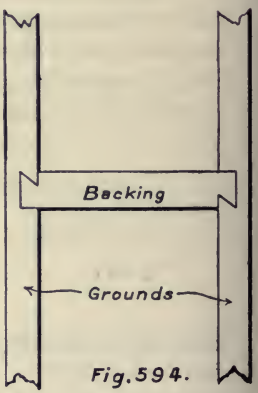

Fig. 594.

they are splayed to receive and "key" in the plastering, being fixed perfectly "plumb" or perpendicular to the plugs, bricks, or palettes encircling the door or window, except at the floor line. Fig. 591 represents an enlarged plan of a door-jamb, and fig. 592 an elevation to a smaller scale.

The dotted line on fig. 591 represents the gauge to fix by. The angles at X on fig. 592 are joined by a *bevelled haunching*, as fig. 593, in the elevation, drawn to a larger scale.

Backings are pieces of wood framed in between the grounds to form a backing and fixing for linings, window boards, and other wide joinery, requiring to be fixed against anything, as fig. 594.

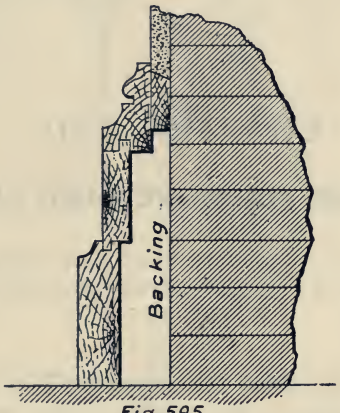

Fig. 595.
1" Scale

Shaped backings are those which are cut and notched to receive irregular framing or different members, as skirtings, etc., in best work. (See fig. 595.)

For ordinary skirtings a fillet is run along the walls, on the floor, to receive the bottom of the skirting, as X, fig. 590.

All first-class work should be fixed to grounds in lieu of plugs, which are only fit for inferior common work; and when the grounds are fixed perfectly true vertically and horizontally, there is no difficulty in affixing the joinery without fitting, cutting, and scribing; and moreover the plasterer finishes his work with greater truth in his surfaces, as he has perfectly true substantial grounds to straighten from.

CHAPTER XVII.

DOORS: THEIR FINISHINGS AND FASTENINGS.

Door Frames—Ledged Door—Ledged and Braced Door—Framed and Braced Door—Framed and Ledged Door—Fanlights—Panelled Doors and Panelling—Door Casings—Dadoes—Skirtings.

BEFORE dealing with the doors themselves it will be advisable to acquire a thorough understanding of the frames or cases which are designed to contain them. These frames, being generally built up in reveals formed

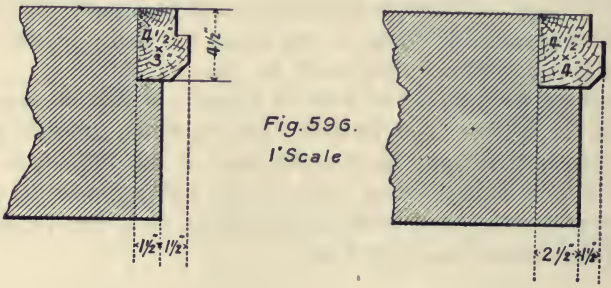

Fig. 596.
1" Scale

in the brickwork as the work proceeds, have to be no less than 4½ inches wide—the width or half the length of an ordinary brick—and 3 or 4 inches deep, according to requirements and the depths of the jambs. The frame usually projects about 1½ inches beyond the face or "sight size" of the opening (fig. 596).

The frames are made up of two jambs (or legs), as the posts are called, and a flat or arched head, according to the nature of the opening (fig. 597), both jambs and head being, of course, of the same size. The jambs are tenoned into the head and wedged, the head generally being 3 inches

longer beyond each side of the jambs. These projections are called horns, and are intended to be built into the walls.

Fig. 598 represents a frame for a square-headed door, the jambs of which are tenoned into the head.

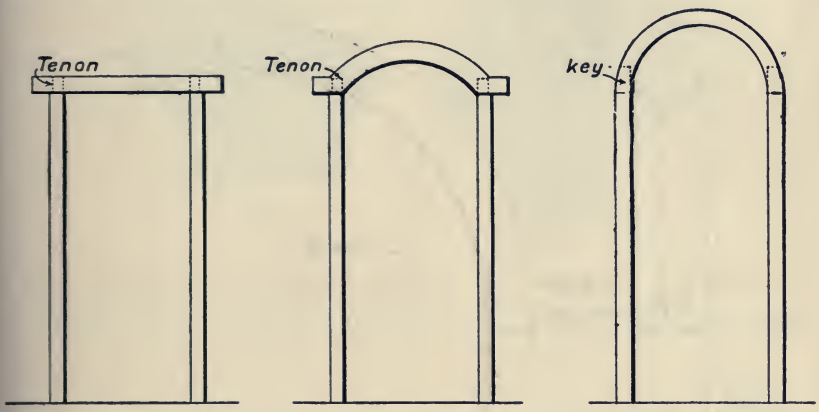

Fig. 597.
½" Scale

Fig. 599 shows the head cut out for a segmental-headed door, the joints at the top being similar to the last, and the head being cut out of a deeper piece of stuff.

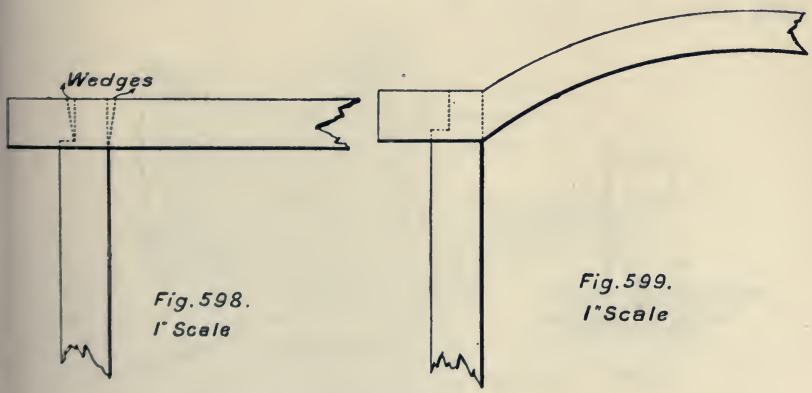

Fig. 598.
1" Scale

Fig. 599.
1" Scale

Fig. 600 represents a frame for a semi-circular-headed door, the joints at the springing being as shown, and the key being formed on the top of the jamb, and let into a mortise in the circular head and wedged up tightly. The joint at the crown is made similar to fig. 556, and sometimes also that at the springing, exactly as shown in that figure (*vide* Chapter XVI.).

Door frames are secured at the foot of the jambs by dowels let into the jambs and steps, as in fig. 601; or in best work, where the bottoms are apt to rot away from the damp that rises, they are dowelled into projecting stones worked to the same section as the frame (fig. 602), and painted, so

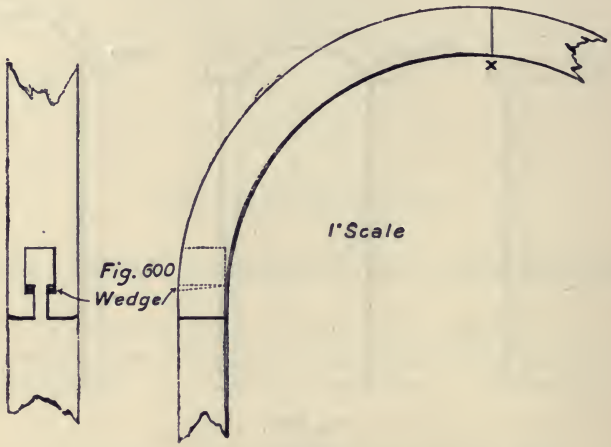

that the difference cannot be noticed at first sight. These are sometimes called *cotch* stones.

Another method is to let the bottom of the jambs into cast-iron shoes —also of the same section as the frames—which are secured to the stone sills.

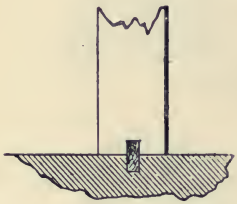
Fig. 601.

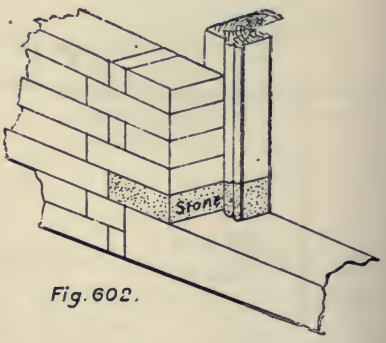

Fig. 602.

The frames, when built as the work proceeds, are often tied in with wrought-iron ties, two or three in each height, one end turned into the wall, and the other secured to the back of the frame (as fig. 603).

In sections the frames, of course, vary according to the requirements and nature of the work; but all are *rebated* for the door.

Fig. 604 is a section of a rebated and chamfered frame.
Fig. 605, that of a rebated and moulded frame.

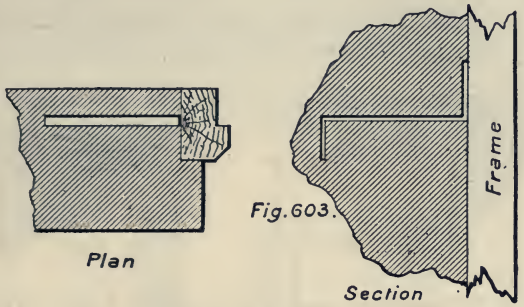

Fig. 603.

Fig. 606, a rebated and beaded frame.
The rear faces, abutting against the brick or stone rebates, are often

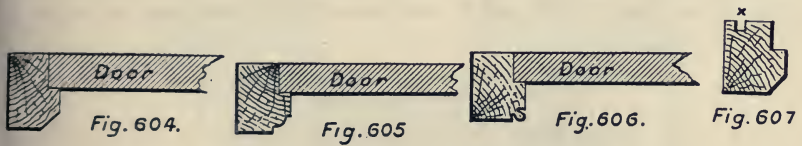

Fig. 604. Fig. 605 Fig. 606. Fig. 607

grooved for the plastering or linings, in addition to the other labour named above (fig. 607).

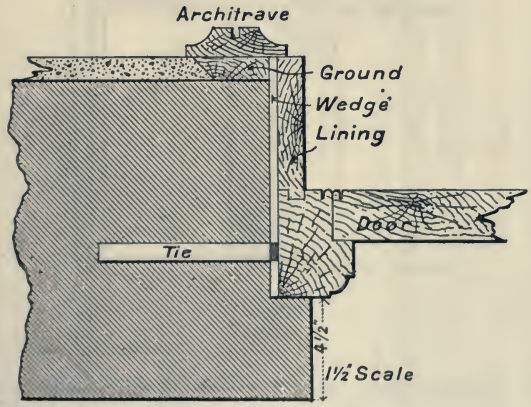

Fig. 608.

Fig. 608 represents the plan of the jamb of a frame with door linings and finishings in an ordinary 9-inch reveal.

Often, to break the joint in best work, the side of the rebate and the

door are beaded, as in fig. 609, or the arris of each is taken off and forms a V joint, as in fig. 610.

The section of the head is similar to fig. 611, with the addition of the elevation of the return of the linings, etc., as seen down the jamb.

In very wide walls, in first-class houses, the linings are panelled, as

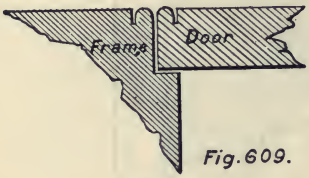

Fig. 609.

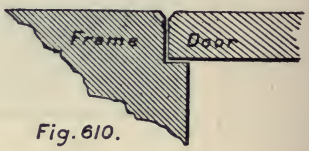

Fig. 610.

fig. 612, which represents a section through the head. The jamb would be the same, without the elevation lines shown on.

N.B.—Students—when drawing plans and sections of moulded and panelled work, which returns and is seen in elevation, between or in front of the parts which are in section—should take care to show all

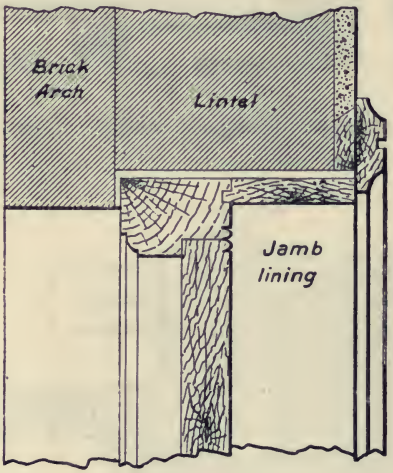

Fig. 611.
1½ Scale

these lines in elevation, that being the correct way, and, in addition, they embellish their drawings. This particularly applies to panelled work.

Small scale elevations of the whole height of these jambs are given on figs. 613 and 614, the former being the plan and the latter the panelled linings, the rails of which should always correspond and be in true line with the panels of the door—*i.e.*, a door three panels high should have linings

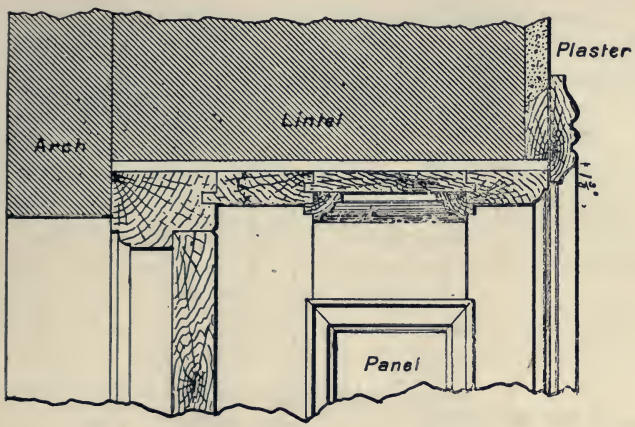

Fig. 612.
SECTION 1½" Scale

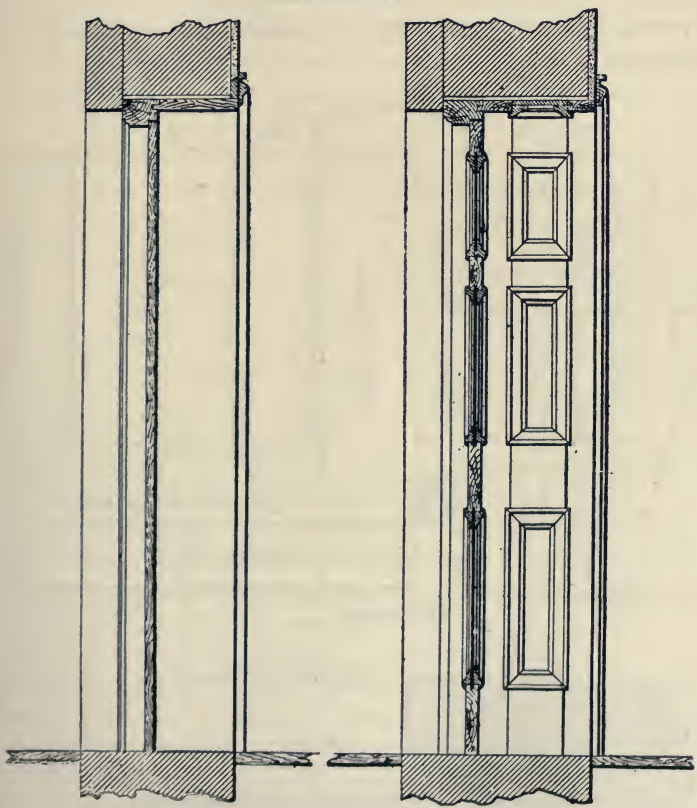

Fig. 613 Fig. 614

½" Scale

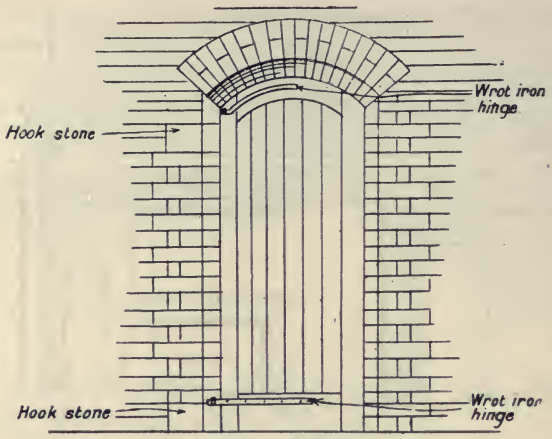

Elevation
Fig 615. ½" Scale

three panels high, each panel being of the same height as those on the door, to correspond.

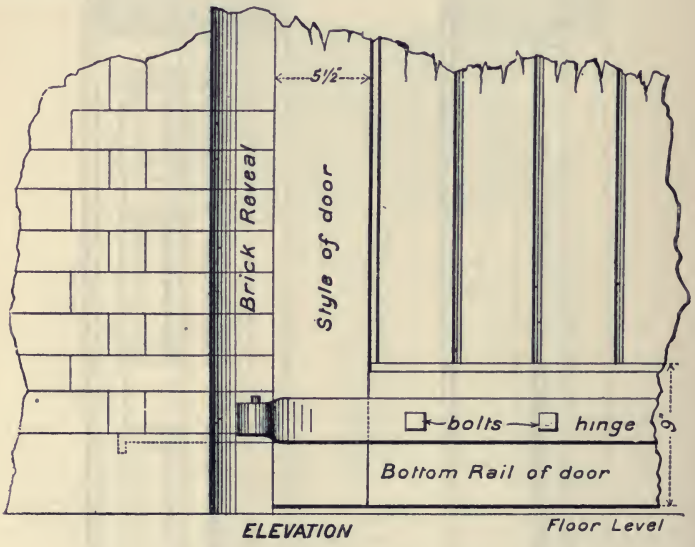

Fig. 616. 1"Scale

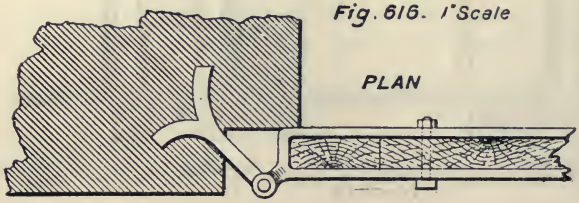

In agricultural buildings door frames are seldom used, the doors being hung at top and bottom by wrought-iron band-hinges, on to hooks which are secured to stones built in the jambs. Fig. 615 is a small elevation, and fig. 616 enlarged plans and sections, with details of the hooks, etc.

The hooks, otherwise called *crooks*, are usually used in pairs, and sometimes the top crook (or hook) is reversed, so that the pin of each points towards the other, to prevent the door being lifted off them, in which case the door has to be put in position before the upper band-hinge is attached, or bolted to the framing of the door.

Another method to prevent the door being lifted off its hinges, when hung externally, is to screw the end of the pin of the crook, and put on a nut, which should be permanently fixed.

When very large doors or gates are a necessity, it is very much better to screw the hinge to the lower edge of the bottom rail of the door with a conical pointed projection on the underside, instead of the knuckle to go over the pin; and this cone is made to work in a gun-metal socket, which is leaded into a special stone, fixed a small distance above the level of the threshold or top step immediately under the door, so that the door may swing or spin (as it were) on this cone. In this case it is always advisable to strengthen the band, supporting the door, by means of lugs or ears welded on either side, so that the thickness of the door is grasped by them. They should be at least nine inches high and every eighteen inches along the band-hinge, with a minimum of three pairs. It is needless to say these lugs should be bolted together through the door, and the face of them should be flush with framing; otherwise they will form a ledge or cup for the wet, and cause the bottom of the door to rot.

The knuckle and pin of the upper hinge must be perfectly perpendicular over the centre of the cone to render proper and easy working without undue pressure on particular parts; and the hanging style should be much wider than usual, so that it will have more strength to keep the door from sagging towards the closing or meeting styles.

If this principle of "centre hanging" or "on points" were more extensively used we should have less sagging of doors to contend with, especially with regard to the best doors, and even window shutters in first-class work, for the principle can be applied to the top and bottom of framings, similarly to "door springs," to great advantage.

Before leaving the subject of door frames mention must be made of the practice of using straight door frame heads in arched openings, and nailing a thin *turning piece* or arch piece on to the top of the frame, so as to fill up the space above to the outline of the arch, as fig. 617.

Doors.—Doors are wooden framings, hung to frames or doorcases, or on hooks, in external positions, and to casings or linings, internally. No

door should ever be less than 2 feet 9 inches in width, 6 feet 9 inches in height, and 1½ inches in thickness.

Ledged Doors are the first and simplest form of door, consisting only of beaded or V-jointed match boarding, nailed to deal ledges, generally three inches in width. Fig. 617A represents the outside of a ledged

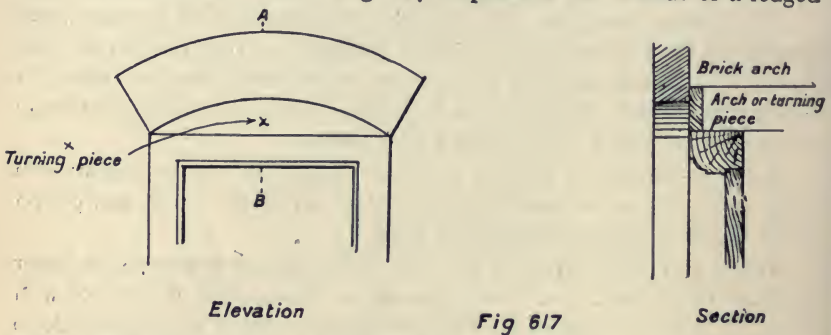

Elevation — Fig 617 — Section

door, and fig. 618 the inside, X X X being the ledges, which are often chamfered on all arrises, as shown by the double line. A plan is given on fig. 619, and an enlargement of the section at the ledge, fig. 620.

They are hung to the frames by iron hinges, called *cross-garnets* or T-hinges (from their shape), fixed at top and bottom to door and frame, and are fastened by Norfolk thumb latches, and locked by cased stock

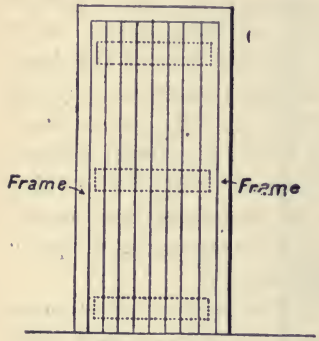

Fig. 617 A
Elevation

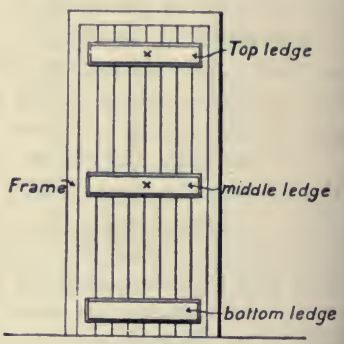

Fig. 618
Elevation

locks with a hollow box staple, X, fixed on the frame to take the bolt of the lock, as fig. 621. In the North these are called *Batten* doors.

N.B.—If the door frame is not rebated out to the thickness of the boarding and ledges, blocks have to be fixed on to the frames to make the fixing on the frames the same level as the ledges of the door.

The **Ledged and Braced Door** is a stage higher than the ledged door, being braced up, as the name implies; the only noticeable difference being at the back, where the braces—whereof the object is to keep

the door from hanging down from its hinges—are seen. Fig. 622 gives an elevation of the back, from which the nature and difference of the door



Fig. 619.

Section
Fig. 620. 1" Scale

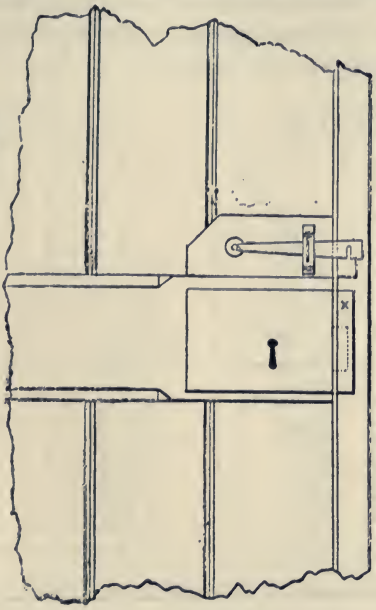

Fig. 621. 1½" Scale

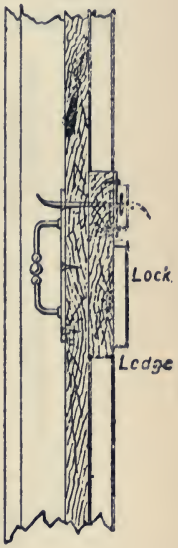

¼" Scale.

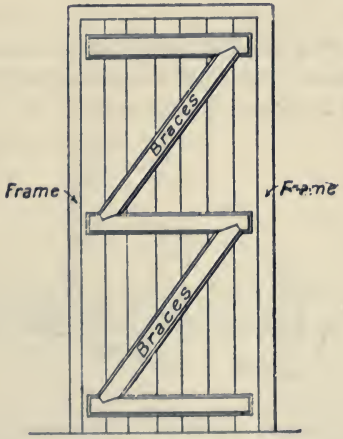

Fig. 622 ½" Scale

(as compared with the plain ledged door) can be understood. The fastenings, etc., are precisely similar to those used for ledged doors.

N.B.—It must be borne in mind that these braces, to effect their object, must incline upwards from the jamb to which the door is hung.

The **Framed and Braced** or **Framed Ledged and Braced Door** consists of a piece of framing, the size of the opening between the rebates of the door frame, with a middle or lock rail and braces (like the door last-named) in addition, to strengthen the framing; the whole being filled in with match boarding, as fig. 623.

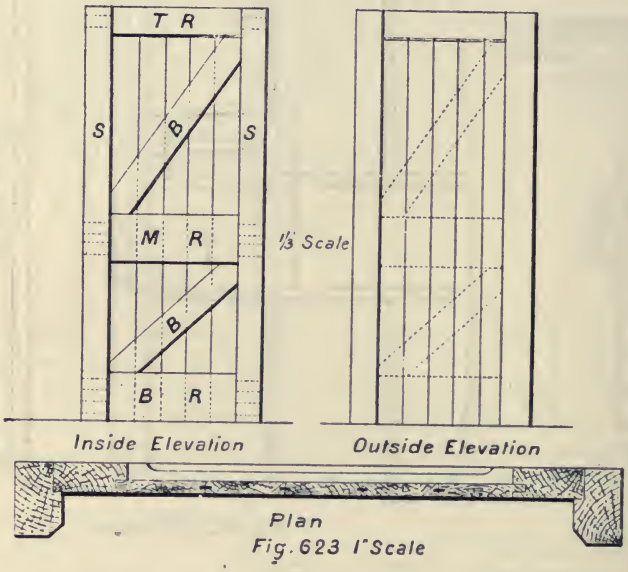

Fig. 623 1" Scale

Before going into the detail of this kind of door it will be as well to impress upon the student that all continuous upright framings are called *styles*, and the cross or horizontal pieces *rails*.

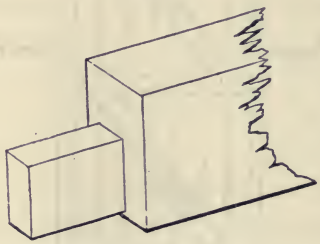

Fig. 624

The rails are tenoned and wedged into the styles in the usual way, as previously explained, the top rail tenon being as fig. 624, and the lock and bottom rails (being the thickness of the boards less in thickness) have bare-faced tenons, as fig. 537, but two tenons in height, on account of their depth as compared with the top rail.

All styles are generally $4\frac{1}{2}$ inches wide, lock and bottom rails 9 inches deep, and the top rail only $4\frac{1}{2}$ inches; therefore, in a door 2 inches thick, the styles and top rail are $4\frac{1}{2}$ inches × 2 inches, but the lock and bottom rails, to which the boarding between the styles and below the top rail is secured, are 9 inches × 1 inch, in cases where 1-inch boarding is used,

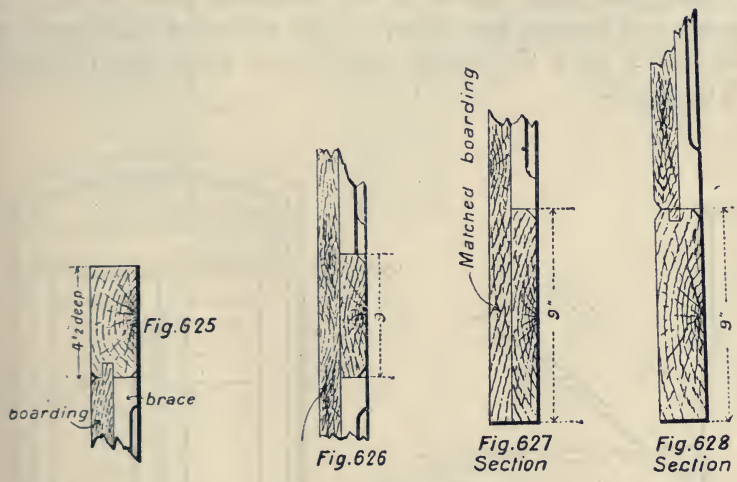

and $1\frac{1}{4}$ inch with $\frac{3}{4}$-inch boards—the two thicknesses, in each case, making up the 2 inches of the door.

The detailed section of the top rail, showing how the boards are secured to it, is as fig. 625; that of the lock rail as fig. 626; and the bottom rail, where the boards run through, as fig. 627; but in cases where a flush bottom rail is used, the section is as fig. 628.

Fig. 629 explains the joint at the styles.



Fig.629 1½ Scale
Plan

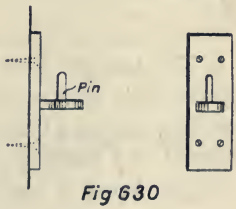

Fig 630

The fastenings used are just the same as for the ledged doors, with the exception that sometimes "band-hinges" are used instead of "cross garnets," the hinges being bolted to the door front and hung on to plate hooks, as fig. 630, screwed to the frames; or hook stones are substituted, doing away with the frames (*vide* fig. 616).

To impart a lighter appearance to the framing of these doors, the styles,

rails, and braces are often stop-chamfered on all edges, the elevation of the joint at the lock rail next the hanging style then appearing as fig. 631.

Framed and Ledged Doors are similar in all respects to the last-named, with the only exception that, as their name implies, they have no braces.

Fanlights.—Some internal as well as external doors are made with transoms and fanlights over them, to give additional and regular light as fig. 632, X being the fanlight, which can be either fixed, or hung on butts or centres.

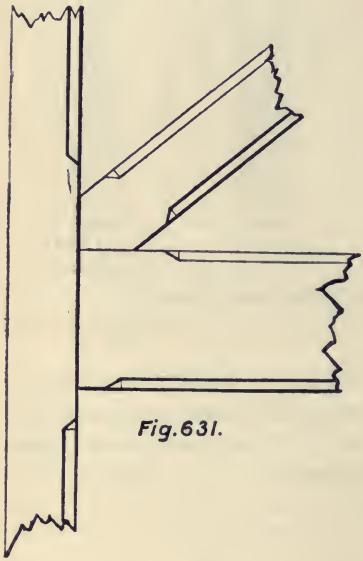

Fig. 631.

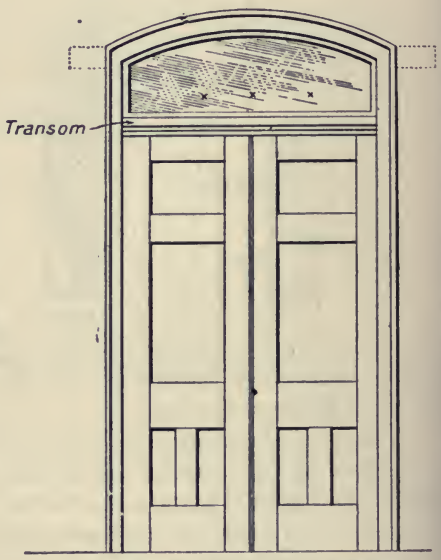

External Door with Fanlight
Fig. 632. ½ Scale

The fanlight itself consists of a piece of skeleton framing, similar to a glazed sash, with or without bars. The transom, more or less intricate in section, acts as a head to the door frame, and sill to the fanlight; being framed—by mortise and tenon joints—into the jambs, the head of the fanlight frame is similar to that for the head of the door, which has now been superseded by the transom.

Fig. 633 represents the jamb, head, and sill, with transom, of a fixed fanlight, a close examination of which will show all that is required for the purpose.

The styles and head of the fanlight are generally square, $1\frac{3}{4}$ inches or 2 inches, as the thickness of the fanlight and rebate on the frame. They may be of any section, ovolo-moulded (fig. 634); chamfered

(fig. 635); lamb's-tongue moulded (fig. 636); or of any other design; but the glass must always be put in from the outside. Where putty is used it is always the best, and renders it the more water and wind-tight as the weather presses the glass against the rebate, as fig. 637.

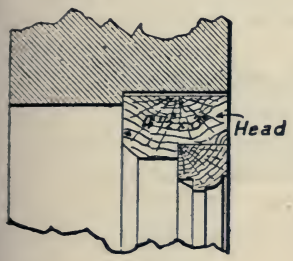

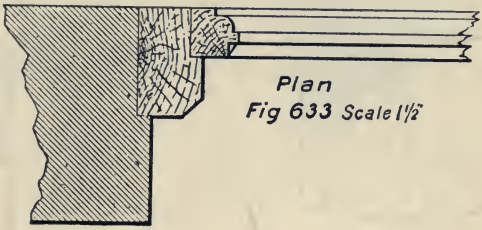

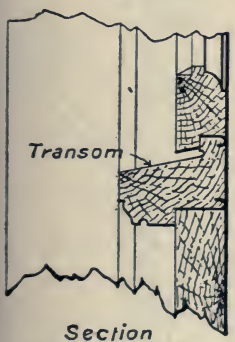

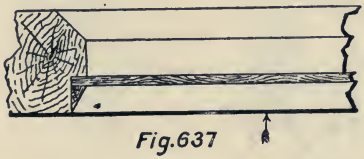

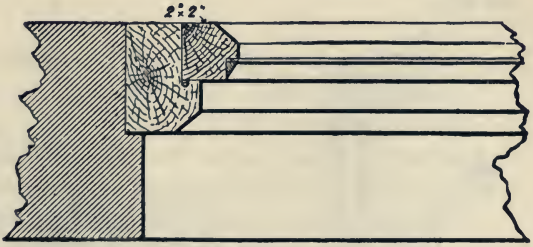

Occasionally, however, when loose beads are used, the glass is put in from the inside, as fig. 638, but never with putty. The mouldings certainly look better outside in contrast to the putty, but the work is never so good.

A *hopper fanlight—i.e.*, one to open inwards, hung on butts to the transom—is illustrated at fig. 639, which explains itself.

Fanlights are seldom made to open outwards, because they are very apt to help the rain to come into the house, as can be imagined from fig. 640.

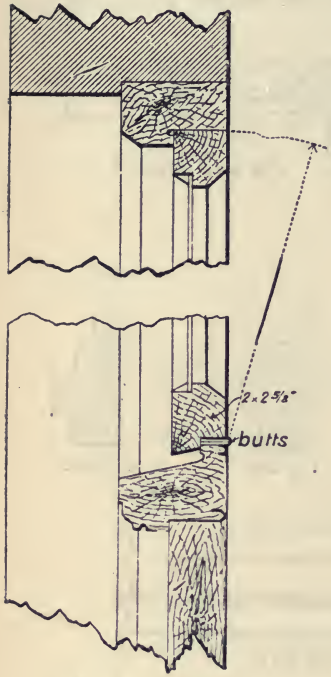

Section
Fig. 639

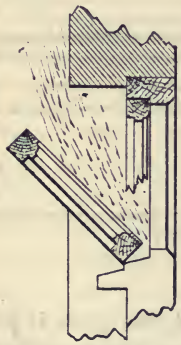

Fig. 640

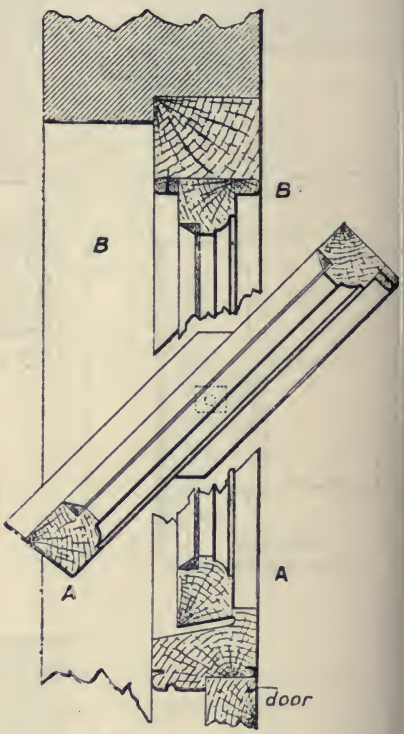

Section
Fig. 641 Scale 1½"

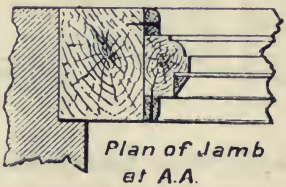

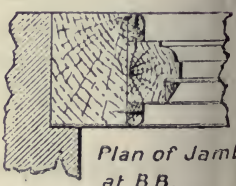

A fanlight *hung on centres* is represented by fig. 641, from which the principles may be gathered. The jambs have a solid bead on the lower part of their height (something less than the half) inside, and on

the upper part outside; with loose beads planted on the style of the fanlight, in reverse fashion; mitre-cut to fit each other—*i.e.*, each loose bead into the corresponding solid bead on the jamb—both inside and outside, when closed.

This is done to allow the swing-fanlight to open outwards at the bottom and inwards at the top, revolving on pivots which fit into slots fixed on each jamb.

These are also called *pivoted* fanlights, from the manner of hanging them on pivots, as fig. 642.

The advantage of pivoted or "centre-hung" fanlights is that, being out of reach, so to speak, they can be easily opened and closed by means of cords and pulleys. If the fanlight have the pivots fixed a little above the centre of its height it will close of itself.

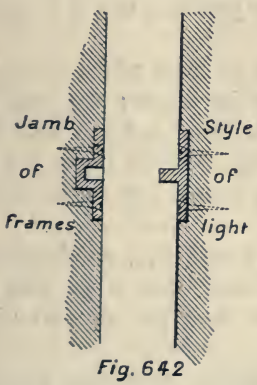

Fig. 642

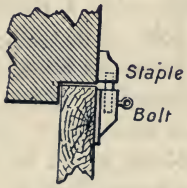

Fig. 643

Fig. 644.

Should the fanlights be divided into small squares, the bars used are similar to those explained for sashes in Chapter XVIII.

Hopper fanlights (fig. 639) are secured by small spring fasteners, fixed to the top rail of the fanlight, with a box staple, to receive the spring bolt, fixed on the head of the frame, as fig. 643. The ring serves to pull the bolt back when the light is required to be opened.

Pivoted lights can be secured properly by means of the cords, which may be tied over belaying hooks (fig. 644) screwed to the frame of the door, or to the linings.

Panelled Doors.—This kind of door is the most general in ordinary use, and consists of a framing, made up of narrow pieces, mortised and tenoned together, and grooved in the inside to receive the panels.

Fig. 645 represents the plan and elevation of the skeleton of a four-panelled door, fig. 646 those of a five-panelled door, and fig. 647 those of a six-panelled door.

S S are the styles, the one with the butts on being called the hanging style, and the other the closing style. Styles always run through the whole height, and are really the foundation of the complete framing, the other members being directly or indirectly connected to them.

M M are the *muntins* or *muntings*, which are tenoned, at top and bottom, about 2 inches into the rails, as, for obvious reasons, they cannot be wedged.

T R is the top rail, which is tenoned into the styles.

L R is the lock or middle rail, the top of which should always be 3 feet 2 inches above the floor line, that being the acknowledged height of convenience for the handles of the locks.

B R is the bottom rail; and F R, when used, the frieze rail; P represents the panels, which are sometimes distinguished as "top," "bottom," or "middle" panels, according to position; and F P are the frieze panels.

The door, fig. 645, is hung with one pair of butts, which should be of wrought-iron, either 3 inches or 4 inches in length; the lock is a rim-lock, which, though on the same principle, is of a better kind than the ordinary stock-lock—viz., a projecting lock, screwed on to the face of the framing, the bolt, when turned, going into a box staple secured to the jamb of the frame or lining.

The five and six-panelled doors, figs. 646 and 647, are hung with $1\frac{1}{2}$ pairs of butts, on account of their increased size, while they are secured by a mortise-lock, which is sunk into the style and part of the lock-rail, as shown by dotted lines.

In addition to the *furniture*, as the handles or knobs, etc., are commonly called, it will be noticed that these doors have what are called *finger-plates* screwed on to the styles above and below the lock.

Fig. 648 will give the student an idea how a door is put together, the example being a five-panelled door.

It will be seen that the styles are made with horns, X X, $1\frac{1}{2}$ inches longer than the size of the door, at top and bottom, to give the workmen something to knock the styles off by while framing, and allow of more substance to withstand the driving home of the wedges at top and bottom.

Where the doors are 2 inches or more in thickness, all rails, etc., must be double-tenoned; and under any circumstances all lock-rails must be double-tenoned into the closing style when mortise locks are to be used.

Before entering into the details of the various modes by which the skeleton framing of the door is ornamented, it must be impressed on the student that all panelled doors can be treated in the same manner with

one class of work on both sides, or a different one on each side. For instance, a four, five, or six-panelled door can be either square-framed

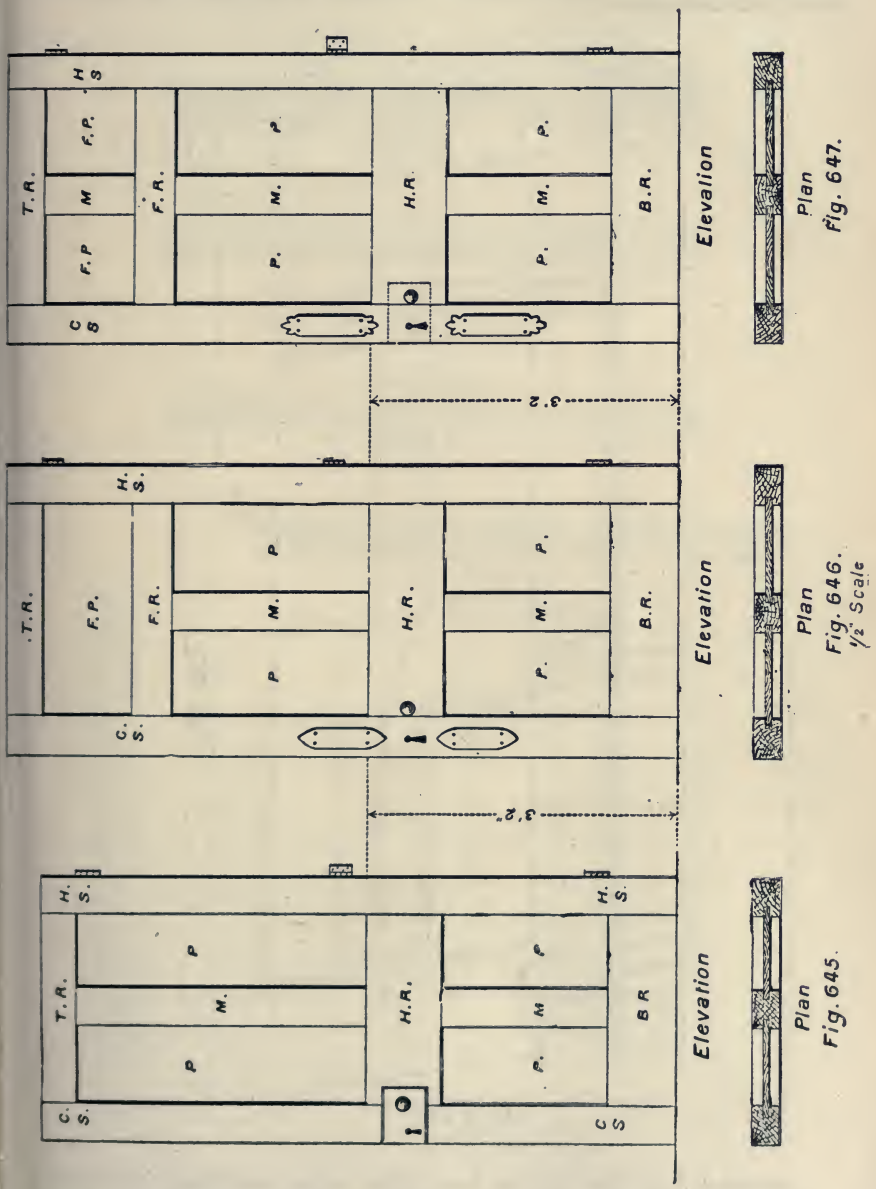

both sides, as fig. 649 ; moulded both sides, as fig. 650 ; or square-framed one side and moulded the other, as fig. 651.

Square-framed consists of the panels being left in square recesses; in fact, left as the skeleton framing. Fig. 649 represents a door square-framed on each side.

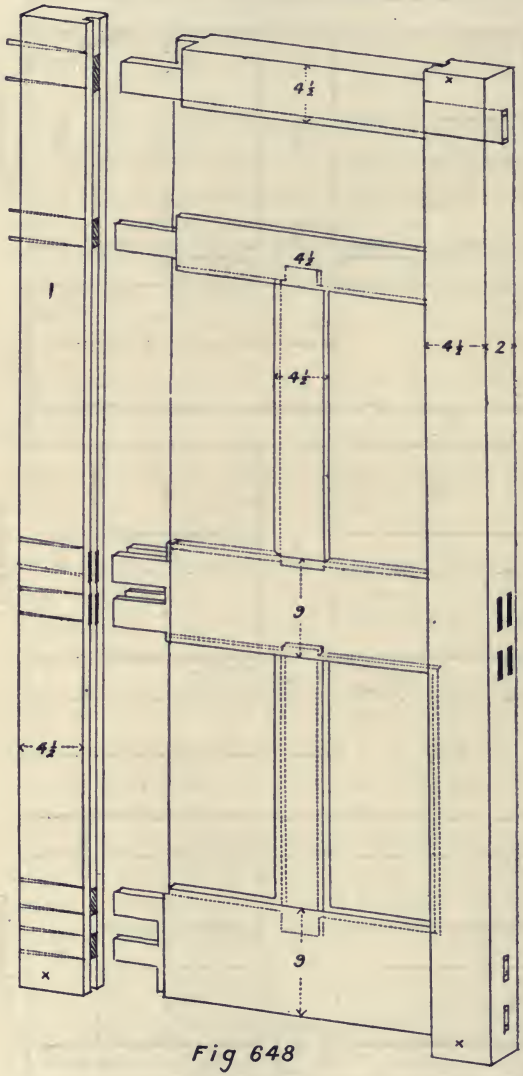

Fig 648

Moulded both sides is the term used when mouldings are mitred round the panels (fig 650), whether they be "stuck" or "planted" mouldings, as explained in Chapter XVI.

Square-framed and moulded is a combination of the last two, one kind being on each side.

Bead butt and square is as fig. 652, the beads running up beside the



Square & Framed Panels
Plan
Fig. 649. 1" Scale

Stuck moulding
Planting moulding
Plan
Fig. 650. 1" Scale

Square framed
moulded
Fig 651. 1" Scale



Square
bead butt
Plan

Sectional Elevation

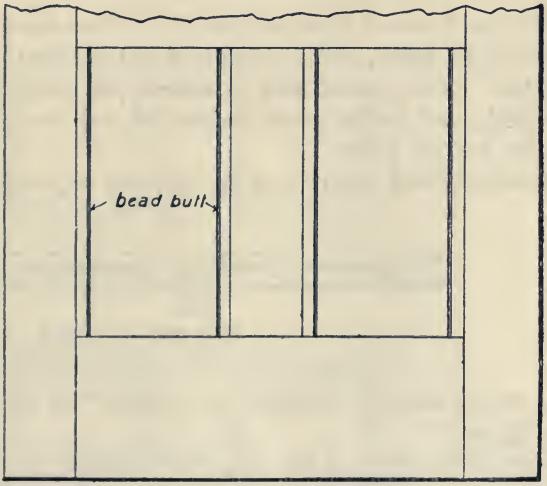

Elevation
Fig. 652. 1" Scale

styles, and butting up against the rails. It will be noticed that the panels in this kind of door are thicker, which is an advantage in external doors.

Bead flush and square has the bead mitred round inside the panel

instead of only on two sides, and butting against the rails. The plan is precisely the same as fig. 652, the difference only being detected on the drawings upon the elevation and vertical section (see fig. 653); and comparing them with fig. 652, it will be noted that the bead is shown on the sectional elevation in a "bead-flush" door, but not in the "bead butt."

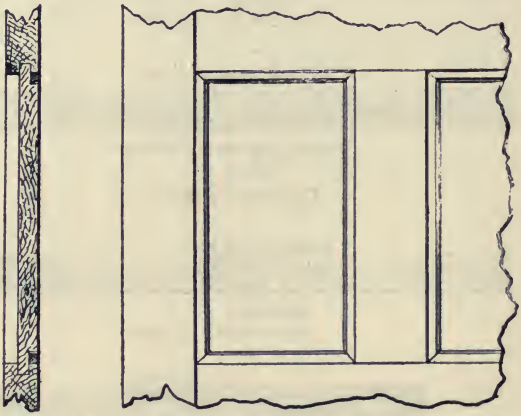

Sectional Elevation — Elevation

Fig. 653. 1" Scale

The two kinds of doors last named are often made moulded instead of square on the inside, being "bead butt and moulded," or "bead flush and moulded." The beaded work is seldom put inside, being most suitable for outside, and having a more substantial and strong appearance, unsuitable for internal effect.

Chamfered and square is as fig. 654, and requires no further explana-

Plan

Fig 654. 1" Scale

tion, except that the chamfers are worked "on the solid"—*i.e.*, of the framing itself.

Stop-chamfered is as fig. 655, the elevation of the panels being as shown.

Bolection-moulded doors are on plan as fig. 656, and on elevation as fig. 657; whereon it will be noticed that the lines of the framing are within the outsides of the moulding, which is the proper way to show a bolection moulding in elevation.

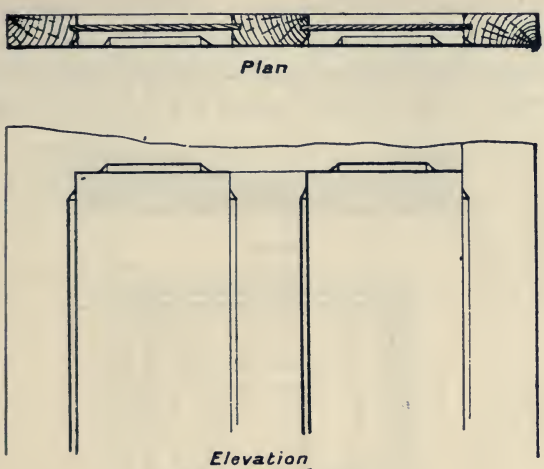

Fig 655. 1" Scale

Fig. 656

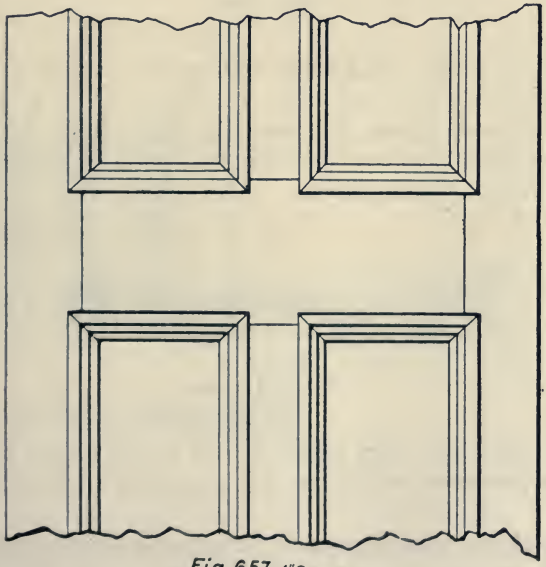

Fig. 657. 1" Scale

Often in addition to these mouldings—which are connected to the sides of the framing, and really enclose the panels—the panels themselves are more or less ornamented, the most general methods being the following :—

Raised panels, as fig. 658, from which it will be seen that the panels

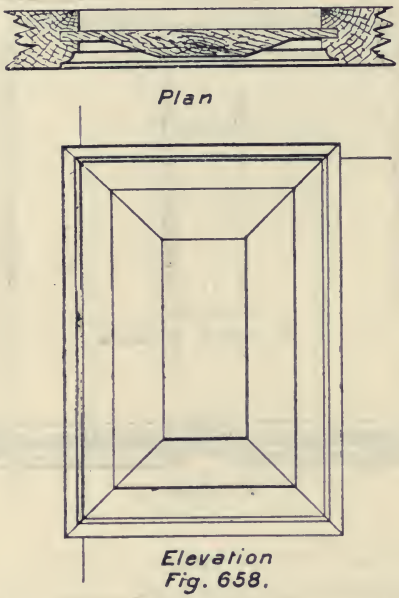

Fig. 658.

are thicker in the centre being raised up from the usual face which goes into the groove of the styles and rails.

Raised and sunk appear the same, in front elevation, as the last; but, before the bevel starts from the face of the panel, it is first sunk about $\frac{1}{8}$th of an inch, as X X on fig. 659.



Fig. 659 1½" Scale

Moulded, raised, and sunk panels are yet a step higher, the edge of the raised portion being moulded, as fig. 660, which carries a double line in elevation.

Linen panels are occasionally used in the best kind of work, the face of the panel being moulded and carved to represent a roll of linen twisted about (fig. 661).

Miscellaneous Doors.—Some doors, called *sash doors*, are made with the top part of them prepared for glass panels, in which cases the styles are often diminished at the lock or middle rail, as at X, fig. 662.

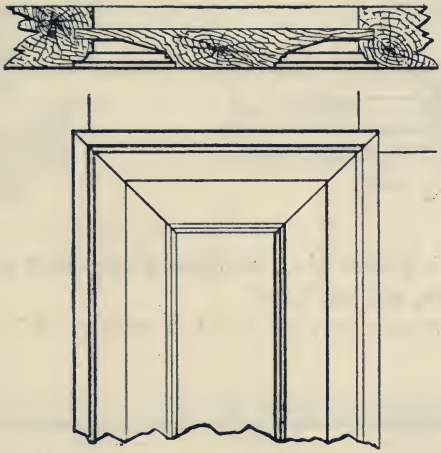

Fig. 660. 1½" Scale

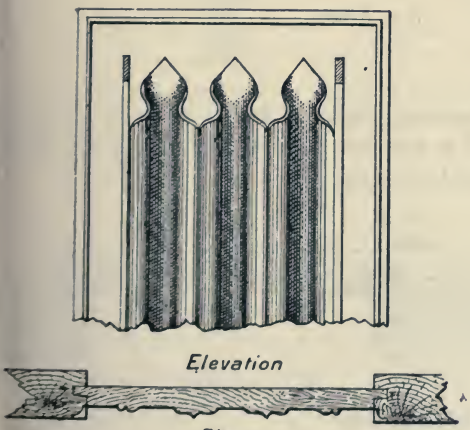

Fig. 661.

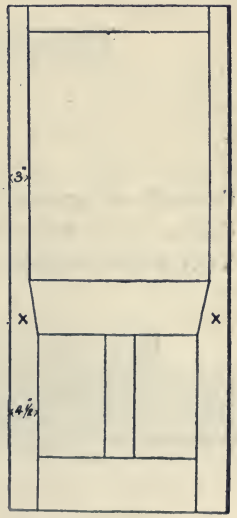

Fig. 662 3/8" Scale

This is done both for effect, and to allow of more area of glass, which is secured within the framing by loose beads mitring round the panels and screwed to the framing after the glass is in.

Fig. 663 is an enlarged plan of the style, showing the glass and mode of fixing. The styles of this kind of door are often called *gun-stock* styles, from the shape which results from the diminution.



Fig. 663.

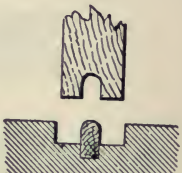

Fig. 664.

Dwarf doors is a name given to doors of very small area, principally to cisterns, cupboards, and trapdoors.

Jib doors are those which are made to correspond in appearance with

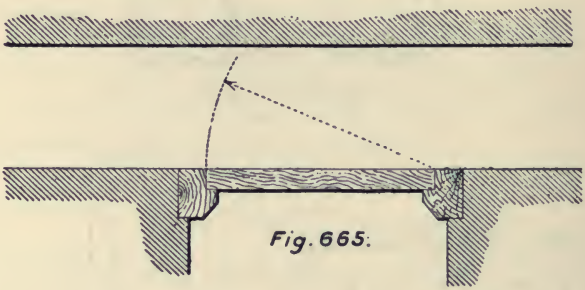

Fig. 665.

the walls of a room, having the same finishings, in the shape of skirtings, dadoes, chair, and picture rails, or cornices, fixed to them as to the walls. They are out of date now, and seldom used.

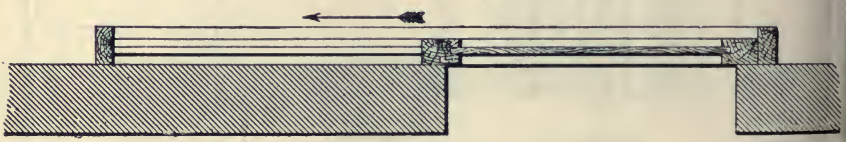

Single door

Fig. 666 ½ Scale

Sliding doors (when double) are made in two portions, which run past each other on wheels when required to open. The wheels, which may either be fixed to the top or bottom of the doors (figs. 668 and 669), have a hollow margin in the centre, which grips an iron or hard wood guide

(fig. 664) running past the openings, the whole width of the doors, to keep them in position.

This class of door is suitable for goods sheds, fittings, and other situations where there is not room for a door to open on its hinges, as fig. 665.

To overcome this difficulty the sliding door is used either double or single, according to the width of the framing and spaces at its sides (fig. 666).

Fig. 667 shows an opening with narrow sides, which necessitates the door being in two halves.

Figs. 668 and 669 show, respectively, sliding doors, with wheels on a runner overhead, and on a runner underneath, with guides to suit the alternate methods.

Folding doors are those which, being too wide to be hung to one jamb, are divided into two parts, each hung to a jamb, right and left, and meeting in the centre, as fig. 670. Each of the half-doors is hung with butts to the jamb, and one "leaf" or "fold" is fastened by bolts at top and bottom, into sockets fixed to the head of the frame or linings, and to the floor. The other leaf is secured with either a rim or mortise lock (as before described), but the latter has to be rebated to suit the section of the closing style of the door.

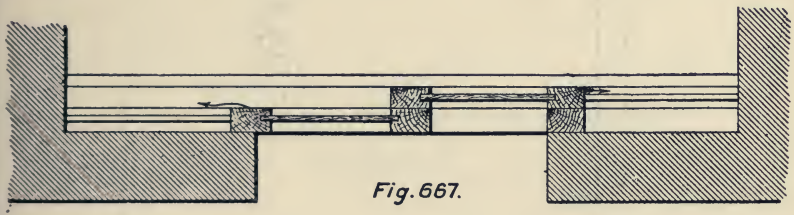

Fig. 667.

They are made in the same way as other doors, the meeting styles (as they are called) at X being rebated, as fig. 671, to form a joint; and in best work this is more or less checked to prevent the ingress of draughts and damp, as fig. 672.

The jambs of these and other kinds of doors and frames are also often checked out for the same reasons (fig. 673), but it is better to leave a hollow on the frame, as fig. 674, and have no projection on the style of the door, which has been proved to suck or draw in the rain in windy weather.

Double-margined doors are imitation folding doors. The door is hung in one width, with a bead worked on the middle from top to bottom, to make it appear as if it were made in two parts.

Internal doors have "linings" or casings, which can be either plain or

panelled, according to the thickness of the walls they are in for their cases.

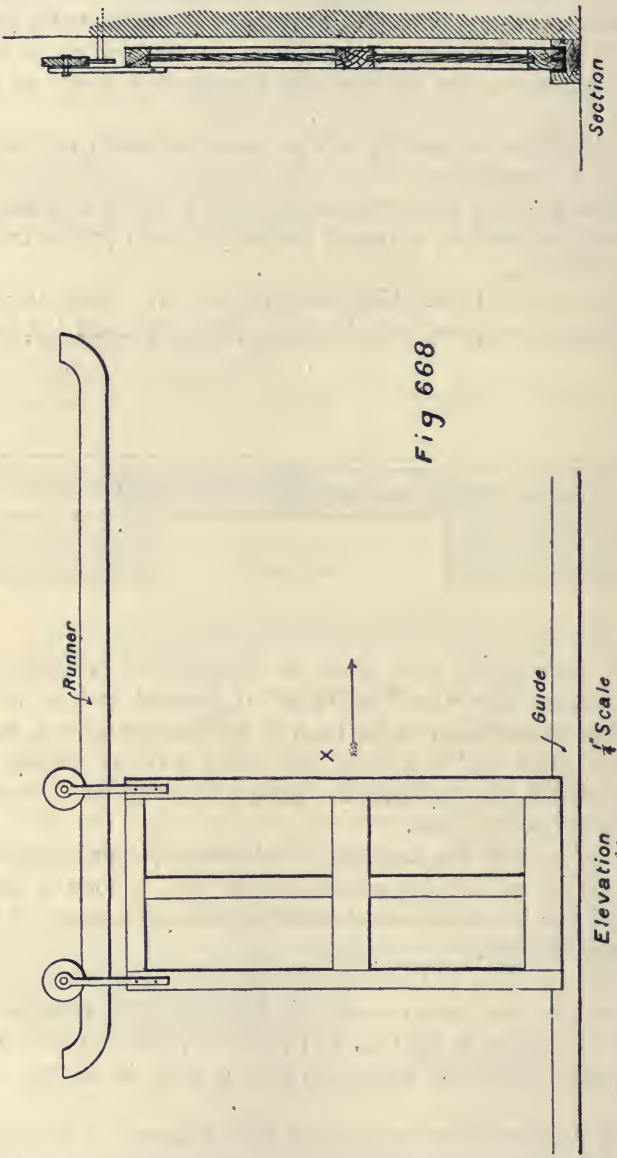

Plain casings are used for doors in $4\frac{1}{2}$-inch, 9-inch, and sometimes in 14-inch brick or corresponding stone walls. A rebate on the casing, $\frac{1}{2}$

an inch in depth, around the three sides of the door, regulates the size of

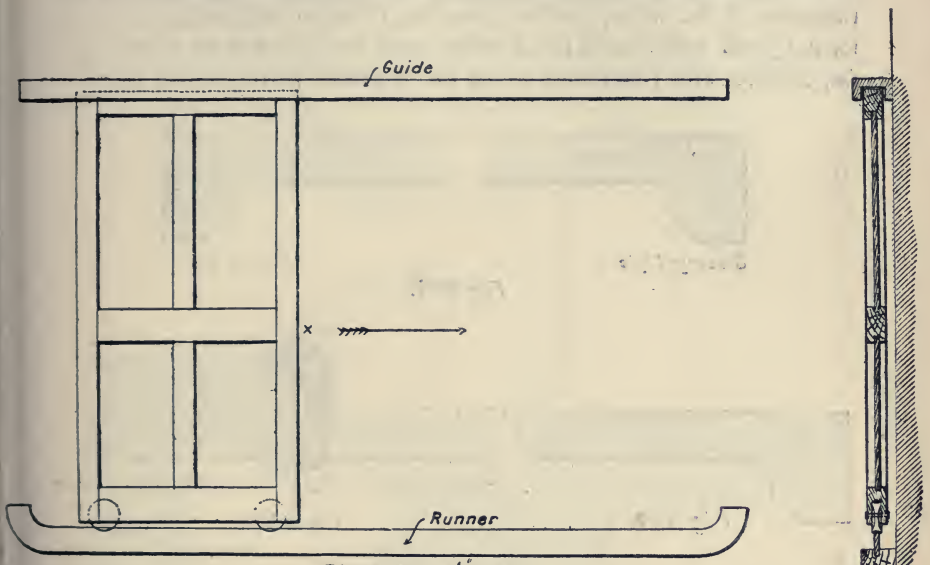

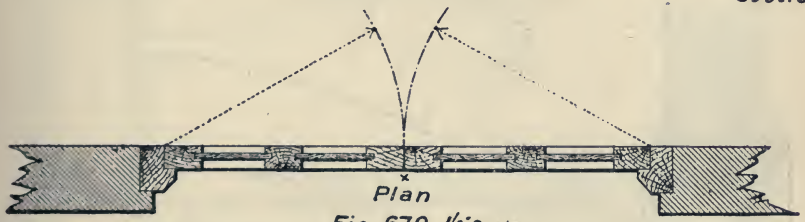

Fig. 671.

Fig. 672.

the casing. Thus for a door 2 feet 9 inches × 6 feet 9 inches, the casings must be 2 feet 9 inches between the rebates in width, and 6 feet 9 inches

between floor and rebate in height. Their width is regulated by the thickness of the walls *plus* the plastering, if any, on each side. A casing for a $4\frac{1}{2}$-inch wall should be $4\frac{1}{2}$ inches, *plus* two $\frac{3}{4}$ inches for plastering—*i.e.*, 6 inches wide; and for a 9-inch wall it should be $10\frac{1}{2}$ inches wide.

Fig. 673.

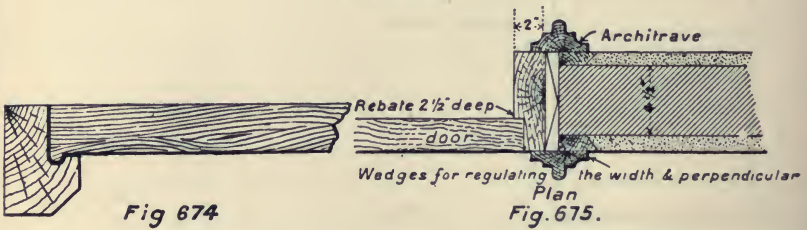

Fig 674

Fig. 675.

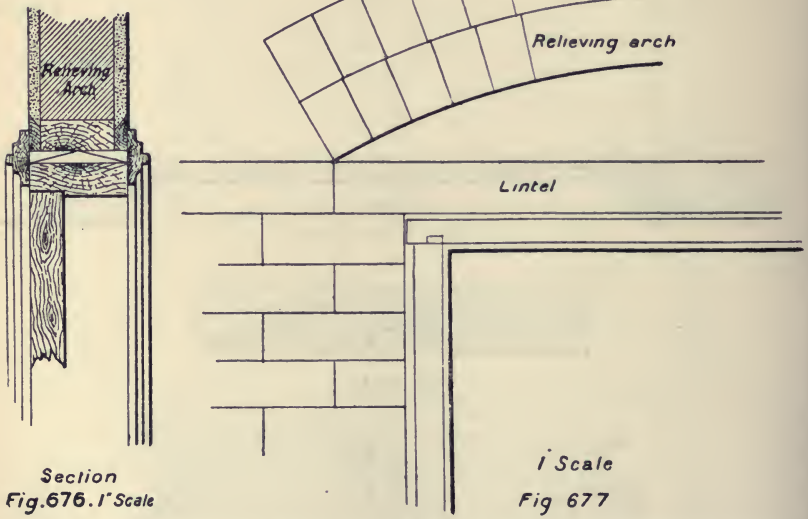

Fig. 676.

Fig 677

Plain casings are generally 2 inches thick, and either single or double-rebated—the one being necessary for the door and the other according to fancy and uniformity.

Fig. 675 represents the plan of one jamb of the casing for a 2-inch door in a $4\frac{1}{2}$-inch wall, *single-rebated.*

Fig. 676 gives the section at the head showing the architraves on each side in elevation and section.

Fig. 677 shows a front view of part of a door lining or casing, with lintel and relieving arch, and rebate for doors, whereof fig. 678 is an enlarged view.

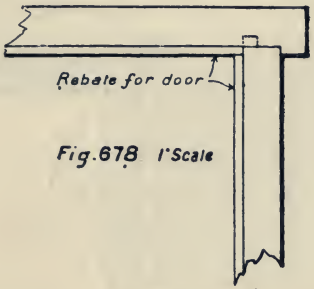

Fig. 678 1"Scale

Section
Fig. 679 1Scale

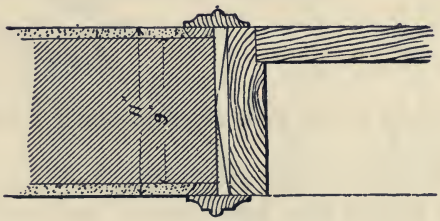

Plan
Fig 680

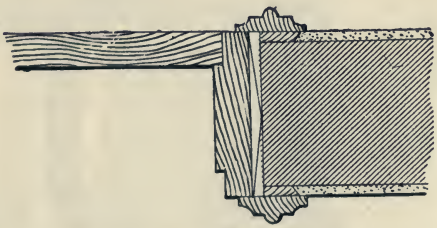

Plan
Fig 681

Double-rebated casings have a rebate on the other edge, corresponding to that for the door; a 6-inch casing—*i.e.*, for a 4½-inch wall—being as fig. 679, which is a section through the head. It is needless to give the jamb; the student should be quite able to follow that out himself.

The "single and double-rebated" casings for 9-inch walls are similar to the last, but of course wider.

Fig. 680 represents the plan of a single, and fig. 681 that of a double-rebated casing for a 9-inch wall.

Those for 14-inch walls must, of course, be cross-tongued, having to be made out of two widths of stuff, 11 inches being the widest procurable.

Fig. 682 is a plan of a cross-tongued double-rebated casing.

Occasionally, this cross-tonguing is superseded by framing on loose rebates on each side, as fig. 683, which has the advantage of not showing

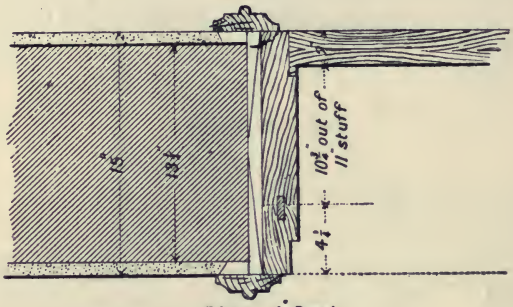

Plan. 1" Scale
Fig 682

any crack if the joint gives, as would be seen with the cross-tonguing, as fig. 682.

It is also a good plan to key them across their back with hardwood keys, to keep them from twisting; the keys being dovetailed in, as it were (see fig. 684), and driven home from the thick to the thin end.

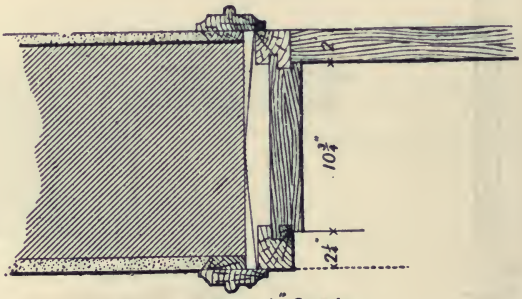

Plan 1" Scale
Fig 683

This difficulty is often obviated by using *skeleton casings*; but it should be noted that these can be, and are, often used for any other widths. They have the advantage of giving a firmer and better fixing for the hanging style of the door. The 1½-inch thickness, which the rebate left of a 2-inch casing or lining, was all too little and weak for hanging a large door to; whereas, with the skeleton casing and "loose" stop, we have

always 2 inches to hang to, and without waste of stuff and extra cost, such as would be entailed if there had been 2-inch rebates, on plain linings.

Fig. 685 represents an enlarged plan, and fig. 686 a small elevation, of the jamb, before the rebate, or rather *stop* piece, is planted on its face to form the rebates.

Panelled casings, as the name implies, are more ornamental than any of the last. Still they cannot be used for narrow casings; 11 inch even

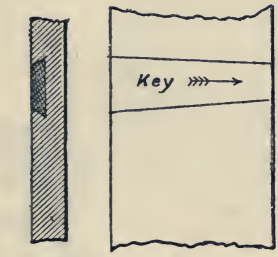

Fig 684

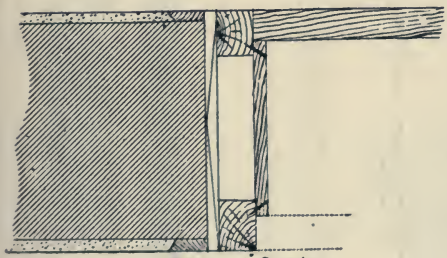
Plan 1 Scale
Fig 685

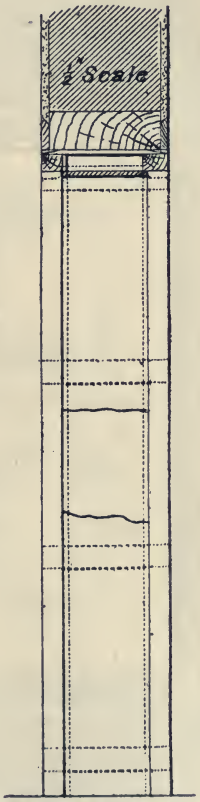

Sectional Elevation
Fig 686

make the panels rather cramped up. The panels must range in height, etc., with the doors, those on the jambs by the panels of the door in height, and those on the head according to the number of panels at the top of the door. It is always as well to show the top or "soffit" panelling, as it is termed, by dotted lines on the plan, as fig. 687, which gives a plan, etc., of panelled linings or casings for an 18-inch wall, and fig. 688 a smaller-scaled elevation.

From figs. 687 and 688 the student will gather that the door is 6-panelled, 3 in height and 2 wide; a 5 and frieze-panelled door would have had only 1 panel on the soffit where 2 are shown by dotted lines on the plan.

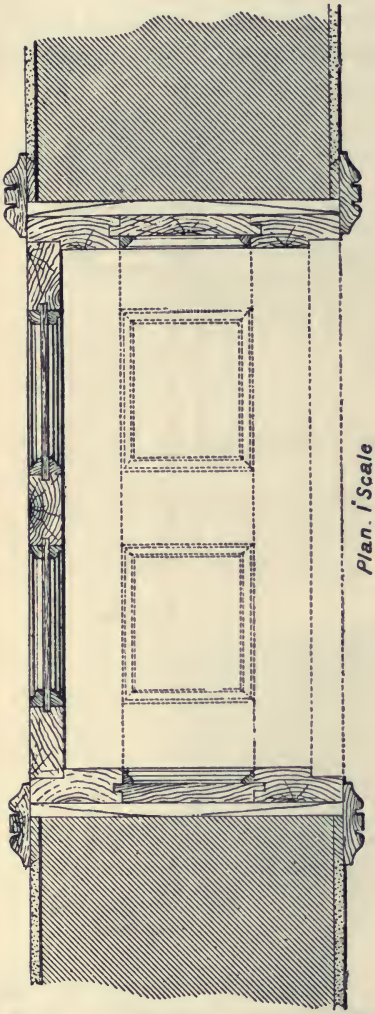

Plan. 1 Scale
Fig 687

Elevation
Fig. 688. ½ Scale

Oftentimes the rebates are what are called *loose* rebates, and they are sometimes beaded in addition, as fig. 689.

From the various illustrations, etc., given of linings or casings, the student will have noticed how important it is that the framed grounds round the doorway should be fixed to the gauge shown on fig. 591

perfectly plumb on the face and sides ; though the latter can sometimes be corrected by the wedges used to regulate and secure the proper line of the door casings.

Dadoes are wooden framings fixed to the walls around a room, either as an ornament or for protection. They are usually about $1\frac{1}{4}$ inches

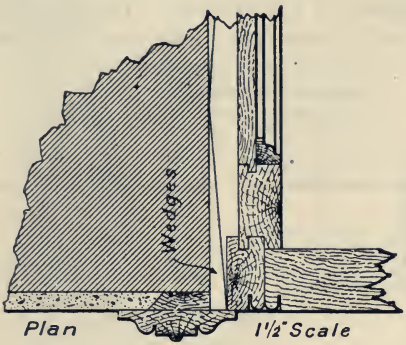

Fig. 689

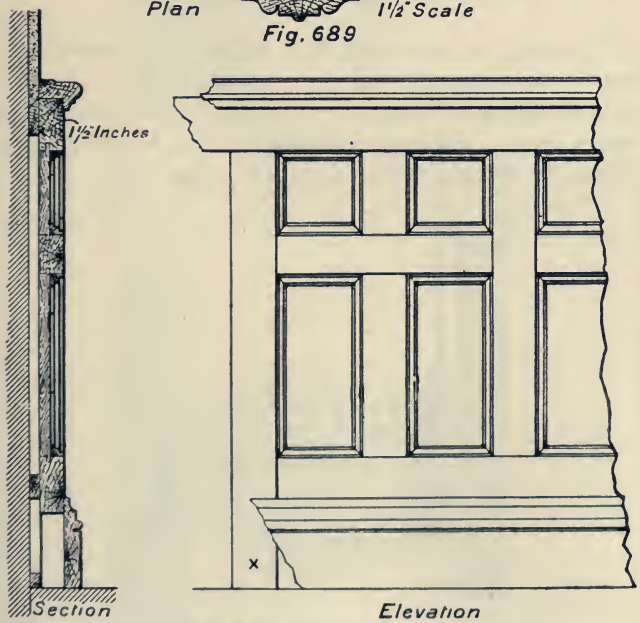

Fig. 690. ¾ Scale

in thickness, and can be made of plain, cross-tongued, or any other of the various kinds of match-boarding ; or, in better work, they are panelled, and can be square-framed, moulded, chamfered, bolection-moulded, bead flush, or with raised or other ornamental panels, as explained and illustrated for doors.

They are square at the back and fixed to grounds and backings

plugged to the brick walls; but, to prevent damp, they should be painted at the back before being permanently fixed.

Fig. 690 represents a section and part elevation of a panelled dado with its belongings, X showing what is called a *leg*, being the end style, which runs down to the floor; between these legs the dado only goes just below the top of the skirting. There is no regulated height for dadoes; they vary according to taste and the number of panels in

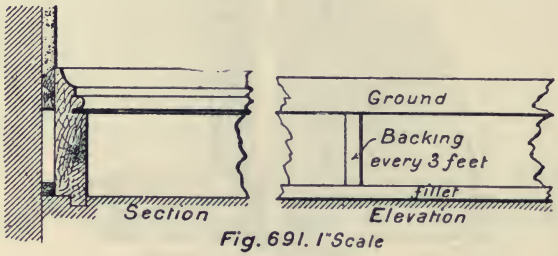

Fig. 691. 1" Scale

height. Of course, in match-boarded dadoes, the boards are fixed perpendicularly, and generally run down to the floor.

All internal angles of dadoes are tongued and grooved, and the external angles mitred and tongued, or formed with any other suitable joint, explained in Chapter XVI., to which please refer.

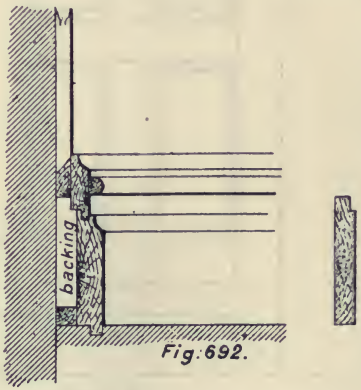

Fig. 692.

Skirtings are plain or moulded longitudinal boards, of various heights, fixed on grounds and backings to the walls at the floor line. In best work they are tongued into the floor, as fig. 691, which represents a moulded skirting with its fixings.

Internal angles are tongued with the mouldings scribed over each other, and the external angles are mitred only.

A *double skirting* consists of two or more members, as fig. 692, and

generally necessitates the backings being cut to the shape of the back of the complete skirtings, as fig. 692.

Chair rail is the name given to the longitudinal mouldings which

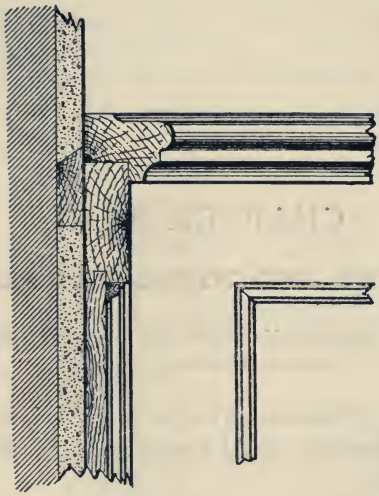

Fig. 693.

are fixed at the height of the tops of the backs of chairs, as a capping to dadoes, as in fig. 693; or to grounds on plaster walls, as fig. 694.

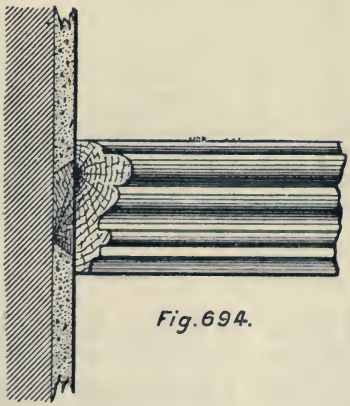

Fig. 694.

The chair rail is often called the "surbase," and the skirting the "plinth" or "base" of a dado.

Skirtings and dadoes are often made of plaster or cement, instead of wood; but these will be explained in Chapter XXI. on "Plastering," etc.

CHAPTER XVIII.

WINDOWS AND WINDOW FINISHINGS.

Sash, or Cased Frames—Solid Frames and Casements—Borrowed Lights—Window Finishings—Shutters.

Windows and Frames.—Window openings are filled in with two classes of joiner's framing—cased frames filled in with sashes, or solid frames with casements.

Sash Frames.—*Cased frames* are of two parts, as stated above, consisting of sashes, in one or more squares, with or without bars, suspended over pulleys by lines with regulated weights tied on at the other end, in boxings framed together as jambs. These jamb boxings are connected by

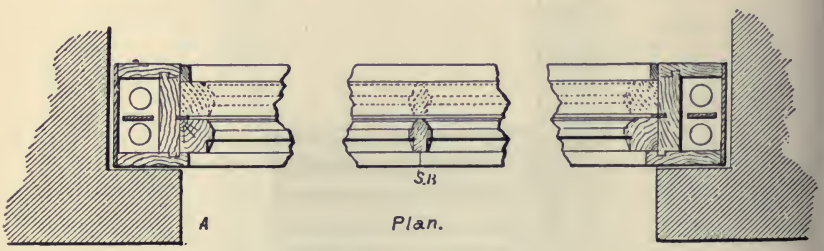

Fig. 695. 1" Scale.

a head at the top and sill at the bottom, forming a four-sided frame, within which the two sashes are enclosed.

Fig. 695 represents, to a small scale, the plan of a cased frame with its sashes; fig. 696 is a section of the same.

Figs. 697 and 698 are enlargements of the same, at the points marked A, B, C, and D, respectively; and the detailed parts are lettered as follows:—

P S, pulley style; P P, pocket piece; P H, pulley head—*i.e.*, head of style; S C, sash cord; W, weights; I L, inside lining; O L, outside

lining; B L, back lining; P B, parting bead; P L, parting lath; T B, inside or stop bead; S, sill; B, blockings; S, styles of sashes; B R, bottom rail of sashes; M R, meeting rails of sashes; T R, top rail of sashes; S B, sash bar.

From the enlarged illustrations the student will have noticed that the thickness of the sashes, whether it be $1\frac{5}{8}$, $1\frac{3}{4}$, $1\frac{7}{8}$, 2, or $2\frac{1}{4}$ inches, regulates the thickness of the whole boxing. All the other usual sizes are figured, so that he should be able to apply the above to any thickness of sash.

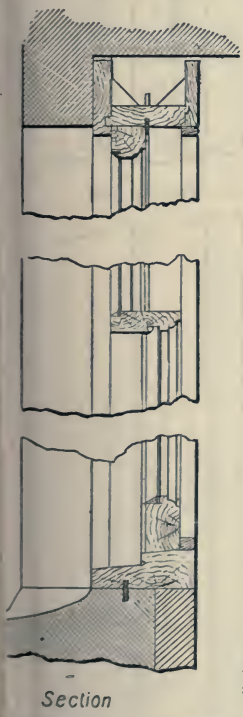

Fig 696 1 Scale.

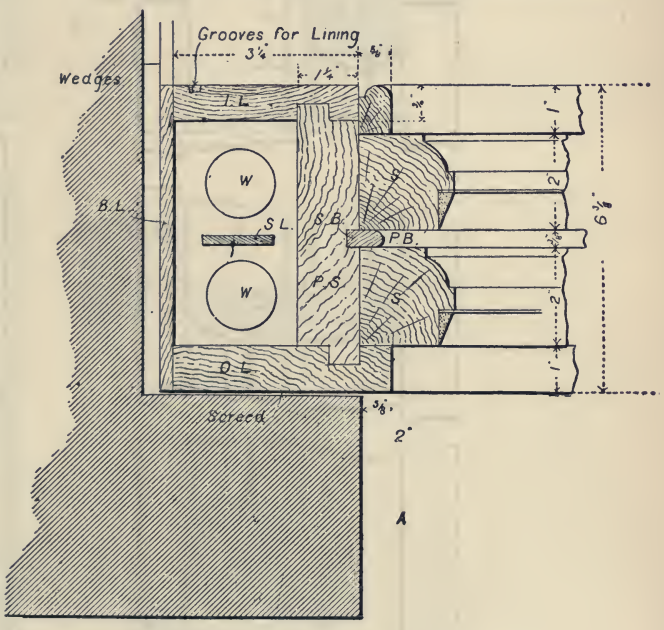

Fig. 697 Scale ¼ full size.

On fig. 697, the plan of the jamb, both sash styles are shown, though only the inner or bottom sash is really seen in its place when the section is taken below the meeting rail C, and that of the top or outside sash is only observed when a section is made above the meeting rails.

It will also be noticed that the two weights are shown in the boxings. This sash-frame is supposed to be *double-hung*—*i.e.*, both sashes are suspended by the cords over the pulleys, and weighted, so that they can be regulated when neither open nor shut. If the sashes were *single-hung* only one weight should be shown in each jamb on the same side of the

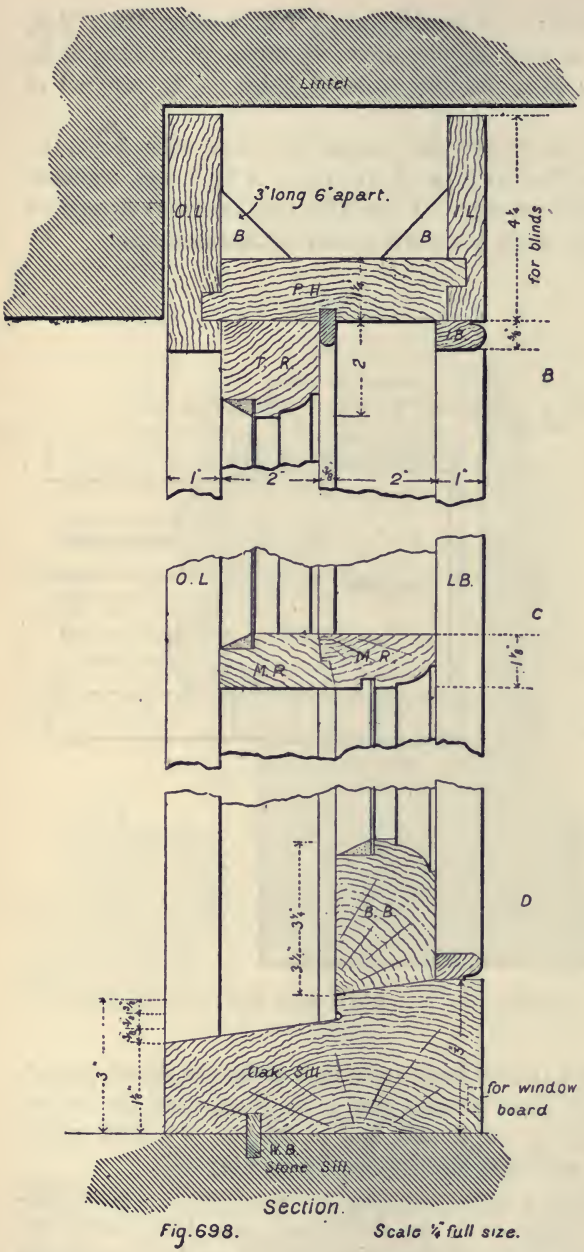

Fig. 698. Scale ¼ full size.

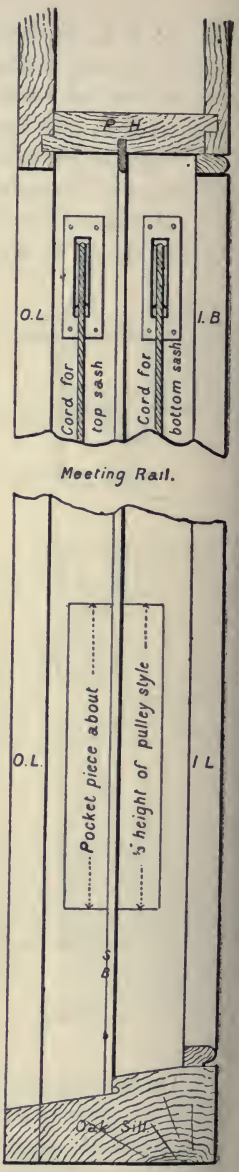

Fig. 699. 2" Scale.

parting lath, P L, inside the boxing—the same side as the hung sash is of the parting bead outside. This parting bead should be of oak or teak. to provide against undue swelling and sticking of the sashes.

Fig. 699 is an elevation of the pulley style, without the sashes in; and fig. 700 a section, showing the working details of the axle pulleys, weights, cords, and pocket pieces, the latter of which are for putting in and getting

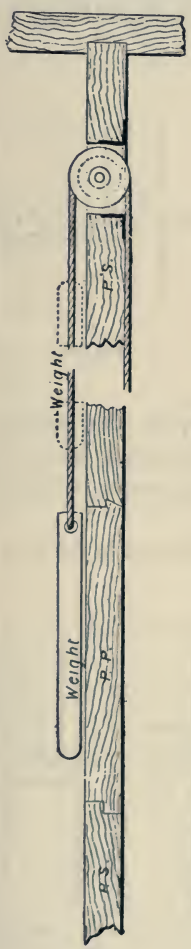

Fig. 700.
2" Scale.

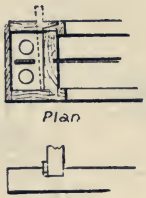

Fig 701.

Fig. 702.

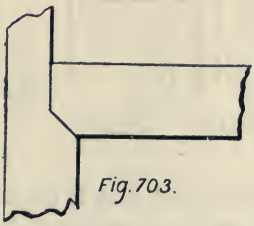

Fig. 703.

out the weights, when hanging or regulating the sashes. One pulley only is shown on each pulley style when the sash is ' single-hung.'

The pulley styles are housed and wedged into the oak sills, as shows on fig. 701, and housed into the head which runs across at the top (See fig. 702.)

The linings are united at the top angles, as fig. 703; and the sill is notched out for them at the bottom, as fig. 704.

The meeting rails are always about $\frac{1}{4}$ inch thicker than the styles, or thickness of the sash, to fill up the space of the parting bead, which creates a space where the top and bottom sashes meet, as shown in fig. 705.

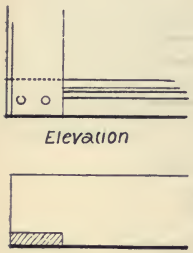

Fig. 704

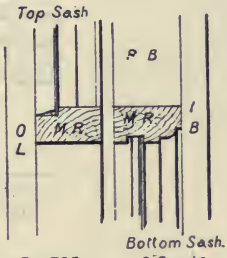

Fig. 705 2"Scale.

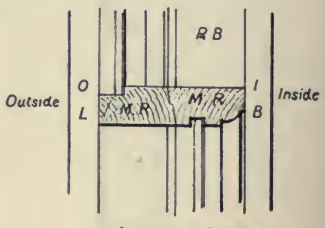

Fig. 706 2"Scale

Fig. 706 shows the space filled up properly by the meeting of the sashes, which should lock as shown, the top sash always being outside on account of the ledge which it would create at the meeting with the bottom sash if it were inside, as fig. 707.

Sometimes the oak sills are double-sunk, as shown in fig. 708, and the

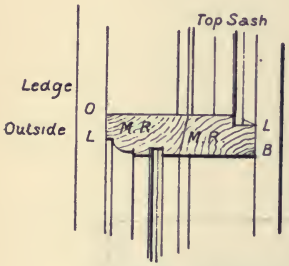

Fig 707 2"Scale.

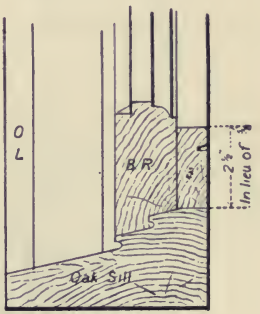

Fig. 708.

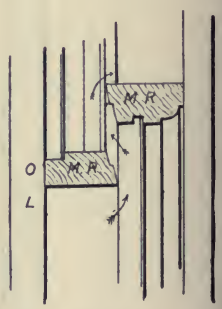

Fig. 709.

top or inside bead, I B, is made deeper, so that ventilation can be let into the room without creating a draught, by raising the bottom sash a little, so that it does not get above the top or inside bead, while the air gets in between the meeting rails of the sashes not properly locked, as fig. 709.

To prevent the wet driving or sucking up the sills they and the top or inside bead, I B, are made to either of the sections on fig. 710.

The cord is connected to the sash style, as fig. 711, which is a view of the side of the sash style running up the pulley style; a space for the cord being made in the thickness of the style, as the plan shows, with an enlarged place for the knot, as on elevation.

The outside linings of the frames are often moulded on the edge in better work, as fig. 712.

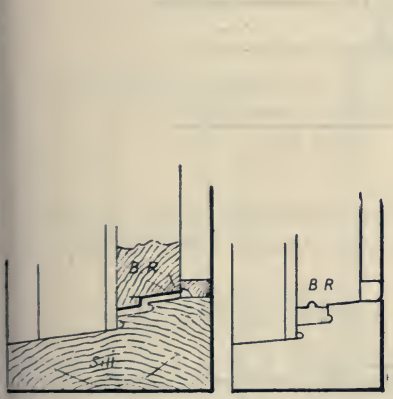

Fig. 710.

Fig. 711.

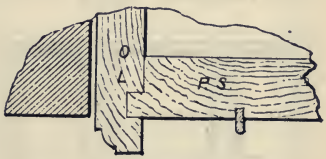

Fig 712

The sashes themselves are moulded to a variety of designs; fig. 713 being chamfered; fig. 714, ovolo-moulded; fig. 715, lamb's-tongue moulded; fig. 716, astragal and hollow-moulded; fig. 717, moulded.

All rebates for the glass in the sashes should be no less than $\frac{3}{8}$ inch deep, and about $\frac{3}{4}$ inch wide.

Fig. 713.

Fig. 714.

Fig. 715.

Fig 716

Fig. 717

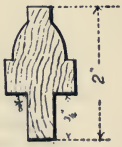

Fig. 718.

Sash bars are of width varying from $\frac{3}{4}$ inch to $1\frac{1}{2}$ inch, by the thickness of the sash; but the thinner they are the better, as they do not block up so much light. They are moulded on each side to the moulding of the sash itself, an ovolo-moulded sash being as fig. 718; and they are connected together, as fig. 719, by a scribing and mortise and tenon; T being the tenon, M the mortise, and Sc the scribing.

Those in the direction of the jars or blows are made the "through" bars, with the mortises. The other joints between styles and rails are scribed, mortised and tenoned together, and wedged up.

When sashes are not hung they are said to be *fixed* sashes.

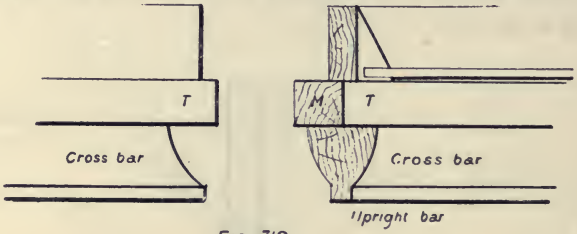

Fig 719

Venetian sashes are 3-light windows, the centre light being larger than the sidelights, as fig. 720; the boxed mullion between being as fig. 721,

Fig. 720.

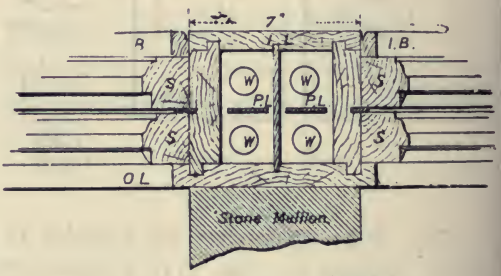

Fig.721. 1½ Scale

when all sashes are hung; and fig. 722 illustrates the treatment when this is not the case; the mullions taking up far less room; and the weights of

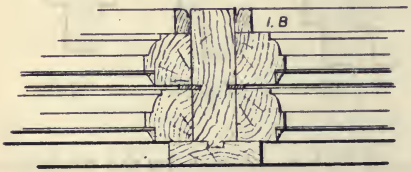

Fig.722.

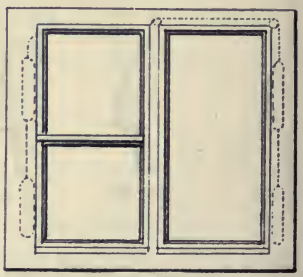

Fig. 723.

the centre sash (the only one hung) are enclosed in the jambs, the cords being worked by pulleys over the sidelights, as fig. 723 will explain, the two lights being shown to illustrate the difference of working as compared with the usual way

Marginal sashes have a narrow margin formed by a sash bar up or around the lights, the space between the bar and the style being the margin, as fig. 724.

Single and *double-hung* sashes have been explained in the general description.

Circular-headed sashes have the underside of their top rails and the

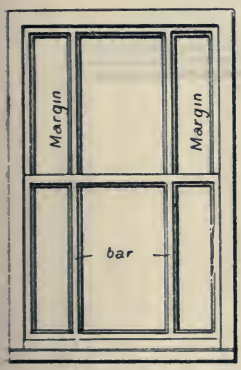

Fig 724

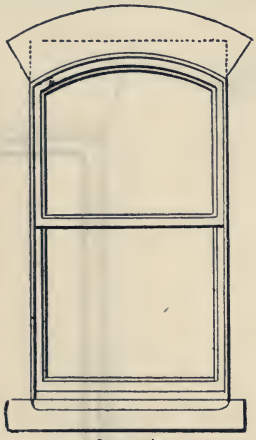
Outside.
Fig. 725.

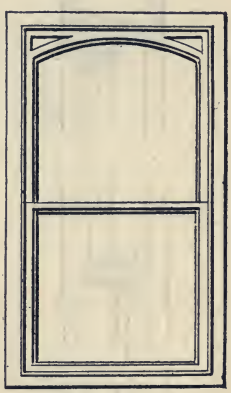
Inside
Fig. 726.

head of the outside linings cut to the outline of the arch, while the inside is kept square and flat (figs. 725 and 726).

Circular-headed sash frames have their boxings, as well as their sashes, ramed circularly inside and outside. But the only difference noticeable in

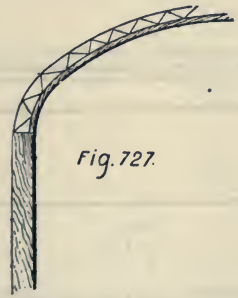
Fig. 727.

a section is, that the pulleys must be placed below the springing line. The plans are the same, and the elevation of course different, showing exactly what the work is. The pulley style is cut to a thin veneer, and blocked out, as fig. 727, the two bending over and meeting at the crown, where they are joined.

Sashes are secured by means of sash fasteners, consisting of a lever on a plate screwed to the upper side of the meeting rail of the top sash,

which turns under a catch, screwed by a plate to the upper side of the meeting rail of the bottom sash, as fig. 728.

When large heavy sashes are used they are lifted up, when to be opened, by projecting or flush lifts fixed to the bottom rail of the bottom sash, and the top sash is pulled down by a ring fastened to its top rail.

Solid Frames are made of solid heads, sills, and jambs, similar to

Fig 728

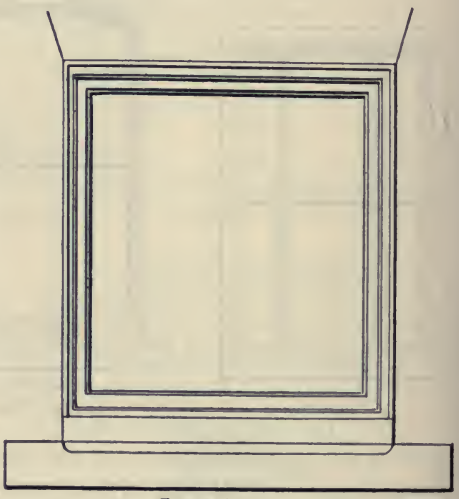

Elevation
Fig 729.

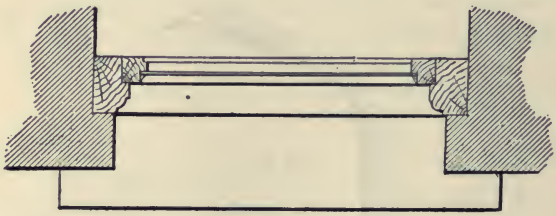

Plan.
Fig. 730.

door-frames, and filled in with casements exactly the same as sashes, but hung by "butts" to the sides of the solid framing.

There is very little difference to be noted on the external elevation as compared with that of a sash or cased frame, except that there are no meeting rails to be seen; the real difference being in the working of them, as shown by plans, sections, and of course the details.

Figs. 729, 730, and 731 represent the elevation, plan, and section of

a solid-framed, single-light window, with a casement hung to a jamb to open inwards. It will be noticed that the brick jambs need not be so wide; 2 inches is quite sufficient as compared with $4\frac{1}{2}$ inches for a cased frame; and, moreover, a solid frame does not require so much depth of jamb for its thickness, $4\frac{1}{2}$ inches again being ample, whereas some sashes or cased frames require as much as $6\frac{1}{2}$ inches; but this varies according to the thickness of the sashes, linings, etc.

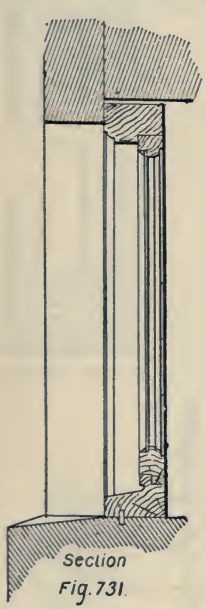

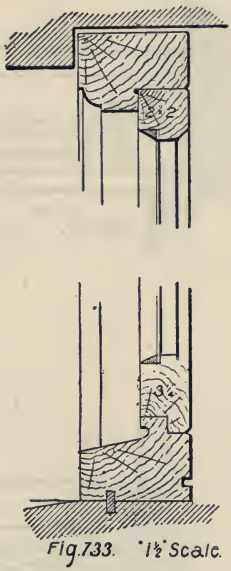

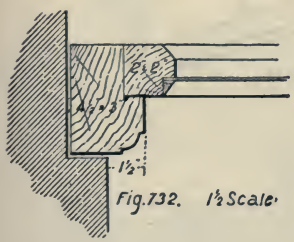

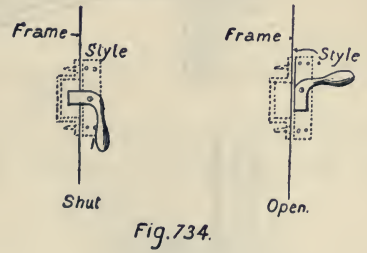

Fig. 732 is an enlargement of the plan of a jamb or section of the head, both being alike; and fig. 733 is a section of the sill of chamfered casements and frames to open inwards.

The casements are hung to the jamb by a pair of $2\frac{1}{2}$ or 3-inch butts, and secured by a *casement fastener*, the principle of all the very numerous different kinds being a handle with a pin, which turns on a brass plate screwed to the casement, and enters into a mortise or staple on a plate screwed to the solid frame (fig. 734).

Fig. 735 represents plan and section of head, and fig. 736 a section of the sill, of a moulded casement to open outwards.

These are hung and fastened in the same manner as the last-named,

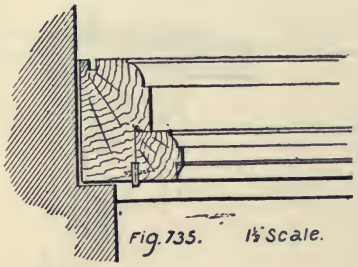

Fig. 735. 1½ Scale.

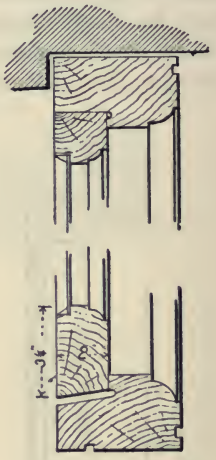

Fig. 736 1½ Scale.

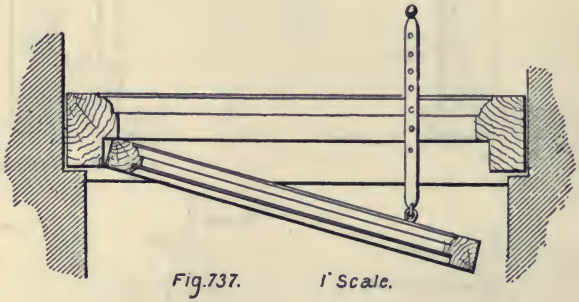

Fig. 737. 1" Scale.

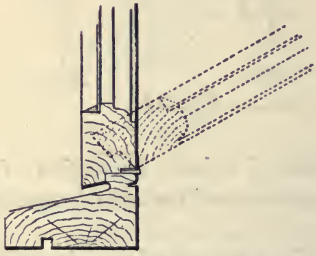

Fig 738 1½ Scale.

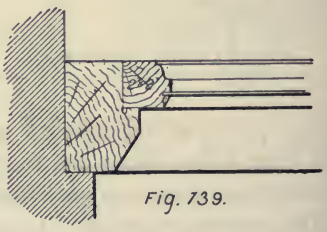

Fig. 739.

and the opening arrangement is regulated by means of a stay with a movable joint fixed to the bottom rail of the casement. The arm is pierced with a suitable number of holes, which fit on to a pin, screwed by a plate

to the sill, whereby the opening may be regulated and the casement fixed in any position required (fig. 737).

Hopper casements are similar to hopper fanlights and fall inwards, being

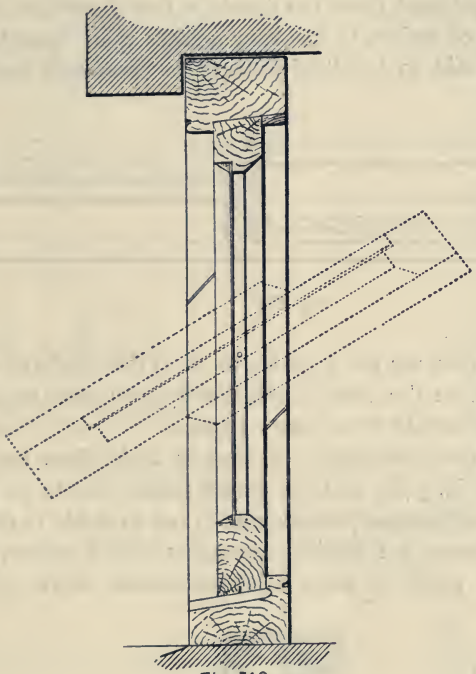

Fig. 740

hung to the sill, as fig. 738, fig. 739 being a section of jamb and head with lamb's-tongue moulded casements.

They are secured by the spring fastenings illustrated in the last chapter.

Pivoted casements, or those hung on centres, are explained by fig. 740,

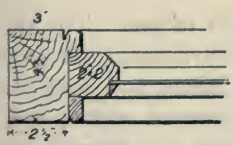

Fig. 741.

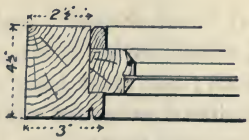

Fig. 742.

figs. 741 and 742 being sections of the jamb above and below the pivots. If any further explanation is required, the student must refer to the same kind of thing in fanlights, where their principle is described in detail.

Sliding casements, as the name implies, are those which are made in two

sections, the one to slide past the other. Fig. 743 is a plan of a frame, filled in with two sliding casements, of which L L are locking styles, each being rebated out to fit the other; and figs. 744 and 745 give sections of the sill and head.

It will be gathered from the drawings that these last casements have the advantages of sashes, in that they neither open inwards nor outwards, which may be said to be disadvantages in casements and solid frames,

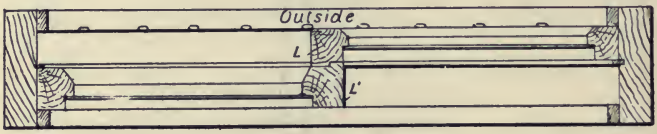

Fig. 743.

and, moreover, they are not so liable to let in the wind and wet as hanging casements; but, on the other hand, they require more space in thickness, and often cause trouble with narrow jambs.

Sometimes the casements are kept in their place by iron studs, let into the sill, as fig. 746; and the writer thinks that to be the better way, as it is not so intricate and, consequently, not so liable to defects.

French casements are folding casements and windows, which answer the purpose of doors as well, being continued down to the floor-line.

Fig. 744.

Fig. 745.

Fig. 746.

Fig. 747 is an elevation, and fig. 748 a section of one. The details of jambs, meeting styles, heads, and sills, are similar to those of ordinary folding casements; but these have to be thicker, $2\frac{1}{4}$ inches, and each casement is more like a sash-door with diminished or gunstock styles; and where the glass panel is very long, a low panel, like that of a door, is framed at the bottom, to lessen it, as fig. 747.

Hit and miss casements are those used for farm buildings, etc., as figs. 749 to 752, the top part being glazed between moulded bars, stumped into head and transom; and the lower part consisting of upright slats, with alternate spaces framed into transom and sill outside, with slatted

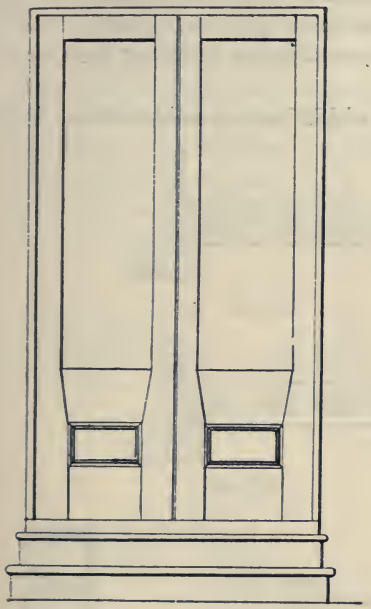

Fig 747 ⅜ Scale

Fig 748 ⅜ Scale

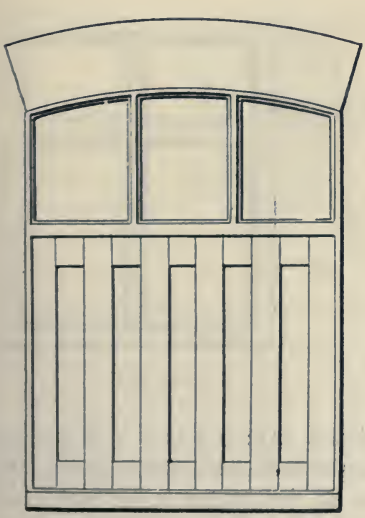

Fig. 749.

Fig 750

framing within, which, being moved aside two or three inches, either opens or closes the alternate spaces between the single slats outside. One plan shows the slatted frame moved aside, so that the holes are open, and the other plan shows them shut.

Two-light solid frames are those which have a solid mullion, which is

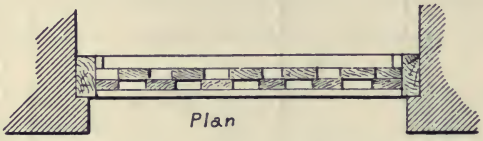

Fig 751. ½ Scale.

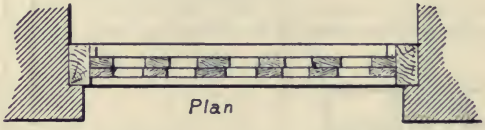

Fig 752 ½ Scale

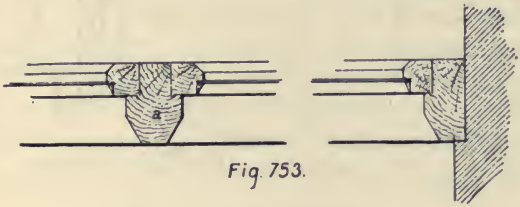

Fig. 753.

Fig. 754.

Fig 755

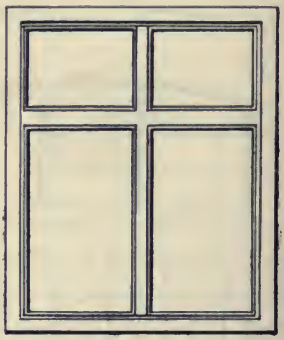

Fig. 756.

treated like a double jamb, as at A, fig. 753; but they may also be made two-light by a transom, one light above and one below it, as fig. 754; the transom being in section similar to fig. 755, which is for both casements made to open outwards.

It will be understood that the section of the transom varies in every

case, where the top and bottom lights differ with regard to their opening and shutting. From the various illustrations given in these notes the student ought to be able to draw them to suit any requirements.

Four-light casements and frames are generally made by a mullion and transom, which divide the opening into four spaces, as fig. 756.

Sometimes the casements are *hung folding* in solid frame, in which cases the section of the meeting or locking styles is made as fig. 757; or it is occasionally treated as fig. 758.

It has been proved that it is a great advantage to make the rebates on

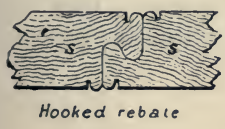

Fig 757

Fig 758.

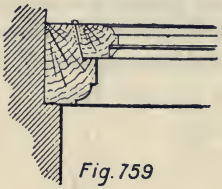

Fig. 759

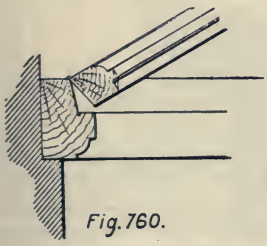

Fig. 760.

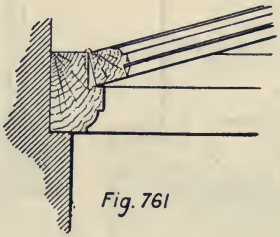

Fig. 761

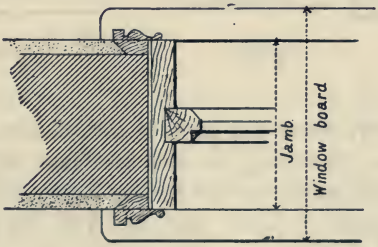

Fig. 762

the solid frames and the side of the hanging style of the casements, as fig. 759—*i.e.*, on the splay; the contention being that the joint fits better and tighter, without any liability to knock the edges off the styles when the casement opens, as shown by the comparison of figs. 760 and 761. The outer edge of the style gets away quicker in the one case than in the other.

Borrowed Lights, of which the object is to give light from one room to another which has no external walls, consist of a plain sash, rebated and fixed into a plain lining, of the thickness required by the walls. The lining goes all round the opening, as fig. 762, but a little wider at

the bottom, to form a window-board, which takes the place of the architrave on the jambs and head.

Water bars, of iron or brass, of different sections, are often fixed to the bottom or end of casements, as fig. 763, which is only one of the many equally efficacious patented methods for keeping out driving rain.

Weather boards are another means of throwing the water off the bottom of casements. They are of wood, and similar in section to fig. 764, being tongued into the bottom rail, or housed.

Window Finishings.—The finishings to cased and solid frames being alike, the student must understand that the various framings, mouldings, etc., explained in this chapter equally apply to both kinds of windows, although each kind of work will be shown in connection with a cased frame.

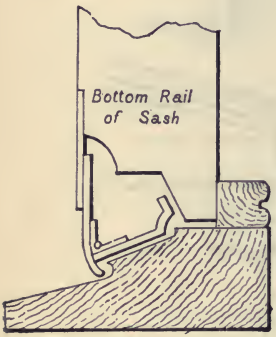

Fig. 763

Fig. 764.

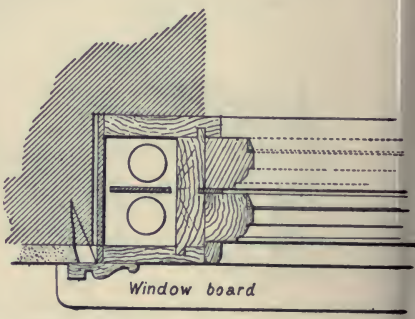

Fig. 765.

In common work, where the back of the window frame finishes flush with the face of the plastering, the only finishings required are a window-board at sill line and an architrave up the jambs and across the head.

Fig. 765 represents a jamb, and fig. 766 the head and sill of a window, treated as above.

It will be noticed that the architrave is fixed to "plugs," grounds being seldom used to ordinary windows; and the window-board is grooved into the oak sill.

Window-boards have rounded nosings, as fig. 766; or they are moulded with a bed-mould underneath them, as fig. 767, in better work.

Architraves may be single or double, the single being as shown on figs. 765 and 766; and the *double-faced* (the proper term) are as fig. 768, consisting of two separate moulded members.

When the sash frame does not take up the whole depth of the jamb

linings have to be employed to make a finish up to the face of the plastered wall, and the window-boards have to be widened, as figs. 769 and 770.

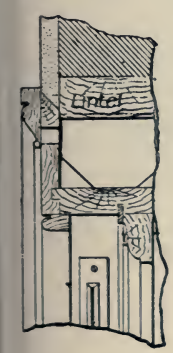

Fig. 766.

Fig. 767.

Fig. 768.

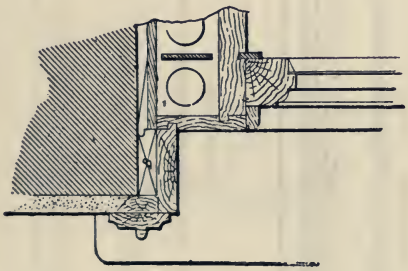

Fig. 769.

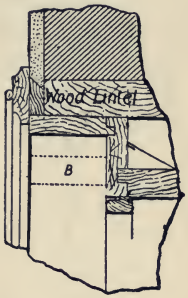

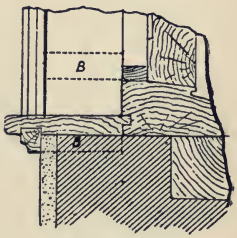

Fig. 770.

The window jamb linings are grooved into the inside linings of the frames, and fixed to backings, B, which are secured to plugs in the wall.

The window-board, being of increased width, also requires backing underneath, as shown.

Fig. 771.

All backings should be no more than 3 feet apart.

Sometimes, in these wider walls, the brick or stonework is left out between the jambs, beyond the back of the frame, from the window sill to the floor line, as fig. 771, in which case the jamb linings of the windows last described are continued down to the floor, and called

elbow linings below sill level; and this finishing of course dispenses with the wide window-board, the narrow nosing (figs. 765 and 766) being again brought into requisition; and beneath it, instead of plaster,

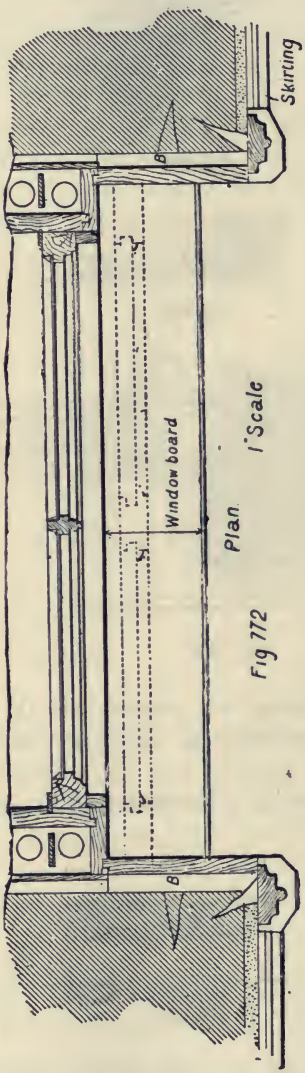

we have wood panelling, called *window backs*, from beneath the window-board to the floor-line; the skirting, as around the room, covering the legs or styles, which run down as explained in fig. 774 (for dadoes).

Fig. 772 represents a plan, and fig. 774 a section of a window treated and finished off in this way.

From the front elevation, fig. 773, the window back will be seen

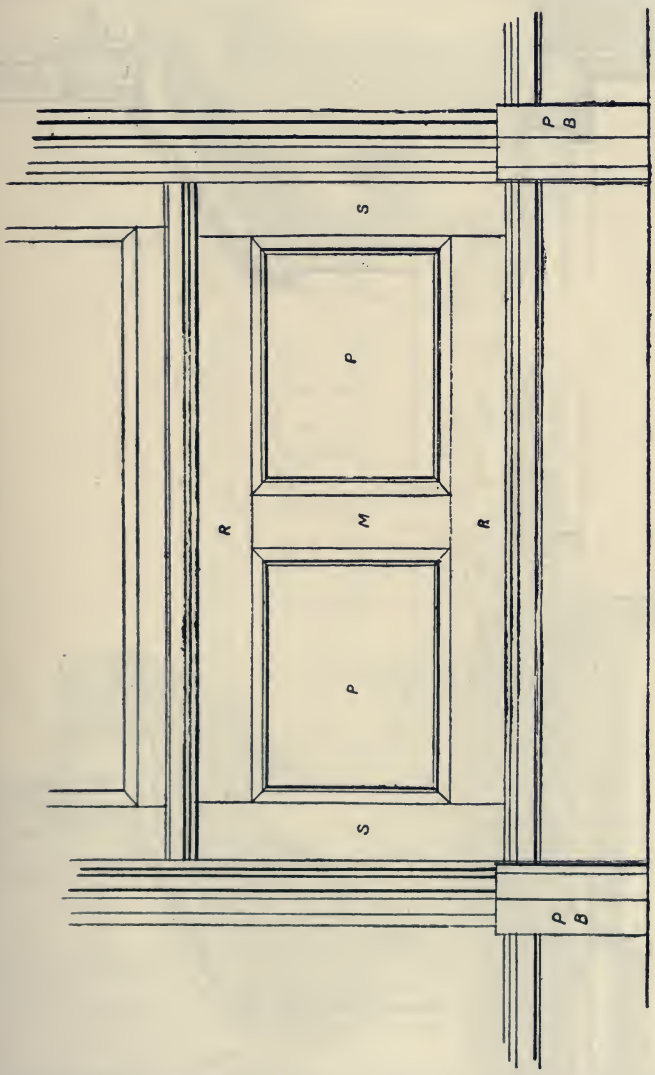

Fig. 773. Elevation 1" Scale.

to consist of a panelled framing about 1½ inch thick, flush at the back and fixed to grounds, as G on section, fig. 774. The front of the panelled framing may be plain, chamfered, or moulded to any design, and the usual method is to show the window backs by dotted lines on

the plans, as fig. 772. The jamb and elbow linings combined are fixed

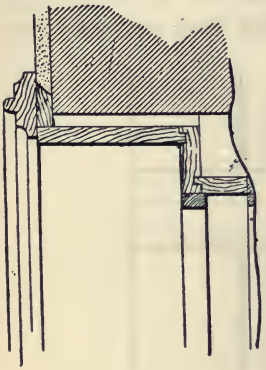

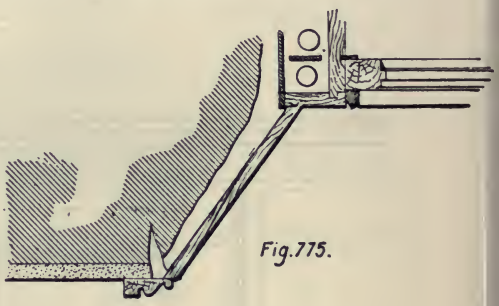

Fig. 775.

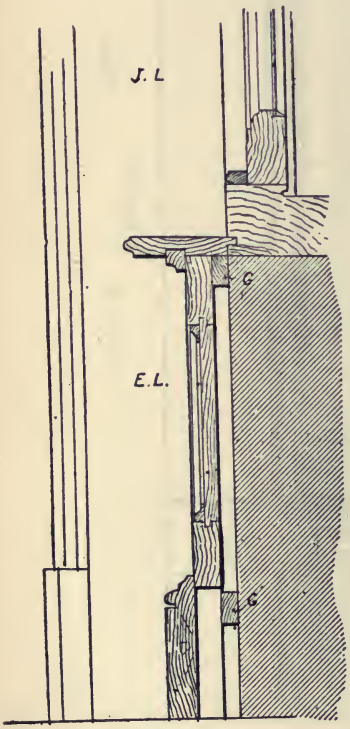

Section.

Fig. 774. 1" Scale.

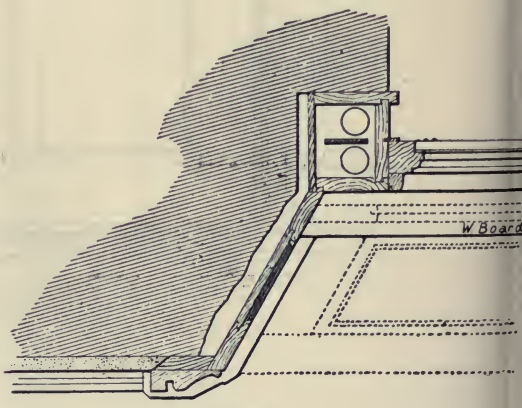

Plan.

Fig. 776. 1" Scale.

on the splay, as fig. 775, when they are called *splayed lining*, the head of course remaining *flat*.

Linings are tongued at their top angles, just as door linings or casings, to join the horizontal to the vertical portions.

Plinth blocks or bases, P B (fig. 773), are often put at the bottom

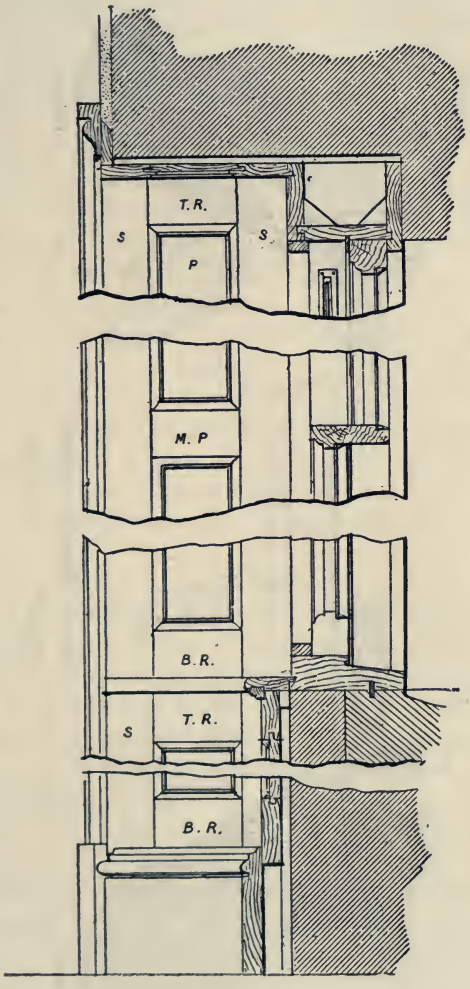

Section.

Fig 777.

of architraves, as shown, for the skirting to run up against, as well as for appearance.

Linings, in the best work, are often panelled, whether square or on splay, the soffits also being treated in the same manner. Figs. 776 and 777 will fully explain all matters in connection therewith; though

it may be well to remark that that part of the lining called the *elbow* should be made to range with the panels of the window backs, with the window nosing returned round it in the shape of a flush-bead

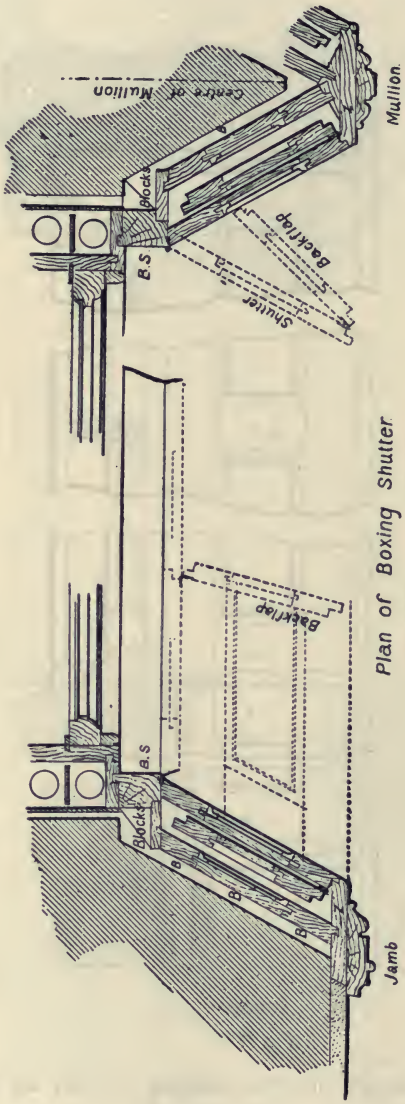

Plan of Boxing Shutter 1" Scale
Fig. 778

(fig. 777), because the architrave would not allow of the board itself being returned.

In designing window finishings the blinds should always be borne

in mind, and spaces left on each side the window and above the head for them; and it will be noticed that provision has been made for them in every case hereinafter illustrated and explained.

Shutters, as applied to the internal finishings of a house, are of two kinds—boxing shutters, and lifting or sliding shutters, their object being to give greater security and warmth at night.

Boxing shutters are also called *folding* shutters, because they fold back, into one or two leaves, into the "boxings" which are made for them where the jamb linings are usually fixed.

The first thing to be done, according to fig. 778, is to leave a space for the "blinds" all the way round the window by "blocking-out" (as shown by B S on all the drawings), and to this member the shutters are hung. To the left of the blind fillet we get a plain side of the boxing, blocked out from the wall to the face of the blind space or fillet; and into this is tongued the back lining of the boxing, which is generally panelled, moulded, and fixed to backings like a jamb lining, because it is visible when the shutters are unfolded to cover the windows. The other end of this back lining is tongued into a wide moulded ground, which is securely plugged to the brickwork, and in addition to its own work forms a rebate for the front shutter and part of the double-faced architrave (as Z), on which the other member of the architrave is fixed.

Having completed the boxing according to plan, the shutters (which are usually $1\frac{1}{4}$ or $1\frac{1}{8}$ of an inch thick) only have to be put in, and the front shutter is panelled, moulded on the face exposed in the daytime, to the same design as the window backs, soffits, elbow linings, and other work in connection, and the hinder side of it is generally made "bead butt," as is also the same part of the back flap or other shutters, which are exposed by night when the shutters are unfolded. The other part of the back flap is left square-framed.

The edges of the styles of all shutters and back flaps are rebated out alternately, so that when they are unfolded they fit together and form one surface, with no spaces at the joints, as they would if they were square-jointed.

The elevation of the shutters is exactly the same as the jamb linings of a window, and the soffits, window backs, and elbow linings are made and used in the ordinary way; in fact, a window with shutters is not complete without them.

It is unnecessary to explain and illustrate these matters again. The student must look back to the part of this chapter concerning them if he still requires any information.

It may be as well, however, to give a section through the head, top, and bottom of the boxing, and also to show the sill and the mode

of dealing with the bottom of the shutters at window-board level, to allow of the space for blinds when the shutters are in use (*vide* figs. 779, 780, and 781).

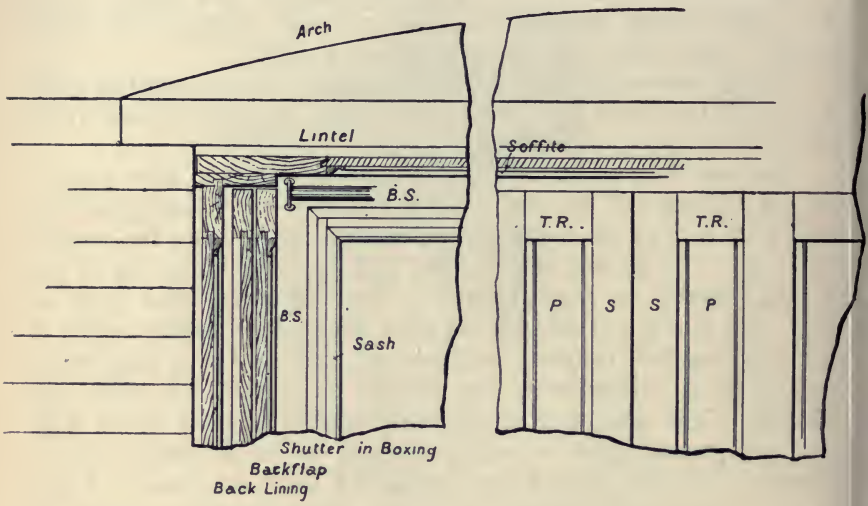

Part Sectional Elevation

Fig. 779 1" Scale

Part Elevation Showing Shutters Closed.

Fig. 780 1" Scale.

At the top, as fig. 779, the styles of the soffit run through, and an irregular piece of wood about ½ an inch thick, beaded on the front edges, is nailed underneath them to lower the top of the shutters, so

that when they are unfolded their tops do not touch the underside of the soffit. The bottom is treated in a similar way, to prevent the shutters from scratching the window-board.

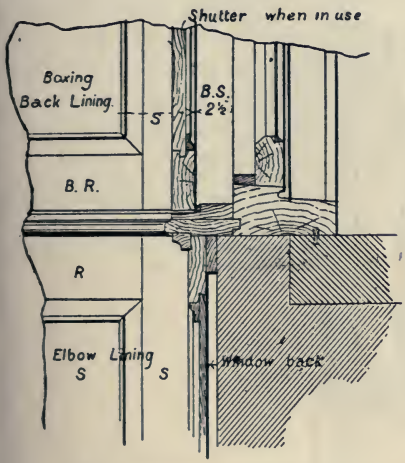

Part Sectional Elevation Showing Elbow Lining etc
Fig. 781. 1" Scale

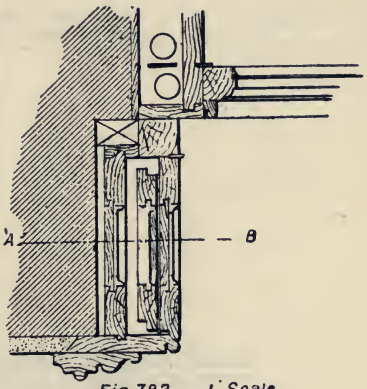

Fig. 782. 1" Scale.

The section of the sill (fig. 781) will explain how the shutter bottoms are treated there, to allow of stopping in front for blind space. In very thick walls the shutters are often made square—*i.e.*, at right angles to the windows in lieu of *on the splay*, as fig. 778, which

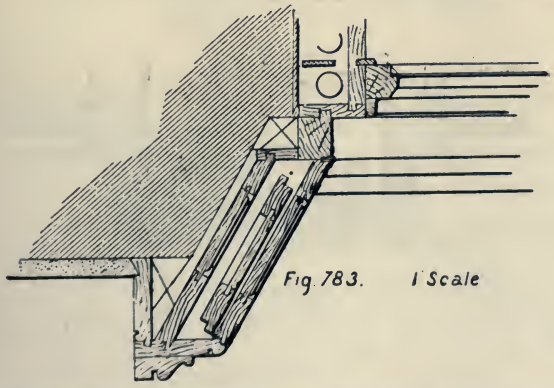

Fig. 783. 1" Scale

is the common way in ordinary walls. Fig. 782 gives a plan of such method, and it is needless to give any other details, as they are similar to those already given.

In thinner walls, where there is no room for shutters of ordinary and

reasonable widths, the boxings have to be blocked out beyond the face of the plastered walls, as fig. 783 for splayed shutters, and fig. 784 for square shutters.

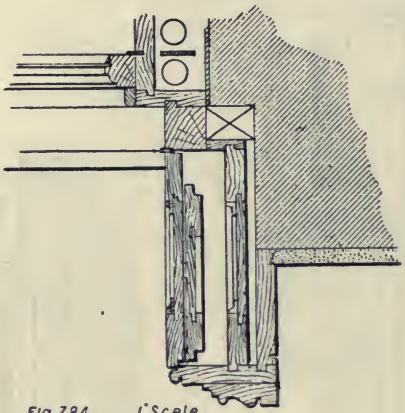

Fig 784 1"Scale.

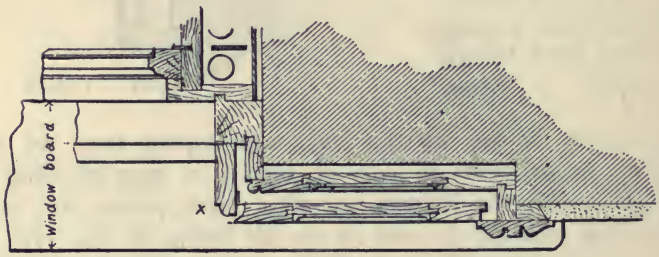

Fig 785. 1"Scale

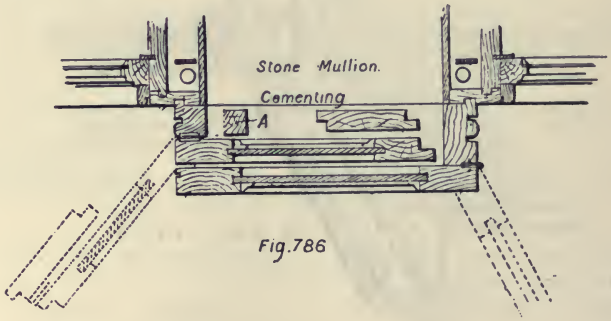

Fig.786

Another method, as fig. 785, is to throw a wide flap back on the face of the wall, the joint between the small and large parts, at X, being called a *rule* joint, on account of its similarity to the joint of a 2-foot rule; and they are treated as mullions, as fig. 786, where they do not want projecting

boxings (as in figs. 778, 783, and 784). It will be seen on fig. 786 that the mullion must be wide, so that the shutter and back flap, which are hung to the blind space, can be got into a small boxing blocked out on the right-hand side by a moulded upright to which the front boxing flap is hung; and when the shutters are out and in use a small blocking, A, hinged to the left blind space (smaller than the right), is brought out to receive the back of the boxing flap, and make a complete ornamental boxed mullion, as if the shutters were not in use and formed it.

Folding or *boxing* shutters are sometimes made in two heights, the joint being at the meeting rail level of the sashes; and where they are in

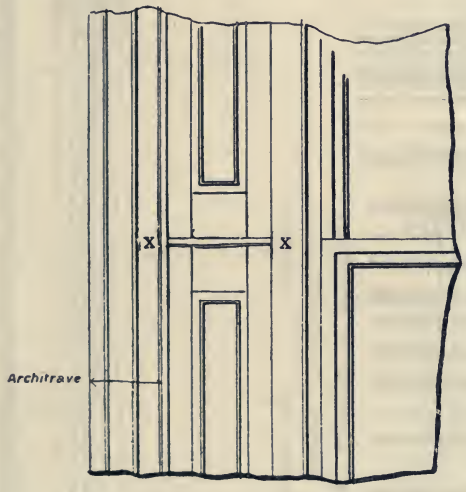

Fig. 787 1" Scale

one height a flush bead is often worked on them at that level, as X, on fig. 787, which may either represent a flush bead or a beaded joint.

From the preceding illustrations and explanation the student will have noticed that the back flap is narrower than the shutter, and only one back flap has been shown on this illustration; but more may be added, according to the size of the window, to be covered by shutters from two boxings, one set on each jamb. Still, it is always better, where possible, to have wider shutters and back flaps, and less of them in number, as the more there are the more likely they are to get out of order. At best they are often very awkward and troublesome.

In setting out this kind of shutter great care must be taken that the rebates are in pairs, one to fit the other—not forgetting the meeting styles of the sets from each jamb. It is always of advantage to leave as much space as possible between the shutter and back flaps, when in the boxing,

to make room for the shutter bar, etc., which is secured to the back of the shutter.

Shutters are hung by small special butts, called *back flaps*, fixed about 3 feet apart up the styles, the complete set of shutters (when unfolded)

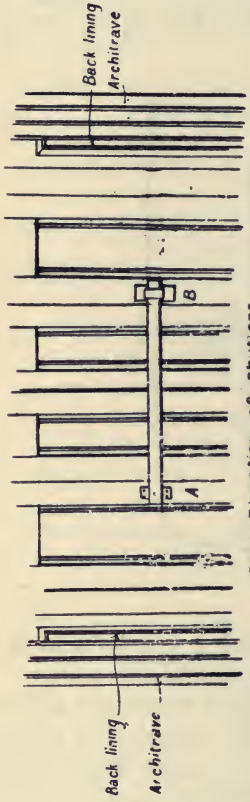

Part Elevation of Shutters
Showing Shutter Bar
Fig 788. Fig. ½ Scale

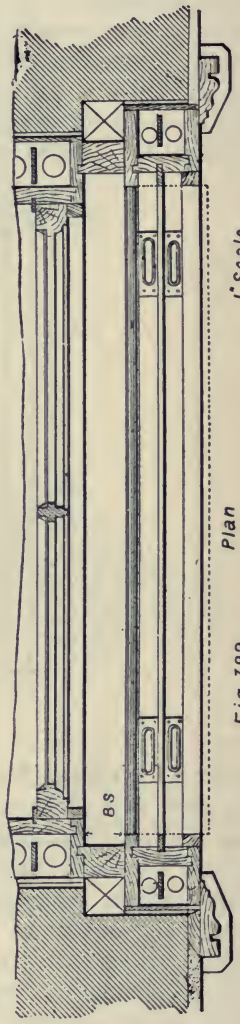

Fig. 789. Plan 1" Scale.

being held together in position by the shutter bar, which stretches from behind the back of the back flap of each jamb, as fig. 788, and is secured to one shutter by a loose joint, to fall down, when not required, at A; and let into the other, at B, when in use.

The other kind of shutters, for internal windows, though not so

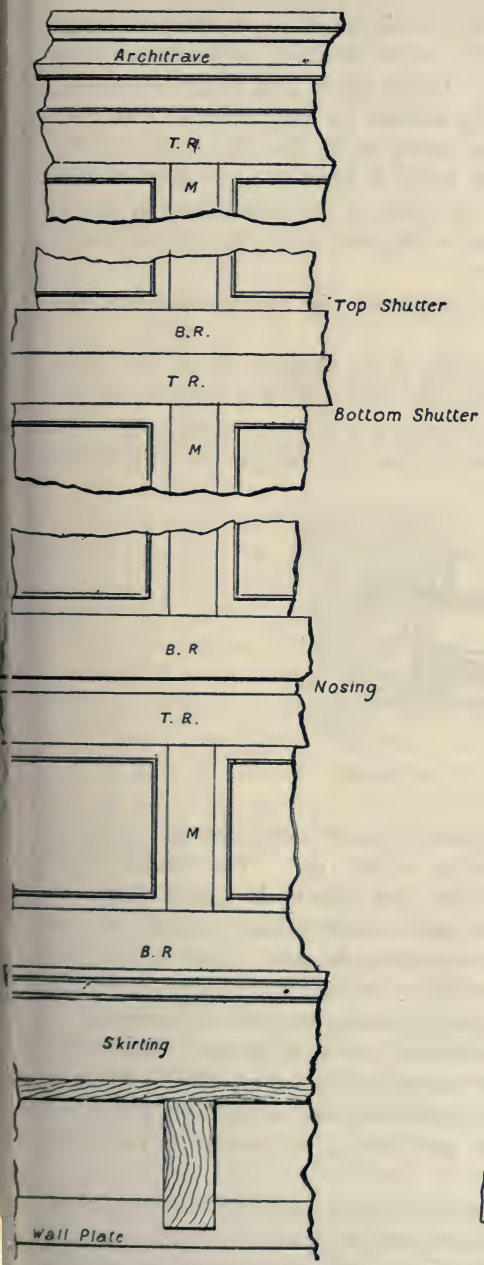

Part Elevation.

Fig. 790. 1" Scale

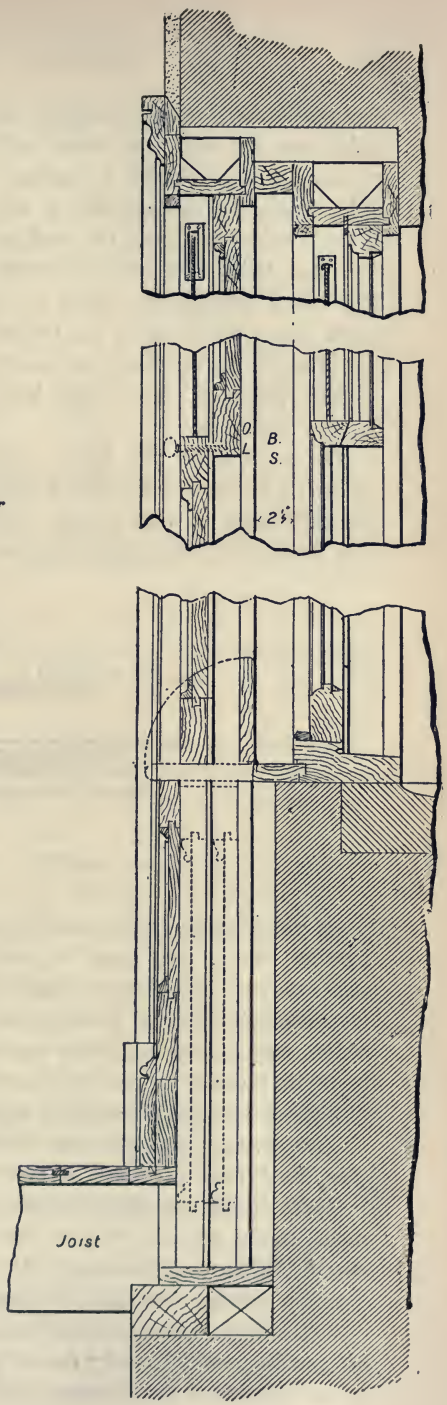

Section.

Fig. 791. 1" Scale.

commonly used as the "boxing" shutters, is the *lifting* or *sliding* shutters, which are framings the whole width of the window, enclosed and hung in cased frames similar to sashes. When not in use, they are made to slide down the casings into a well, formed for them between the back of the window back and the wall, as shown on fig. 791, the toprails being then just below the window-board, which is fitted so as to act as a flap. The cased boxings are made up the jambs of the windows from underneath the soffit-lining to the bottom of the well below the window-board, and often below the floor, as shown.

Fig. 789 is a plan of this kind of shutter, fig. 790 an elevation, and fig. 791 a section.

On account of the heavy weights of the shutters (which are about $1\frac{1}{8}$ or $1\frac{1}{4}$ inches thick), lead weights are used instead of the iron weights generally used in sash frames, and cords are fixed to work them. The only fittings and fastenings required for these shutters are the rings in the

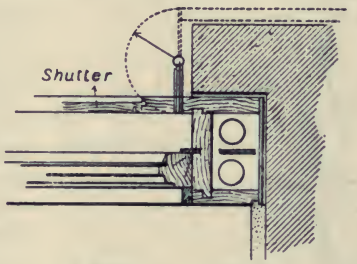

Fig. 792 1" Scale.

top of the toprails, to lift them up, and a screw to connect the two leaves together, where they meet in position, as fig. 791. The window-board, used as a flap, is hung with small butts, and lifted up by a flush ring.

Sometimes internal shutters are made to slide laterally, though they are seldom met with now. They are worked on the same principle as sliding doors and casements, to which the student must refer, the only difference being the lightness of the framing for shutters as compared with that for doors.

External shutters, whether for houses or shops, are now almost obsolete; but it may be as well to say that house shutters are folding framings, the same height as the windows, each fold being secured by *parliament* hinges to the outside lining of the sash frames, and thrown by them outside the brick reveal, as fig. 792.

Shop shutters consist of numerous narrow panelled framings, about 15 inches wide, the same height as the window; and they can be removed and put in position one by one at pleasure. They are secured by mortises in the bottom of the shutters, which go on to small dowels fixed on the window sill.

CHAPTER XIX.

WOODEN STAIRS.

Stairs and Staircases—Definition of Terms and Rules—Kinds of Stairs—Construction of Stairs and Details—Handrails.

Stairs and Staircases.—Stairs are the means by which ascent or descent is made from one level (or floor) to another. They can be made of stone, iron, concrete, or wood; but it is only intended to deal with wooden stairs in this chapter.

The stairs themselves are built up of a continuous range of light boards, grooved and tongued together, and arranged in horizontal steps rising one above the other in a raking line drawn from the bottom, or starting-point, to the top or place where it is required to land.

The ends of these boards or steps are connected to stouter boards, pitching from the bottom to the top to the raking line just alluded to; and they are often supported in the middle, as will be explained more fully hereinafter.

This structure of boards, etc., called stairs, connecting the different floors together, is enclosed in a *staircase*, which is either a specially built chamber, or a space or part of a larger apartment set aside for the purpose.

When the latter is the only provision made for containing the stairs, the floors and ceilings have to be trimmed, as fig. 793, in order to provide headway, and allow of communication between the stairs and the higher floor levels, with which the stairs themselves are the means of communication.

It is needless to say that there are numerous kinds of wooden stairs, differing from each other in principle and in form, but alike in general detail, although the mouldings and mode of treatment may differ a little However, before entering into these details, or going into an explanation of the different kinds, it will be as well to acquaint the student with the meaning of the different terms and rules applied to stairs in general.

Definition of Terms with Rules.—The *tread* is the flat horizontal surface of the step on which the foot is placed (distinguished by T on the illustration, fig. 794).

The *riser* is the vertical face of the step, or the upright, R, which connects the back of the lower tread with the front of the upper one.

The *nosing* is the edge of the tread, which projects beyond the face of

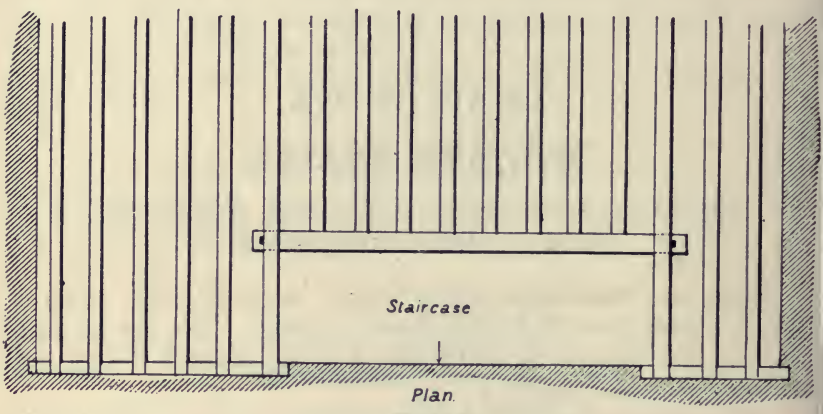

Fig 793

the riser; it is usually rounded, and sometimes, by means of a small hollow fillet planted underneath, it is made moulded (as shown in fig. 794).

Newels (N) are the vertical posts, either square, moulded, or turned, which connect the handrails and strings of different flights together. The riser of the top or bottom steps is always housed into the centre of the newel at their various heights.

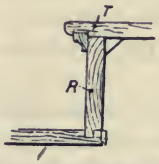

Fig 794

A stair generally starts with a newel where there is no wall to receive the ends of strings, handrails, etc., whether it be at the top or bottom, in each of which cases the newels are a convenience and an ornament.

The *strings* (S T) are the "walls" of the treads and risers of the stairs. Each step is housed into the strings at both its ends, the string running from newel to newel, or from floor to floor at the inclination of the stairs, and parallel to the line of nosings and the handrail.

The *handrail* (H) is a rounded or moulded rail, fixed above and parallel to the string along the walls, or from newel to newel, for the convenience and aid of persons using the stairs. It should be of such a section that it can be easily and comfortably grasped by the person ascending or descending the stairs.

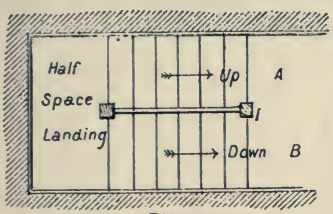

Plan.
Fig 795.

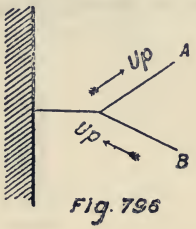

Fig. 796

Balusters (B) are the light upright posts or bars supporting the handrails between the newels, from the treads of the steps or string, and they can be square, moulded, or turned.

A *flight* is the series of continuous treads or risers, or steps, inclining from one landing to another, or connecting the different floors, if there are no landings.

A *landing* is the flat space or floor at the top of the stairs.

A *half-space landing* is a similar flat resting space between two flights,

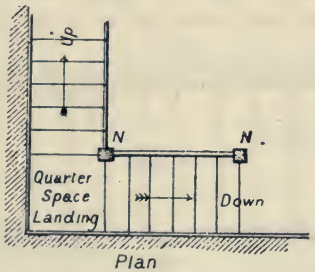

Plan
Fig 797

one of which returns upwards in a direction opposite to the other, which goes down, as figs. 795, 796. It is generally the width of the two flights.

A *quarter-space* is a landing half the size of the last-named, and extending across one flight only, the riser of the upward flight being at right angles to that of the downward one (fig. 797).

The *go* or *going* of a stair is the distance from riser to riser, and the "rise" is that from tread to tread.

The *going* of a "flight" is the distance from first to last riser, between landings, or between the bottom and top of the stair.

Fliers are the ordinary steps, rectangular in tread or plane; while *winders* are those of triangular form, which are employed in turning corners or curves.

Curtail steps are those generally at the bottom of a flight or stair, which have one circular end to tread and riser; and in the centre of the tread the newel is placed, as fig. 797A, the other end of the step being housed to the wall string in the ordinary way.

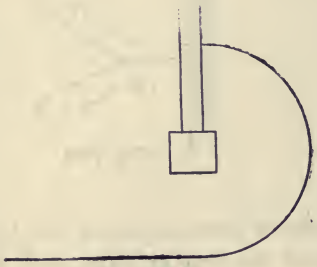

Fig. 797A.

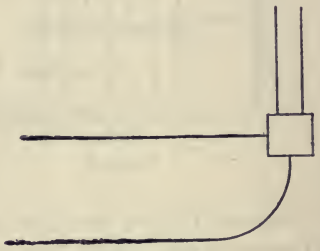

Fig. 797B

Bull-nosed steps are similar to the latter in form and use, but the end is only about a quarter of a circle in contrast to a "curtail" (*vide* fig. 797B).

It will be readily understood that the success of a stair depends on the convenience and ease with which it can be ascended or descended—*i.e.*, the *go* and *rise* of the step must be of suitable dimensions, and the

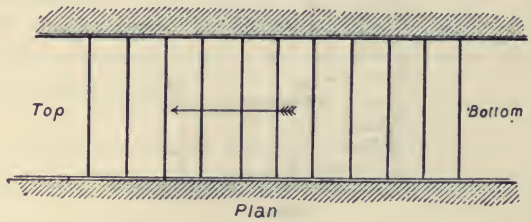

Fig 798

flights short (*i.e.*, of no more than a dozen steps) between a landing, half or quarter space, on which to rest if necessary.

Various rules have been drawn up to regulate the width of the tread or "go," in proportion to the rise of the risers; but the writer considers that the following scale of proportion gives the most comfort and ease to the user of the ordinary stair, while it is also a simple one for the student to remember.

Take 9 inches wide for the tread, and 7 inches high for the rise of the riser, as the standard or basis; and accordingly as the tread increases or

decreases in *width* per *inch*, deduct or add ½ inch in rise respectively, therefore :—

A	5-inch	tread	should	have	a	9-inch	riser.	
,,	6	,,	,,	,,	,,	8½	,,	,,
,,	7	,,	,,	,,	,,	8	,,	,,
,,	8	,,	,,	,,	,,	7½	,,	,,
,,	9	,,	,,	,,	,,	7	,,	,, (standard).
,,	10	,,	,,	,,	,,	6½	,,	,,
,,	11	,,	,,	,,	,,	6	,,	,,
,,	12	,,	,,	,,	,,	5½	,,	,,
,,	13	,,	,,	,,	,,	5	,,	,,
,,	14	,,	,,	,,	,,	4½	,,	,,
,,	15	,,	,,	,,	,,	4	,,	,,

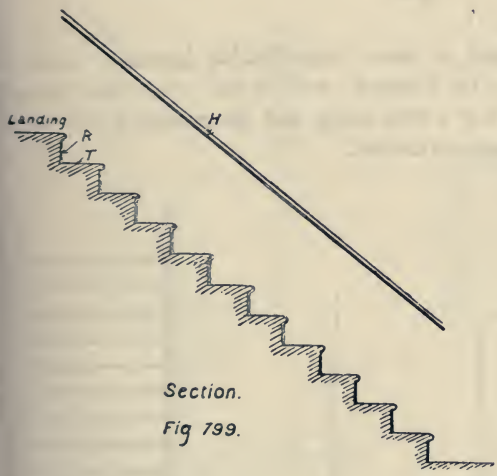

Section.
Fig 799.

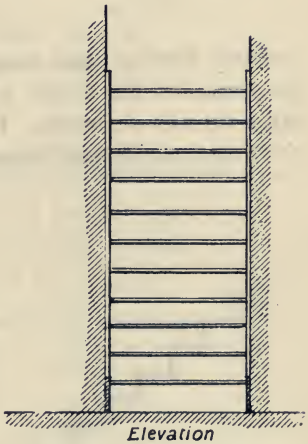

Elevation
Fig. 800.

Another rule is that the "product" of width of the tread, multiplied by the height of the riser, should equal 66 inches, which will be found to agree nearly enough with the above table, which I have given.

Of course it will be understood that these dimensions cannot always be carried out to the letter, on account of the varying circumstances, lengths, and heights met with in practice; but the principle can be always borne in mind, and regulated to the individual requirements.

The width of the stair or length of the step is also subject to variation, with the different positions and circumstances, but they should never be less than 2 feet 9 inches or 3 feet for ordinary use; and it is better that they should be of such a width that two persons can pass each other on the flight with ease.

In winding stairs, or places where there are winders, the full width of

the tread in proportion to the rise should be placed where a person would put his feet when he is grasping the handrail in ascending or descending the stair; that is, about 18 inches from the centre of the handrail, or string.

Kinds of Stairs.—A *straight* stair is that on which the person ascending moves up in the same forward direction from bottom to top, as figs. 798, 799, and 800, in plan, section, and elevation. This is a very

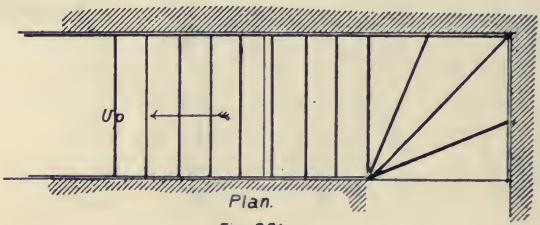

Plan.
Fig. 801

common form of stair, though it takes a considerable length of space in proportion to the height to be attained; and on the other hand, it only takes up half the width. It is a very tiring and inconvenient stair when there is a considerable distance to ascend.

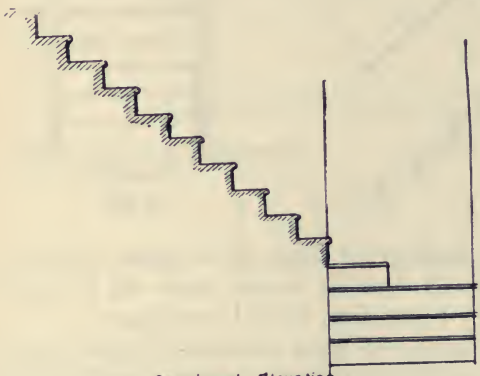

Sectional Elevation
Fig 802.

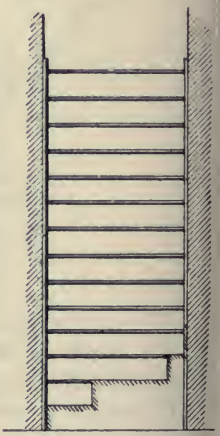

Front Elevation
Fig 803

Figs. 801, 802, and 803 represent the same class of stair with winders at the bottom, which create a saving in the length of the staircase, and, when at either bottom or top, necessitate the starting place or landing being almost at right angles to the stair itself.

Winders, though of common occurrence, are an inconvenient defect in a stair, and should always be avoided as much as possible. Straight stairs

may have a landing in their length, to break the flight, and as a resting place ; but it seriously increases the length of the staircase.

Dog-legged stairs are the first improvement on the latter, inasmuch as

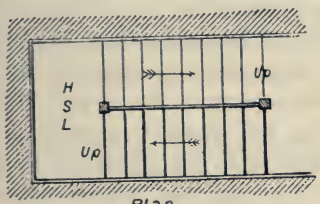

Plan
Fig 804

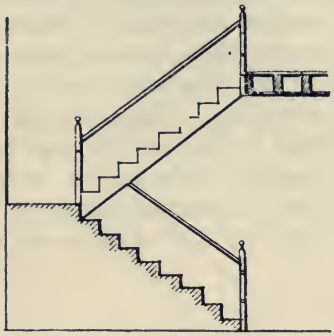

Sectional Elevation
Fig 805.

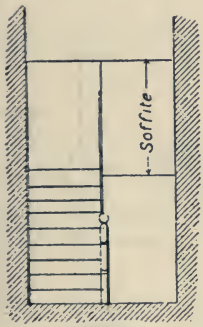

Front Elevation
Fig 806

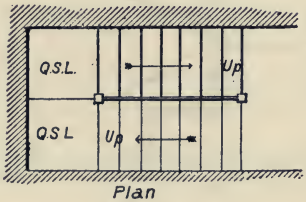

Plan
Fig. 807

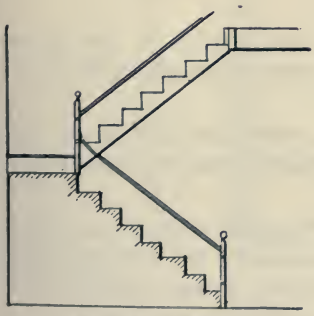

Sectional Elevation.
Fig 808.

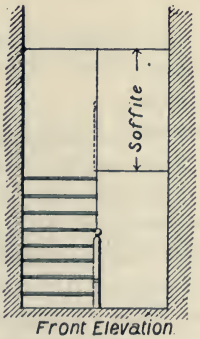

Front Elevation
Fig. 809.

by them the distance to be ascended is divided into two flights with a half-space, or two quarters connected by one riser, between each flight, as figs. 804, 805, 806, 807, 808, and 809. It will be seen that the length

of the staircase is considerably reduced, while its width is increased; also that the outer string, carrying the outer ends of the steps of one flight, is exactly above that of the other flight, leaving no opening or well hole, as it is called, between them. It is in this kind of stair that the newel is first used, its object here being to receive the top end of the string and handrail of the one flight, and the bottom ends of the other, or top flight. The newels are generally square pieces of wood, but sometimes turned or otherwise ornamented. Figs. 810 and 811 represent the common square newel (used in figs. 807, 808, and 809), which receives the strings of both flights, one over the other, on the first side, the risers of the bottom and top step of the alternate flights on the second and fourth sides, and the riser (X, fig. 811) on the third side, when there are two quarter-spaces in

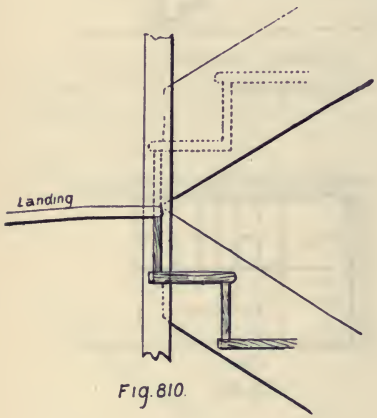

Fig. 810.

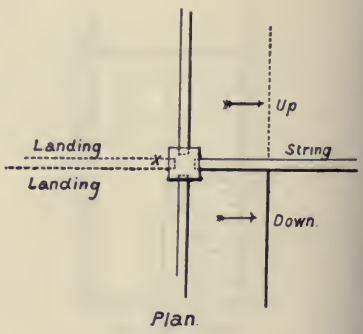

Plan.
Fig. 811.

lieu of the half-space landing. The newel reaches in length from the floor below to a little above, where it receives and supports the handrail of the top flight.

Sometimes, in dog-legged stairs, the quarter and half-spaces are completely taken up by winders; but this should always be shunned as a most serious defect and danger.

The open newel stair differs from the foregoing, in that it has a well hole between the strings of the two flights, necessitating the use of two newels in lieu of the one at the junction; while it allows of one tread and two risers between the two quarter-spaces, as in figs. 812, 813, and 814.

This is a convenient form of stair, though it takes a wider staircase than the last; but this is more than counterbalanced by its utility, for which reason it is most generally used in decent work. Still, its principles can be misused by the addition of winders in the quarter-spaces, as in the last.

A *geometrical* or *wreathed* stair is one which has no newels. It requires

about the same length of staircase as a "dog-legged" or "open newel" stair, but is perhaps a little wider than the latter. The principle of the stair is the continuous string, stretching, or inclining, as it does, from bottom to top, around a well hole, with a half-round corner (still on the

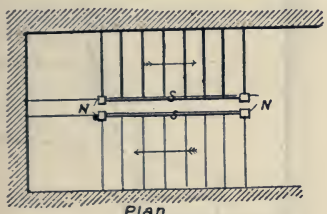

Plan
Fig 812

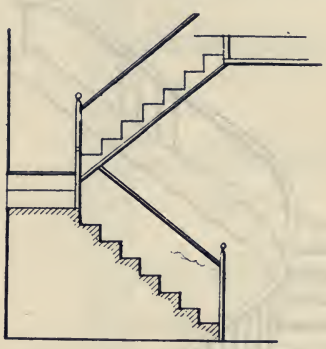

Sectional Elevation
Fig 813.

incline), where the newels of the open newel stair have been dispensed with.

It has no landings or quarter-spaces, but is one continuous, convenient, and comfortable ascent, the winders converging to points inside the well

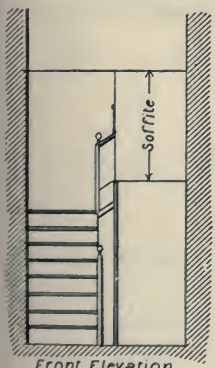

Front Elevation.
Fig. 814.

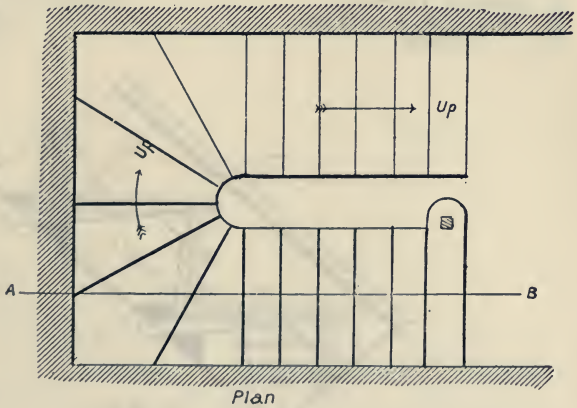

Plan
Fig 815.

hole, and thus giving a wide tread, at a very short distance from the wreathed string and handrail. Figs. 815, 816, and 817 give plan, section, and elevation of such a stair.

Having explained the different kinds of stairs, it now only remains to explain the details which may be said to be applicable to all the foregoing

kinds, although there are extra members, and different forms and details of them, peculiar to the more elaborate kind of stair.

Construction of Stairs.—Fig. 818 is a section of the treads and risers of a common narrow stair between two walls. The treads have

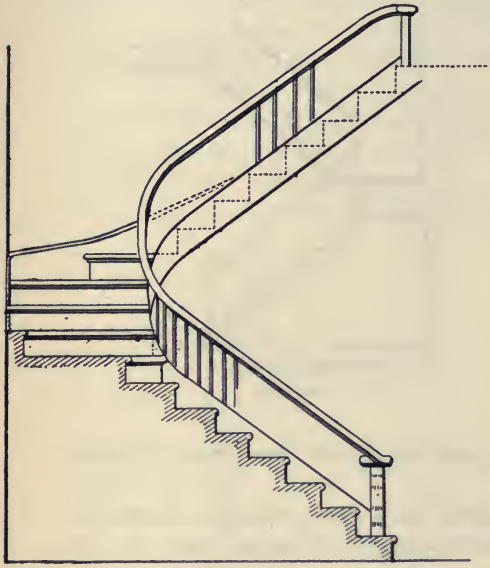

Sectional Elevation.
on Line A B. Fig. 815.
Fig. 816

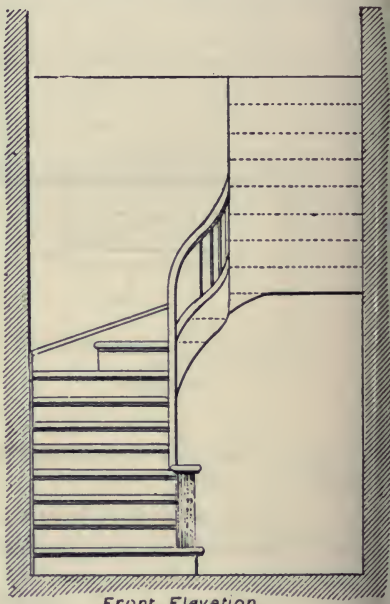

Front Elevation
Fig. 817

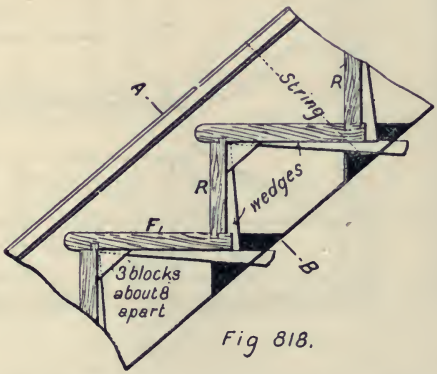

Fig 818.

rounded nosings, and are grooved and tongued to the risers, glued together, blocked and housed into the strings, and wedged up finally.

Winders are similar in detail, but their section depends of course upon where it is taken, and which wide or narrow part of the tread it cuts through, as A B or C D, fig. 819, the latter of which cuts the risers when close together.

Both of the strings, in this case, being wall strings, their sections will be similar to fig. 820, which is a section on line AB in fig. 818. The string is housed out for each end of a step, with its wedges to riser and tread, as fig. 821, in elevation.

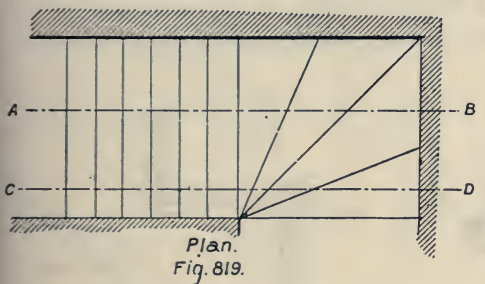

Plan.
Fig. 819.

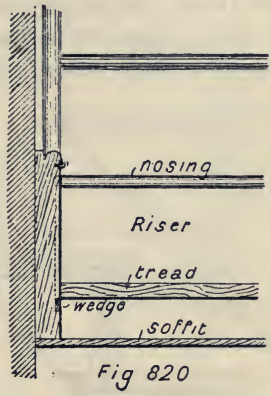

Fig 820

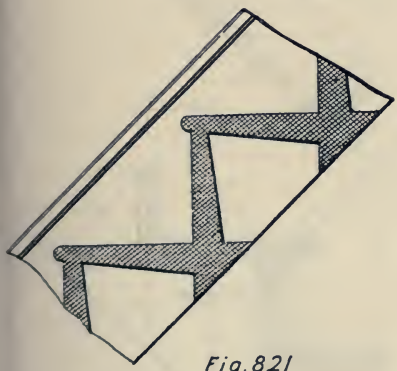

Fig. 821

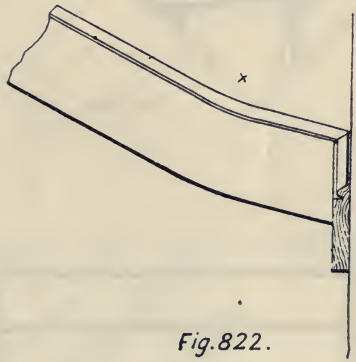

Fig. 822.

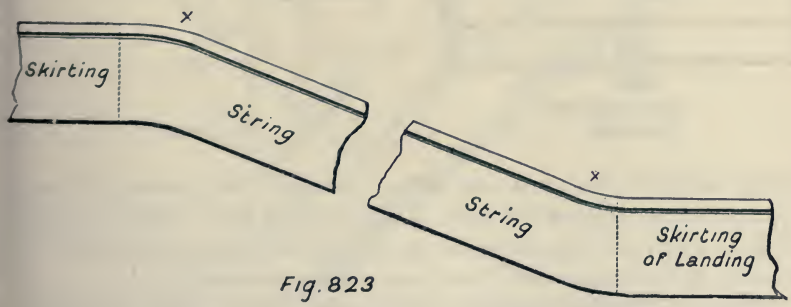

Fig. 823

Where strings meet at right angles they are either grooved and tongued together, or dovetailed; and where there are winders, at either corners, or junctions of raking with straight, they are eased off, as X, figs. 822 and 823, which are called *ramps*.

In better stairs, the section of treads and risers is as fig. 824, from which it will be gathered that the strings are deep, being 11 inches in lieu of 9 inches, and the nosings moulded, the small hollow fillet being housed into the underside of the tread, and dispensing with the tongue on the top of the riser. And in addition to the gluing, blocking, housing, and wedging to strings, where the steps are wide, they have an extra support in the form of a rough bearer called a *carriage*, which inclines from bearing to

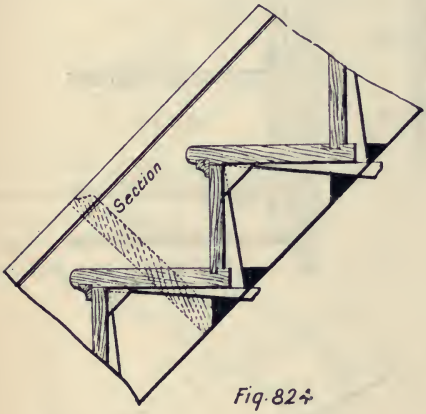

Fig. 824.

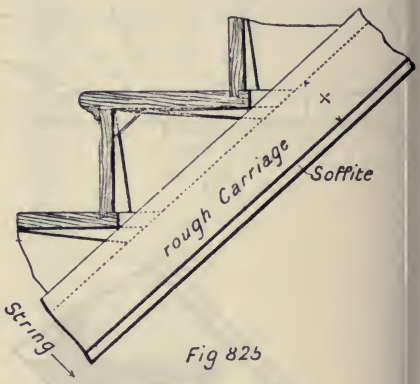

Fig 825

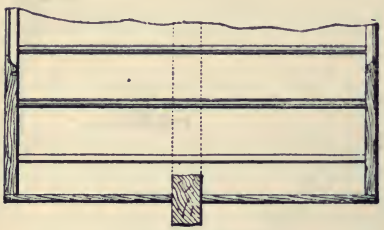

Cross Section.
Fig. 826.

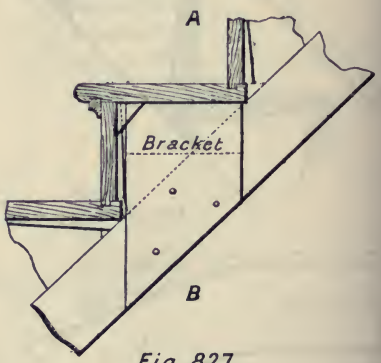

Fig. 827.

bearing, parallel to the string supporting the under-side junction of treads and risers in the centre of the stair, as figs. 825 and 826. This also entails additional depth of string, as X, the top dotted line representing where the underside of the string would have been without the carriage.

Oftentimes a further addition to the "glued, blocked, housed, wedged, and supported by fir carriages," is made by screwing shaped brackets on to the side of the carriage to support the *treads* of the steps, as fig. 827, the carriage only being a help to the risers and the stair, as a body. (See also section, fig. 828.)

When each flight of stair has not a wall on each side of it for wall strings, the other string, which is not against a wall, is called an outer

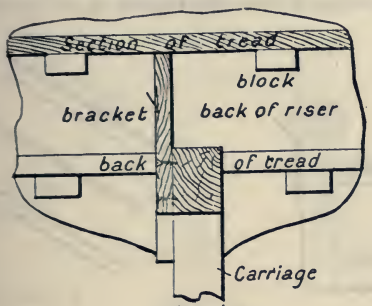

Section
Fig. 828.

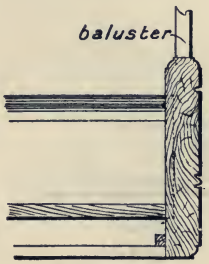

Fig. 829.

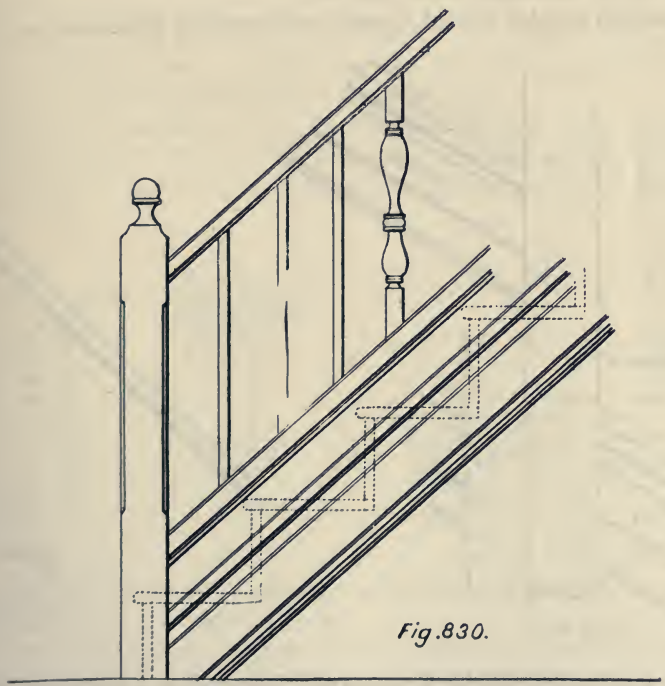
Fig. 830.

string. Consequently, it must be stouter, and more ornamental and taking to the eye on the outside, as fig. 830, which shows handrail, etc., in elevation, fig. 831 being a plan of the same. The string is as fig. 829

in section, or it may be more elaborate still, and consist of string, S; capping, C; and fascia, F; as fig. 832.

Strings should always be tongued at headings, and either grooved and tongued, or dovetailed, at all angles, housed into the centre of all newels,

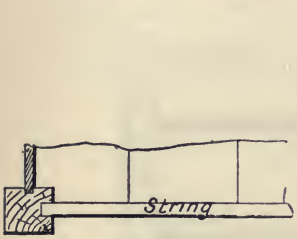

Plan
Fig. 831.

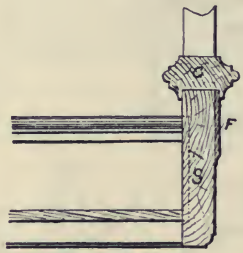

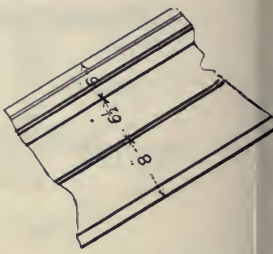

Elevation
Fig. 832.

and pinned in, as in fig. 833. If they are moulded the housing has to be scribed for the mouldings to fit in as well.

Handrails are also scribed, housed, and pinned to all newels, and should

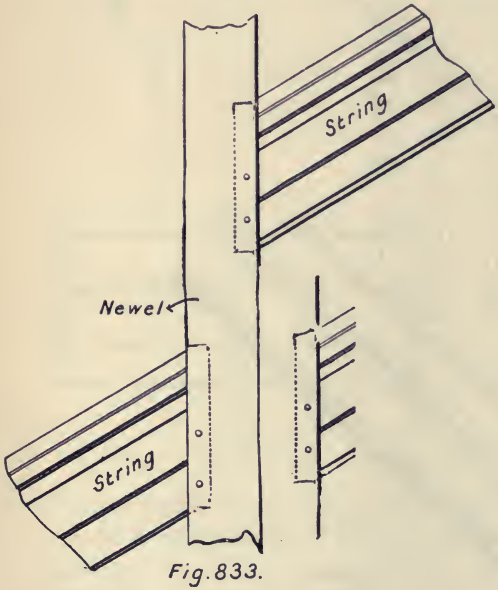

Fig. 833.

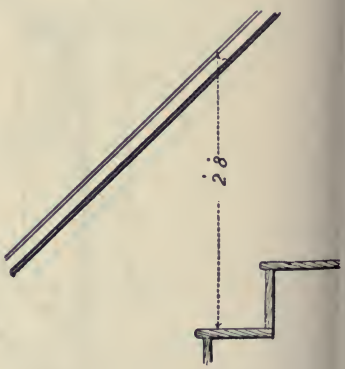

Fig. 834.

be fixed 2 feet 8 inches above each tread, measured in a line from the face of the riser, as fig. 834. On landings and flat places they should be 3 fee 1 inch high. Fig. 835 presents a rounded or mopstick handrail in section fig. 836, a moulded handrail; and fig. 837, a *toadsback* moulded handrail, so called because of its flat curved top.

The *balusters* are housed into the strings and handrail, as shown above; but sometimes, especially when of iron, they are connected together by an iron core, which is secured on to the top of them, as fig. 839, and the core, in its turn, is let into and screwed to the underside of the handrail, as fig. 840.

Fig. 835

Fig. 836.

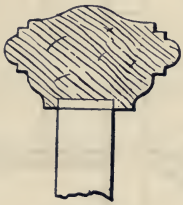

Fig. 837.

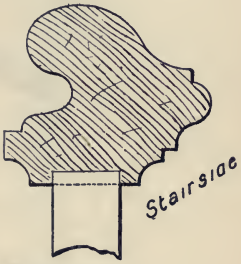

Fig. 838

A handrail should always have a curved top face and no arrises, and be of such a size that it can be easily grasped. Fig. 838 is a section of one suitable for a winding geometrical or wreathed stair.

Newels are generally cut out of square stuff, and either left square, moulded, or turned. They are the mainstay of the stair and the connecting link between the flights, as every string should be framed and pinned into

Fig. 839.

Fig. 840

Fig. 841

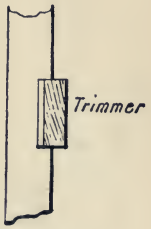

Fig. 842

them, and the risers of the steps next to them ought always to be housed into their centre, as previously shown.

When newels are not framed at both ends, from floor to floor, they have either rounded or turned tops, when their foot is framed and secured as at the bottoms and tops of stairs; and where they occur between landings or flights, and are not framed at either of their ends into floors, etc., but to the trimmers sideways, as figs. 841 and 842, they have a moulded or turned top, and the bottom is turned and ornamented as well,

and called a pendant or drop, as fig. 843, which is a representation of the newels at a half-space landing on an open-newel stair.

Landings, whether half or quarter-space, are made of flooring boards

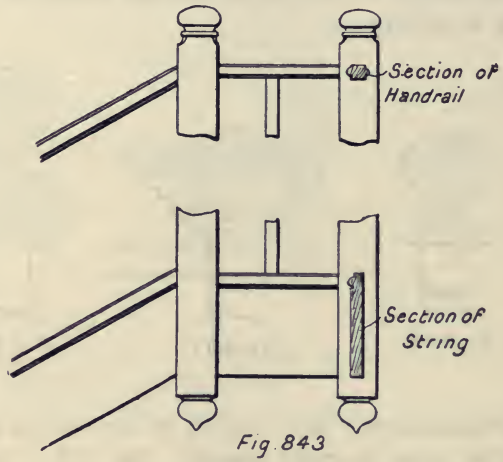

Fig. 843

carried on ordinary joists framed into the trimmers, to which one flight inclines, and from which the other starts, as fig. 844, which represents a half-space landing.

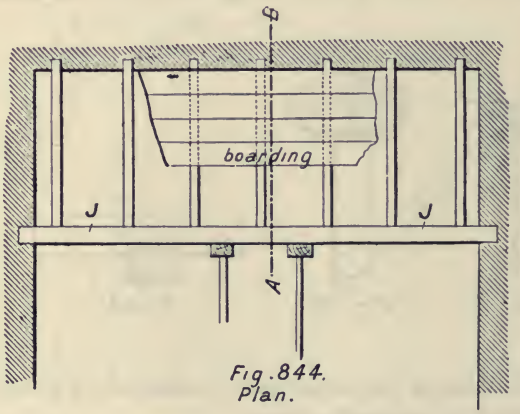

Fig. 844. Plan.

In best work these boards are not nailed down, but are glued together and secured by hardwood buttons underneath, each button being screwed to the underside of the board, and the tongue on them turned into a groove on the joist of the landing, so that the buttons are secured to the joists, and the boards to the buttons, as figs. 845 and 846.

The edges of the landing are treated as the top of a tread of a step,

when they act as such. Fig. 847 represents the edge of a landing above a riser, and fig. 848 the edge of a top landing, surrounding the well hole of the stairs; A, the part which covers the face of the trimmer, being called

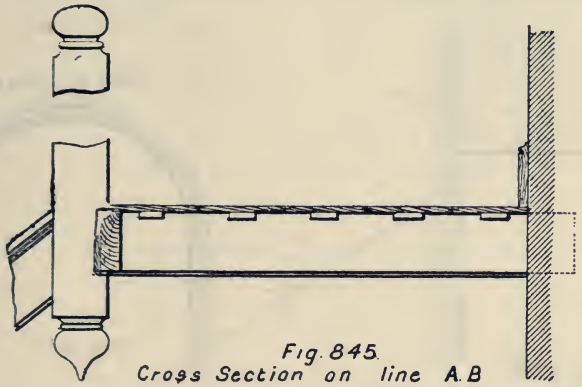

Fig. 845.
Cross Section on line A.B

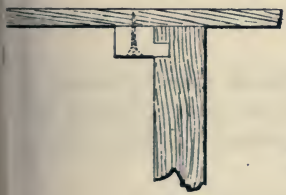

Fig. 846

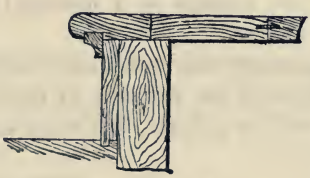

Fig. 847

Fig. 848.

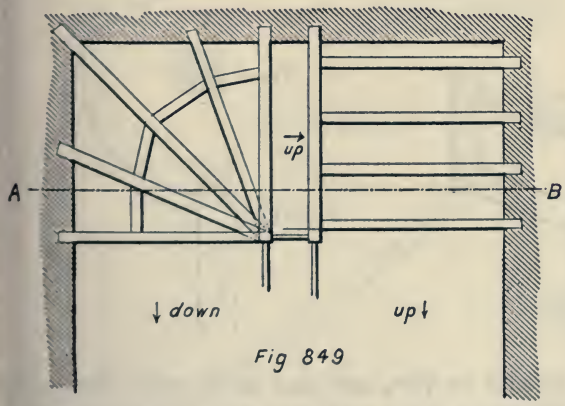

Fig 849

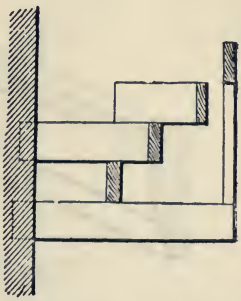

Section on line A.B.
Fig. 849

an *apron*. Where there are quarter-spaces, it is obvious that one continuous trimmer is neither suitable nor useful, as explained by fig. 849—the right of the figure representing the rough joists and trimmers of a quarter-space in an open newel stair, with two risers between the quarter-

spaces, while the left side shows how to place the bearers, etc., when necessary, with winders. The section will explain the different height of the bearers, and should give the student an idea of what is required in such cases. (See fig. 849.)

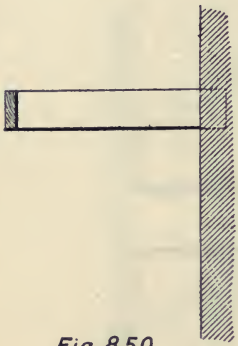

Fig. 850.

Fig 851.

The bearers for the winders in a wreathed or geometrical stair are treated in a similar manner.

Wreathed stairs (geometrical), with their continuous winding strings, of course are very intricate at the returns; so much so, that the strings and handrail are constructed on a drum, that more accuracy may be obtained,

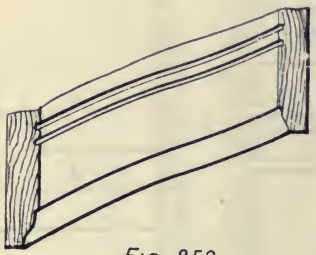

Fig. 852.

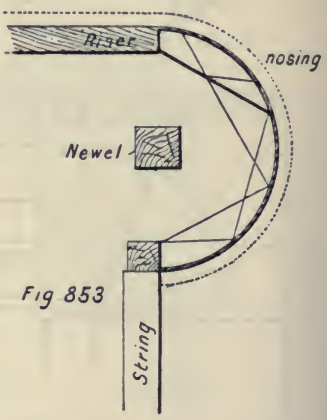

Fig 853

as the string is both circular on plan, and rises at the same time. The back of the string at the return is cut away to a very thin veneer, which is blocked up with wedge-shaped backings from behind; and the joint between the two parts of the string is secured by handrail screws. (See fig. 851.) It must be borne in mind that it rises at the same time as it goes round. (See fig. 852.) Carriages and bearers support the steps.

Buil-nosed or *curtailed* steps are treated in the same manner. See fig. 853, which is a plan of one of the latter at the bottom of a stair, showing the veneering and blocking to the curve.

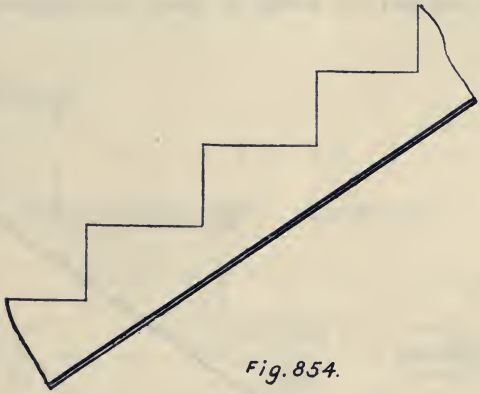

Fig. 854.

Occasionally, in best work, the strings are *cut and mitred*, which is another name for the *open* string; and, at the same time, gives a clue to the class of treatment to which the string is subject.

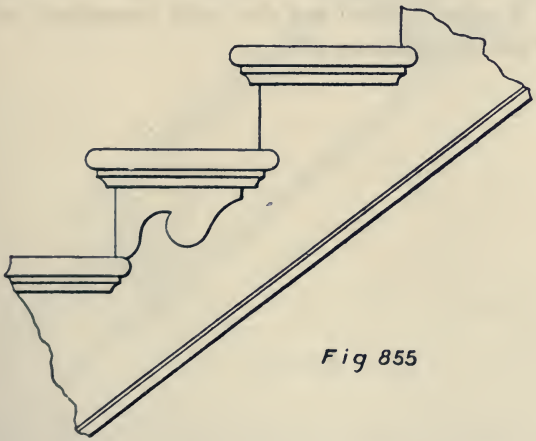

Fig 855

The string (that is, the *outer* string) is cut out to the shape of the steps (fig. 854), the ends of the treads are rounded, and the small moulding is returned, as fig. 855, oftentimes with a small thin cut bracket underneath as a finish.

The mitring part, as the term "cut and mitred" implies, comes in with the risers, which are mitred to the string, as fig. 856.

This kind of string is used chiefly in open-newel and geometrical stairs.

Sometimes, in wooden stairs as well as stone, solid spandril steps are used, being housed into the strings as usual, but dispensing with gluings,

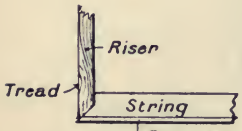

Fig 856

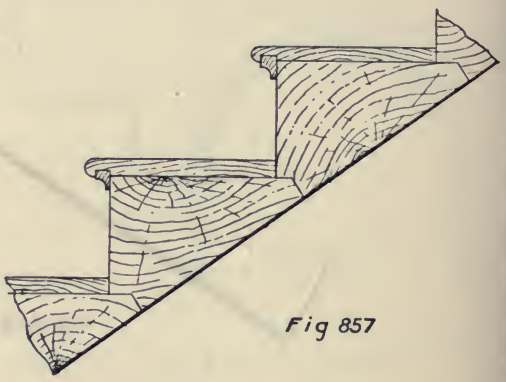
Fig 857

blockings, and other framings underneath. The tread is a loose thin slab of hardwood, nailed on to the top of the solid step, as fig. 857.

In ordinary stairs the treads are from 1 to 1½ inches thick; risers, ⅞ to 1¼ inches; strings, 1½ and 2 inches; balusters, 1½ to 2 inches square; and newels, 4 or 5 inches square; and the other dimensions, of course, vary according to the circumstances, etc.

CHAPTER XX.

SKYLIGHTS AND LANTERNS.

Skylights—Lanterns on Roofs and Flats—Louvres—Ceiling Lights.

Both of these classes of framing are used for the purpose of light, either fixed in the roofs, flats, etc., or forming a roof in themselves. Their object is to give light from above, where, from various causes and circumstances, the enclosing walls cannot be used to supply that want.

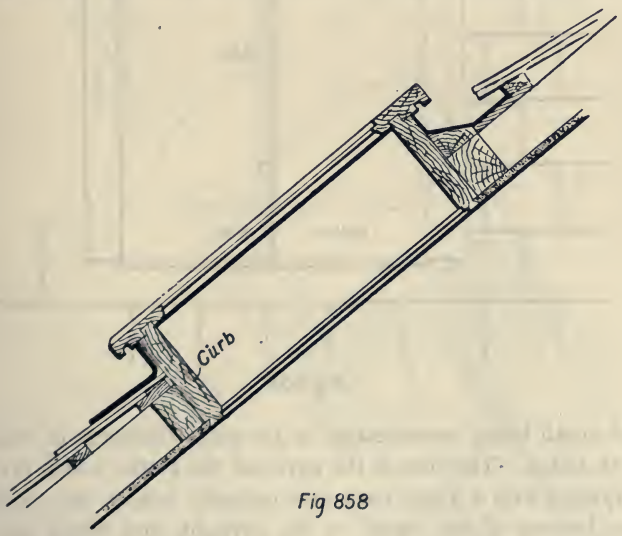

Fig 858

Skylights.—A *skylight* is the smaller of the two, and is generally flat in form, and inclined with the pitch of the roof; whereas a lantern has vertical or only slightly inclined sides, which are often framed with casements made to open, in order to give ventilation in addition to light, the whole being covered by a slated, tiled, or glass roof.

Fig. 858 represents a skylight in section, fig. 859 the elevation in a

slated roof; but only the woodwork will be dealt with in this chapter, no notice being taken of tiling, slating, or leadwork. The student ought to be well acquainted therewith, as they have been explained in previous chapters.

The roof rafters, etc., are first of all trimmed to suit the size of the skylight required, and a curb is framed together and wedged up within that space. The angles of the curb are either grooved and tongued, or dovetailed together; and, in a slated roof, the curb should be 9 inches deep, to allow of a gutter behind it at the top part, as in fig. 858.

In a tiled roof, however, the curb should be 11 inches deep, the

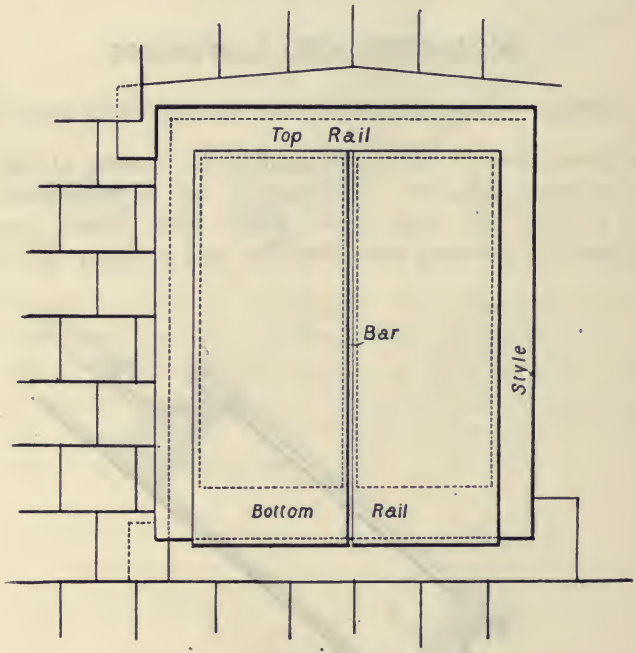

Fig. 859.

increased depth being necessitated by the extra thickness of tiles as compared with slates. The tiles at the eaves of the gutter, which is at the top of the skylight, with a 9-inch curb and ordinary rafters, etc., would almost touch the bottom of the toprail of the skylight, and would not allow of a sufficiently large gutter, especially for snow, hence the necessity for 11 inches.

The 9 and 11-inch curbs are measured from the underside of the rafters, and if these are of more than the ordinary depth of common rafters, the depth of the curb has to be increased accordingly, but the above are the usual sizes—*i.e.*, 9 and 11 inches deep by $1\frac{1}{2}$ or 2 inches wide.

The top of the curb is tongued, to fit a groove around the underside of the skylight, which is a framing of styles and rails, with bars for the

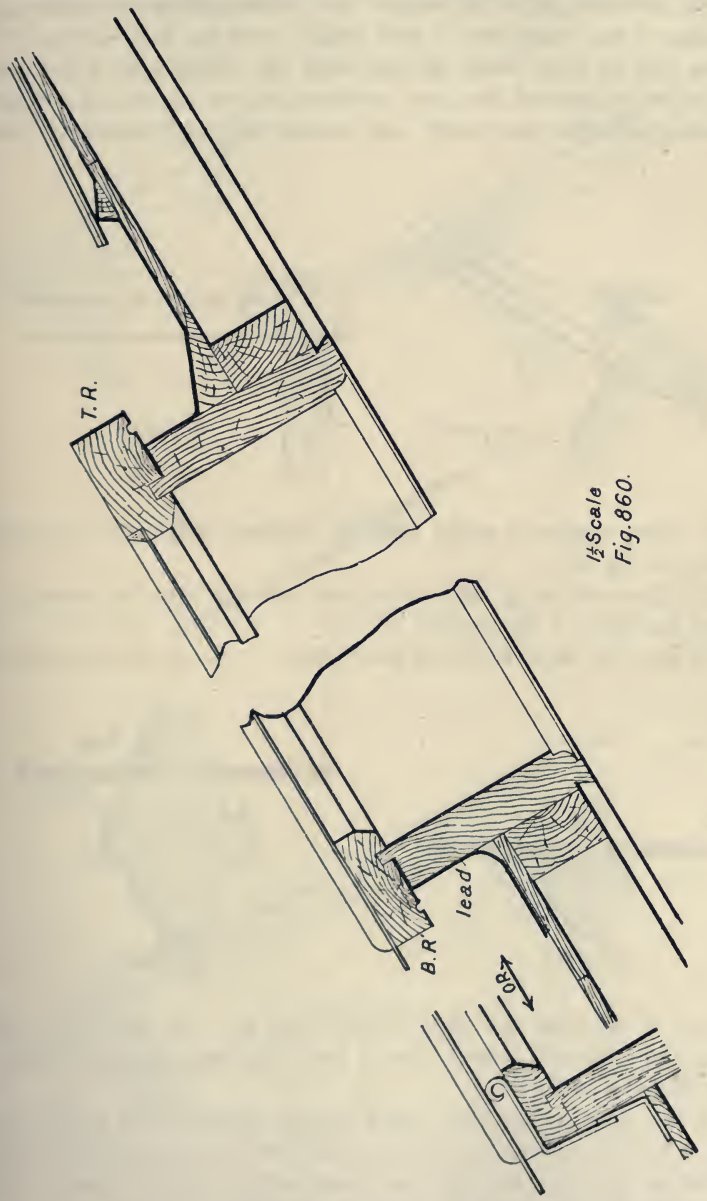

glass, running in the direction of the roof, and framed into the top and bottom rail, as will be gathered from fig. 859.

Fig. 860 is an enlarged detail of the top and bottom of fig. 858, from which it will be seen that the bottom rail is not as thick as the top one, being $\frac{3}{4}$ of an inch, or the depth of the rebate, less. This is done in order to allow the glass to run down over it and project over the bottom edge of the bottom rail, so as to throw the rain-water off. Otherwise, if the bottom rail were to be made of the same thickness as the toprail, a gutter would be formed, and the rain would soak through the putty and drop inside;

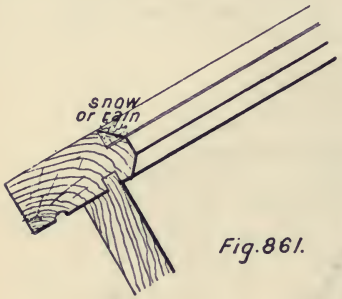

Fig. 861.

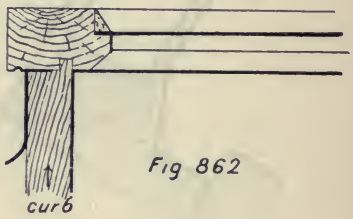

Fig 862

and in snowy weather it would form an excellent lodgment for the snow, as shown on fig. 861.

The styles are as fig. 862 in section, and the rails are tenoned and wedged into them at the angles.

The bars (fig. 863), which are fixed about 12 to 15 inches apart, are,

Fig 863

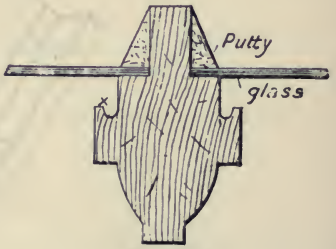

Fig. 864

of course, of the same moulding as the styles and rail, and of the same depth as the styles and toprails, but $1\frac{1}{2}$ inch wide, and framed at each end into the top and bottom rails.

The bars may be moulded to any section, chamfered, or square ; and in best work they are checked out a second time, and grooved underneath the glass, as fig. 864, to allow the condensation which collects on the underside of the glass to run down the bars and out.

Skylights can be either fixed or hung; and in the latter case they are

hinged by butts at the top, and opened at the bottom upwards by a patent lifting apparatus (fig. 865).

The glass of the skylight is kept in position by light narrow copper

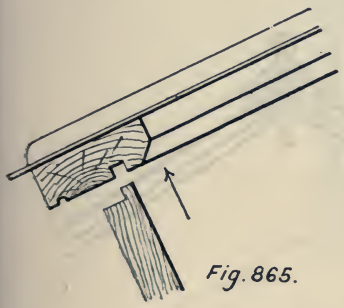

Fig. 865.

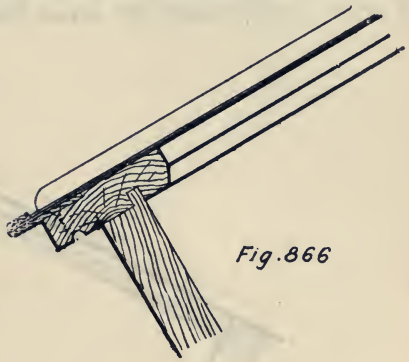

Fig. 866

Fig 867

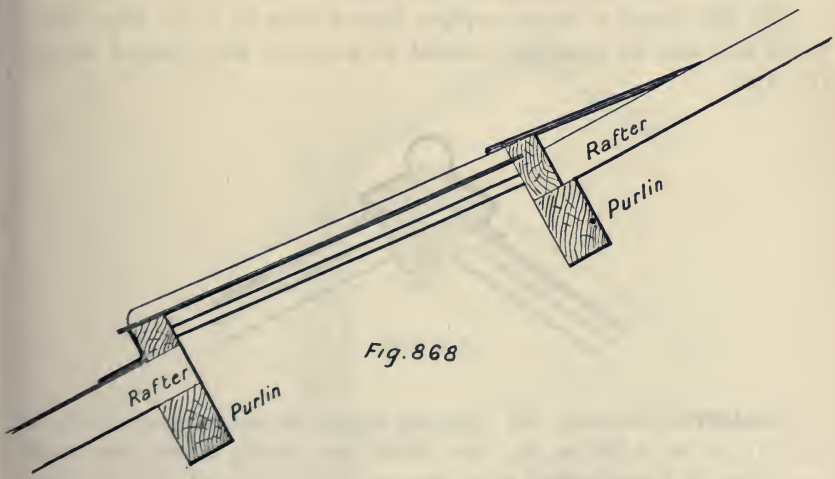

Fig. 868

clips screwed to the rails, underneath the glass, which they clasp at the bottom as in fig. 866.

The glass ought, if possible, to be in one length ; but when that is not

possible, these clips, with another bend in them, are also used to keep the top pane (which laps over the others) in position, as fig. 867.

In common and very large fixed skylights, over sheds, etc., no curbs are used; but a head and sill to the required section are fixed to the ends of rafters longitudinally, the styles being framed into them at the ends,

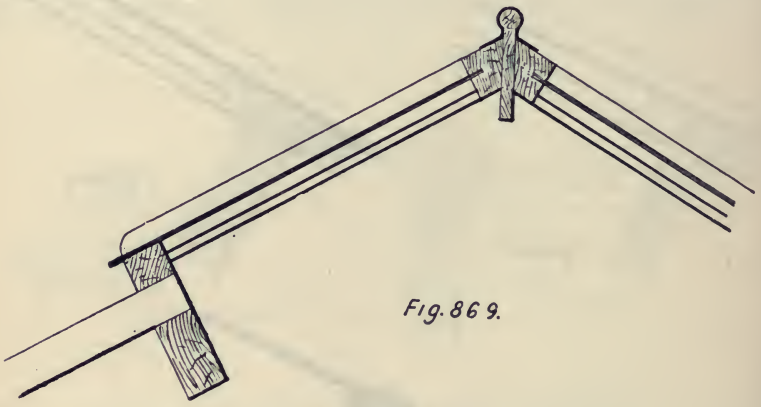

Fig. 869.

and the bars stumped into the head at the top, and notched into the sill at the bottom, as fig. 868, which illustrates such a skylight in any position intermediate between the ridge and the eaves.

Fig. 869 shows a similar skylight, placed close up to the ridge itself, which also may be differently treated, as shown in the enlarged section (fig. 870).

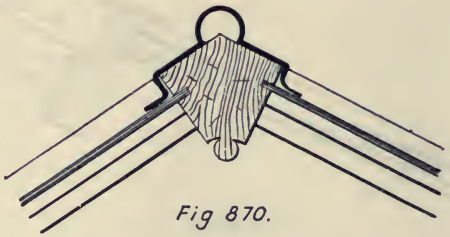

Fig 870.

Lanterns.—Lanterns are generally formed at the apex of a roof, as fig. 871, or on a flat, as fig. 872; their roofs having either gable ends, as fig. 873, or being hipped, as fig. 875.

The top or roof part of the lantern (figs. 871 and 872) is precisely similar to an ordinary skylight, consisting of bars, styles, sills, and heads framed together; the heads of the two sides meeting at the apex, against

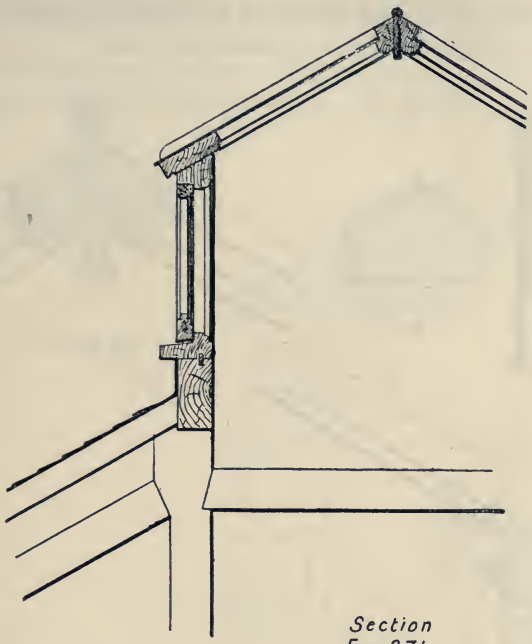

Section
Fig. 871.

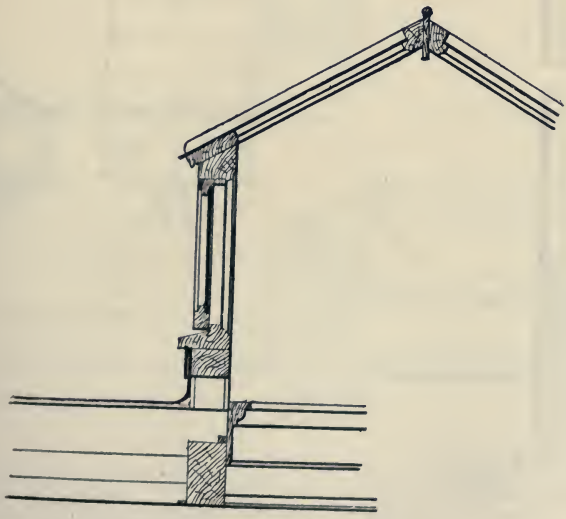

Section
Fig. 872

ridge pieces, as fig. 873A, the section at the sill being as fig. 874, which also shows the upright framing of a lantern on a roof.

Plan
Fig. 873.

Elevation
Fig. 873.

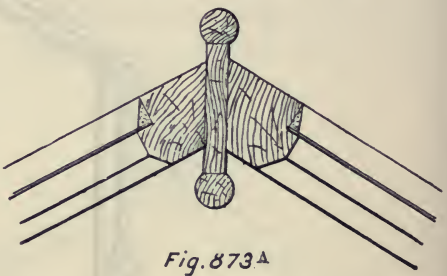

Fig. 873A

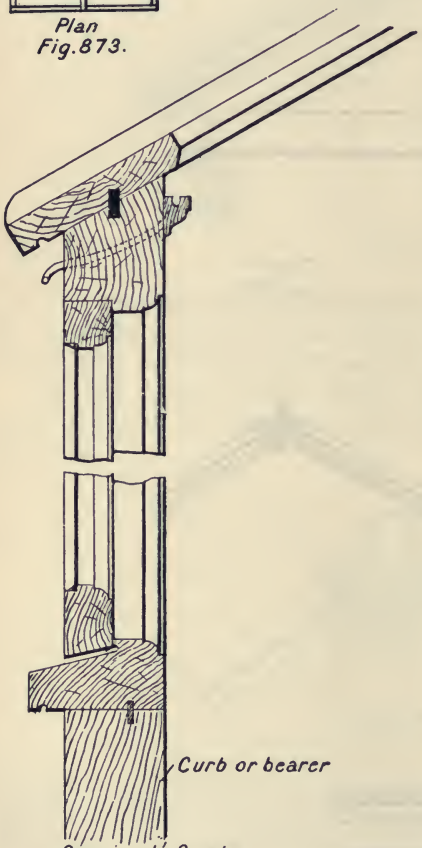

Section ½ Scale.
Fig. 874.

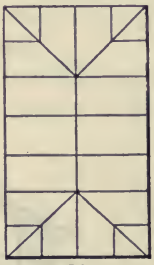

Plan
Fig. 875.

Elevation.
Fig. 875.

The hipped roof (fig. 875) is built up of bar rafters, hip and jack bar afters, framed into the head at the ridge, and at the sill they are treated

as fig. 875A, which otherwise represents a lantern on a flat (*vide* also fig. 872).

The side framing consists of four angle posts, framed into head and sill, with intermediate mullions, the whole rebated out for, and filled in

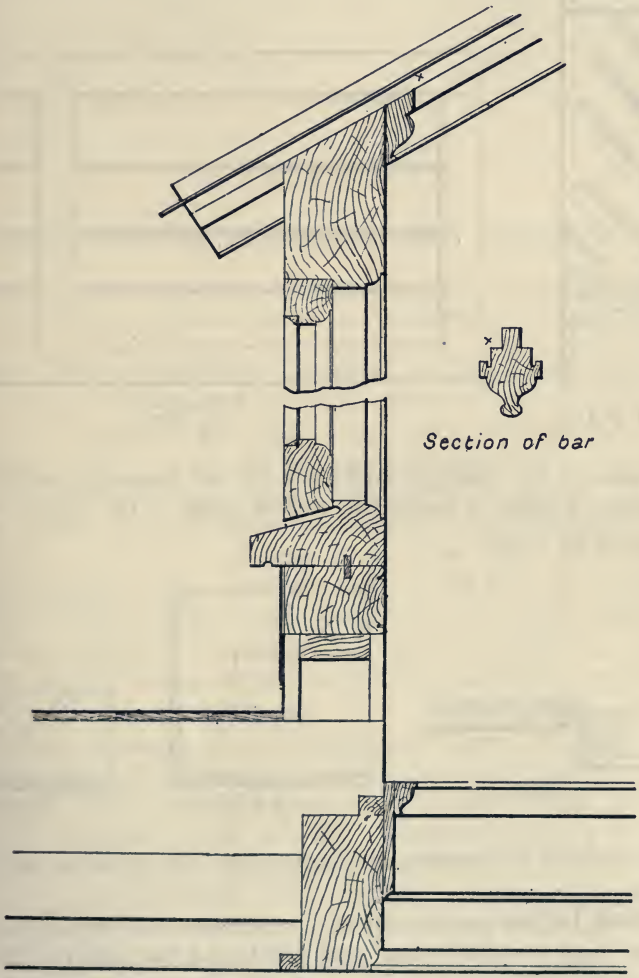

Section
Fig. 875A

with moulded casements, either fixed or hung, according to requirements, the casements being sometimes hung on centres, or pivoted, as hereinbefore explained. It is needless to give details of these angle posts, mullions, and casements. The student will be able to form his own details

from the illustrations, etc., already given in the chapter on solid frames and casements.

Fig. 876.

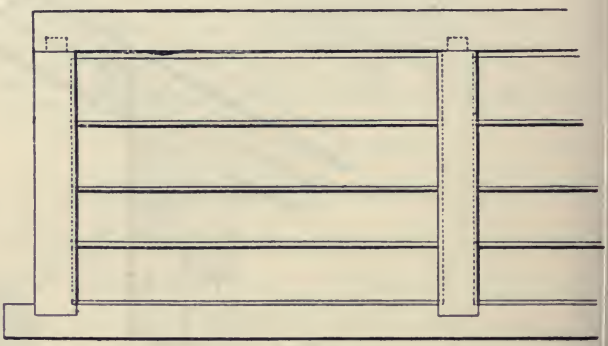

Elevation
Fig. 877.

In lanterns for common shed roofs the side framing is often filled in with louvres instead of casements, to give egress to the hot air or steam as shown in fig. 876.

Fig. 878

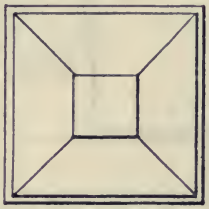

Fig. 879

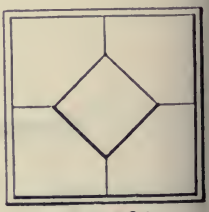

Fig 880.

The ends of the louvres are housed into the posts or mullions, as fig. 877.

Ceiling Lights are often used, in connection with fixed skylights, to bring the light into the rooms, and still have a flat ceiling. The ceiling rafters are trimmed, and a curb is wedged inside it, rebated out at the top for the casement, which is of the ordinary section and class (*vide* fig. 878). The bars may sometimes be constructed and arranged to some geometrical or ornamental designs, as figs. 879, 880.

CHAPTER XXI.

PLASTERING, PAINTING, AND GLAZING.

Plaster Work Materials—Plaster Work Processes—External Work—Ornamental Work—Glass and Glazing—Patent Glazing.

Plaster Work Materials.—Plastering consists in covering with a smooth surface all rough walls, ceilings, partitions, etc., in the superior apartments of dwellings, etc., where a more finished, better-looking, and more sanitary effect is required. This result is obtained by the use of various materials, including several patents, as will be pointed out in the following remarks on the materials themselves and their application.

The lime used by the plasterer is the *pure* lime, containing only carbonate of lime, and is sometimes called a *fat* lime. It has neither great power of setting nor ultimate strength, is of a white colour, and slakes very freely; and immediately the water is poured on it a great volume of steam will arise, and the lime will begin to crack very loudly, if it is of the best kind for plastering.

Such lime is found at Crich, Buxton, and Dorking, being the product of burning either marble, white chalk, or the Bath and Portland oolites of various places. By the slaking process pure lime will increase in bulk to three times its original cubical contents. When the slaking is completed the lime and water are run through sieves, to collect and screen out the hard unslaked lumps or residue, which would be a source of danger in the finished work. The creamy mixture of slaked lime and water is called *putty*, and in this state, to ensure perfect slaking, some limes should be kept for a period of one or two months before being used.

The sand used for plastering must be clean and sharp, free from all earthy or vegetable matter, and washed, if necessary, to eliminate all these impurities. Pit sand is far preferable to that taken from large river beds, where the sand is continually kept in motion by the currents, so that the particles or grains are rounded, which takes away their sharpness.

Plaster-of-Paris, used for gauged stuff, is calcined gypsum, which,

after being mixed with water to a paste, sets quickly and with a smooth hardened white surface.

Portland cement, which will be dealt with more fully in Chapter XXIII., is chiefly used for outside work, the lighter (in weight) and quicker-setting qualities being the most suitable for this purpose.

Keene's cement is Plaster-of-Paris, saturated with *alum*, and is chiefly used for angles, pilasters, and the more ornamental parts of plastering, for internal use only.

Parian cement is a finer-working substance, used for large surfaces of a better class in internal plastering, the walls generally being first backed up or rendered over with Portland cement and sand, in preparation for the Parian, which is really Plaster-of-Paris recalcined, with *borax* added.

Martin's cement is similar to the last in preparation, *pearl ash* being used instead of borax, which produces a "fatter" cement, forming (like Keene's) a better "arris."

There are several other kinds of cement of these classes, but they are so seldom used in ordinary work that it is unnecessary to describe them.

The *laths* used for plaster work (fig. 881) are thin strips of wood, about 1 inch broad and up to 4 feet long, rent or sawn out of good fir or oak; and the different thicknesses are classified as below:—

Single lath	are about	$\frac{3}{16}$	of an inch thick.	
Lath-and-half	,,	$\frac{1}{4}$	,,	,,
Double lath	,,	$\frac{3}{8}$	,,	,,

Plaster Work Processes.—*Brick and stone walls* are—as it is termed—covered by "two" or "three" coat work, consisting of a *rendering* or *pricking up* coat, a *floating* and a *setting* coat.

The first consists in covering the walls roughly with the patent materials specified, or with the *coarse stuff* (otherwise called "hair mortar") in common and ordinary work, consisting of the properly slaked fat lime, mixed wet with about three parts of good, clean, sharp, washed sand, and a proportion of good well-beaten cow-hair. This mixture is then applied to the walls, to the thickness of about $\frac{1}{2}$ an inch, or as may be required to make the wall surface perfectly plumb and level. So soon as the coat begins to dry it is scored over or scratched to give the next or floating coat a key or means of attachment.

When this first—rendering or pricking-up—coat has become dry, the second or *floating* coat is applied on it to a certain thickness, of from $\frac{1}{8}$ to $\frac{1}{4}$ of an inch. This coat consists of a better and stronger mixture of the same materials as the first, but with less hair, called "fine stuff." The surface of this coat is made truly even in every way following on the last by means of perfectly plumb, vertical, and horizontal *screeds*, laid on the walls to the required thicknesses, and about 6 inches wide, at the angles,

ceiling, and skirting, and intermediately, as the straight edges, with which the spaces between are regulated, require.

This second coat is left rough from the *float*, as the tool used is called; and when it becomes dry the third or setting coat is applied, consisting of a very thin film of *fine stuff*,—*i.e.*, "putty," or slaked lime, with a very small admixture of sand, made to about the consistency of good cream. This is applied and worked up to a perfectly smooth and level face, which sets quite hard; after which it is left to dry, and the work is complete.

When a wall is intended to be painted it is finished with a *trowelled* face (for which purpose various other special plasters are sometimes used, to give it a better hardened face), the workman using a steel "trowel" for this purpose, instead of the wooden one, called a "float."

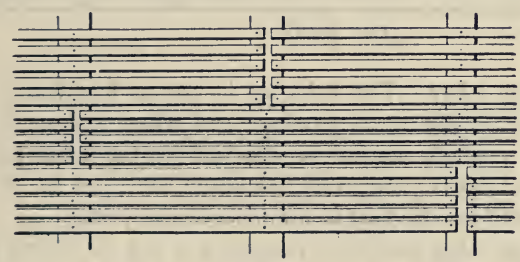

Fig 881.

Two-coat work consists of an amalgamation of the first two coats, finished off with the setting coat.

Walls are sometimes *battened*; that is to say, thin battens are fixed to plugs, vertically up the walls at about 16 inches, centre to centre, to receive the lath-work (fig. 881), as will be explained for partitions and ceilings. This "battening" is used for damp walls; but, while it gives a free circulation of air behind the plastering, it brings with it a greater evil, inasmuch as, besides being subject to decay, it forms a harbour for all kinds of vermin; and rooms with battened walls are made quite lively by the noise of mice and other such creatures. For the same reasons walls behind skirtings, etc., should be rendered up. In elevation, lathwork on battens looks exactly like lathwork on partitions or ceilings; the only difference appearing in the plans or sections, which in this instance are represented by fig. 883.

Counter-lathing or *brandering* is similar to the above, and consists of ordinary laths laid about 16 inches apart on wood lintels, etc., to throw out the laths so as to allow of a key for the plaster work laid on them, over doors and windows and other openings spanned by wood, to which ordinary plastering will not adhere.

Ceilings and *partitions*, *battening*, and *counterlathing* are treated as fig. 881, fig. 882 being a plan of the partition; and the work is specified, for two-coat work as *lath*, *plaster*, *and set*, or *lath*, *float*, *and set*, and for three-coat work as *lath*, *plaster*, *float*, *and set*, consisting of the same proceedings in laying on the material as for walls, with the "addition" of the "lathwork," which means the covering of the surfaces with laths of various thickness (as previously described) nailed to the framing at about 16 inches from centre to centre; the laths being parallel to one another, and about $\frac{3}{8}$ of an inch apart, to allow of a key to the pricking-up or first coat of the plastering, which is pressed on to the lath and through the

Fig. 882.

crevices to form a key. The laths are in various lengths up to 4 feet to suit the spaces of the wood framing; and where a joint is necessary it should not be perfectly vertical up the wall on the same piece of wood, but they should break joint every half-dozen laths, and so on, as fig. 881. "Lath and half" are the best to use for ordinary work.

This lathing being done, the plastering is laid on exactly the same as on the walls, but it should be pointed out that the first coat takes much longer to dry, having no absorption to assist the drying process on laths, as is the case on walls.

Fig. 883.

All external angles should be roughed up either in Portland or Keene's cement, to make a good hard finish, as ordinary "hair-mortar" and "putty" have no strength for such positions; or "wood angle-beads" should be fixed to plugs in the joint, up the angle, and the plastering *quirked* up to it, as explained under "Joinery" (Chapter XVI.).

When requisite, the plastering to walls, ceilings, partitions, etc., as above, can be made to dry quicker by the addition of a proportion (about one-fifth) of "plaster-of-Paris" to the ordinary mixtures for the various coats; and this is called *gauged* work. The proportion of plaster regulates the time of setting; but it is unadvisable to hurry the work of plastering, and certainly not by "gauging," which is apt in time to cause the whole surface to crack, almost like a spider's web.

Selenetic lime is a mixture of hydraulic lime and plaster-of-Paris, often used for ordinary plastering; its advantages being that it is quicker in setting between the coats, and will take more sand, which renders the mixture cheaper; but it should be mixed according to special instructions from the manufacturers.

Robinson's Patent Paragon Cement (made near Whitehaven), *Adamant*, and *Adamantine* are all patent mixtures for plastering, invented and introduced for the purpose of saving time in the drying of ordinary plaster, and with other advantages, such as a better and harder-finished surface, and the properties of being fireproof, and so adhesive and cohesive as to obviate cracked ceilings and the like objectionable but unavoidable results. They are said to be as cheap as the ordinary plastering, though this has to be proved, as a general thing instead of an exception; but the advantages conferred should be worth the extra cost. A very superior and economical covering to internal walls is to float them in Portland cement and sand, and finish white with "Albino," the best quality of Adamantine.

External Work.—External walls are coated in a similar manner to the internal walls, as already explained, with the exception that Portland cement is used instead of "fat" lime, which will not withstand the weather; and they may be finished off in different manners, the chief of which are here given.

Rough-cast has a rough face, made by the last coat consisting of coarse grit.

Ashlar is the lining up of walls, so as to divide the face into rectangles, similar to ashlar or other stone facing.

Stucco is a general term, used for the rough mixtures, whether with cement or lime, cement-covered external walls being often said to be "stuccoed"; while "trowelled stucco" for internal work is a smooth face, worked with fine stuff without hair, in ordinary plaster; and "bastard stucco" contains hair.

Depeter has a more roughened face than rough-cast in external cement plastering; the effect being obtained by small pebbles, which are pressed in while it is setting.

Depreter is a finish to the same cementing, made to imitate tooled stone.

Scagliola is an imitation of marble, in pilasters, etc.

Ornamental Work.—*Cornices*, and other ornamental mouldings, used to break the angles of apartments, etc., are "run" in plaster by means of "horsed mouldings," running on a wood ground fixed on the wall, truly horizontal, the required depth of the cornice. Ordinary cornices are backed or roughed up with a stronger mixture of coarse stuff, to make it set quicker; and when this has been worked to the right contour it is

finished off with plaster-of-Paris, which gives it a hardened white face, with good arrises, where required. When moulded cornices are too big to allow of this backing up being well and properly done in rough stuff, they are *scotch-bracketed*, as fig. 884, which consists of laths cut to lengths

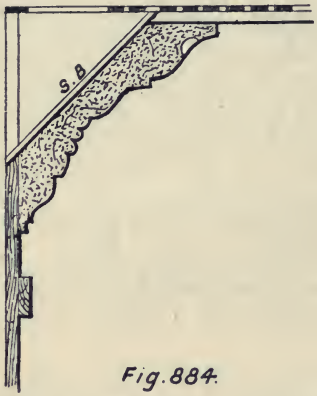

Fig. 884.

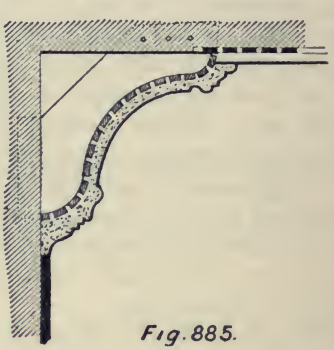

Fig. 885.

and fixed from wall to ceiling, to take off the triangular space shown, and fill up the angle to save material.

As the cornices increase in size beyond this, it becomes necessary to use *wood bracketing*, which consists of wood brackets, roughly cut to the

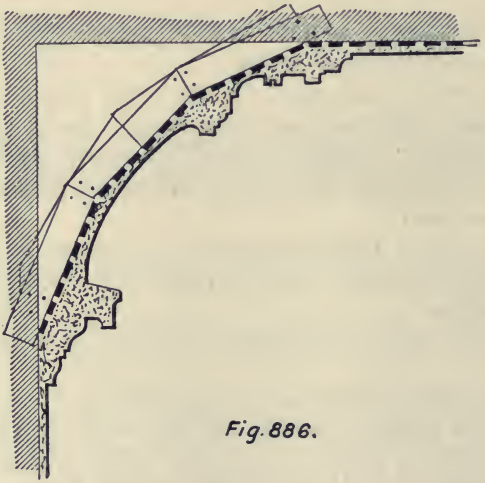

Fig. 886.

required shape, and fixed, 16 inches apart, to the ceiling joists and wall, and on these the laths are nailed longitudinally for the plastering, as shown in fig. 885; though sometimes the brackets are so large that they have to be built up in parts and framed together, as fig. 886.

Enrichments in plaster are cast in moulds made in beeswax, modelled to the required design.

Papier Maché or *Carton pierre*, as the name implies, is a paper composition formed into the required moulds and ornaments.

Fibrous plaster is a patent, now very much used, consisting of slabs of various sizes, fixed with zinc nails to the woodwork, and covered over with a setting coat about $\frac{1}{8}$ of an inch thick. Of this appliance, "Hitchin's," "Jackson's," and "Wilkinson's" are the best-known qualities.

Plaster work is often painted, or treated by the following processes :—

Whitewashing or *limewhiting* consists of two coats of "fat" lime slaked to a white liquid, and applied with a large brush; it is only used in common work, and for sanitary purposes.

Whitening is a mixture of size and whitening, applied in two coats to internal work only, such as ceilings and walls; and when any colouring matter is added it is called "distempering," the surface being first *clearcoled* or *claircolled—i.e.*, covered with a solution of glue and alum, which fastens the colour, as it were.

Colouring, applied to both external and internal work, consists of ordinary whitewash, mixed with different colouring matters. "Duresco" is a patent washable covering of this class.

Painting.—*Painting* is the covering of wood, iron, plaster, or other materials, either for the purpose of protecting them or for ornament.

The ingredients employed in the various mixtures used for the different kinds and coats of painting include the following materials :—

White lead, called a "base" in painting work, is a carbonate of lead formed by combining carbonate fumes with the pure lead, by the process of corrosion with acetic acid, the resulting residue being a white powder, which is either sold in that condition, or, more generally, when ground in linseed oil to a pasty consistency.

Red lead is made from oxide of lead, and can be either procured dry or in oil, like white lead. It is used as a drier, for painting iron, or for the first coat, called "priming," on woodwork.

White lead is more used than red lead, being more easily converted into various colours; while it is very dense, and forms a strong permanent covering or protection, being of a good "body" as it is called.

Oil and *turpentine* are called "vehicles" in paint, because they (figuratively speaking) "convey" the lead on to the surfaces to be covered.

Linseed oil, of a *drying* kind, is used very greatly in the mixing up of paints, it having the property of being ductile, while it will also dry well and form a good coating.

Turpentine is really an oil extracted from the pine tree, and used to make paint work more easily, and for *flatting* coats internally, it having a dull effect, in comparison with the linseed oil.

Driers, whether in the form of Litharge, commonly called oxide of lead, or "patent driers," are used to make the oil set all the quicker in forming a coating.

The colouring of paint is done by the addition of various ochres and vegetable matters of different colours called "pigments."

The proportions in which these bases, vehicles, etc., are mixed may vary according to circumstances, and the coats applied, being generally in about the following ratios:—

First coat or priming—14 lbs. white lead, 1 lb. red lead, 6 pints linseed oil (raw for inside, boiled for outside), ½ lb. driers.

Second and third coats—14 lbs. white lead, 3 or 4 pints oil, 3 pints turpentine, ½ lb. driers.

Fourth coat—14 lbs. white lead, 2 pints oil, 4 or 5 pints turpentine, ½ lb. driers.

Woodwork, intended to be painted, comes from the joiner's shop, generally, ready smoothed and clean, so that the first proceeding is to *knot* it—*i.e.*, to cover the knots over with size, or patent knotting, to kill the turpentine in them, and so prevent them spoiling the finished work. The whole surface is then *primed* with red lead paint, which satisfies the absorption of the wood. It is then rubbed down with pumice stone, all holes are filled up with putty, and any unevenness obviated, in preparation for the second, third, and fourth coats, each coat containing less oil and more turpentine than its predecessor. Good work should be rubbed down between each coat, which gradually approximates to the finished colour as described, and the final coat very often, from its tint, allows of little lead or body being used.

For ordinary new work the words of the specification are:—"Knot, stop, prime, and paint three oils or coats in best white lead paint"; the only difference between inside and outside work being that "boiled oil" should be used for all parts that are exposed to the sun.

Old work should be well "cleaned, rubbed down, and stopped" before the coats are applied in the ordinary way.

Varnishing is the process of coating plain or painted work with a colourless material called "copal varnish," a mixture of resin and oil or turpentine, which forms a very hard, glossy, and durable coating.

Graining is an additional coat of paint applied on the ordinary four-coat work, and marked or scratched over to imitate the grain of oak and other woods.

Ironwork should be painted with oxide of iron paint, as the lead in the ordinary mixture is said to cause an injurious galvanic action between the two metals.

Glass and Glazing.—*Glass* is a transparent material, used for giving light through openings, while excluding the elements. It is a mixture of

white sand, soda, and chalk, in various proportions, melted together at a very high temperature, and then formed into the various kinds required. These include "crown," "sheet," and "plate" glass.

Sheet glass, the most useful variety, is made by blowing the heated glass into cylinders, which have their ends cut off and periphery split down, so that the glass can be flattened out in a kiln, under the action of heat, applied to open it out, after which it is allowed gradually to cool. The various kinds of sheet glass are distinguished by their weight per foot, super., as 16 oz., 21 oz., 26 oz., and 32 oz.

Plate glass is, of course, a superior kind, made of thicknesses varying from $\frac{1}{8}$ inch to 1 inch, by which thicknesses it is described and distinguished. In the process of its manufacture the glass, when at a white heat, is placed on a table and rolled to the required thickness; after which it is polished over or left as *rough-cast*. Its advantages over "sheet glass" are that it is much stronger and less affected by atmospheric influences, while it cannot be cut noiselessly with the diamond—which renders it an enemy of burglars.

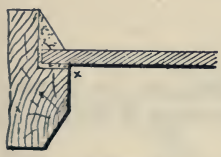

Fig. 887.

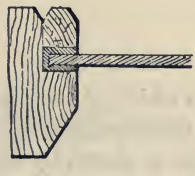

Fig 888

Rough-cast—the resulting material without the polishing—has a rather wavy appearance, but is otherwise as strong and advantageous as the polished plate.

British polished plate glass is even superior to the ordinary "polished plate," though of the same material; its superiority being the result of grinding the surfaces down truly before polishing.

Hartley's rough rolled plate is of similar composition to the "plate," but it is rolled on a patent ribbed table, which gives it the advantage of admitting light without scorching, glare, or diminished transparency.

There are numerous other varieties of glass, chiefly made out of the different manufactured products above explained, and rendered different by the labour and colouring matters expended on them and used therewith.

Glass is cut into squares or panes of the required size, and secured by means of putty (a stiff, pasty substance of whiting and oil) into the wood or iron rebates, as fig. 887, which shows the glass puttied and *back-puttied*, as at X; or it is secured and bedded in washleather, by means of wood fillets or beads, as fig. 888.

As the putty used in glazing cannot be made of a suitable lasting material, but is perishable, the necessity has arisen of late years of employing other means of securing the glass to the framing, especially in skylights and other exposed flat or sloping surfaces.

A simple method of attaining this object is to secure it by sprigs driven into the woodwork at the bottom of the sheet and at the sides, as fig. 889,

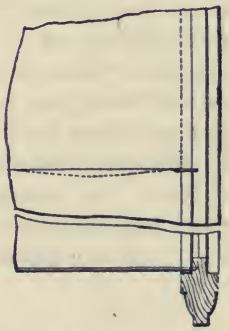

Fig 889

in addition to which, if the glass is cut circularly on the bottom edge, all water will be collected, and will run down the centre of the light clear of the putty and bars, as shown by dotted lines.

Patent Glazing.—Among the many patented methods of accomplishing this result, now in vogue, may be mentioned the following:—

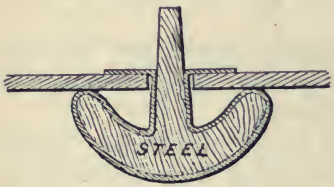

Fig.890.

Fig.891.

The British Patent Glazing Company's Patent, consisting of steel bars and sheet lead, as illustrated by fig. 890, from which it will be seen that no water can enter and drop through their system, as any water penetrating between the bars and the lead is collected in the groove of the bar.

Messrs. Braby's Patent, consisting of wooden bars of any size and design, and zinc, etc., is illustrated in section by fig. 891.

Messrs. Grover's *Simplex* is shown in figs. 892 and 893, from which it

will be seen that their method consists of a patent lead strip, as fig. 892, fixed to wood bars and turned down on the glass, as fig. 893.

Fig. 892.

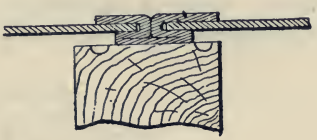

Fig 893.

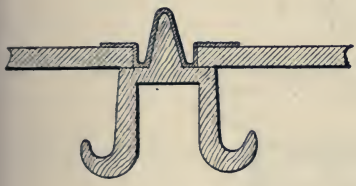

Fig. 894

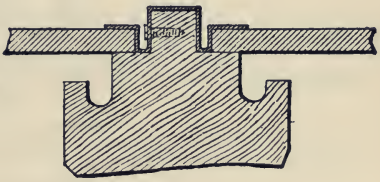

Fig. 895.

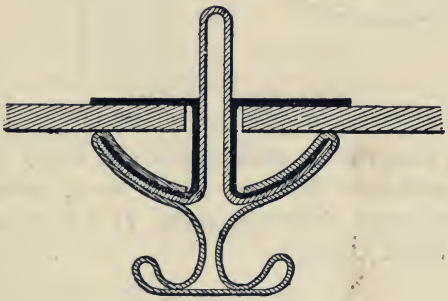

Fig 896.

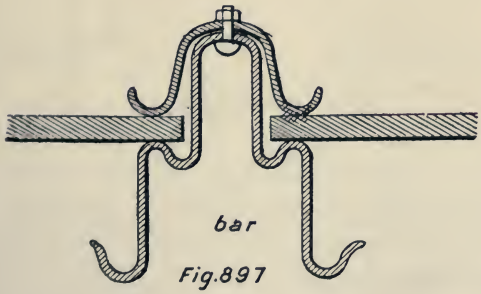

Fig. 897

The *Pennycook* Patent is illustrated by figs. 894, 895, and 896, from which it will be seen that this system can be adapted to iron, wood, or metal bars.

Helliwell's Patent consists of metal bars and capping, as fig. 897, and Rendell's of similar materials, as fig. 898 in section.

There are many other similar patents, including that of Messrs. Mellowes (of Sheffield), which is extensively used throughout the country, though those above illustrated are quite as good and effective.

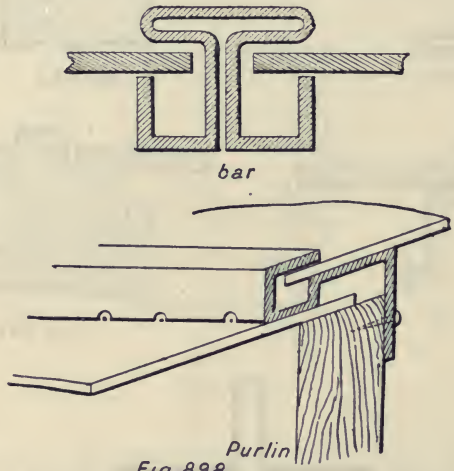

Fig 898

Duroline is a substitute for glass in positions where glass would soon be broken. It consists of thin wire-woven work, covered over by a transparent thin substance of different tints. It is fixed on rafters by zinc nails, and lapped at the joints.

CHAPTER XXII.

CENTRING, FOUNDATIONS, SHORING, SCAFFOLDING, SEWERS.

Centring—Foundations—Different Soils—Sewers—Shoring and Strutting—Scaffolding—Hoisting Tackle—Underpinning.

Centring.—Centres are framed structures for temporary purposes, used in throwing arches over apertures, etc. They have their top shaped to the required curve of the arch, are made specially for the dimensions of the opening, and act as a support to the constituent parts of the arch during construction, and until each member has taken its proper bearing, and the whole has become one solid mass.

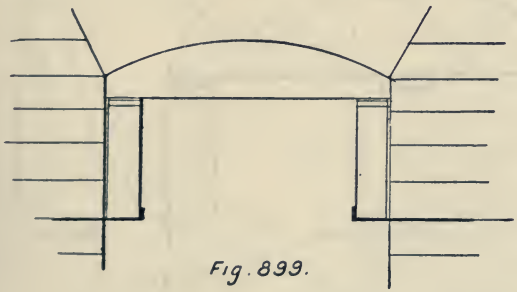

Fig. 899.

For small arches, and only $4\frac{1}{2}$ inches deep on soffit, a wood *turning-piece* is used—*i.e.*, a strong piece of wood about 3 inches wide is cut to the required curve of the arch, and fixed just below the springing, generally by means of bricks held up by nails driven into the joints of the reveals, as fig. 899.

For openings of a larger size the centres are formed of two outside pieces, cut to curve, and with small pieces called *laggings* nailed at right angles to their faces across the top, as fig. 900, while the bottom is

secured in a similar manner, the whole being frequently fixed by bricks in precisely the same manner as last explained, though when of larger sizes they are *horsed up* by upright supports strutting up, as it were, from the sills or other flat horizontal surfaces below, as shown on the illustration.

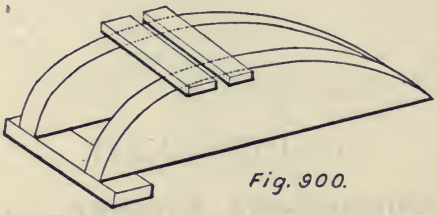

Fig. 900.

The centre itself is raised into its exact position by means of two wedges driven together and placed on the horizontal piece across the support, or on the supports themselves, or bricks at each springing, as at XX on fig. 901. For rough arches these laggings, of about $\frac{3}{4}$ inch ×

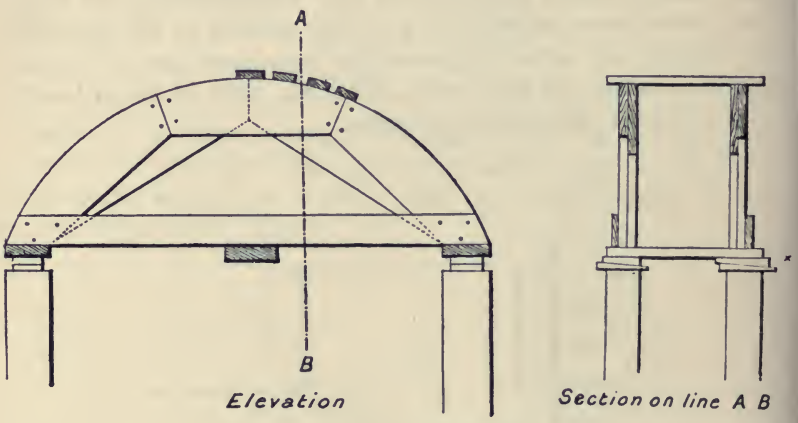

Fig. 901.

$\frac{1}{2}$ inch in size, are spaced at about their own width apart; while centres for faced work, and especially for rubbed and gauged arches, must be *close-lagged—i.e.*, their lagging must butt up to each other and the arrises eased off, to give the line a true unbroken curve.

When the opening is so wide and the rise so high that the curved ribs (to which the laggings are nailed) cannot be cut out of ordinary-sized stuff, the centres have to be built up by lapping and nailing two thicknesses together to make the one rib, as fig. 901.

Fig. 902 shows the centre for a still larger arch, built up and framed, the radii and cross pieces being halved or dovetailed together, and to the ribs, as shown.

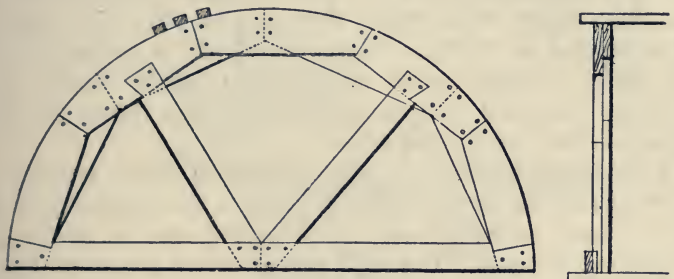

Fig. 902.

Fig. 903 is a sketch of a framed centre, as seen from a point of view above it.

Foundations.—Foundations, as a rule, should be 3 feet below the general surface of the ground—*i.e.*, the trench excavated to receive the bottom of the concrete, or brick footing, should be 3 feet deep, especially

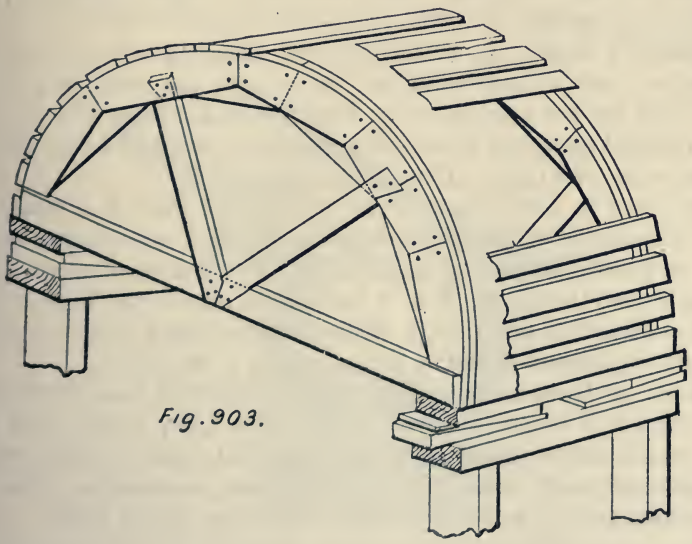

Fig. 903.

in clayey ground, which is liable to be affected by both heat and rain, the former in particular causing it to crack to a depth even exceeding 3 feet. Of course it will be understood that the nature of the ground varies enormously in different parts of the country, sometimes in different parts of the

same town, and even, in some cases, in different streets or gardens, two soils differing in nature often being closely adjacent.

A *good* foundation should be in solid as opposed to *made-up* ground; it should be incompressible, and of the same nature throughout, the strata being at right angles to the weight they have to carry—*i.e.*, horizontal, instead of dipping or sloping. When punned with a rammer it should sound "solid," a hollow sound indicating an inferior nature below; and it should resist the pick or crossbar well when driven in, without disintegration of the surrounding mass.

All foundations, of whatever kind, should be made perfectly level (except where they are *stepped*) before they receive the concrete or footings, ground of a stony or rocky nature being levelled with the pick, and the softer kinds well rammed. The solid ground should always be reached; and if there are great variations, etc., arches should be thrown over weak places, when at a great depth, from piers built on the solid. If a solid stratum be reached, with an inferior one below, it is unadvisable to go any deeper, if that solid stratum is sufficiently strong to carry the weight required.

Where the nature of the ground will not allow of the building being built on it with safety, concrete, of specified and adequate depth and strength, is employed in the trench to assist the natural ground by distributing the weight.

Different Soils.—In dealing with the following different kinds of ground, it must be understood that the remarks are made in a general sense, and are not intended to lay down any hard-and-fast rule, as in all cases personal inspection of the site is absolutely necessary before deciding on any points with regard to foundation work.

Solid rock in foundations cannot be bettered when it is sound and alike all over, so that it would be ridiculous to take it out merely to replace it by an inferior article such as concrete. However, the bottom should be made truly level; or, if it is uneven by nature, the loose inferior portions should be taken out, and those places arched over to and from the solid, or concrete should be put in, *lapping* at the joints.

Gravel is the next best and most suitable soil for a sound foundation; and where it is sound it cannot be improved upon, though when it is loose and coarse it should be grouted with lias lime or cement-mortar of required strength, according to circumstances, or otherwise a thin bed of concrete may be put in the trench on the top of the gravel.

Foundations of loose gravel, however, are apt to slip, and consequently the sides must be shored by one or other of the following methods: In tolerably good ground *poling boards*, in size about 9 × 2 inches or 9 × 3 inches, are placed at intervals, in pairs, on each side of the trench, and strutted apart by stout members, small pieces of scaffold poles, from

4 to 6 inches in diameter (as fig. 904), being generally sufficient for the purpose. But where the ground is looser the poling boards must be placed close together, perpendicularly, with *walings*, which are placed

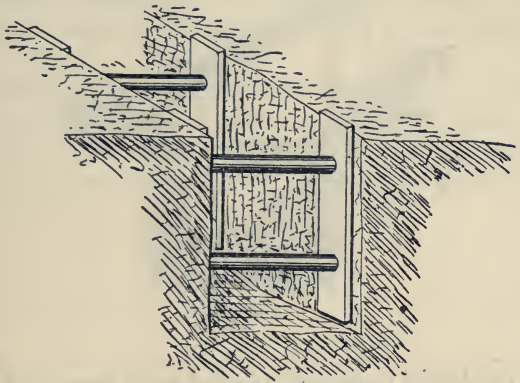

Fig. 904.

horizontally inside them, and strutted from one to the other, at intervals of every 2 to 4 feet, as fig. 905; the poling boards, in this case, varying from $1\frac{1}{2}$ to 3 inches thick, and the walings being usually 11×3 inches.

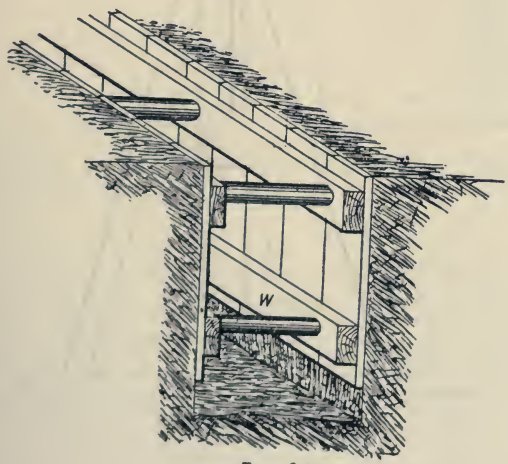

Fig. 905

In running sand it will be obvious that it is impossible to wait until a sufficient depth has been dug out to allow of vertical poling boards being used without the sides previously slipping in; wherefore *sheeting*, as shown

in fig. 906, is used, laid longitudinally, and secured by poling boards and strutted, as in the first instance (fig. 904).

Reverting to the consideration of the various natural grounds, the next

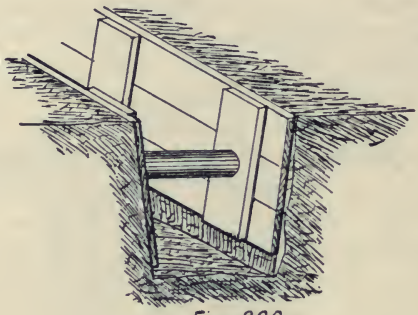

Fig 906.

in order as a substantial formation is a good hard, *sound clay*, which should lie in horizontal strata, as a dipping clay is apt to slip downwards and cause settlements. It is necessary that clay should be well drained, so that the

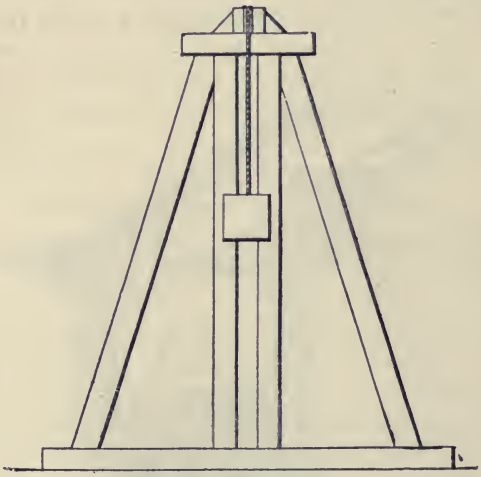

Front Elevation
Fig 907

rain shall not have time to affect it so much as to cause any considerable alteration; and the bottom of the concrete, or top of the clay, should be at such a depth as to be beyond the influence of heat, as it is well known that the sun is very apt to cause deep and frequent cracks in clayey ground.

Excavations in hard clays do not always require shoring, though it is advisable to adopt that precaution in the case of the weaker kinds of clay.

Chalk, from its nature, is a very uncertain foundation; though the harder and better qualities may sometimes be as good as rock, while the softer kinds are always very bad, and liable to be greatly affected by wet.

Sand, in whatever form, and especially quicksand, is a most treacherous soil for foundations, having no power to keep itself together, as it were, so that it must not be taken into any account. The best course is to remove it by excavation, if practicable, and replace it with a layer of con-

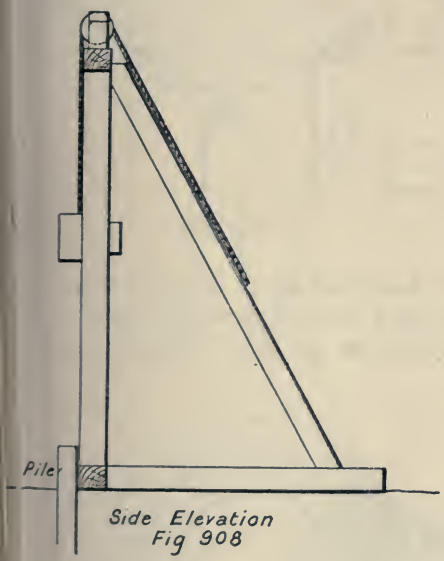

Side Elevation
Fig 908

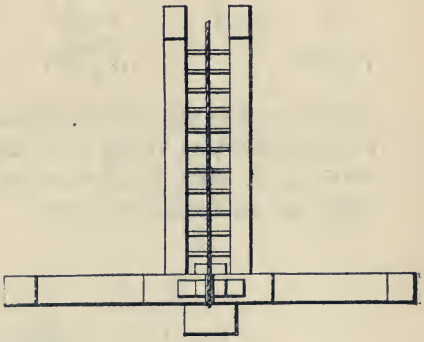

Plan
Fig. 909

crete. Where such sand and other boggy and soft soils are present and of considerable depth, so that the bottom thereof cannot be reached without too much trouble and expense, for their removal, as ought to be done, platforms of wood or *fascines* are adopted and made to carry the whole building, floating, as it were, on the top of the sand; while, in the better qualities of this loose ground, *piles* of square timber of considerable length are driven down to a solid foundation.

This is effected by means of heavy weights, called *monkeys* or *rams*, being directed on to their top by guides held up by framing, as shown in figs. 907, 908, and 909, the weights being elevated by hand or by suitable machinery to a certain adequate height, and then allowed to fall on the head of the pile, which is encircled by a wrought iron ring to prevent it

from splitting under the force of the impact; while the bottom or point of the pile is shod with an iron-pointed shoe, as fig. 910.

These piles are from 9 to 12 inches square, and spaced at from 1 to 3 or 4 feet apart in each direction, as shown in fig. 911, being driven firmly into the solid ground, while their heads are connected by bearers of timber of various sizes into which they are tenoned, and on these

Fig. 910.

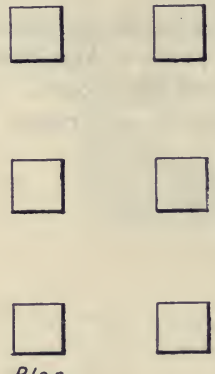

Plan
Fig 911.

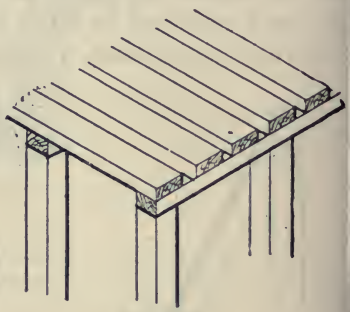

Fig. 912

bearers are laid the wooden planks, or stone slabbing on which the foundations are built, as in fig. 912; the spaces for a short depth, below and between the piles, being occasionally dug out and filled with concrete to make one solid mass at the top.

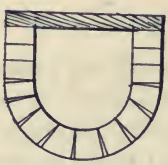

Fig 913

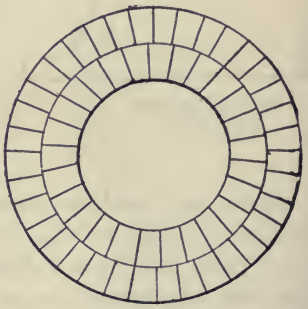

Fig. 914

The use of inverted arches for the distribution of the weight in variable foundations has been dealt with in Chapter III., to which the student is referred.

Sewers.—*Sewers* are large drains, which are of a size beyond the limit of the use of glazed or other piping for the purpose, built of brick, and circular, oval, or egg-shaped in section. It should be pointed out that

glazed stoneware pipes are now made in sizes up to 3 feet in diameter, so that brick sewers, on account of their awkwardness, would not be built of any sizes below this limit, to supersede piping.

Therefore, the first kind of brick sewer in general use is what is called a *culvert drain*, the straight sides and circular bottom being built of brickwork, either $4\frac{1}{2}$ or 9 inches thick, and covered over with stone slabs, as fig. 913; or the sewer is built quite circular with special bricks, as fig. 914; though this is the more awkward method of the two.

Where sewers, built on the above lines, are of such large dimensions that true circles would take up too much room, and render them nearly

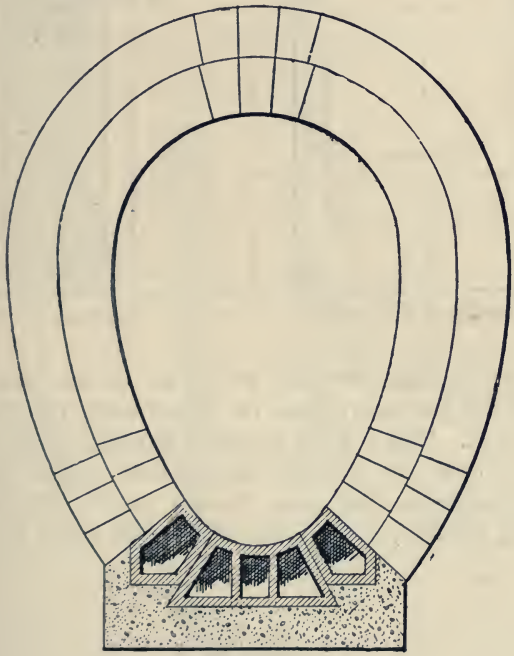

Fig. 915

flat where a good curve to the invert is required for the quick flow of sewage, they are built egg-shaped, as fig. 915; from which it will be seen that the sewage, whether its volume be great or small, has the best and most equal chance of the necessary quick flow in this form, whereas in the circular kind this cannot be the case. As a rule, the bottoms, or *invert* blocks, should not be of more than 9 inches radius (the smaller the better, within reason), and of glazed stoneware. The general proportion for the widths and heights is that the diameter of the top circle is double that of the bottom or invert, and the internal height from bottom

to top three times that diameter, the remaining space between the circles at the side walls being lined in with arcs tangential to both circles.

Shoring and Strutting.—*Shoring*, as applied to excavations, has been dealt with previously; and it is now proposed to give the student an idea of shoring to buildings which require additional support, when the adjoining or part of their own property has been pulled down.

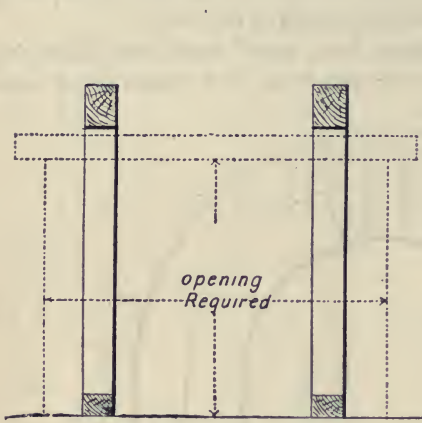

Elevation: Fig. 916

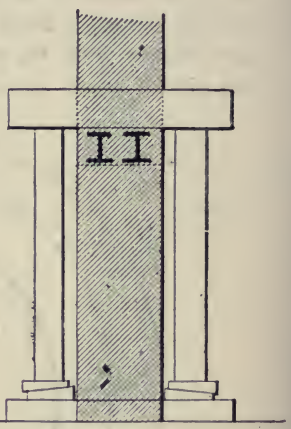

Section: Fig. 917.

In cases where large openings are to be cut into main walls it is necessary that the part above must be shored while the girders to carry it are being put in. This is done by means of struts, posts, or legs, raised perpendicularly from the balk-sills on the solid ground or floor *made solid*, and supporting needles going through holes cut above the height of the opening required, as figs. 916 and 917, the whole being tightened

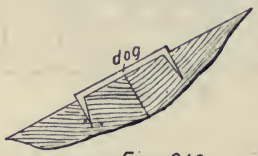

Fig 918

up by wedges, at the feet of the posts, as shown on the side elevation. The dotted lines show the proposed position of the girders and the opening to be cut in the wall after the weight above has been secured by the shoring, which is generally constructed of balk-timber 10 or 12 inches square, as required.

The joints, as in all strutting or shoring, are either bolted together or secured by wrought iron *dogs*, as fig. 918, driven home into each member.

When one house between two others has been pulled down (which is the more usual occurrence) a temporary timber framing, consisting of several trusses, is built between the two from wall to wall, to allow each to prop the other, as it were. These forms of course vary infinitely, and are of varying strengths, according to the spans and distances apart, if the depth of the opening requires more than one set of framing. A long plank is placed vertically up the walls of each house, and the framing is built in and wedged tight between them, as fig. 919; or where one house

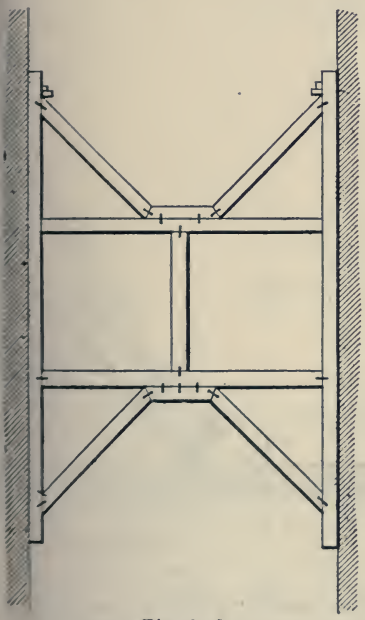

Fig. 919.

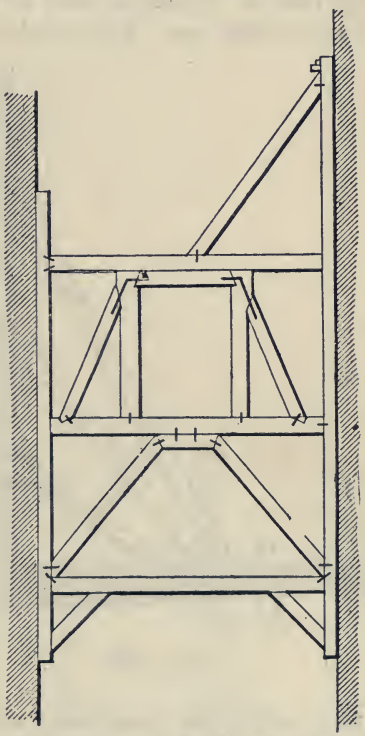

Fig. 920.

is taller than the other, and the width requires a truss similar to king or queen posts in roofs, they are treated as in fig. 920, though the work can be done in various other manners, and different men have different ideas on the subject.

Angles of buildings which require to be strutted, and end houses which cannot be strutted from another building, are dealt with by means of *flying shores*, as fig. 921, with long timbers, or as in fig. 922, with short timbers secured by boards nailed on each side, and bound together with hoop iron. The butting pieces in the ground, backed up by the vertical

post solidly driven into the ground, should incline at right angles to the pressure of the chief shore or strut. Each of the shores is secured at the top, as in fig. 923, a hole being cut into the upright plank and wall, into which the *pin* or *needle* is driven. This pin is assisted by a cleat nailed above it, and the shore is butted up and wedged against it, as shown.

Scaffolding.—*Scaffolding*, as familiar to everybody, is a series of temporary platforms, raised up, as the building increases in height, to allow the men to work from them at various stages, and store their materials for immediate use. They consist of poles, ledgers, putlogs, boards, cords,

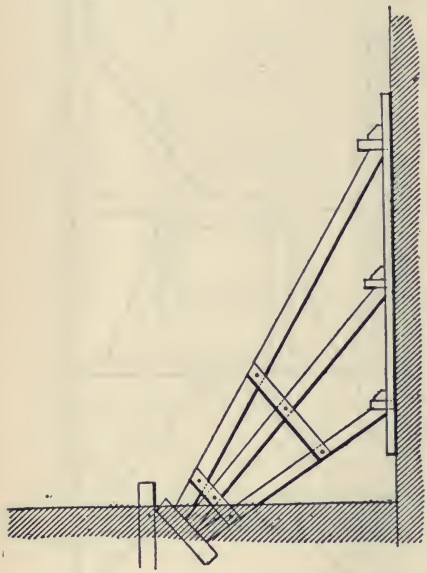

Fig. 921.

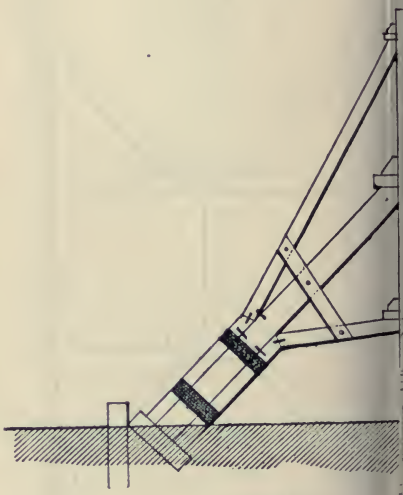

Fig. 922.

and wedges, the poles being the upright circular members, secured in the ground about 9 feet apart, as A, on figs. 923 and 924. The ledgers, B, running longitudinally at every different rise of 4 or 5 feet, are secured by the cords 18 feet long, bound tightly round the two and wedged up. From the ledgers to and into holes in the wall (which is about 5 feet away) the putlogs C are laid every few feet to receive the boards D, which form the platform. When the framing is of any height it is braced, as shown by the ordinary scaffold poles, secured by the cords, and wedged like the ledgers.

Masonry requires stronger scaffolding, which is, therefore, usually strengthened for the purpose by the use of 3-inch battens, instead of $1\frac{1}{2}$ inch planks, to form the platform; and also it will not allow of putlogs

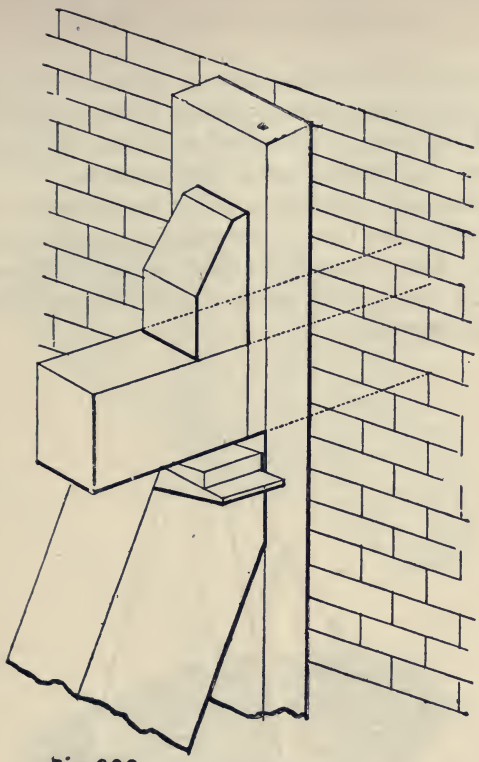

Fig. 923.

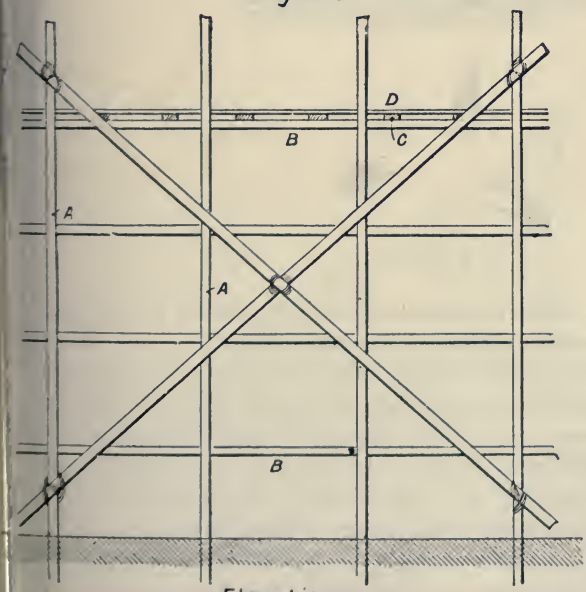

Elevation
Fig 923

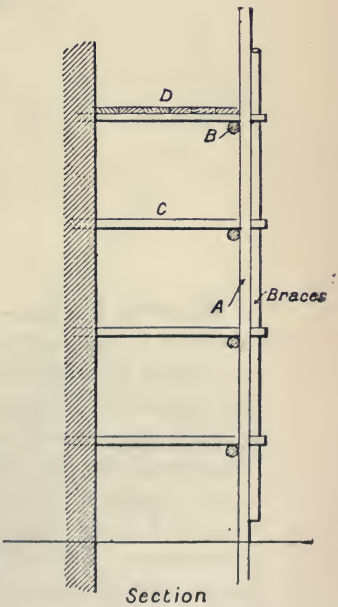

Section
Fig 924

going into the walls, in which case they are strutted up from one platform, or height, or putlog, to the other, by planks placed against the wall.

In Scotland the work is built from the inside, the working platforms being raised from floor to floor as the work proceeds.

Gabers scaffolds are little used, so it is unnecessary to enter into particulars about them, more than to say that the standards, putlogs, etc., are made by bolting deals together, the whole being cross-braced, and bolted to the standards and to one another, presenting an appearance like a quarry floor laid diagonally.

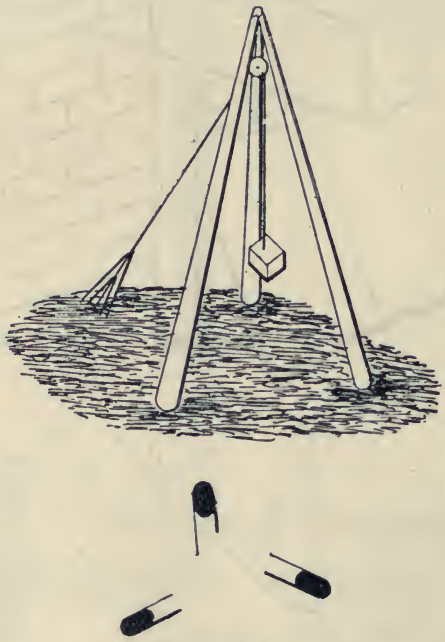

Fig. 925.

Hoisting Tackle.—*Stones* are lifted and set into position in the work by means of ropes and pulleys supported by *shear-legs* (as fig. 925), which are scaffold poles let into or bedded in the ground securely; or the pulleys are secured to the apex of two poles held in position by guy ropes, as fig. 926; and when the work gets beyond the use of these methods, above the ground, derrick cranes are employed to hoist up all materials and to bed stones, though they are often used on the ground floor in place of shear legs or guy ropes and poles. They consist of two legs, from platforms or beds, fixed on the various floors sufficiently weighted to prevent any slipping out, inclining up to an apex to which an upright is raised from another platform immediately under the apex, on which also

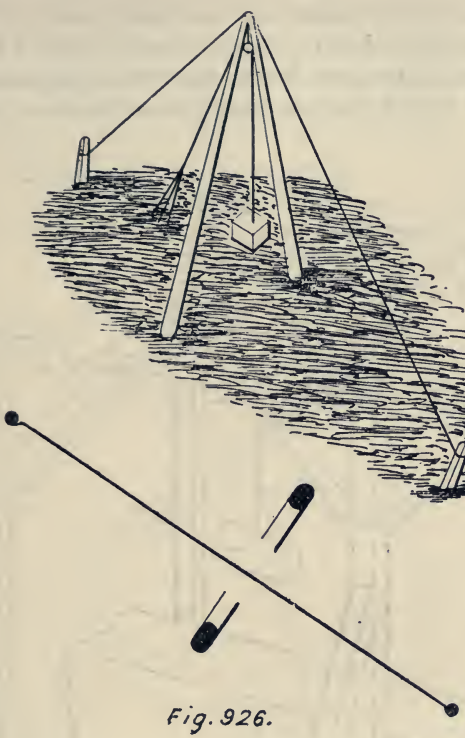

Fig. 926.

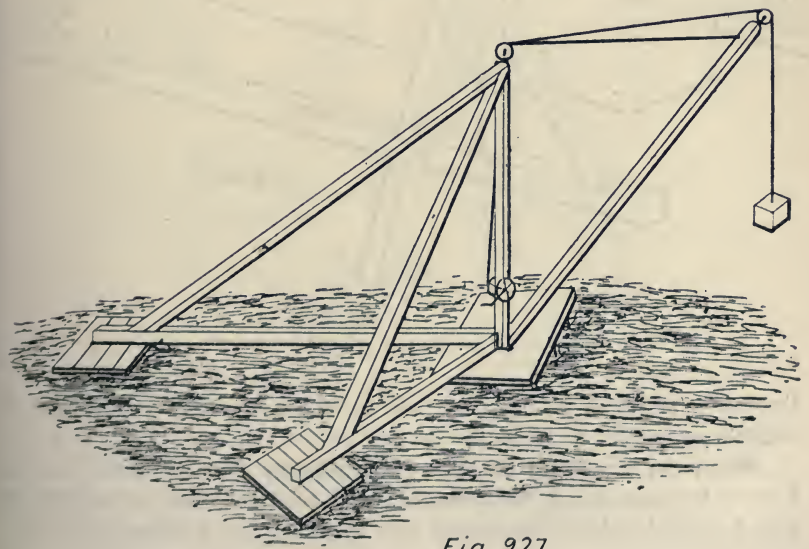

Fig. 927.

stands the apparatus for winding up the chain, which goes up to the apex and thence to the end of the derrick or gib, which is hinged at the bottom of the foot of the post beside the winding apparatus, as shown in fig. 927. This derrick or gib is raised up and down as required, and,

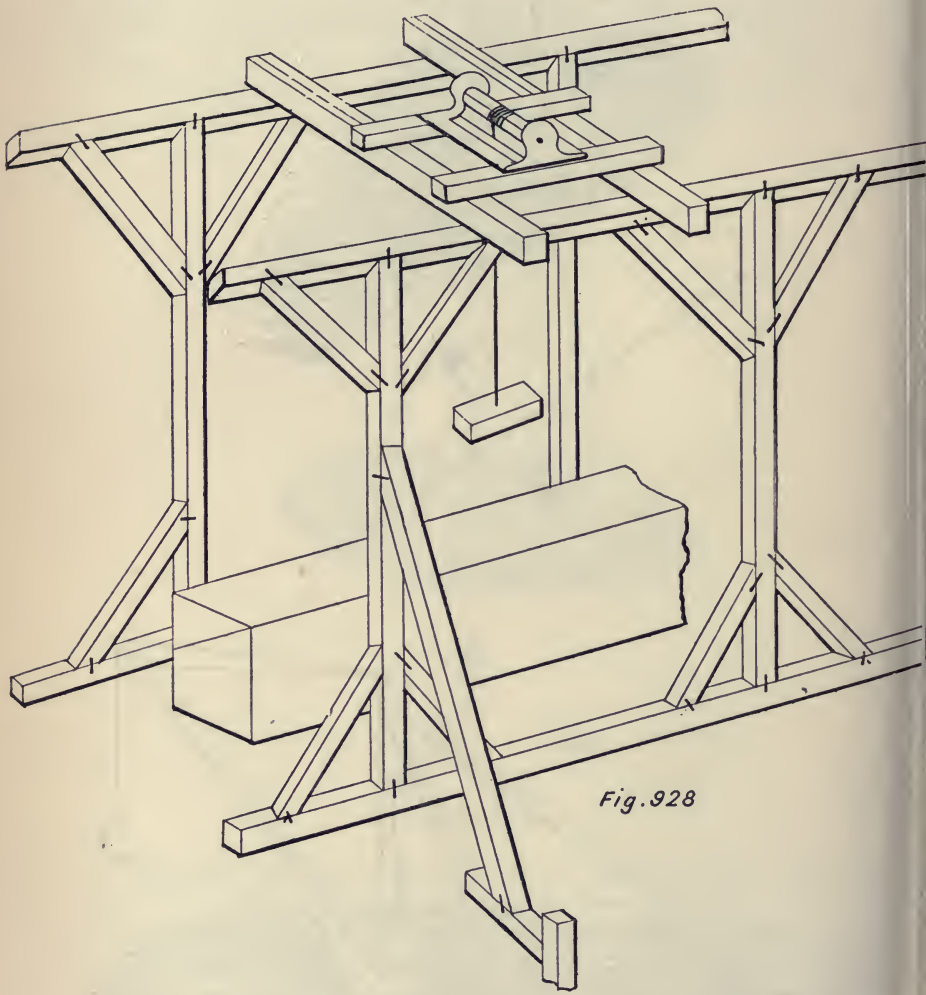

Fig. 928

through a pulley at its top, the chain to lift the stones s worked from the winding apparatus.

When the stones are too heavy for ordinary derrick cranes travellers have to be constructed, consisting of strong platforms made of balk-timber raised on each side of the wall up to a height so that a trussed beam from one to the other can work or travel along above the required height of

the wall. These trussed beams—for they are in pairs—run on wheels on rails fixed on the upper face of the top beams of the framing on each side; and they support the jenny or crab which runs across, from side to side, on wheels guided by rails on the trussed beams.

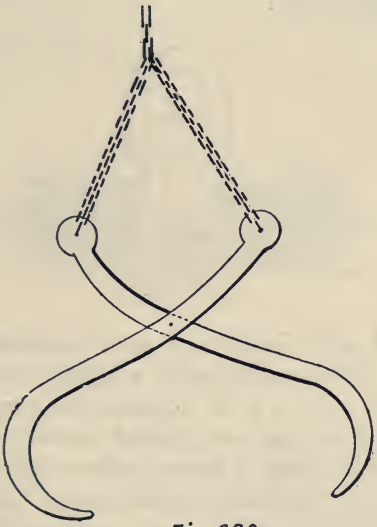

Fig. 929.

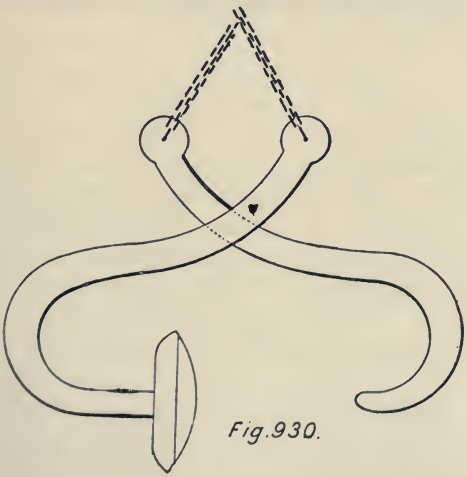

Fig. 930.

The jenny is used for hoisting the stones, and can be moved to any position along the traveller beams, which in themselves can be worked along the side framing, as the sketch will indicate (see fig. 928).

The stones lifted by either of the above methods are grasped by nippers, as fig. 929; and also with a round block, as fig. 930, on one

side, whenever the face might be injured by the nippers tightening when the weight hangs on them.

Another method is to cut a mortise in the top bed of the stone, and insert a *Lewis*, as fig. 931, which, it will be seen, is dovetailed in, and secured to the chain or rope.

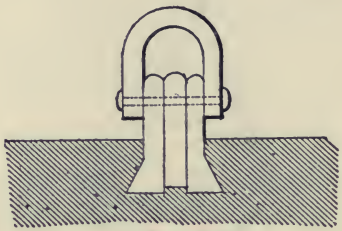

Fig. 931.

Underpinning is the building of walls underneath an existing wall, or structure, such as cellar-walls below a building where there has been no cellar previously. These works require great care, so that settlements or the collapse of the building are guarded against; and with this view all underpinning should be done in cement-mortar, and in very short lengths, 2 or 3 lineal feet only of excavation being taken out at a time, and the work built up and wedged tightly and completely to the existing wall above before any more earth is taken out from under the wall further on.

CHAPTER XXIII.

MISCELLANEOUS MATERIALS.

Asphalte—Granite—Limes and Cements—Mortar—Concrete—Marble—Terra-cotta—Artificial Stones.

It is proposed in this chapter to deal with certain building materials which have not been treated of in (as it were) their proper places, in reference to their application and use.

Asphalte.—*Asphalte* is a limestone saturated with naphtha, found in a natural state on the Continent at places enumerated below. It can also be made artificially by a combination of bitumen (in the form of *pitch*) with other solid matter. The natural asphalte is generally ground and run into moulds, with sand and a little pitch (when it is called mastic), and sold in small blocks containing a little more than a cubic foot. It is made fit for use by being melted in a furnace and applied on the walls while hot; and as it has the qualities of being frost-proof, damp-proof, and fire-proof (up to a certain degree), it can be used for damp courses, for protecting damp walls, covering roofs, and for baths, skirtings, and street paving. It should be laid by experienced workmen, in layers from $\frac{3}{4}$ to 1 inch thick, and rubbed to a smooth surface, on a suitable bed of concrete, also floated to a smooth level top, as a foundation for the work.

Of the various kinds of asphalte in the market the following are the chief:—

Limmer, found near Hanover in a natural state, and used for general purposes in the usual way.

Seyssel, or Claridge's asphalte, as it is called, is found in the Jura mountains, near Pyrmont-Seyssel, on the eastern frontier of France, in a rocky state, containing about 90 per cent. of carbonate of lime and 10 per cent. of bitumen. There are three qualities of it—the fine, fine-gritted, and coarse-gritted—used for the different kinds of work previously enumerated.

Val-de-Travers asphalte is found near Neufchatel, in Switzerland, in a rock containing from 12 to 20 per cent. of bitumen, which renders it a first-class asphalte, and suitable for the best work.

Asphalte damp courses are often made by mixtures containing coal-tar pitch and real pitch, in the original natural form of bitumen, the material which makes the limestone rock asphaltic, and which is found in its pure state in Palestine, near the Dead Sea, and also in the island of Trinidad.

Granite.—*Granite* is an igneous rock, containing quartz, feldspar, and mica, usually in the proportions of about 5, 4, and 1 respectively. Found in Scotland at Peterhead and Aberdeen, in Aberdeenshire, and in Kirkcudbrightshire; while in England it is found at Mount Sorrel, in Leicestershire, and several places in Devon and Cornwall.

The quality of the granite depends on the quartz, both for hardness and durability, while the feldspar gives it its colour, and has a great effect on its weathering properties, bad feldspar causing the disintegration of the mass. The mica, though in small quantity, is a source of weakness, and must not be taken into account, except when there is too much of it.

Granite is quarried by blasting and wedging; it is dressed in the quarry, because it is so hard when it loses its sap, and it is capable of taking a high degree of polish. It is used chiefly for ornamental purposes in the building trade, principally for shafts or columns and bases to large buildings. The Leicestershire granite is of a pink colour; the Devon and Cornwall varieties are chiefly grey; and the Scotch kinds either red or grey; while Syenite, or Syenitic granite (found in Egypt, and containing hornblende instead of mica in the first instance, and, in addition to the quartz, feldspar and mica), is darker in colour owing to the hornblende, and tougher than the British varieties.

Lime and Cements are the products of limestones of various composition, burnt in kilns by calcination, as it is called.

Lime.—Pure lime, in itself, has neither power of setting nor ultimate strength, and it is only when combined with clay and burnt that it is of value as a building material. The presence of clay, up to a certain percentage, regulates the value of its strength and setting power, a pure, rich, or *fat* lime (as explained and used for plastering) containing little or no clay, which allows it to slake at once with a loud crackling noise and considerable steam. It is only fit for plastering and other sanitary purposes, and can be made out of most pure limestones, including the Bath and Portland varieties, marble, and chalk.

Poor lime is the next degree, containing from 80 to 90 per cent. of carbonate of lime, with a residue of sand, and other qualities which give it no hydraulic properties, as its power of setting under damp conditions and in water is called. It may be termed a useless variety as compared with the others, considering that it slakes sluggishly and imperfectly, which makes it valueless for plastering; while for mortar it is worse than "fat" lime, because it will neither increase so much by slaking, nor take such a quantity of sand, being neither one thing nor the other. Rich and poor

limes never set hard, though sometimes they may harden a little on the exterior only.

The first best, as a good, quick-setting, and strong lime, is called a *feebly hydraulic* lime, containing 80 to 90 per cent. of carbonate of lime and 8 or 10 per cent. of clay, which are the required ingredients. The small amount in which it is present in this kind is not as much as is wanted, though its slaking may be considerably reduced. The clay is required to such an extent that its silica and alumina will take up in combination most of the lime, forming silicates and aluminates of lime, the former being formed at an early stage of the burning, and the latter after subjection to a considerable degree of heat; and it is this fact which makes it necessary that the stronger limes and cements should be the more burnt.

This combination reaches its state of perfection (as about to be explained), and then it declines in efficiency and value, owing to the presence of too much clay.

Hydraulic limes, the fourth class, contain from 15 to 20 per cent. of clay, which takes some time before it begins to slake, and then only in a small degree. It sets in about a week, and is fairly strong. It is the product of grey chalk, found in Sussex and Surrey.

An *eminently hydraulic* lime contains from 20 to 30 per cent. of clay, is of a greenish-yellow colour, found in the lias lime formations at Barrow-on-Soar, in Leicestershire; Rugby and Stockton, in Warwickshire; Whitby, in Yorkshire; Lyme Regis, in Dorset; and Holywell, in Wales. It sets hard and quickly, and is very difficult to slake.

When the clay is mixed with the lime in a natural state, or otherwise artificially in the proportion of 1 and 2, the resulting combination of chemicals obtained at a great heat is called a *cement*, the Portland variety being the best, of which there are two different kinds, slow and quick setting—the former being heavy and the latter light in weight.

Cement.—Generally speaking, cement is made from cement-stones or pebbles, containing from 30 to 35 per cent. of clay, which proportion is the best for the complete combination of the different constituents, as previously pointed out.

This natural cement is made chiefly at Rugby and Stockton, in Warwickshire, and in Kent; while artificial varieties are made in different parts of the country (principally in the south) from a mixture of white chalk and unburnt clay, in the proportion of about 2 to 1, which is calcined at a very high temperature to produce a heavy, slow-setting cement.

Good cement should be of a very fine powder, leaving no more than 10 per cent. residue when sifted through a sieve of 2,500 meshes per square inch. It should be clean and cool to the arm when thrust into it, and

it may be either quick or slow-setting—the slower it is the stronger it ultimately becomes, weighing up to 120 lbs. per striked bushel; while the quick-setting quality weighs from 95 lbs. to 112 lbs. per bushel. It is capable of bearing a tensile strain of 350 lbs. per inch superficial, and is of a greenish-grey colour; a brown tint indicating excess of clay, and blue excess of lime. It should be stored on wooden floors in dry sheds.

Roman cement contains too much clay (from 30 to 45 per cent.), producing a brown quick-setting material, weighing no more than 75 lbs. per striked bushel, and of little ultimate strength compared with Portland. It is useful, however, in work which has to be done quickly, such as sea-walls, etc., requiring that the work should set in the interval between tides.

Selenitic is a patent artificial cement, made from lias lime, by the admixture of plaster-of-Paris or a sulphate of lime, which stops all slaking, and makes the cement set quicker, with a greater proportion of sand, without apparent loss of strength.

Pure and poor limes are sold in lumps by the ton; lias limes in lumps or in bags, when ground for concrete purposes; while cements are sold either in bags or casks.

Burning Lime, of whatever quality of the stone or lias kinds, is burnt in clamps or kilns of both Tunnel and Flare varieties, on both the intermittent and continuous systems; while cements are burnt in conically shaped, brick-lined kilns, as they require much more heat.

Clamps are very little used, as they are a poor and expensive way of working; the lime and fuel being placed in the clamps in alternate layers, and covered over with some material to keep in the heat.

Tunnel kilns are of different sections, on the continuous principle; the lime and coal being added from time to time through an orifice at the top, heated gradually, and abstracted, as it gets down in parts, from a hole at the bottom and away from the fire; while *flare* kilns are on the intermittent system, the usual cylindrical brick-lined spaces being filled with lime and fuel, and burnt all together, emptied, and then refilled.

Mortar is a mixture of sand with lime or cement in various proportions, according to requirements, to bind together the solid materials used in a building.

Limes should be first thoroughly slaked, and then mixed in a mortar mill with certain proportions of sand, ashes, brick, or stone dust, etc., being thoroughly ground and amalgamated together. When mixed by hand care should be taken that the lime and sand are screened, in order to separate all large lumps, etc., before the water is added to make it into the creamy mass required, no more being mixed under any circumstances than is required for the day's consumption.

Cement is generally mixed, by hand, with very clean, sharp sand-

mortar, which must be washed if necessary, though, on large buildings, cement is mixed by machinery; and although lime-mortar made by hand is inferior to that made by machinery, cement-mortar is not affected either one way or the other, on account of its fineness of grit and freedom from lumps.

The usual proportion for ordinary work, under no special circumstances, is :—

Poor and Pure lime	. .	1 part to	3 parts of sand.
Hydraulic lime	. . .	1 „	2 to 3 parts of sand.
Portland cement	. . .	1 „	3 to 5 „ „
Roman „	. . .	1 „	1 part of sand.
Selenitic „	. . .	1 „	4 to 6 parts of sand.

Concrete.—*Concrete* is a mixture of gravel, broken stone, slag, or brick, called *agglomerate* or *aggregate*, with either ground lias lime, Portland or Selenitic cements, known as the *matrix* when mixed with water. It is used in bad or uncertain soils to form a sound foundation for the superstructure, also for fireproof arches, and coverings to the ground, under floors, to keep out damp and receive layers of hard floors.

The proportions in which the agglomerate and matrix are mixed vary considerably, according to the weight of the proposed superincumbent mass, and the materials of which it is made. The usual admixtures are : 1 of hydraulic lias lime to from 3 to 5 parts of ballast or agglomerate, containing sand, gravel, slag, brickbats, etc.; 1 part of Portland cement to from 4 to 7 of ballast, etc.; or 1 part of Selenitic cement to from 6 to 8 of ballast, etc.

The matrix, consisting of the sand and cement, or lime, is often mixed into a mortar first, and then poured on to the agglomerate on a wooden platform, after which the whole is turned over and thoroughly incorporated. Otherwise, the lime or cement is thoroughly mixed with the agglomerate when dry, after which the water is added, and it is again turned over several times for the second mixing.

This mixing being done, the resulting concrete is either wheeled and thrown into the trenches from a height, or laid in gently from buckets, each stage of the process being followed by careful ramming together and levelling up.

No large stones should be allowed in the agglomerate or aggregate. Those for concrete foundations should be small enough to pass through a ring $2\frac{1}{2}$ inches in diameter; while those for arches, lintels, and other special work must pass through a ring $1\frac{1}{2}$ inches in diameter.

Marble.—*Marbles* are pure limestones, of very hard and compact natures, varying in colour, and capable of taking a high polish. They are found in Devonshire, Dorsetshire, Scotland, and Ireland; while consider-

able quantities come from the continent of Europe, and elsewhere. As a building material marble is chiefly used for ornamental purposes, in internal work only, such as columns, staircases, chimneypieces, and the like.

Serpentine is a similar kind of material, used for similar purposes, but much softer in its nature, though compact, and capable of receiving a first-class polish. It is of various colours, in streaky forms, from which it derives its name; and it belongs to the igneous rock formation, partaking of the nature of a granite or porphyry, and is found near the Lizard, on the south coast of England. When free from white streaks it is suitable for external ornament, though better adapted for internal work.

Trap or Whinstone is a hard mixture of feldspar and hornblende, of a crystalline nature, very tough, and of a green or black colour, used for setts, paving, road-metal, etc. The best quality is found in Northumberland; at Penmaenmawr, in Wales; and in Scotland.

Terra-cotta.—Terra-cotta, a substitute for stone, for dressings to buildings, is the product of a rich clay found in several parts of the country, especially at Ruabon, Rowley Regis, and Tamworth. It is made by mixing several kinds of clays with ground glass or pottery to prevent shrinkage. The mass is ground to a powder, mixed in water, finely strained, kneaded, and then cast into moulds of the required patterns, etc., then dried and baked in domed kilns, at a very high temperature, and gradually cooled.

It may be either of a rich red, pink, or buff colour, according to the presence of iron, the light varieties indicating insufficient burning, and a green tint a bad material, which will be very absorbent. The blocks in which terra-cotta is made are cast hollow, soaked in water, and filled in with fine concrete before being set in position in a similar manner to stonework. Terra-cotta has the advantages of great durability and hardness, combined with cheapness and light weight; but against these must be set the fact that the unequal shrinkage, caused in the burning by the nature of the mixture, is apt to prevent the work, especially mouldings, carrying good lines.

Artificial Stones are made, generally speaking, of finely ground stone, ballast, and sand, mixed with Portland cement or other setting materials.

Victoria or *silicated* stone consists of granite dust and Portland cement, mixed to a paste, cast into moulds, dried and immersed in a silicate of an alkali to give it a hard, durable, and stronger weathering face. It is principally used for pavings, as a substitute for the Yorkshire stones, for sills, copings, landings, steps, etc., because it is a cheaper article.

Apoenite and *Ransome's Patent Stone* are similar materials; the former being made, in the first instance, from a mixture of sand, silicate, and Portland cement, while "Ransome's" variety is made from sand, silicate, and chalk, mixed to a paste, cast into moulds, and immersed in chloride of calcium.

Both kinds are greatly used for steps, landings, pavings, and all other purposes where natural stones are used. They have the advantages of being cheap, requiring little labour, are non-absorbent, of great tensile and compressive strength, and light weight.

Peters' Patent Artificial Sandstone can be made of any colour and of grain according to the sand used in its preparation. It can be made in any district, and not necessarily at the manufactory, the quality and strength of the stone as at present ascertained being everything that can be desired.

Pozzuolana is a substitute for sand, of a clayey and ashy nature, found in Italy, in the neighbourhood of volcanoes, and is mixed with lime to make mortars and water cements.

CHAPTER XXIV.

STRESSES.

Definitions—Loads—Stresses—Reactions—Discernment of Strains.

It is only proposed, in this chapter (which is a preliminary to Chapter XXV., where the subject is more fully discussed), to deal with the above subject as far as the syllabus of the advanced course requires the student to go in that stage; and, as a necessary preliminary, an explanation will first be given of the general terms in use.

Definitions.—Different kinds of loads cause different stresses on structures, producing different strains, which the principle of equilibrium demands shall be met by reactions of corresponding power, to resist those actions successfully. The stress is the power of the load.

Thus, one man may push another against a wall with such force (equivalent to a load) as to cause a compressive stress, acting in a manner likely to crush him, unless he can call forth a reaction on his own part to resist the strain which that stress or action of pushing puts on his strength, and to prevent his being crushed against the wall.

Or, a team of men in a tug of war, by pulling, cause a tensile stress, which produces a strain on the other team, who must have the power to resist the strain imposed on them by such stress, or else they will be drawn over the line.

Or, again, the blades of a pair of scissors meeting, with a piece of material between them, cause a shearing stress, or action tending to shear or cut that material in two, unless it has the nature or power to set in a reaction, tending to resist or counterbalance the strain put upon it by such action or stress.

Having shown the student the *application* of the general terms, an explanation of each one individually, with the various forms it takes, will be given in detail.

Loads.—*A load* is the weight or power of the external forces acting on a certain structure, together with the weight of the structure itself; and

it may be either a live or a dead load, the whole of which is either concentrated at any one point, or at any number of points on the structure, or it is distributed equally over the whole, or any part, of the same.

A live load is a moving force applied suddenly and intermittently, accompanied by shocks and vibrations; such as a train going over a bridge, a sudden gust of wind on a roof, or a weight falling suddenly on a beam or floor; while

A dead load consists of a force or weight of a continuous nature, applied gradually and remaining; such as solid independent and unsupporting walls on breastsummers, materials stored on warehouse floors, etc.

It has been proved that live loads produce twice as great strains as dead loads of equal weight or force; therefore structures will carry twice as much dead load as live load.

A breaking load is that which is so great as to produce fracture to the structure, while *a safe or working load* is that which a structure will carry with safety and without any apparent risk. A safe or working load, causing a stress, is generally one-fifth of that of the breaking load. The ratio between the two, as one and five in this instance, is called the *Factor of safety.*

Stresses are the actions or forces which cause the strain, and are of six different kinds, including:—

"Compressive," "tensile," "shearing," "transverse," "bearing," and "torsional" stresses, the latter of which will not be dealt with, as it is not met with in buildings.

Compressive stress is that which crushes a thing, causing a strain of compression, especially present in columns and posts of buildings, while the struts in roof trusses are generally subject to it.

Tensile stress has a tendency to pull out or tear a material asunder, and is met with in all ties and suspenders, in roof trusses, and other framed structures. A simple method to distinguish between compressive and tensile stresses is to consider whether a piece of string or rope, of a flexible nature, could be substituted for the member without detriment to the structure, neglecting, of course, the amount of the stress. If rope or string would answer the same purpose, it may be regarded as certain that the member is in tension; and if not, it may be taken for granted that, in ordinary roof-structures, the member is in compression.

Shearing is that stress which shears or cuts the body, and is especially applicable to riveted joints, where one plate slips along the other, cutting, or shearing in two the rivets which connect them. The web of ordinary girders is subject to shearing, inasmuch as the top flange being in compression and the bottom in tension, or *vice versâ*, the two stresses have a tendency to draw together like the two blades of a pair of scissors

Transverse stresses are met with in the bearing members of a structure, such as lintels, joists, rafters, and breastsummers, on which the stress has a tendency to bend the member and break it across, if it has not sufficient power in itself to resist the strain put upon it by the action or stress caused by the load.

Bearing stress may be said to be the opposite of shearing, as the action on the plates, caused by the successful resistance of the rivets to being cut in two, results in the rivets cutting into the plates compressing or stretching them (when of insufficient strength), so that the rivet holes are enlarged.

Shearing affects rivets, and *bearing* the plates, in riveted joints.

Reactions.—The principle of equilibrium demands, for the sake of stability, that the strains which these stresses impose upon structures and their different members shall be met by a resistance in the nature and strength of the materials capable of withstanding those strains. Their

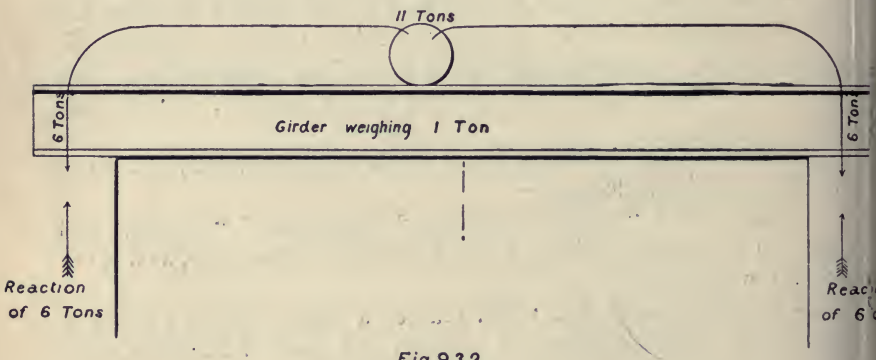

Fig. 932

actions must be met by corresponding *reactions*, which are located, as it were, at the points of support.

For instance, a girder, weighing 1 ton, and carrying a load of 11 tons, is supported by two columns, which, it is obvious, must be of sufficient strength to be able to keep up or resist between them the 12 tons of pressure or strain which the stress or action of the load imposes upon them; or, reverting to the "tug of war," the competing teams must be evenly balanced to keep in equilibrium, thus making it clear that actions must be met by reactions of equal or greater strength in order that the latter may succeed or hold their own.

When a girder is uniformly loaded, or carries its load in the centre, it is obvious that each support will carry an equal proportion; therefore the two reactions required to meet the strain on the supports must together be equivalent to the load, and of equal (or greater) power

Thus, a girder, weighing 1 ton, and carrying 11 tons, either at its centre, as fig. 932, or uniformly distributed over its whole length, as fig. 933 (the total load, or external force, being 12 tons), brings about an action of 6 tons at each support, and each of these has to be met by a reaction of an upward tendency, equivalent (at least) to 6 tons, to prevent the columns being crushed down by those loads.

When these loads, however, are placed in different positions at unequal distances from the supports, it is plain that the stress from the loads acts unequally on the supports; that nearest the load, of course, taking the lion's share.

In such cases the principle employed in ascertaining the amount of strain imposed on each support is that of "proportion," as regulated by the different lengths into which the girder is divided by the load. Thus a

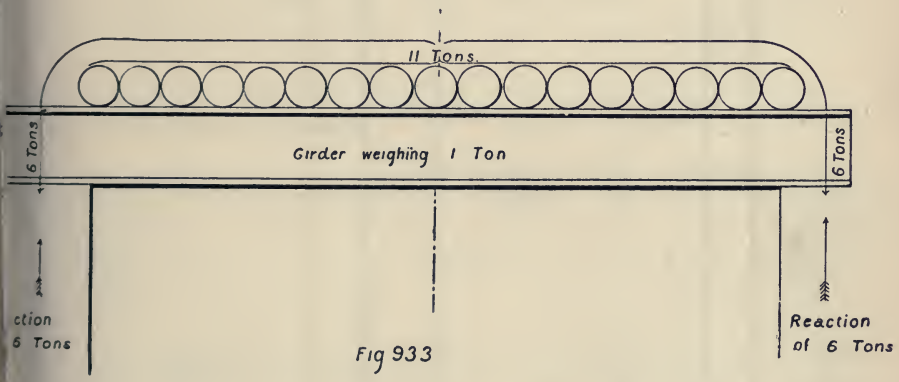

Fig 933

girder 20 feet long, with a load of 10 tons 5 feet from one of the supports and 15 feet from the other, would transmit its load to the supports in the proportion of 5 and 15, the one nearest to the load, of course, taking the 15 parts—*i.e.*, three-quarters (as fig. 934). The rule for calculating the reactions required is therefore: "Multiply the load by its distance from the *other* support, and divide by the span," to give the reaction. Thus:—

$$\left.\begin{array}{l} \text{Reaction at A} = \dfrac{\overset{\text{tons feet}}{10 \times 5}}{20} = \dfrac{50}{20} = 2\tfrac{1}{2} \text{ tons} \\ \text{Reaction at B} = \dfrac{10 \times 15}{20} = \dfrac{150}{20} = 7\tfrac{1}{2} \text{ "} \end{array}\right\} = 10 \text{ tons.}$$

The sum of the two reactions, as calculated, should be exactly the same as the load.

When two or more loads are placed on one girder, each load must be dealt with separately, as shown below in reference to fig. 935, which

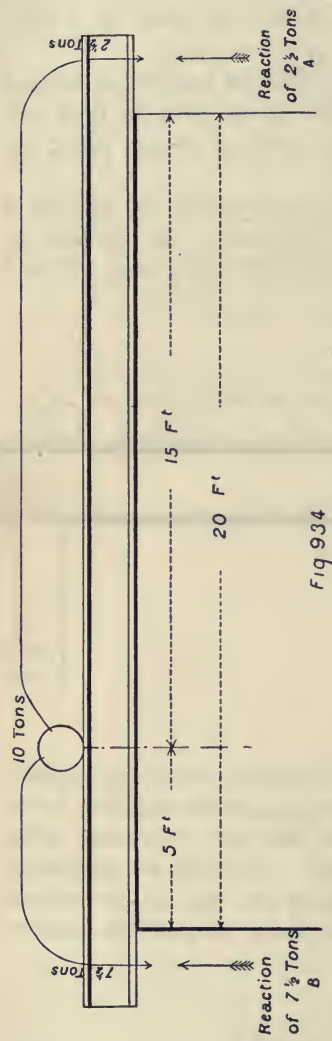

Fig 934

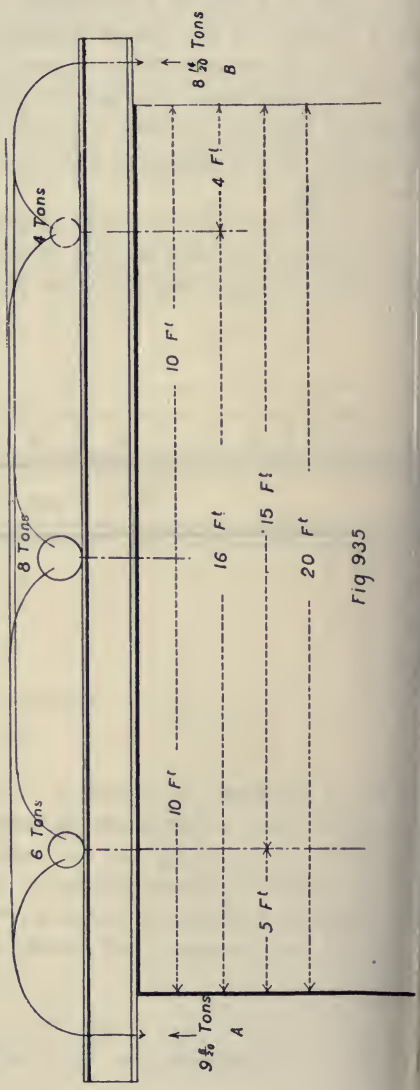

Fig 935

illustrates a girder 20 feet long, loaded with 6 tons at a point 5 feet from A, 4 tons 4 feet from B, and 8 tons in the centre, making, in all, a load of 18 tons to be carried by the two supports in the proportions ascertained.

Reaction A.

tons. feet.

Necessary for load of 6 tons $= \frac{6 \times 15}{20} = \frac{90}{20} = 4\frac{1}{2}$ tons

,, ,, 8 ,, $= \frac{8 \times 10}{20} = \frac{80}{20} = 4$,,

,, ,, 4 ,, $= \frac{4 \times 4}{20} = \frac{16}{20} = \frac{4}{5}$,,

} $9\frac{3}{10}$ tons.

Reaction B.

Necessary *to complete* load of 6 tons $= \frac{6 \times 5}{20} = \frac{30}{20} = 1\frac{1}{2}$,,

,, ,, 8 ,, $= \frac{8 \times 10}{20} = \frac{80}{20} = 4$,,

,, ,, 4 ,, $= \frac{4 \times 16}{20} = \frac{64}{20} = 3\frac{1}{5}$,,

} $8\frac{7}{10}$ tons.

6 tons + 4 tons + 8 tons = total of 18 tons

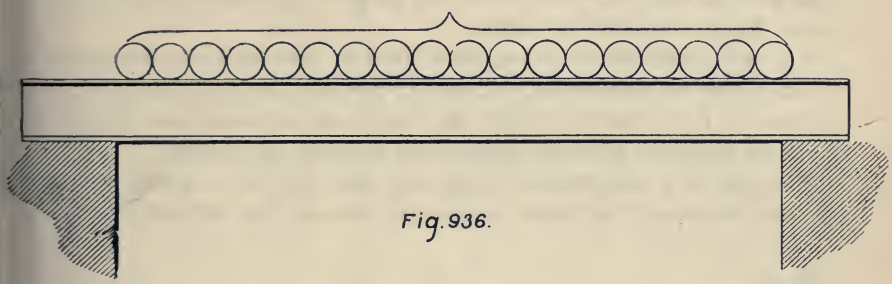

Fig. 936.

With regard to cantilevers, which have only one support, the reaction required is the same as the load to be carried by the cantilever, together with its own weight.

It will have been noticed that the principle of "leverage" plays a conspicuous part in the proportioning of the loads to the supports and their necessary reactions; and it is this same principle, in a different form, which gives us the undoubted and undisputed fact that concentrated loads cause *double* the stress and strain of the same load uniformly distributed; each part of the latter load, nearer the support, assisting to balance its outer neighbour, as it were; just as a man would carry a given quantity of water in two buckets, one on each side, more easily than he would carry it if it were all in one large bucket, and carried on one side.

For method and convenience of calculation, these distributed loads are grouped together, as it were, and reckoned as one load at its centre—*i.e.*, the centre of the distribution, as fig. 936.

The Discernment of Strains.—Common sense, consideration, and judgment are all required in distinguishing what parts of girders and the

like, and what members of trusses and other framed structures, are in compression, and what parts in tension.

With regard to the first-named—*i.e.*, girders—the illustrations hereinafter given should clearly impress this distinction on the student's mind, the forms, of course, being exaggerated for the purpose.

Fig. 937 represents a girder *supported* only at each end, from which

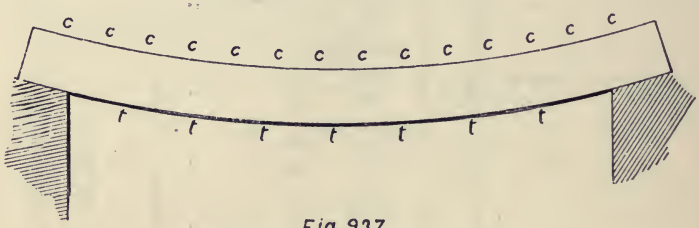

Fig. 937

it will be seen that the whole of the top flange is in compression, and the bottom flange is entirely in tension.

Fig. 938 represents the same girder fixed at both ends—showing part of each flange in compression and part in tension—the top flange being in compression in the centre, "under the load," and in tension over the ends and at the supports, while the bottom one is exactly the reverse.

Fig. 939 is a combination of figs. 937 and 938—*i.e.*, a girder having one end fixed and the other supported, showing the different results;

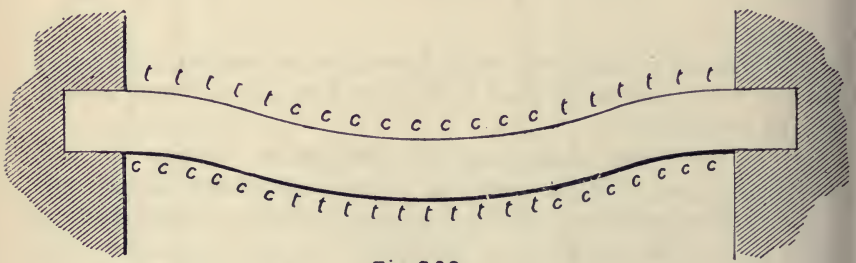

Fig. 938.

while fig. 940 illustrates a continuous girder, having several supports, over which the top flanges, as will be seen, are in tension and the bottom ones in compression, the central portions being as usual, and as previously shown.

The best practical illustration of the above is a piece of indiarubber of sufficient length, subjected to similar conditions, etc., when it will easily be seen which part is in compression and which in tension.

Cantilevers, of course, must be fixed to hold themselves up, much

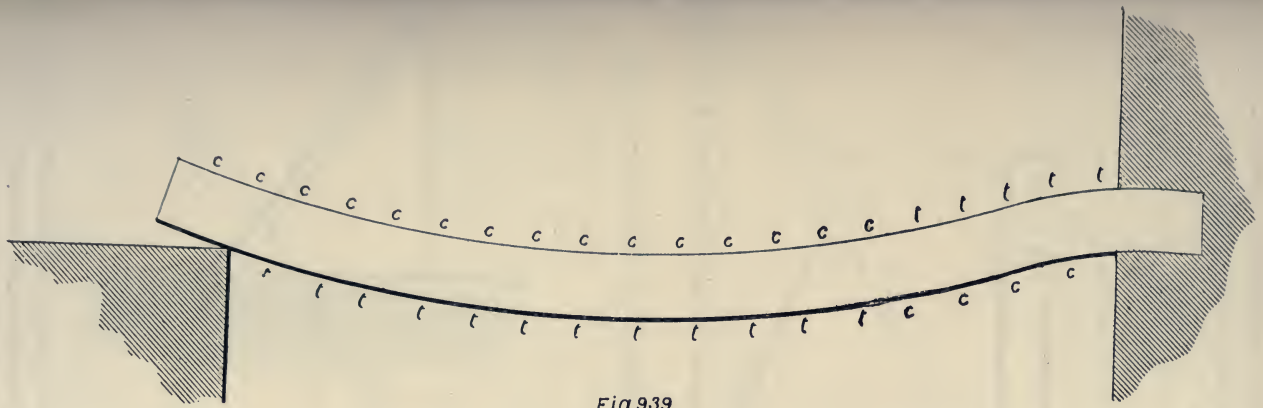

Fig.939.

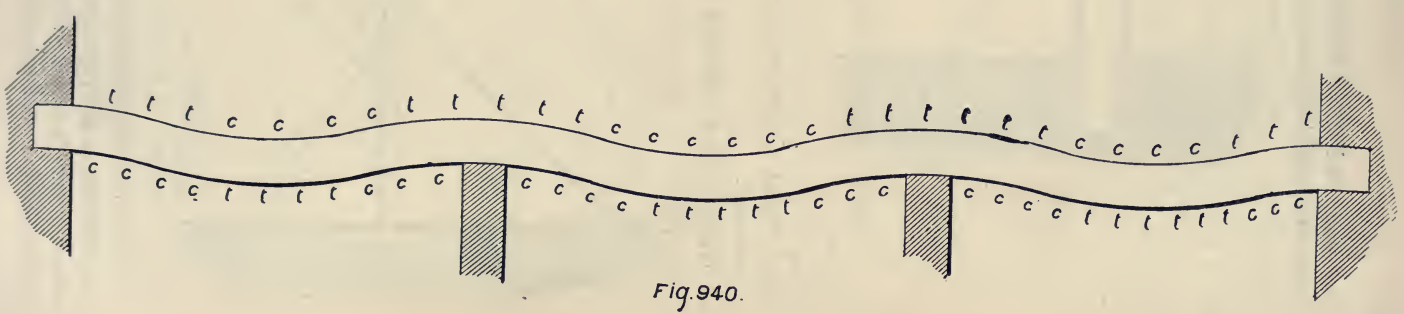

Fig.940.

more under a load in addition; and when they are a simple projection, similar to half a girder, as fig. 941, it will be seen that they are subjected

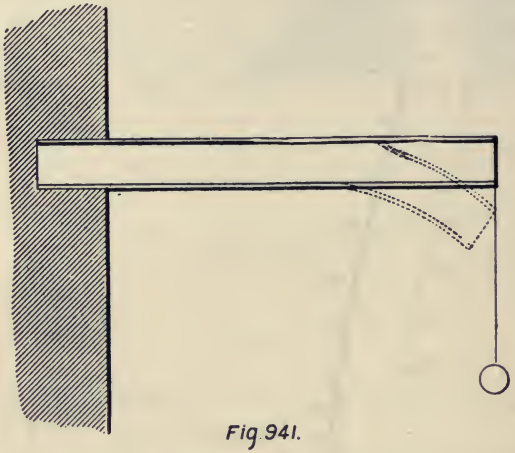

Fig. 941.

to the strains of compression and tension, resulting from loads at their end, as indicated.

When they are framed it all depends on their form. Here the

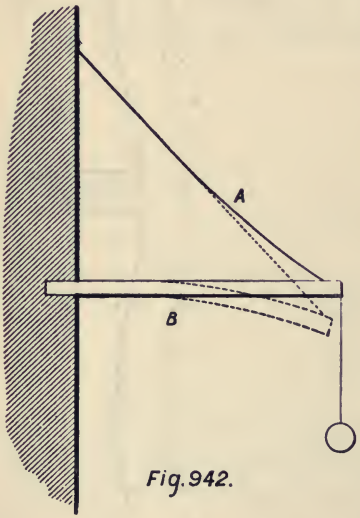

Fig. 942.

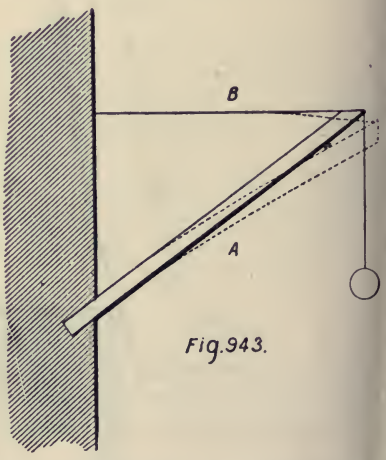

Fig. 943.

principle of considering the possibility of the substitution of rope solves all difficulties; as in fig. 942, it will be apparent that a rope would do for the member A, which is therefore in tension; but not for B, which is consequently in compression. On referring to fig. 943, it will be at once

seen that exactly the opposite is the case, A being in compression and B in tension, the dotted lines showing the effect of an excessive load.

Turning to the consideration of roof trusses, we find the application of the rope principle more useful than ever; but it should first be pointed out that the weights on roofs are, as it were, collected together and located at various points, proportionately, as fig. 944, from which it will be seen the eaves joint A take, $\frac{1}{8}$ part on each side, while the ridge C, and purlin joints B, each take $\frac{2}{8}$ or $\frac{1}{4}$ of the load.

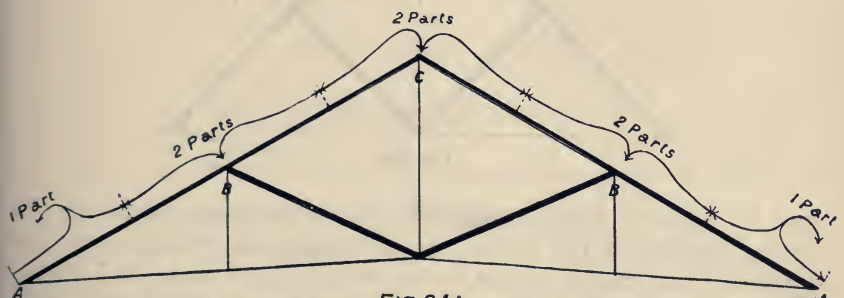

Fig. 944

To discriminate between the members in compression and tension, we find, on reflection, that a rope would certainly *not* act as an efficient substitute for the rafters or struts, as shown by thick lines, but that it might be used for the tie and suspension rods shown by thin lines (see fig. 944). Therefore the latter are in tension, and the former in compression or transverse strain.

Figs. 945 and 946 are further illustrations of trusses, the latter being

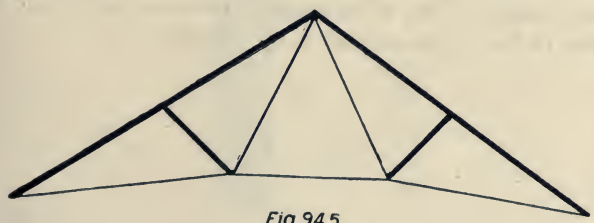

Fig. 945

the ordinary wooden king post; fig. 947 represents a trussed beam, a principle often employed to strengthen thin boards to carry flower pots, the thin line members being usually of string.

Having ascertained which member or part is in tension, and which in compression, we know that wrought iron has the greatest power to resist strains tending to elongate it or tear it asunder; therefore we can do no

better than use it for members in tension, and, generally speaking, it is most convenient in round or bar form, though it can be rolled into T's for struts and rafters. As regards parts in compression, cast iron, on account of its great power to resist compression, would be the strongest and best,

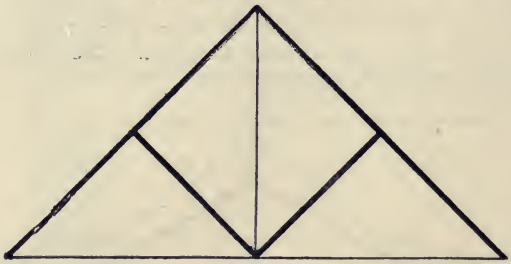

Fig. 946.

were it not for its fragile, unweldable, and inconvenient nature, for the putting together of the joints. As a consequence, wrought iron has superseded cast iron for rafters and struts which are made of T shape, the form most suitable for long lengths, where bars or rods would bend, unless built up to make them the more rigid, as hereinbefore shown.

Fig. 947.

Joists, rafters, lintels, etc., subject to transverse strain (though rafters have been taken above as in compression, but only in contra-distinction to tension), are strongest when of rectangular form and of a good depth, the strength lying in the depth, and *not* in the breadth.

CHAPTER XXV.

CALCULATION OF STRAINS.

Computation of Strains on Cantilevers, Girders, and Trusses variously loaded.

Computing Strains.—The strains which the various stresses produce, as hereinbefore enumerated, can generally be calculated arithmetically and graphically, to check each other; and it is intended in this short chapter to briefly and concisely put before the student a few of the methods in vogue for that purpose.

Cantilevers—*Load Concentrated.*—Assuming that he thoroughly understands everything in the previous chapter, we will first deal with plain cantilevers of rectangular forms. Fig. 948 represents a cantilever 12 inches deep and 3 feet projection, loaded at its end by a given weight of 4 tons. The formula by which the greatest strain is calculated is $\frac{wl}{1d}$, w representing the weight, l the projection or length, and d

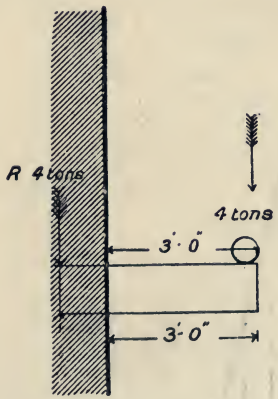

Fig 948

the depth. Therefore we have:

$$\frac{w\,l}{1\,d} = \frac{4 \text{ tons} \times 3 \text{ feet}}{1 \times 12 \text{ inches}} = \frac{12 \text{ feet}}{1 \text{ foot}} = 12 \text{ tons strain,}$$

which can be graphically proved as illustrated in fig. 949 and the following.

"Draw the cantilever to scale as the figure, join A B diagonally across

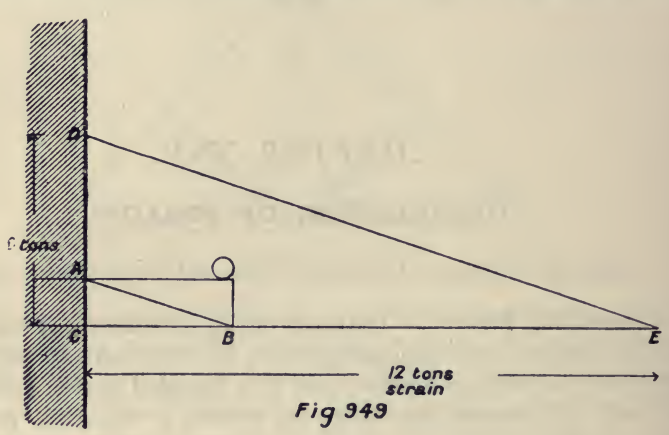

Fig 949

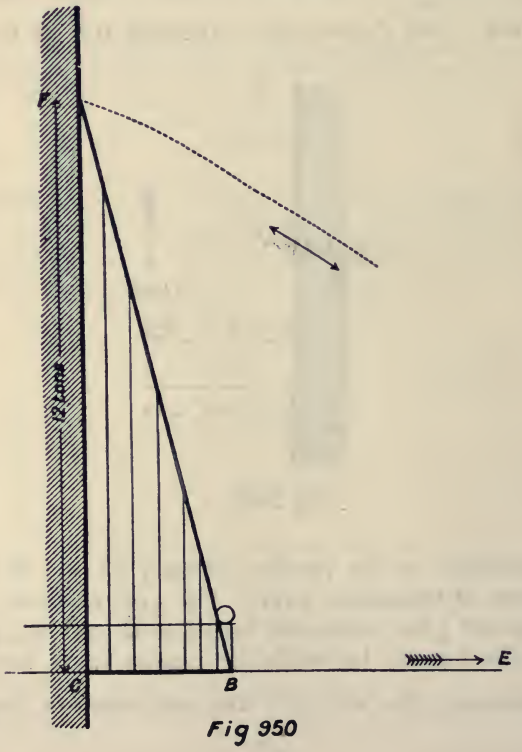

Fig 950

the member, and set up from C, at right angles to C B, C D, equivalent to 4 tons (1 ton or foot being of the same scale); then from the point D draw D E parallel to A B, cutting C B produced in E, and C E will give the amount of strain which, when reduced according to scale, will equal 12 tons."

As it is well known that the strain is greatest at the point of support, and diminishes to nothing immediately under the weight, the strains at intermediate points will graduate between the two external points of support and application of the load, so that such strains at the different intermediate points can be ascertained according to fig. 950, the perpendiculars representing the strains at the points from which they are raised.

On fig. 950 the strain line C E on fig. 949 is raised up to the perpendicular as C F, and the points F and B are joined, forming a triangle, as F C B, which represents the form of the whole strains on the cantilever, and the intermediate perpendiculars indicate what is required.

Having ascertained these strains, we can calculate the sectional area required to resist them by dividing the amount of strain by the "power of resistance" of the material to be employed; always remembering that the top flange, or part, has to resist the amount of one strain (tension) and the bottom part the same amount of the contrary strain (compression), to one or the other of which every part is subjected, according to circumstances, as hereinbefore explained.

Wrought iron	will resist safely	4	tons	compression	per superficial inch.
,,	,,	5	,,	tension	,,
Cast iron	,,	1½	,,	,,	,,
,,	,,	8	,,	compression	,,
Steel	,,	6	,,	,,	,,
,,	,,	6	,,	tension	,,
Oak	,, (about)	16	cwt.	,,	,,
,,	,, ,,	13	,,	compression	,,
Memel	,, ,,	10	,,	,,	,,
,,	,, ,,	12	,,	tension	,,
Fir	,, ,,	10	,,	,,	,,
,,	,, ,,	7	,,	compression	,,

Therefore, according to the table, the top flange, if in wrought iron, should be of an area of $2\frac{2}{5}$ superficial inches, to resist 12 tons of tension; and the bottom flange 3 inches in area, to resist the same amount of compression. If fir were used it would require to be 12 inches deep (a fixed depth according to your calculations, which assume it as 12 inches), × 5 inches broad, giving an area of 60 square inches, 24 of which are required (at 10 cwt. per square inch) to resist 12 tons of tension, while the remaining 36 square inches would be required to resist 12 tons of compression (at 7 cwt. per square inch) on the lower part.

Theoretically the cantilever might be constructed as fig. 951 or fig. 952; but this is not done in practice, as a rule.

—*Load distributed.*—Coming to uniform loads on cantilevers, it is usual to take the collected load, or total weight, as located in the centre of the loaded area, as fig. 953, from which it will be seen that it is in this case practically halfway along the cantilever, and the formula resolves itself into $\frac{wl}{2d}$, twice the depth being taken to give the "half" result as compared with a concentrated load; for we know that the latter causes double the strain of a uniform load. Therefore—

$$\frac{w\ l}{2\ d} = \frac{4 \text{ tons} \times 3 \text{ feet}}{2 \times 1 \text{ foot}} = \frac{12}{2} = 6 \text{ tons strain.}$$

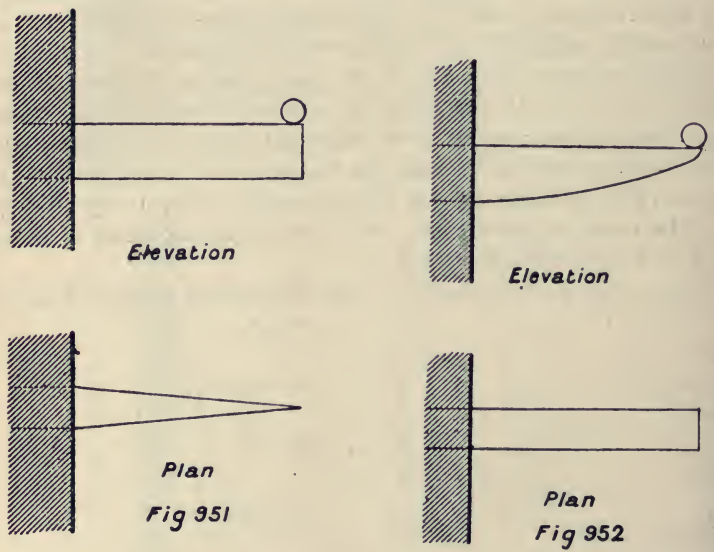

Graphically this is ascertained by a similar process to fig. 950, the diagonal being raised from a point halfway along the bottom flange, as fig. 953, while the graduation of the strains at intermediate points takes the form of a concave parabolic curve, as shown on fig. 954, which should need no further explanation.

The theoretical form of the cantilever would be either as fig. 955 or fig. 956.

—*Two distinct loads.*—If two distinct loads are placed on a cantilever their strains should be calculated separately, and the results added together; while graphically they should be treated as fig. 957, of which the small diagram is constructed, to give the lines of inclination to the figure. A

perpendicular is dropped from any point as Z, and on it are marked off consecutively from the point the weights or reactions of the loads, Z Y representing to scale 1 ton, and Y X 2 tons. The depth, which always

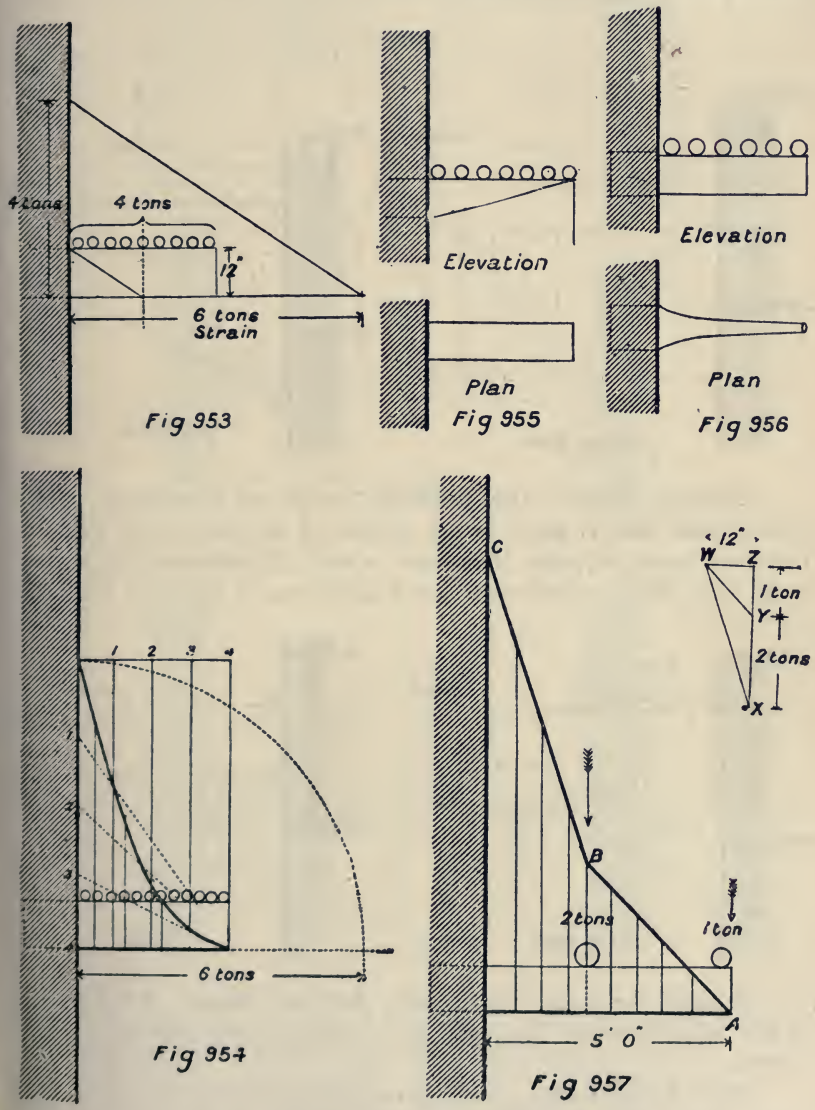

plays such a conspicuous part, is marked off at right angles to Z X from Z, as W ; and then W Y and W X are joined. Reverting to the main figure, from A we draw A B parallel to W Y until it meets a perpendicular raised

from the other load; after which A B is continued to C, but parallel to W X. Thus the diagram is formed, and the strains can be scaled off as required. If the cantilever were uniformly loaded, it would be treated similarly to fig. 954 in principle.

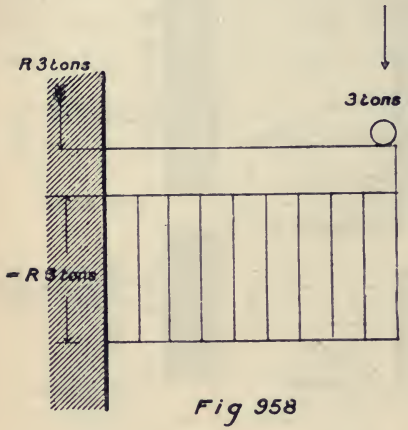

Fig 958

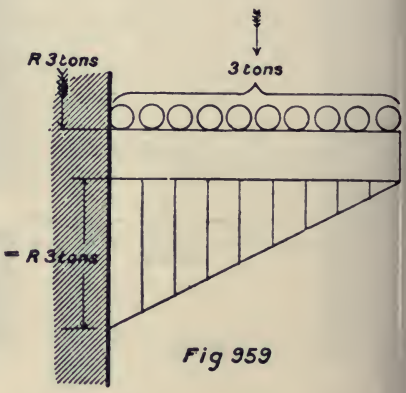

Fig 959

—*Shearing Strain.*—The "shearing" strain on a cantilever, with a concentrated load, is equal to the amount of the reaction all along the cantilever from the point of support to that of application of the load, as fig. 958; while, on uniformly loaded cantilevers, it gradually diminishes

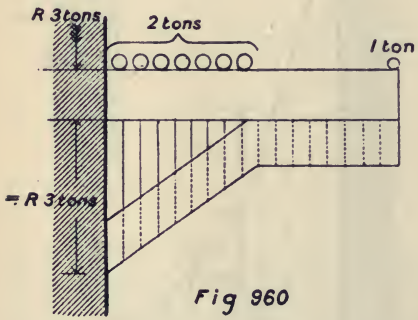

Fig 960

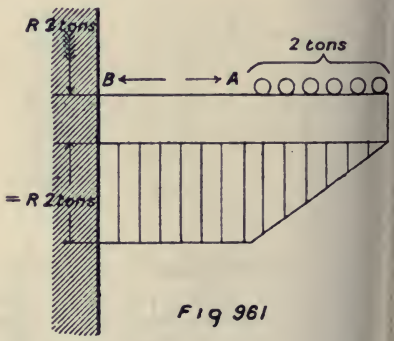

Fig 961

to nothing at the point of application from the amount of the reaction at the support, as fig. 959, one part of the load assisting the other, as it were.

—*Two distinct Loads.*—A cantilever differently loaded at two or more points would have its "shearing" strain shown, as fig. 960; and if a uniform load is fixed at a distance and clear space from the support, it will be as fig. 961, taking the form of a concentrated load from A to B.

Girders.—Girders are treated in a similar manner to cantilevers, their strains being ascertained by the following formulæ:—

$\frac{w\,l}{4\,d}$ for concentrated loads,

$\frac{w\,l}{8\,d}$ for uniform loads.

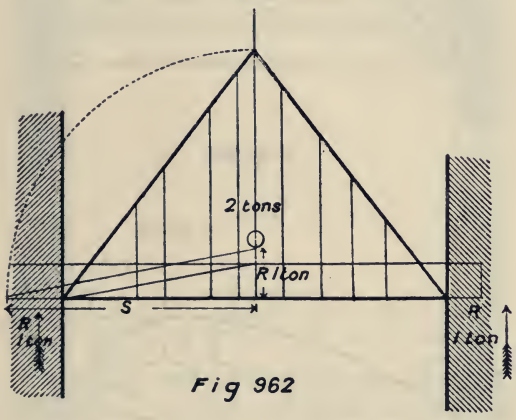

Fig 962

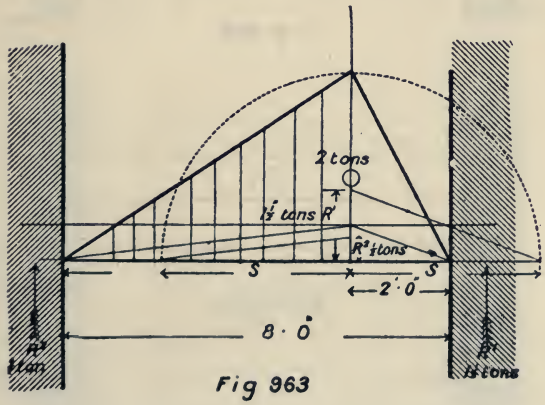

Fig 963

So that a girder of 8 feet span and 9 inches deep, supporting a uniform load of 2 tons, would have its strain calculated thus:—

$$\frac{w\,l}{8\,d} = \frac{2 \text{ tons} \times 8 \text{ feet}}{8 \times 9 \text{ inches}} = \frac{16 \text{ feet}}{6 \text{ feet}} = 2\tfrac{2}{3} \text{ tons strain,}$$

which would be doubled if concentrated.

Graphically, a girder, with concentrated load centrally, would be dealt

with as fig. 962, and as fig. 963 if intermediately loaded; while for

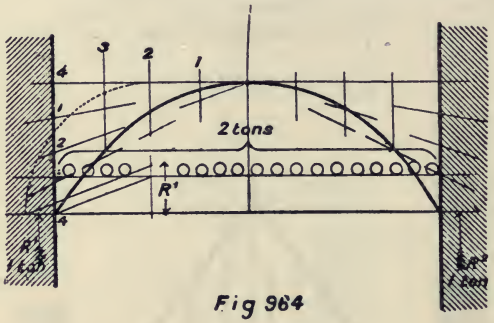

Fig 964

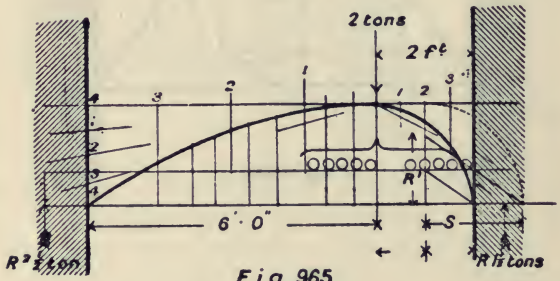

Fig 965

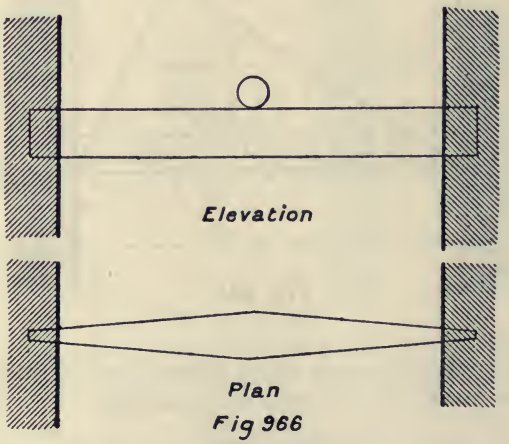

Fig 966

uniform loads it would be as figs. 964 and 965 respectively; one half of the load (or either of the reactions) being set up as the height, when the reactions are equal; and, when they vary, one or the other will answer the

purpose, so long as care is taken that the same side of the load is

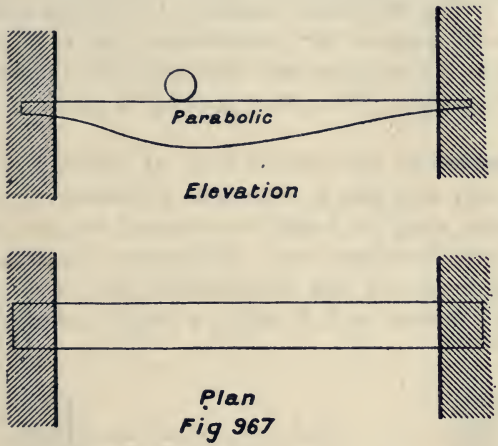

Fig 967

utilised for the diagonal and parallel line to ascertain the strain, as particularly illustrated on fig. 963. If correct, figures will always complete themselves.

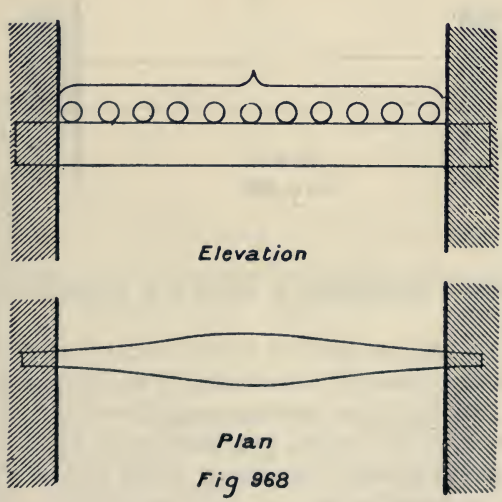

Fig 968

The theoretical outlines for beams or girders are as figs. 966 and 967 for concentrated oads, and figs. 968 and 969 for uniform loads.

—*Under several distinct Loads.*—When a girder is loaded with several different loads the strains are found graphically, as fig. 970 (similarly to fig. 957); and, arithmetically, they are proved by working each load out separately and adding the results together. On fig. 970 it will be noticed that, in the small diagram, the perpendicular line of loads is divided proportionately to the reactions, and the depth line thrown out at right angles from that point. The other working is precisely the same as fig. 957.

Graphic diagrams in this class of work are also of service to the designer, in that they help him to economise judiciously by riveting plates on, intermediately, along the flanges, to withstand irregular strains without increasing the general sectional area. For instance, the diagram of strains, fig. 971, clearly points out that an additional plate of sectional area, to resist the strain indicated by A B, and of a length equivalent to C D, can

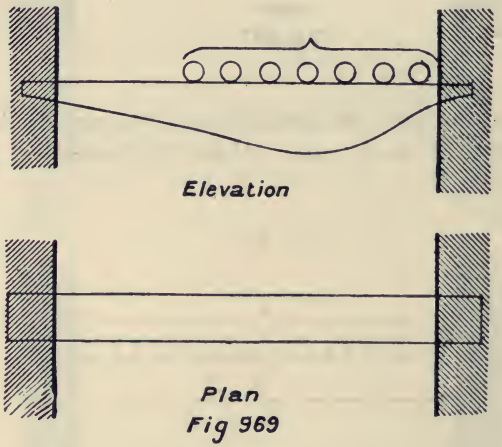

Fig 969

be judiciously added to the length of girder E F, designed to resist a strain amounting to G H.

Sometimes we have, in practice, to find out, by calculation or stress diagrams, the strains caused by certain loads at various intermediate points along a girder; and this is done mathematically by multiplying the reaction by the distance from the support, and dividing the result by the depth; while it is graphically treated (alternatively to figs. 962 to 964, where the perpendiculars are scaled) as fig. 972, which represents a girder of 12 feet span, 2 feet deep, loaded centrally with 10 tons (though this rule is applicable to any weight and position), and it is required to find the strain caused by the load at every 2 feet.

The girder is drawn to a scale by which feet and tons are made equivalent; and, perpendicularly upwards from A on the bottom flange, at the point of support, a line A B is measured to represent the reaction at that

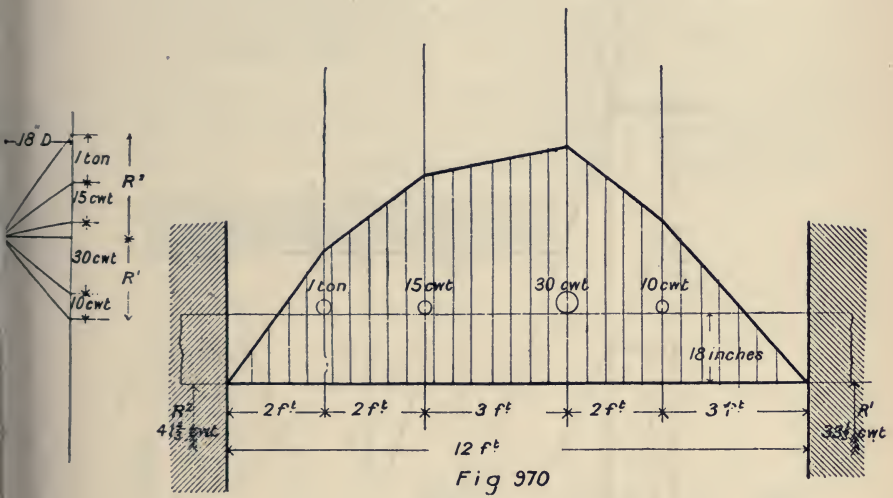

Fig 970

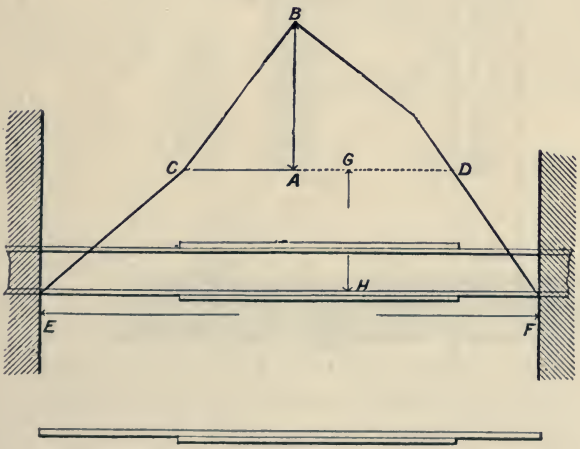

Fig 971

support; and, from the top point B, a line is drawn across, parallel to the girder, and of indefinite length. The points at which it is required to find the strain are marked off along the top flange; and from A a line is drawn

through each one to the indefinite line from B, and the distance from B, cut off by that intersecting line from A, gives the required answer when

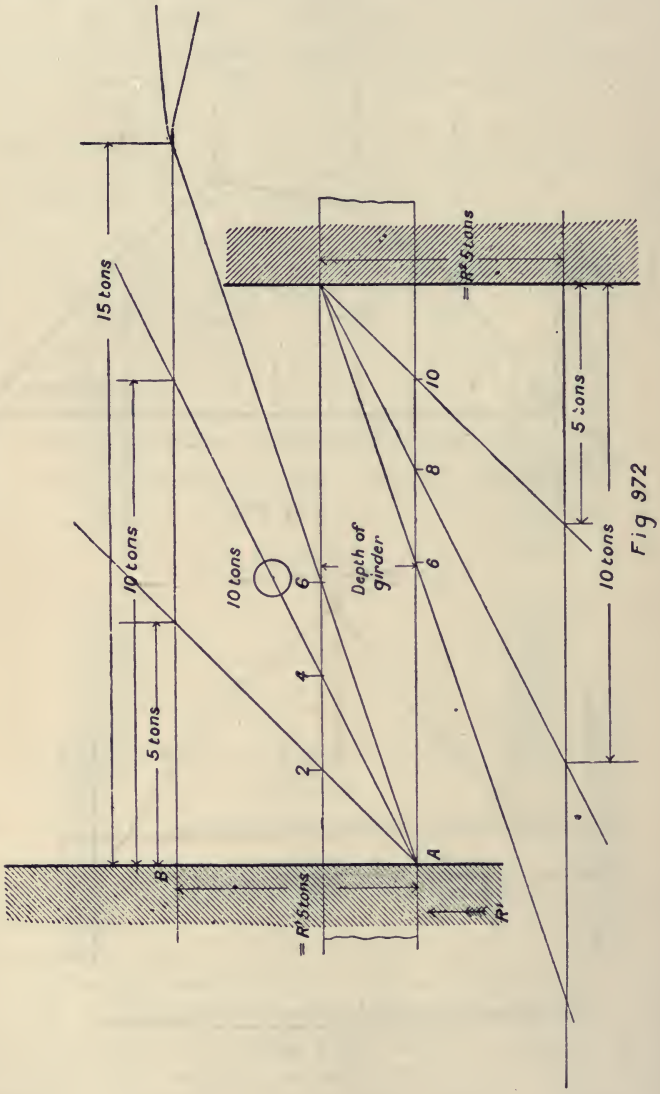

Fig 972

reduced to weight according to scale. The strains on the bottom flange are worked out conversely to the above, as shown on the lower part of the

figure; though this is not necessary, as the strains on both flanges are alike in amount, only different in character.

Proof of this is obtained by calculation on lines just laid down :—

$$\frac{5 \text{ tons reaction} \times 2 \text{ feet from support}}{\text{depth of } 2 \text{ feet}} = \frac{10}{2} = 5 \text{ tons strain } 2 \text{ feet away.}$$

$$\frac{5 \text{ tons reaction} \times 4 \text{ feet from support}}{\text{depth of } 2 \text{ feet}} = \frac{20}{2} = 10 \text{ tons strain } 4 \text{ feet away.}$$

If the load be placed at any intermediate point between the supports the reactions of course are unequal, but when multiplied by the distance of the load from each point of support, the same result should be given.

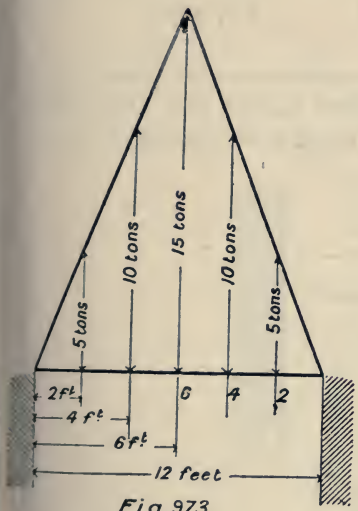

Fig 973

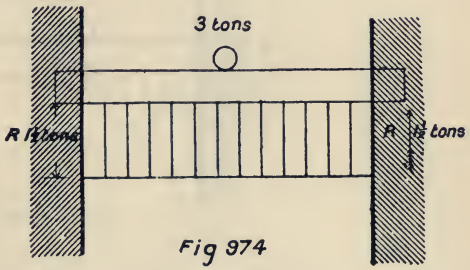

Fig 974

For, supposing this girder were loaded 3 feet from one support, the reactions would then be in the proportion of 3 and 9 (to make up the 12 feet)—*i.e.*, they would be respectively $7\frac{1}{2}$ tons and $2\frac{1}{2}$ tons, which give the same result when multiplied by the distances away as $7\frac{1}{2}$ tons $\times$ 3 feet, and $2\frac{1}{2}$ tons $\times$ 9 feet, each equal $22\frac{1}{2}$ tons strain under the load; and the strains, at any intermediate points between load and supports, can be ascertained in like manner by multiplying the reaction by the distance the point (at which it is required to find the strain) is away from that support. Fig. 973 represents the form of the strains on the girder in fig. 972.

The—*shearing*—on girders is equal to the reaction at each support from the centre or load to that support when it is a concentrated load; while a uniform load causes a gradual *shearing* from nothing immediately under it to the amount of the reaction at the support, as figs. 974, 975,

976, and 977, will explain. So that, in the latter case, the "shearing" at any point is equivalent to the amount of load distributed between that point and the centre.

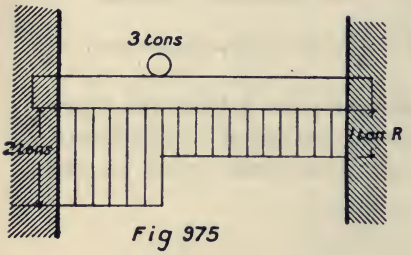

Fig 975

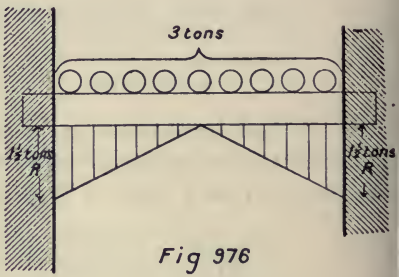

Fig 976

Framed Structures.—Coming to framed structures, the student must thoroughly understand, and never lose sight of the fact, that "the forces acting at any point, to be in equilibrium (which is the foundation of the

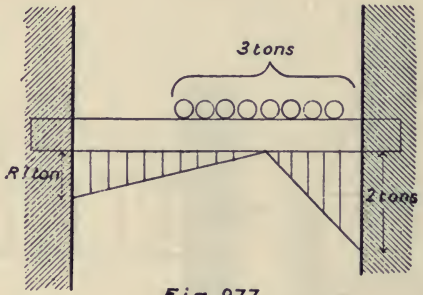

Fig 977

structure), must complete and form a triangle or polygon whose sides are parallel to the directions of the forces, and therefore are equivalent to their magnitudes."

Triangle or Polygon of Forces.—This theorem is the foundation of all calculations and diagrams, as will hereinafter be illustrated (*vide* figs. 979 to 984), though these reciprocals (as they are sometimes called) will, of course, be pointed out, as the diagrams are constructed, in the usual way.

Roof Trusses.—It is only proposed here to deal with roof trusses, as other framings do not, strictly speaking, belong to building construction.

The first procedure is to locate the weight at various points, and then ascertain the reactions (as should always be the first thought in whatever class of work), the polygon of forces (as fig. 990) being used to determine the necessary reactions. But when the loading is vertical and equal on both slopes of the roof, each reaction will be equal to one half the total

load, so that the polygon of forces becomes a straight line, obviating further trouble, which, it will hereinafter be noticed, is present in unequal loading.

—*King Post Truss.*—Taking a "king post" truss as our first form, we proceed as follows:—

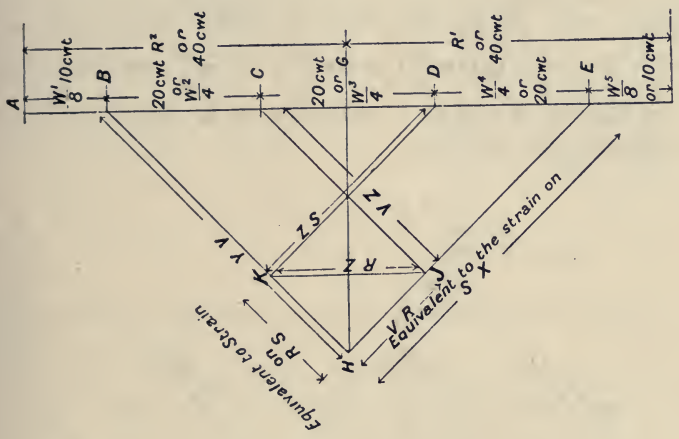

Fig 978

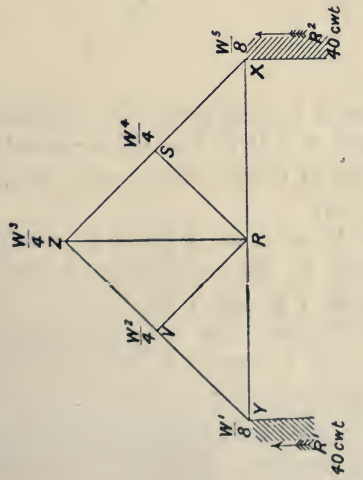

Set up any line vertically in any position as a line of loads, and assuming that the truss carries 4 tons weight, it will be divided as $\frac{w}{4}\ \frac{w}{4}\ \frac{w}{4}\ \frac{w}{8}$ and $\frac{w}{8}$, on diagram 978; so that we shall have to support 1 ton of it at each purlin

and the ridge, with $\frac{1}{2}$ ton at each of the eaves to equally divide the 8 tons. Therefore the reactions will be :—

$$\frac{\frac{4}{4}w + \frac{2}{4}w + \frac{3}{4}w + \frac{1}{8}w + \frac{5}{8}w}{2} \text{ cwt.} = \frac{20+20+20+10+10}{2} \text{ cwt.} = \frac{80}{2} = 40 \text{ cwt. each.}$$

Starting from A on the line of loads, we set off to scale $A\,B = \frac{w^1}{8}$; $B\,C = \frac{w^2}{4}$; $C\,D = \frac{w^3}{4}$; $D\,E = \frac{w^4}{4}$; $EF = \frac{w^5}{8}$; and, bisecting A F in G, we have A G and G F equivalent to R^1 and R^2—*i.e.*, 40 cwt. each, measured from each end.

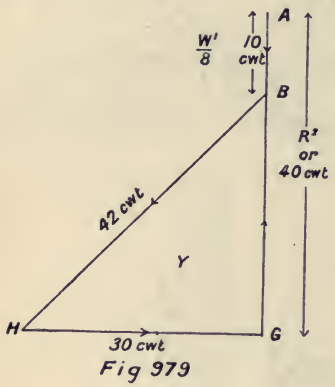

Fig 979

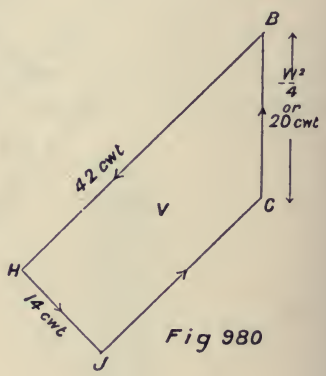

Fig 980

From B we then draw B H, and from G G H, parallel to Z Y and Y R, respectively; giving us A B H G A as the reciprocal of the forces at the joint Y, while B H and H G give us (according to scale) the strains on Y V and Y R respectively.

Next, taking the joint V, we draw H J and J C parallel to V R and V Z, giving us B C J H B as the reciprocal of V, with H J and J C equivalent to the strains on V R and V Z.

Following with joint R, we draw J K parallel to R Z, making G H K J H G reciprocal to R, with J K equivalent to R Z, which gives us the strains on half the members; and since the loading is equal, the strains are equal on the other half, which is completed on the diagram; and all that now remains to be done is to scale off the strains and calculate the material required to resist them in the usual way.

Figs. 979 to 984 give the polygons of forces at the various joints in equilibrium; the arrows indicating the directions, for all forces must go one way round the polygon, beginning at any one point; though they must continue until they close to be in equilibrium.

Each figure is a "reciprocal" of the joint of which it carries the corresponding letters, and each line forming the figure represents a force acting at the joint as A B (fig. 979) represents that at the eaves, B H that on the lower part of the rafter, H G that on part of the tie-rod, and A B the upward reaction of the support.

This subject will require careful study and reasoning, for it must be

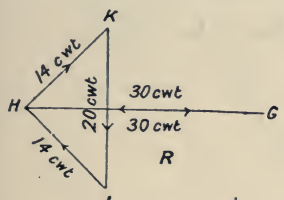

Fig 981

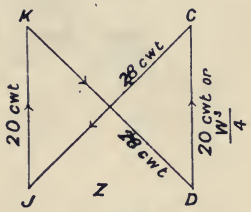

Fig 982

clearly understood and mastered, as this principle is, as it were, the very foundation of our work.

The amounts of the strains are figured on the polygons, which are all drawn to scale similar to the diagram 978. This must always be done most carefully and accurately, for slight inaccuracies often end in large errors, on account of the dependence of one line on another.

It will be noticed that the weights and reactions play their part and

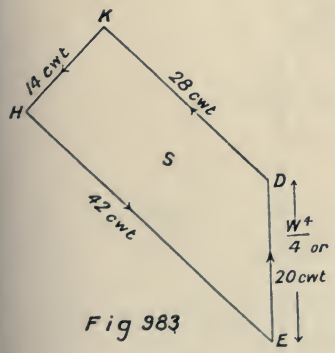

Fig 983

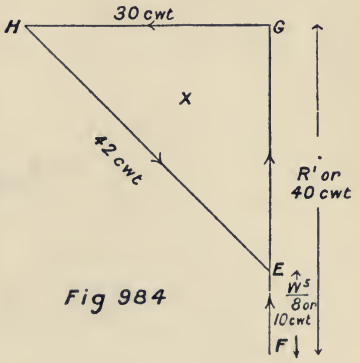

Fig 984

belong to these polygons, for they are known forces, which close the sides, and where they occur they have been marked accordingly.

—*Queen Post Truss.*—Fig. 985 represents the diagram for a "queen post" truss ($\frac{w}{12}$ being equivalent to 10 cwt. and $\frac{w}{6}$ 20 cwt.), which should explain itself; *a b c d a* being the reciprocal of A, *b c e f b* of B, *d c e g d* of E, *f h j g e f* of C, *h k j h* of D; the others being similar, as the truss is equally loaded.

A larger truss, with more framing, is depicted in fig. 986, with diagram, from which it will be gathered that *a b c d a* is the reciprocal of A, *b c e f b* that of B, *d c e g d* of C, *f e g h j f* of D; while *j h k l j* and *d g k h g d* repre-

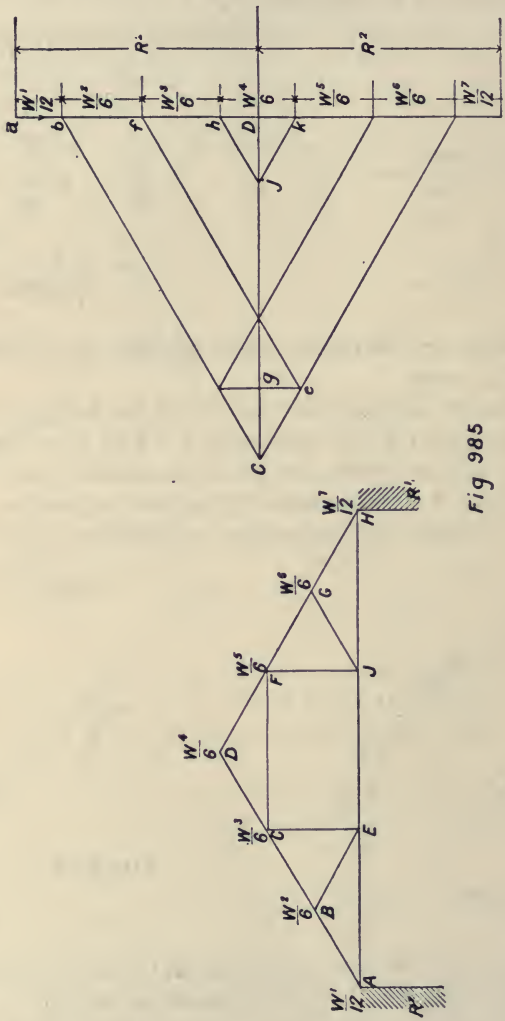

Fig 985

sent E and F respectively. The other part has been left out intentionally, to save confusion; it is practically a repetition of the other half.

Fig. 987 represents a similar truss, with a cambered tie rod, the diagram for which will illustrate what a difference it makes compared with the

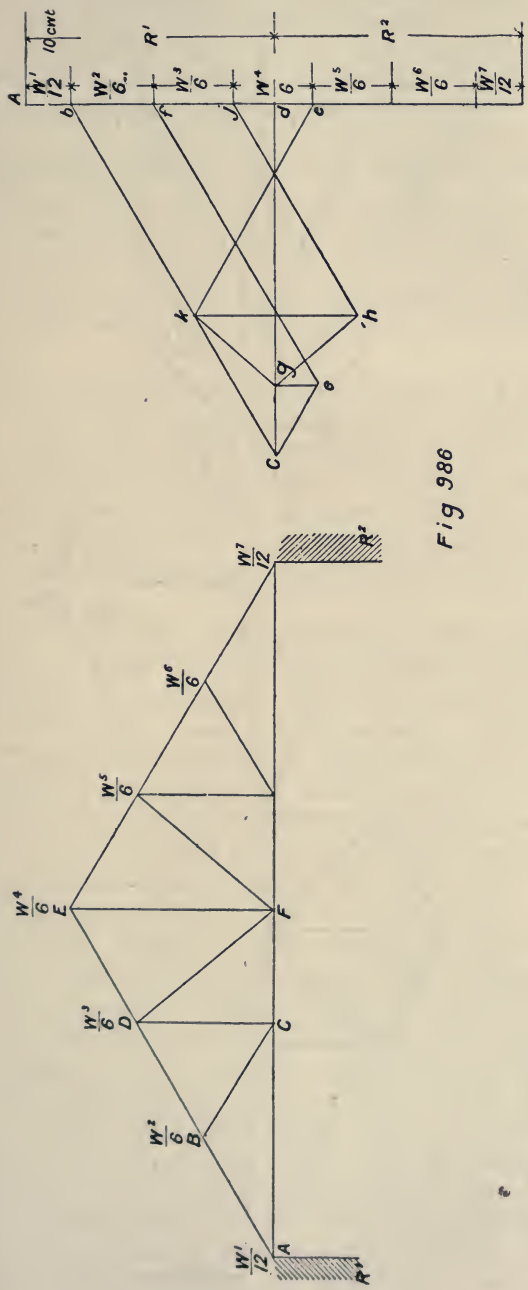
A
10 cwt
R'
R²
W'/12
W²/6
W³/6
W⁴/6
W⁵/6
W⁶/6
W⁷/12
b
f
j
d
e
k
h
g
c
R²
W'/12
W⁶/6
W⁵/6
W⁴/6
E
F
W³/6
D
C
W²/6
B
W'/12
A
R'

Fig 986

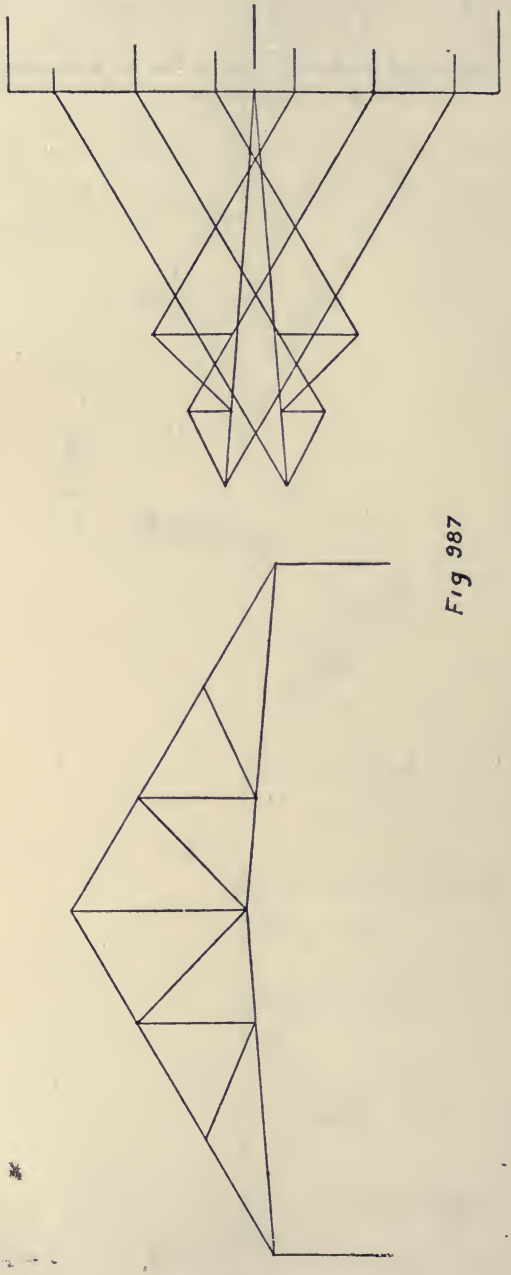

Fig 987

straight rod. The student must work out, or rather "identify the reciprocals" for himself. It is precisely similar to fig. 986.

The next form of roof truss treated will be as fig. 988; and as this is a truss in common use, the writer will take this opportunity of dealing with unequal loading, hereinafter using this truss.

Having located our weights, and ascertained the reactions in the usual way, as hereinbefore explained, we draw the diagram as shown in fig. 988, from the vertical load line, and parallel to the members of the truss; the reciprocals formed thereby representing the joints as follows:—*a c g o a* = A; *c g h d c* = B; *d h t l e d* = C; *o t h g o* = F; *o t l k o* = G; *e l k f e* = D; and *b f k o b* = E; all of them closing together as required. The strains can be found by scaling off the corresponding members in the diagram in the ordinary way.

Hitherto no distinction has been made between lines in compression and those in tension, because the distinction was too apparent; but they are shown in figs. 988 and 989 by thick and thin lines respectively.

—*Special loading.*—It will be seen that in fig. 989 two loads of 20 cwt. are hung from points F and G of the truss in addition to the previous loading, which, of course, alters the diagram considerably as shown, and increases the reactions which remain equal—*i.e.*, 60 cwt. each, as compared with 40 cwt. on fig. 988.

On the usual line of loads mark off the loads on the truss, neglecting the suspended loads, and from each end of the line set up and down the reactions to scale, making *a v* and *b y*, which cross each other, as will be noticed. This done, we proceed in the usual manner, drawing *c g* from C parallel to A B, and from V (the reaction point) drawing *v g* parallel to A F, making *a c g v a* the reciprocal of A; while further parallels will give us *c g h d c* for B, *d h t l e d* for C, and *o y g h t o* for F, as compared with *o t h g o* on fig. 988, the latter containing four forces, while this contains five. The other joints at D E and G are similar to A B and F, while the line *t o* is common to both halves of the truss and the joints F and G.

—*Unsymmetrical loading.*—When we come to unequal and unsymmetrical loading we meet with a difficulty at the very beginning; inasmuch as we have hitherto used no means, except calculations, to ascertain the reactions; and this is done by means of a *funicular* and polygon of forces.

A line is set up, just as a "load" line—viz., as Z Y (see fig. 990)—and on it are marked off the loads, as *z o*, *o p*, and *p y*, equivalent to W^1, W^2, and W^3, on the truss; after which "any" point X is taken, somewhere level with the centre of the load line Z Y, but no less than its length away, and we join X *o*, X *p*, X *y*, which are called *vectors*; then drop perpendiculars from the points of loading and reaction on the truss, after which we draw 1.2, 2.3, and 3.4, parallel to X *p*, X *o*, X *z*, on the *funicular* to connect these perpendiculars; and by joining 1.4 we complete the

polygon of forces; and parallel to the latter we draw X R on the funicular from X to the load line, the intersection determining the magnitude of the reactions R^1 and R^2.

The reactions are then transferred to the ordinary load line, from which the diagram is drawn in the usual way; the resulting reciprocals *a b e o a*, *b e f c b*, *c f t k d c*, *o e f t o*, *o t k o*, *d k o d*, representing the forces at A, B, C, D, E, and F. The diagram shows that there is no strain on E G, and that the strains on C G and G F are alike.

Having mastered these few examples, the student ought to be able to deal with all ordinary strains on building structures.

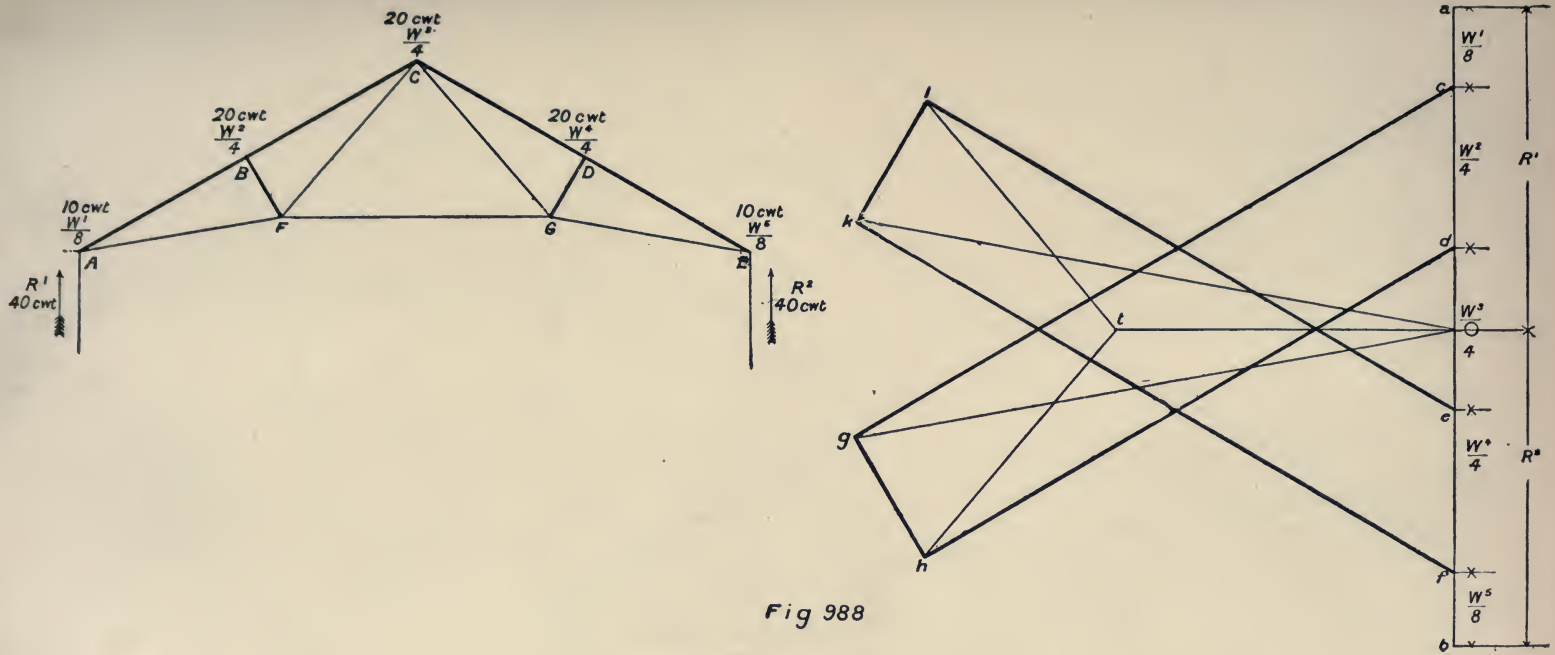
20 cwt
W³/4
C
20 cwt
W²/4
B
20 cwt
W⁴/4
D
10 cwt
W¹/8
A
F
G
10 cwt
W⁵/8
E
R¹
40 cwt
R²
40 cwt
a
W¹/8
c
W²/4
R'
d
W³/4
e
W⁴/4
R²
f
W⁵/8
b
l
k
t
g
h

Fig 988

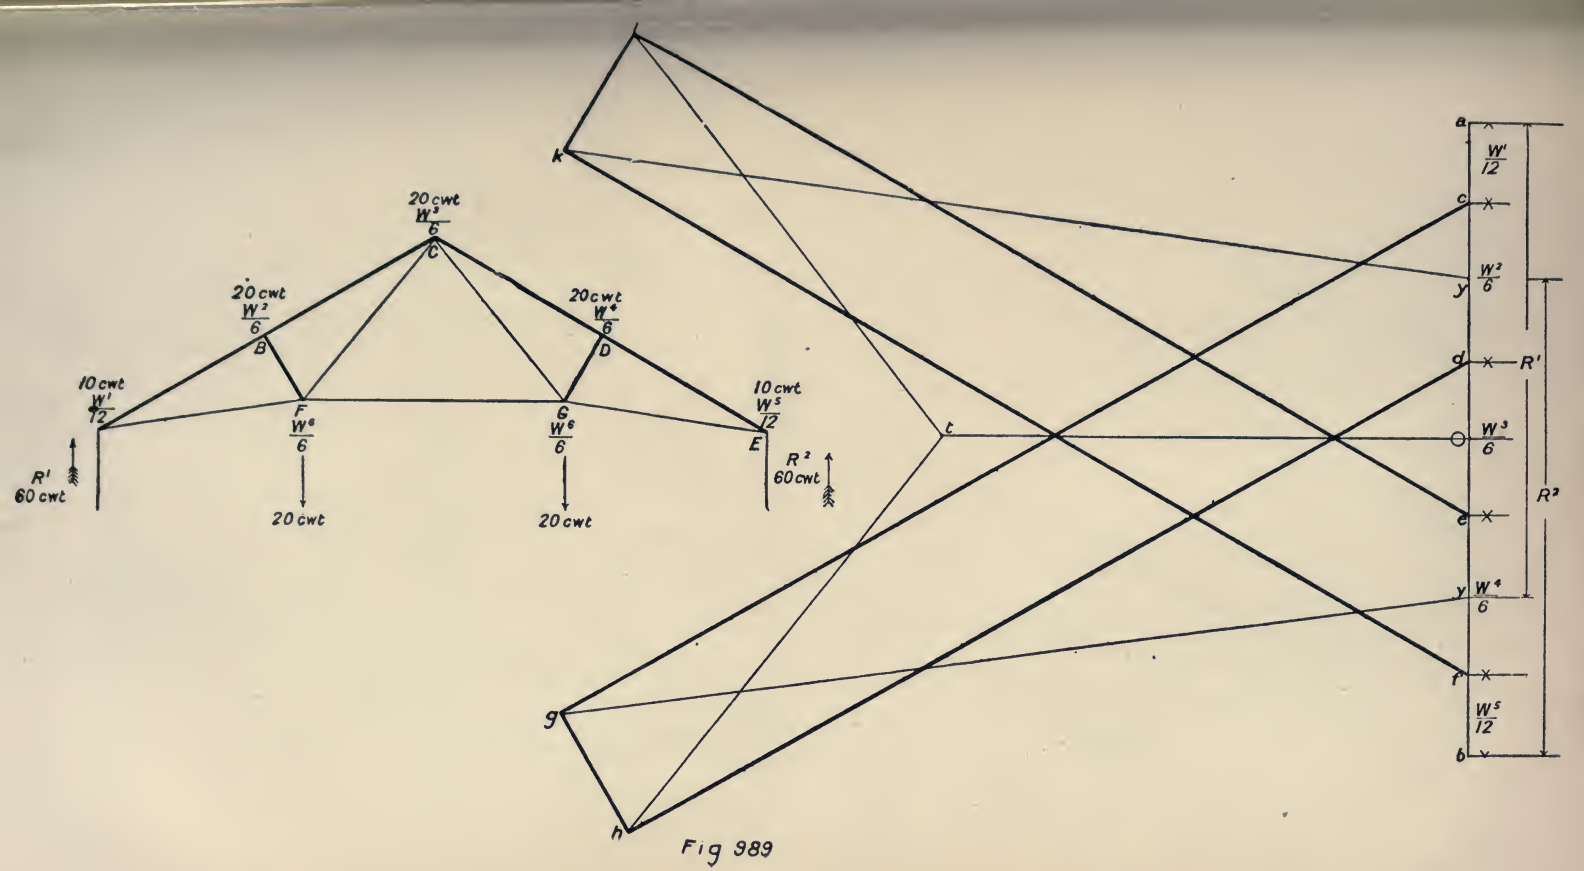
10 cwt
W¹/12
20 cwt
W²/6
20 cwt
W³/6
20 cwt
W⁴/6
10 cwt
W⁵/12
B
C
D
E
F
G
W⁶/6
W⁶/6
R¹
60 cwt
R²
60 cwt
20 cwt
20 cwt
k
a
c
y
d
e
y
f
b
t
g
h
W¹/12
W²/6
W³/6
W⁴/6
W⁵/12
R'
R²

Fig 989

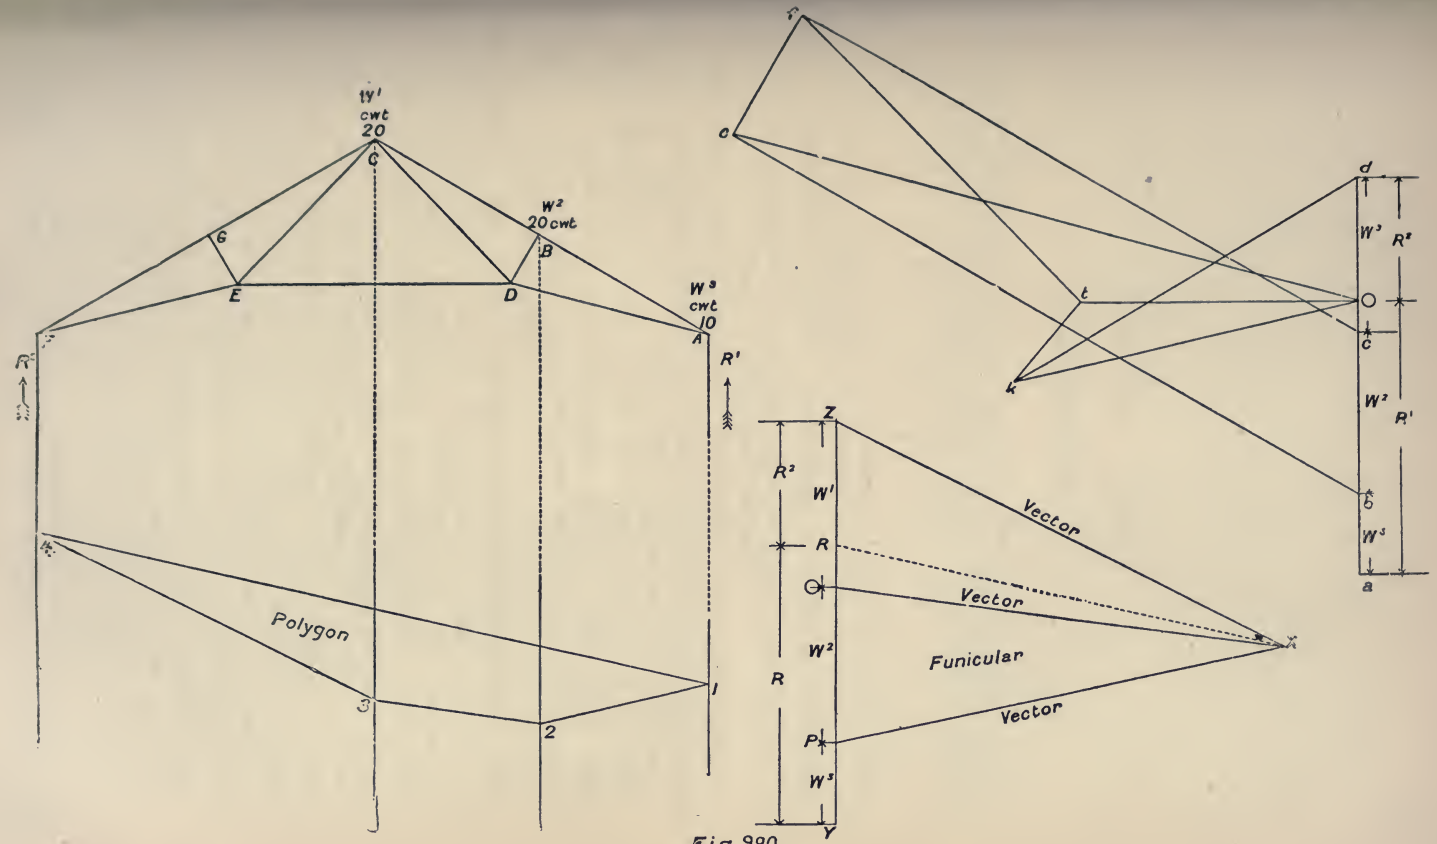
W¹ cwt 20
W² 20 cwt
W³ cwt 10
G
E
C
D
B
A
R
R'
Polygon
1
2
3
4
Z
Y
R²
W¹
R
W²
R
P
W³
Vector
Vector
Funicular
Vector
o
t
k
d
W³
R²
c
W²
R'
b
W³
a

Fig 990

CHAPTER XXVI.

SANITATION.

A Model Dwelling—Air and Ventilation—Draughts—External Ventilators as Inlets—Ventilating Fans—Drainage—Traps—Drain Pipes and Testing—Inspection Openings and Ventilation Inlets—Ventilation Outlets—Flushing—Cesspools—Sewage Irrigation—Water Closets and Soil Pipes—Baths—Water Supply.

This is one of the vexed subjects of the age; though it must be understood that the great differences of opinion only take place as to the means and methods by which it is attempted to get rid of evils, which, one and all agree, exist in a greater or less degree, in connection with the dwellings which belong to the present decade.

Rapid strides have of late years been made in the various details of sanitation, which have required great and wholesale improvement; and still there is ample room for further advancement in all its branches.

Many defects have been got rid of by sure and proved remedies, but there remain many more, which have not been dealt with in such a manner that the world can say we have reached a point of success more or less short of perfection; and it is on these varied and contradictory theories that there is this great amount of disagreement among authorities on sanitation; for the patents and so-called remedies put forth are too numerous to mention. Therefore it is only the wish of the writer to put before the students those things which, we all know, require alteration for the better, so that any suggested methods hereinafter given must not be taken "as recommended"; they are only advanced to give the student an idea how such results might be attained.

The various circumstances, and his own well-considered practical opinion, ought to decide him as to whose patent and what remedy are to be used for particular difficulties. It would be invidious of the author to advertise any one or another person's special patented ideas.

The Model Dwelling.—A "model dwelling," to be up to the requirements of the age and of a healthy life, should be one containing sufficient cubic contents, area, and light for the purposes required; with a plentiful supply and constant circulation of pure air, cooled in summer and warmed in winter, without any approach to draughts of

any kind, which would affect prejudicially the health and comfort of the inmates.

It should also be provided with a plentiful supply of good pure water; and the sanitary conveniences, of whatever kind, should be so arranged that no bad smells or offensive odours can possibly be emitted, except, as it were, out of the reach of humanity. All drains should be air-tight and water-tight, well and securely trapped, laid with proper gradients, and provided with adequate ventilation, so that a body of pure air, figuratively speaking, may prevail within the appliances, and so that all foul air may be driven out, from point to point, at such places that it is harmless to life.

It must be understood that foul air is lighter than pure air, and for that reason invariably floats, as it were, on the top of the pure air, so that we know where it collects, and therefore have to remove it from the upper part of any apartment, where it accumulates. Pure air is *fouled* or polluted by carbonic acid, which either comes, by the breath, from the lungs, or is emitted from the skin of human beings or animals.

Pure air is also vitiated by sewer gas and bad smells, and by combustion, whether caused by fires, gas, or other means of lighting and warming.

On the other hand, leaves of trees and other forms of vegetation absorb the carbonic acid out of the foul air, and generally act as a sort of purifier and filter to the atmosphere.

For the sake of convenience it will be as well to subdivide the subject of sanitation under two heads, as follows:—

1. Air and Ventilation.
2. Drainage and its Connections.

Air and Ventilation.—Human beings, on an average, require, per nead, 300 cubic feet of fresh air per hour to keep them in a healthy state; and for this purpose they must be supplied with that amount of cubic space of pure fresh air, refilled and circulated by the natural pressure of the ingress of the wind, or artificially by fans, from behind, as it were, to drive out the foul air, and replace it by pure air; or that object is attained by extracting the foul air from the top and drawing in the pure air from below.

Assuming that each person requires 300 cubic feet of air per hour, the air in a room 10 feet × 10 feet and 10 feet high, would require to be changed three times in ten hours for one person; so that rooms of various cubic contents require the air they contain to be changed according to the amount of air available for each occupant.

There is no law laying down the superficial area or cubic contents which each private dwelling should have per inhabitant; as such restriction or regulation would be unreasonable and impracticable, though

it is generally laid down by local authorities that rooms of less area than 100 feet superficial, by 9 feet high, should have special ventilation beyond that which an unused fireplace with window and door would give. Nevertheless the Local Government Board require that, though 300 cubic feet may suffice for each individual in public dormitories, yet in practice such cubic space should never be less than 850 for sick persons; and, indeed, some hospitals have as much as from 1,000 to 1,200 cubic feet, and more, per patient. The Educational Department require 130 cubic feet per scholar, while lodging-houses should have 30 feet superficial, or (assuming 8 feet high) about 240 feet cube per person. These figures will give the student an idea of what is required, and also show him how much really depends on the circulation of fresh air.

Draughts.—The various methods for promoting circulation hereinbefore mentioned, having their inlets and outlets by means of flues or ventilators, are apt to cause draughts of various kinds, which it is necessary should be obviated as much as possible; and, with that object in view, a separate supply of air should be provided to feed the fires, which require, under ordinary circumstances, 150 feet cube of air per minute. Unless that supply is made from a special source, it will be drawn to the fire from the door or window, causing a draught between the inlet and outlet; and, consequently, a fire should have an inlet of air contiguous to it, either at the back or sides of the fireplace opening, having an area nearly equal to the outlet, flue, or opening at the chimney-pot.

Down draughts are equally as troublesome, though not so regular, as the fire causes an up draught. Moreover they are not perceptible, unless we have artificial means of ventilation, such as flues and ventilators, which at times are converted, by circumstances, temporarily into sources of this defect; and this all good patents and remedies should render impossible.

Draughts sometimes are driven down outlet flues; and this can be remedied, or reduced to a minimum, by the use of flap ventilators made of mica or other light material, which can be moved or opened by an up or outlet draught, and closed by a down draught. At other times they are caused by the air rushing through the inlet, which strikes against anything such as a ceiling, and comes down on people's heads; or the stagnation of the foul air at the top will press it down.

The heat of a fire or hot-water pipes will draw from windows and skylights in very cold weather, and create serious draughts; hence in the best hot-water work provision is made for running the pipes around the skylights or intermediately, so that the cold air has to pass the heated pipes.

Common sense gives us the remedies for these: either by increasing

the outlet for foul air, or by regulating the supply; though this latter is not to be recommended.

It should be understood that a larger inlet than outlet increases the velocity with which the air circulates, and drives out the foul air all the sooner.

Ingress of pure air can be, or rather should be, of two kinds—warm for winter, and cold for summer. It can be brought in by the following methods, among others :—

External Ventilators as Inlets.—External ventilators, connected by flues to the inside, where valves, flaps, and shutters should be utilised to shut off and regulate the supply at pleasure. A common place to fix these is a little above skirting level, especially in window backs and recesses; and they should be supplied with sliding shutters, of hit-and-miss form, so that, by a slight movement of the shutter, the ingress of cold air may be regulated, or shut off when not wanted. This position for ventilators may be said to obviate the evils at its origin, inasmuch as it clears the air from the bottom of the room upwards; though it is apt to cause undercurrents and unpleasant draughts, to remedy which ventilators are used of the Tobin class, which are fixed generally half or part of the way up the external walls. They consist of external open gratings, connected by flues either to wooden shafts—such as pilasters, etc., more or less ornamentally treated, which are often placed within the rooms—or at other times, where the shafts would be inconvenient and out of place, the inlet is made by an ornamental bracket, projecting into the room, and this is connected by a shaft or flue, within the walls, to the external air grating. The fresh air enters the room at the top of the bracket (fitted with a valve to open and shut), and the force of the air is expended upwards, so that no draught is caused.

Ventilators are also fixed at or a little below ceiling level, and they are constructed of an external open-air grating, connected by a short flue to the inside ventilator, which is constructed on the hopper principle, with closed sides, so that the current of air has a tendency to go upwards. These precautions, however, do not successfully combat down draught, inasmuch as, while they remedy one defect, they cause the air to come in with considerable velocity on to the heads of persons below, which is a great defect. Hence, of the three places in which air can be brought into a room, the best place is midway, as the above will explain.

Fresh air can also be supplied to a room by means of the window, and this, too, without causing draught. The stop-bead on the sill is made 2 or 3 inches deeper, so that, by raising the bottom sash, the air is admitted through the space made at the meeting rails of the sashes thus opened.

Ventilating Fans.—Another means of ventilating apartments, and promoting a circulation of air, is by the use of fans propelled by mechanical

means, which drive the collected fresh air through flues into the rooms, the inlets to the rooms, of course, being fixed at such a distance above the floor that all feeling of draught is obviated. The cold air is taken or drawn down a shaft into the basement, and passes through a fan, which is connected to a series of large flues, and these, in their turn, are extended into various independent smaller flues, which run up the chimney-stacks or upcast shafts, and have inlets opening into the numerous rooms on the different floors above.

At other times the foul air is drawn out by mechanical means, at about the skirting level, into flues connected to shafts, having exits in roofs, towers, etc.; and this egress creates such a vacuum that fresh air is drawn in through other flues, having inlets into the rooms, 7 or 8 feet above the floor, connected to air inlet shafts collecting the fresh air from the open.

The supply of fresh air to rooms is a small matter in comparison with the warming and cooling of it in summer and winter, and this is a matter which is only in its infancy as yet; the only method in vogue at the present time consists purely of passing the air over or through coils of pipes, etc., containing hot or cold air, or over boxes of ice and steam-heated pipes; and this means is only applicable (1) to the "fan" process, which explains itself, and (2) in cases where coils can be fixed between the inlet ventilators and the space to be ventilated, so that all fresh air must pass over or be acted upon in a more or less degree by the hot or cold appliances. Where fans are used, the fresh air can also be washed on a screen—which is very desirable.

In arranging systems of ventilation great care should be taken that the water closet and sanitary apartments are ventilated independently of kitchens, dwelling-rooms, etc.

The egress of foul air can also be provided for by the fresh air driving in through top ventilators, or by extraction. The former method allows of various forms, including:—

1. Independent ventilating flues, constructed in the chimney-stacks, and carried up to the top and out into the open. These are the most commonly used remedies, and their only disadvantage is their liability to down draught; but this can be obviated by the use of the mica *flap* ventilators previously mentioned, which will only act one way as extractors, a contrary action closing them, as in the case of a down draught.

2. Outlet ventilators may also be constructed in ceilings, a flue of zinc connecting the outlet to a flue into the stack or outlet vent in the roof, as just mentioned; and these have the advantage that they can be ornamentally treated, in that we can use perforated centre flowers and cornices as outlets—the former being very efficacious, when the

warmth of the gas will help to draw the foul air to the outlet and drive it away.

Warmth in outlet flues will always increase the velocity of the outcast, whether burning jets be inserted at the bottom of the flues or the flues themselves be warmed or surrounded by warm smoke flues, care being taken that smoke flues are not utilised as ventilators, unless great care can be exercised and very superior and tight flaps be used.

The extraction of foul air is usually attained by means of patent appliances, called *air pumps*, which are generally self-acting. These patents mostly take the form of cowls, which are fixed on the top of the special shafts or on roofs, the various small pipes being brought together in a main shaft, at the top of which the extractor is fixed, and this draws out all foul air, or rather it increases the velocity, and causes an "upcast"; but the efficacy depends on the movement of the external air very much.

It should be noted that the various small flues must not be *let loose* into the main stack, inasmuch as the different currents would clash, and form an injurious whirl, as it were, which would cause an obstruction. They must be kept independent of each other, or be gathered together one by one as they get near the extractor.

Drainage.—Coming to drainage, we will start from the outfall into the main or public sewer, and deal with the drains, water closets, baths, lavatories, sinks, and other apparatus in connection therewith, calling attention to those points requiring special study, whether the system be in connection with a *common sewer*, cesspool, or scheme of irrigation.

It may be stated at the outset that, wherever practicable, it is always advisable to intercept, or disconnect, that portion of a dwelling in which the sanitary conveniences are placed, from the main block of the house, by a lobby having a cross current of air constantly circulating through it.

It is generally acknowledged by most sanitarians that the house sewer should be disconnected from the public sewer or cesspool by some properly devised trap placed as near the end of the house system as possible, as house sewers not so disconnected allow the free admission of any fever germs which may have found their way into the public sewer from some contaminated source. Otherwise householders would have to rely entirely upon the internal fittings of the house for their protection; and in such cases as (1) the temporary removal of a water closet for repairs, without sealing the pipe end; (2) an accident to a trap, causing the water to run out; or (3) the unsealing of a gully during cleaning operations or the evaporation of water during a dry season (all of which may occur in the average dwelling), the inmates would be exposed to the risk of these germs gaining admission to the house—a risk too serious to be contemplated or permitted.

Traps.—The various kinds of traps (a trap being an appliance devised to prevent the rising and entrance into the house of sewer gases by the water which it contains) in use for this purpose of disconnection are too numerous to mention, the main point being that they should be constructed so as to have a dip at the outlet, shown at A, fig. 991, to allow the standing water in the trap to be more forcibly acted upon by the discharges down the house sewer, so that the water may be

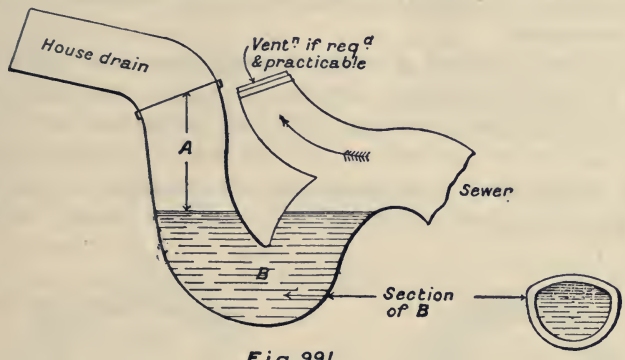

Fig 991

properly changed. The body of the trap B should also be reduced to allow of a better seal being obtained (of, say, 2 or 3 inches), without having too large a body of water to resist the flush through it, and of course such reduction must be kept within reasonable limits, or the trap would be liable to choke by solid matter passing down the sewers; and it is very desirable that there should be an inspection arm on the

Fig 992

trap, as fig. 992, to allow of any obstruction in the drain below being removed.

These traps should be placed below a brick-built chamber, as fig. 999, so that the trap itself can be easily and conveniently cleansed, when required; while the open cover can be utilised as an inlet to ventilate the house drain above, as shown, all possibility of sewer gas arising being obviated by the trap; and when there is an inspection arm, it should be securely fixed, that the joint may be absolutely air-tight.

Drain Pipes and Testing.—The next point for consideration is the house sewer and its branch pipes from this disconnecting trap to the various positions required to receive the solid and liquid matter from the house appliances; and it may be mentioned at once that too much care cannot be bestowed upon the laying of these conduits, as leakages from faulty joints or imperfect pipes will percolate through the soil to a great distance, and may eventually locate themselves, and the evils arising therefrom, beneath the dwelling, to the detriment of the health of the inhabitants.

These drain pipes are generally of glazed stoneware, about 2 feet in length; but of late years many schemes have been carried out in strong cast iron, having its surface coated with glass enamel, or with Dr. Angus Smith's solution of hot coal tar, oil and resin, or other non-corrosive material, the advantage claimed being a better connection, that will stand a high pressure, powerful flushing, and a reduced number of joints, on

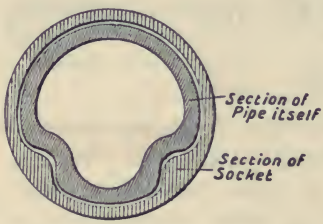

Fig. 993.

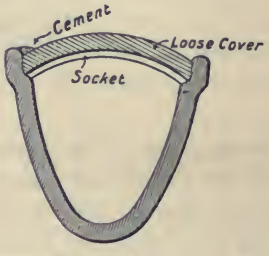

Fig. 994.

account of the iron pipes being in 9-feet lengths, as compared with 2-feet lengths in stoneware pipes. Stoneware pipes, however, have this strong point in their favour—that they are made of an imperishable substance, which iron is not; and, moreover, iron pipes, properly treated, cost nearly double the price of stoneware pipes, bedded in concrete as an additional precaution. These pipes should be egg-shaped, so that a greater hydraulic depth can be obtained for small flushes, to enable them the better to allow the water to carry any solid matter with them, scouring out the drain completely, and also to increase the velocity of the flow.

This reduction of the width of the channel, with its corresponding increase of depth, is attained by the use of pipes similar to figs. 993 and 994, the latter of which—on account of its loose lapped cover—reduces to a minimum the risk of obstruction formed by the squeezing up of the cement used in bedding the bottom joint. Both these pipes have another advantage, in that they do not require so much water to flush them.

They should be laid perfectly straight, on a solid foundation of

concrete, and to a gradual fall from point to point (of, say, 2 inches in 10 feet), according to the size of the pipe—a simple method for calculating the fall of drains and sewers being to multiply the diameter by 10 and call it feet, the result being the length of pipe that should have 1-foot fall—*e.g.*, 4 inches × 10 = 40 feet, or 1 foot in 40, the required fall for 4-inch pipes.

It should be borne in mind that this is the minimum rate of fall that is advisable and likely to answer its purpose, and a greater fall should be the aim of the sanitarian.

If the fall is not sufficient, the contents are likely to silt up and choke the drain; while if too much fall is given, the liquid matter will run too quickly away from the solid, which would thus accumulate, and also choke up the pipes.

The inside circumference of the pipes should be in perfect alignment when fixed together, and all joints should be made thoroughly sound; those in stoneware where patent joints are not employed being made of tarred spun yarn and cement, the cement being mixed with clean sand,

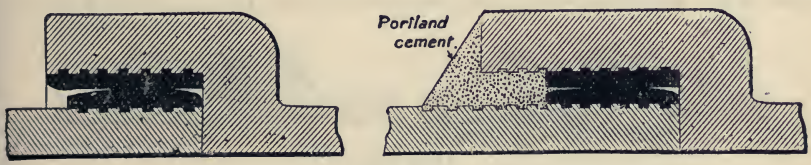

Fig. 995.

in the proportion of about 1 and 1 (otherwise the expansion in setting is liable to crack the sockets), and care should be taken that no cement or projection is left on the joint in the inside of the pipe; while in the case of cast-iron pipes the joints are made by lead being well caulked into the sockets, so that the pipe joints are strong enough to stand the smoke, peppermint, or water-pressure tests, the latter being the best, consisting of blocking up the drain at the outfall and filling with water, which will be retained at a regular level if all is secure. All drains in close proximity to dwelling-houses should stand the water test, otherwise a stoppage in the pipes, causing them to fill up at any time, would force the joints, and cause leakages that may never be discovered.

The other tests are applied by forcing fumes of smoke or peppermint into the pipes; and these fumes, if the system is secure and a good job, should not escape at any place (so that the odour should be perceptible) except at the top of the soil or vent pipes.

Of the patent systems of jointing stoneware socketed pipes one of the most important is Doulton's self-adjusting joint, fig. 995, which consists of concave and convex rims made of hard, imperishable material,

and which are attached to and incorporated with the material of the spigot and faucet ends of the pipes, the spigot end fitting into the socket or faucet, both having previously been smeared over with an oily mixture, so that a turn of the pipe will cause a close-fitting joint to be made

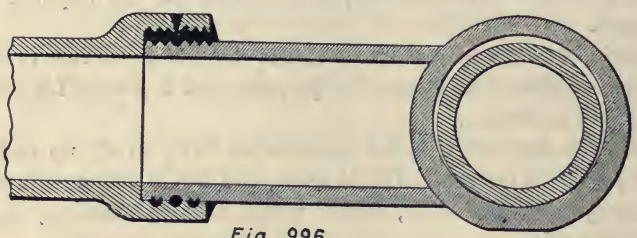

Fig. 996.

between the hard, true surfaces of the rims. Another form of oint is the Albion "Paragon," similar to fig. 996, which explains itself, the clay or cement being forced by the insertion of the spigot to make a water-tight joint. A still later and more improved kind is known as "Sykes" patent joint, as fig. 997, from which it will be gathered that, being a screwed thread,

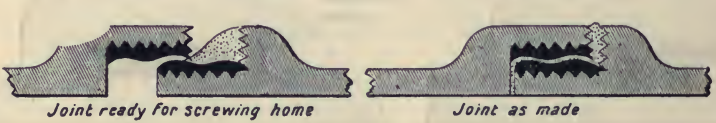

Fig. 997.

so to speak, to be twisted into position, it can be made by the ordinary workman, the jointing material being said to be water-tight and imperishable, and yet flexible—the quality which has been a long while sought, as it is impracticable to make a perfectly rigid joint water-tight, owing to settlements in the ground.

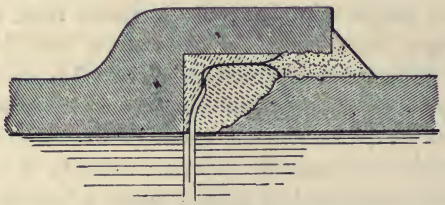

Fig. 998.

Another similar joint is illustrated by fig. 998, which also allows of flexibility in the connection—a point which, together with the fact that perfect alignment is rendered the more certain, gives a great deal of preference to patent-jointed pipes over the ordinary rigid cement and yarn; this latter being most uncertain, owing to unequal settlements of the ground.

Further, the mere filling-in of the soil in deep drains often breaks the joint, no matter how carefully the ramming is done, and moreover, it requires most close supervision and inspection to be sure that no cement has been squeezed up at the bottom of the joints to cause obstructions in the channel.

Inspection Openings and Ventilating Inlets.—Where these pipes take a different angle (forming an elbow), or have a junction one with the other, inspection chambers should be provided, having air-tight covers if in a situation where open grates would be objectionable; though these manhole or inspection chambers, where required and practicable, should be utilised to get the necessary passage of pure air through the pipes, as fig. 999, the lower part of course being properly trapped and securely ventilated from above, as shown; for the mere fact of carrying a soil pipe up full bore above the eaves of the roof will not cause circulation, unless an air inlet is also provided at a lower level.

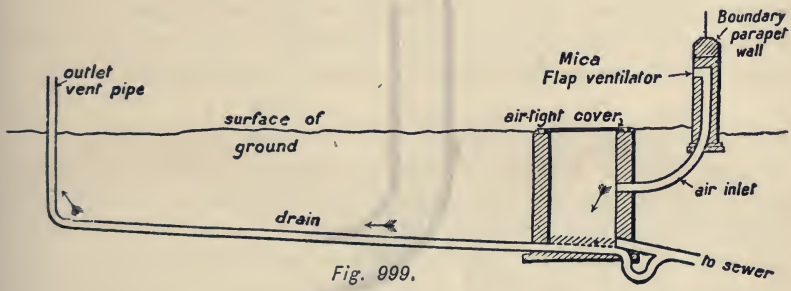

Fig. 999.

Great care should be taken to provide the fresh-air inlet of an area equal to or slightly larger than that of the outlets, which is an important item, very frequently neglected; and it is best, where practicable, to admit fresh air separately to each branch at that point where it joins the main house sewer; and, if this is not practicable, the main inlet at the chamber next the sewer should be large enough to supply the various branches which it has to receive; and where fresh air cannot be supplied by these chambers, it should be let in by means of shafts (sometimes in a wall) provided with mica flap ventilators, to prevent the back pressure of foul air.

Ventilating Outlets.—Cowls are sometimes fixed at the top of the outlet of the ventilating pipes, with the object of increasing the up current; but this is attended with such variable results that an open pipe end, protected from birds'-nests, etc., by a copper wire cage, is preferred by most sanitarians; and if in a position where snow is likely to block up the top in winter, slits should be cut longitudinally in the top of the pipe to give the necessary outlet.

In cases where these ventilating pipes are fixed to trees, they should be constantly examined, or provided with expansion joints, as the growth or movement of the tree might disturb the jointing.

All ventilation pipes should be coated with non-corrosive substance and with molten lead joints. It has been discovered that uncoated pipes very soon rust and crumble, the scales of rust falling to the bottom of the pipe, where it is connected to the drain, and here it accumulates, until a heap is formed which entirely blocks the egress of foul air (see fig. 1000).

Flushing.—To ensure thorough cleanliness in sewers, it is necessary that a means of regular flushing should be adopted; and this can be done in several ways,—either by collecting the rain water in an automatic flushing tank connected to the sewer (in such a manner that foul gas cannot get out) at the head of the system, or by providing a constant supply of water to a flushing tank that can be regulated at will to

Fig. 1000.

discharge a certain quantity of water, automatically, as circumstances require—more frequent in warm weather than in cold—though it is not advisable to have too large a discharge, as it is apt to disturb the seals of the various traps on the branch sections, from 20 to 30 gallons being a sufficient quantity for flushing an average house sewer system.

Oftentimes drainage systems can be properly flushed by the frequent use of the bath when placed at the head of the system, and the smaller the drain pipe the greater the chance of sending down a volume of water the full bore of the pipe, which is absolutely necessary to give confidence and security.

Where there is no public sewer for the proper disposal of sewage, as in the case of isolated mansions and country houses, the sewage has to be dealt with by cesspools, or by surface or sub-irrigation, the latter method being the most preferable.

Cesspools.—When cesspools are used, they should be situated as far as possible from the building and clear of any storage tanks or source of

domestic water supply, their walls and bottoms being perfectly water-tight, and the tank large enough to obviate frequent clearing out; though the other extreme is just as bad. They should be well ventilated by pipes terminating at the most favourable position that the surrounding circumstances will allow; and the overflow should be so constructed that as little harm as possible is likely to occur from it, though cesspools are bad and injurious, even when necessary, constructions; and in all cases the house sewer should be disconnected from them, as hereinbefore referred to.

Sewage Irrigation.—There are two methods of disposal by irrigation —namely,

1. *Surface* irrigation, which consists in distributing the sewage matter over the surface of properly prepared land, the liquid being drained off at a depth which will ensure its being deodorised before being allowed to flow into a stream or river; and,

2. *Sub-irrigation*, by which solid matter is collected in tanks, constructed and subdivided, so that the liquid part is forced through beds of sand and charcoal into other compartments (as fig. 1001), from which it should be automatically flushed out and distributed below the ground, at a depth of, say, 2 feet, by means of ordinary field drains laid a certain distance apart in dry rubble.

It is necessary that the distribution should be large and intermittent to prevent the trickling of small discharges, which make the soil round the tanks boggy and unpleasant, because the liquid never gets beyond the first two or three pipes; and it is desirable to have all irrigation tanks constructed in duplicate, to allow of one set being cleaned out while the other is in operation, without interfering with the regular working of the scheme.

It is needless to add that sewage irrigation depends very much on the nature of the ground through which the pipes are run—a gravelly soil, or any other through which the liquid will percolate quickly, being the desideratum of a sanitary engineer.

Before leaving house sewers, and passing on to the consideration of soil pipes and water closets in connection therewith, the writer would impress upon the student the necessity of careful thought in dealing with drainage schemes, as errors have, frequently, most serious results.

Water Closets and Soil Pipes.—Every water-closet apparatus, on whatever principle, whether *valve*, *wash-down*, or *wash-out*, should have the following properties, to secure safety :—

1. Simplicity in its working parts.

2. A proper trap in connection with it; having a seal of not less than $1\frac{3}{4}$ inches (many have but half this).

3. A sufficient depth of water in the basin to cover the excreta, and so suppress bad smells.

4. Such means of connection to a soil pipe as will ensure a perfect,

permanent, and secure joint—a point which also applies to the ventilation horn of the trap.

5. A flushing arrangement that will allow of a flush of from $2\frac{1}{2}$ to 3 gallons of water, to completely change the body of water contained in the

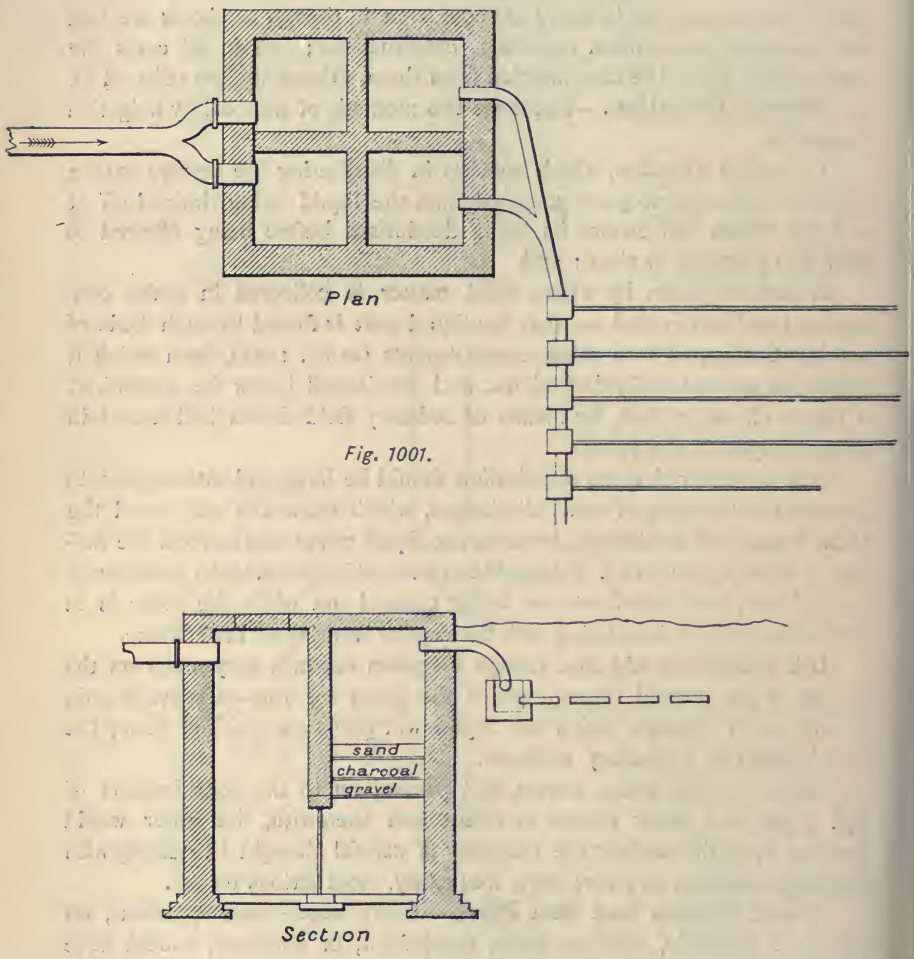

Fig. 1001.

basin and trap, and carry the excreta and paper to the farthest possible distance.

6. It should have no dry surface exposed to contamination.

All closets having these qualities may be considered to be appliances that will meet all usual requirements, and they are connected to the drain below by a soil pipe of glass-enamelled or coated cast iron, or lead (the latter being the most lasting substance when properly fixed); and such

pipes should, in all cases, be always fixed outside, and carried up full bore to the ridge of the roof, terminating at a position remote from all windows or openings into the house, and away from any projection likely to cause a back draught in the pipe.

There is a diversity of opinion as to the size of these soil pipes, some sanitarians requiring 4 inches diameter for each closet, while others are satisfied with a $2\frac{1}{2}$-inch pipe for a stack of three closets; the writer's opinion being that if the pipe be large enough to carry away the solid matter deposited in the basin, the smaller size undoubtedly offers the greater certainty of being kept clean.

Where the branch piece between the outlet of the apparatus and the stack outside is of any considerable length, the trap should be ventilated separately, as also in cases where more closets are fixed on one stack, when each trap should be separately ventilated by a pipe carried up to a position higher than the upper apparatus, and then branched into the main vent pipe—precautions which are absolutely necessary to prevent syphonic action unsealing the traps by removing the pressure at one side of the water seal; and many cases have occurred in which ignorance of this important matter has been the cause of an escape of sewer gas into a dwelling.

Where lead soil pipes are connected to iron or stoneware, a brass ferrule should be wiped on to the end, to allow of a properly caulked joint being made; and all soil pipe joints should be made perfectly air- and water-tight, besides which it is sometimes advisable to treat soil pipes locally, and disconnect them from the house drain or sewer by a trap at the foot, ventilated separately, as fig. 1002, which reduces the risk of sewer gas, in case of any defects to internal fittings; and where this is done, of course a separate ventilating pipe is required for the drains, irrespective of the soil pipes.

Baths, etc.—The next question is that of the baths, lavatories, and sinks, which it is necessary should be constructed in such a manner as will allow of themselves and their surroundings being kept thoroughly clean and wholesome, provision being made to allow of regular inspection for cleansing purposes, when these fittings are enclosed in woodwork; though it is much to be preferred, from a sanitary point of view, that they should be fixed without enclosures, especially sinks, and they should also be clear of all angles and ledges where filth is likely to accumulate.

The outlet fittings to these appliances should be of the description known as full-way fittings, having an area of space through the holes of their grates equal to or slightly larger than the bore of the waste pipes fixed to them, so as to ensure such waste pipes being thoroughly flushed and scoured by each flush sent down them, bath and sink waste pipes

being not less than 2 inches in diameter, and those of lavatories $1\frac{1}{4}$ inch, with traps fixed immediately underneath the appliances, and properly ventilated to prevent syphonage.

Although the legitimate use of a bath is to cleanse the human body, its discharge of from 30 to 50 gallons of water can be utilised with great advantage as a flushing force for cleansing the drains, as hereinbefore explained, and for this reason the bathroom should be situated as near as possible to the point where the discharges therefrom will act on the whole drainage system, the benefit of which is obvious to all; and to utilise this force properly, it is absolutely necessary that full-way fittings and pipes be used, and the waste made to deliver in the open air on to a proper disconnecting trap similar to fig. 1002, but with no inlet—the waste water discharging on to the grating; and this same form of gully should be used to secure lavatory or sink discharges, excepting the case of the latter having large discharges of grease likely to choke the drains, when a proper grease trap should be fixed in a position far enough away, or sealed in such a manner as not to be offensive; but, where there is

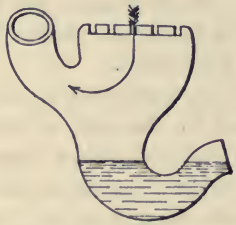

Fig. 1002.

not sediment enough to require such an appliance, it should be flushed clean through the above trap and into the sewer.

The ordinary yard gully is an appliance totally unfitted for the purpose of receiving discharges from baths, lavatories, and sinks, as it is more of a filth-collecting and retaining appliance, which throws off injurious emanations from the decomposed matter which it contains; and, moreover, when fixed outside, they are usually in such close proximity to the house as to allow these noxious gases gaining admission thereto, and then they become, practically speaking, small cesspools about a house. *Anti-bell* or *adjustable traps* (as figs. 1003 and 1004) should always be used, the latter, as the name implies, being capable of regulation according to circumstances of fall, etc.

In dry seasons and hot weather it is essential that the gullies, whether from waste or rain pipes, should be frequently supplied with water to maintain the proper seal, which is easily dried up, and becomes a great source of danger. A sanitarian's aim in arranging sewerage work should be to avoid stagnation and the consequent accumulation of foul gases by so

arranging the pipes that a constant current of fresh air can be maintained in every pipe and drain, including wastes, overflows, soil pipes, etc., giving the principle of diffusion its fullest extension, and at the same time taking care that in no case shall any waste or other such pipe act as an inlet ventilator to the building.

Water Supply.—Good pure water is naturally most essential for the welfare of human beings; and, as a rule, it is supplied by private or public bodies, so that it is only necessary here to deal with its storage and distribution. Sometimes, though very seldom, the water is on constant service, which obviously does not necessitate any storage capacity to guard against a dearth when the water is turned off.

Tanks are used for this purpose, and made of wood lined with lead, or of galvanised iron, if the water is hard and heavy; but where the water is soft, either vitrified stoneware or slate is preferable, as the soft

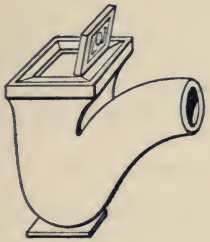

Fig. 1003.

Fig. 1004.

water acts upon the lead, rendering it injurious and unfit for drinking purposes.

Care should be taken to place these cisterns in a position clear of all chance of contamination from sleeping chambers, dust, or foul air, and they should be covered with a dust-tight lid, easily removable for cleaning.

The overflow pipes from cisterns should terminate in a position quite clear of any waste pipes or other fittings, and be in diameter twice the area of the inlet or feed pipe; while stop taps should be placed in a convenient position to control the supply both to and from the cistern, all supply pipes being properly fixed to wood grounds, kept away from exposed places, where they would be liable to be affected by frost.

It is also an important matter, and one which oftentimes saves considerable anxiety and not a little inconvenience and expense, to so arrange the water supply that the risk of freezing is reduced to a minimum, and this may be effected by care and a little attention when arranging the supplies. First of all, all external pipes should be not

less than 30 inches below the surface of the ground; and where they are not in the ground, they should be wrapped in thick hair felt enclosed in wood pipe casings. On entering the house a stop tap should be placed below a bib tap, so that all the water in the house can be drawn

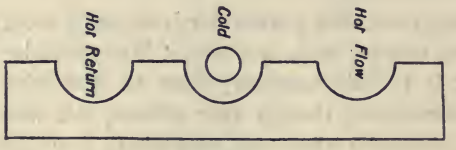

Fig. 1005.

off after the stop tap is closed; and from thence the pipe should be run on internal walls within wooden pipe casings to the cistern, the supply to boiler from thence being fixed in casings grooved to allow of the hot pipes going in the same casing, and yet not contagious to the cold supply, as fig. 1005; a more or less ornamental cover being screwed on to hide the pipes.

APPENDIX.

Syllabus of the Subjects in which Examinations in Building Construction are held by the Department of Science and Art.

[Note.—*The Department announce that a larger number of questions will be set in the Examination Papers for the Elementary and Advanced Stages than the candidate will be allowed to attempt, so that he will, to a certain extent, be able to show his knowledge in such branches as he may, from circumstances, have paid special attention to.*]

First Stage, or Elementary Course.

It is assumed that the student has already mastered the use of the following drawing instruments: rulers, ordinary and parallel; ruling pen; compasses, with pen and pencil bow-sweeps, as well as the construction and use of simple scales, such as 1, 2, 3, or more feet to the inch, showing inches; or such as $\frac{1}{2}$, $\frac{1}{3}$, $\frac{1}{4}$, $\frac{2}{3}$, $\frac{3}{5}$, $\frac{5}{8}$, or other fraction of full size, or of any given scale or drawing; also the meaning of such terms as Plan, Elevation (front, back, or side), Section, Sectional Elevation.

He should understand the object of bond in brickwork—*i.e.*, English bond, Flemish bond, or English bond with Flemish facing, and how it is attained in walls up to three bricks thick in the following instances—viz., footings with offsets, angles of buildings, connection of external and internal walls, window and door openings with reveals and square jambs, external gauged arches (camber, segmental, and semi-circular), internal discharging arches over lintels, and inverted arches.

He should know where to put wood bricks, or plugging, and their use; the construction and uses of brick corbelling, and the construction of trimmer arches in fireplaces.

He should be able to give sections and elevations to scale of the following kinds of mason's work—viz., uncoursed and coursed rubble, block in course, and ashlar, with their bond, and the proper dimensions of the

stones, as to height, width of bed, and length; and of the following dressings—viz., window sills, window and door jambs, plain window and door heads, door steps, string courses, quoins, copings, common cornices, blocking courses; and of the following methods of connecting stones—viz., by cramps, dowels, joggles, and lead plugs.

He should be able to show how to join timbers by halving, lapping, notching, cogging, scarfing, fishing, and mortise and tenon; as applied to wall plates, roof timbers, floors, ceilings, and partitions.

He should be able to draw, from given dimensions, couple, collar, and king-post roofs, showing the details of the framing and of the ironwork.

He should be able to draw, from given dimensions, single, double, and framed floors, with or without ceilings beneath them; showing modes of supporting, stiffening, and framing the timbers, trimming round hearths and wells of stairs; also floor coverings of boards or battens, rebated and filleted, ploughed and tongued, and laid folding, with straight or broken joints, bevelled or square heading joints.

He should be able to draw in elevation, from given dimensions, a framed partition with door openings.

He should be able to draw in elevation, and give vertical and horizontal sections of solid door frames and window frames.

He should be able to describe, by drawings, beadings of different kinds, dovetailing, cross-grooving, rebating, plough-grooving, chamfering, rounded nosing, and housing.

He should be able to draw in elevation, and give vertical and horizontal sections of, the following doors,—viz., ledged, ledged and braced, framed and braced, panelled, and the mode of putting them together, position of hinges and furniture; as well as to describe, by drawing, the following terms as applied to panelled door—viz., square and flat, bead butt, bead flush, moulded, all on one or both sides.

He should be able to draw in elevation, and to give vertical and horizontal sections of the following window sashes and frames—viz., single or double-hung sashes with square bevelled, or moulded bars, and cased frames; casement sashes hung to solid frames, with method of hanging and securing in each case.

He should be able to show, in elevation and section, the lead-work connected with chimneys, ridges, hips, valleys, gutters, and lead-flats.

He should be able to give an elevation and section of the slating of a roof laid with duchess or countess slates on boards or battens.

He should be acquainted with the proper cross-section for cast iron beams for use in floor girders or bresummers, or as cantilevers; and be able to draw such a section in its right proportions from given dimensions of flanges.

He should be able to draw in elevation, from given dimensions and

skeleton diagrams, ordinary iron roofs up to 40-feet span, showing the sections of different parts, and methods of connecting them.

Second Stage, or Advanced Course.

In addition to the subjects enumerated for the Elementary Course—in all of which questions of a more complicated nature may be set, combining work done by the different trades—the knowledge of the students will be tested under the following heads, viz. :—

1st. Freehand sketches explanatory of any details of construction, such as the joints of iron and wooden structures, and other parts requiring illustration on an enlarged scale. These sketches may be roughly drawn, provided they are clear and capable of being readily understood.

2nd. The nature of the stresses to which the different parts of simple structures are subjected, as follows :—

In the case of beams either fixed at one or both ends, or supported or continuous, the student should know which parts of the beam are in compression, and which in tension.

He should be acquainted with the best forms for struts, ties, and beams, such as floor joists, exposed to transverse stress.

He should know the difference in the strength of a girder carrying a given load at its centre, or uniformly distributed.

In the ordinary kinds of wooden or iron roof trusses, and framed structures of a similar description, he should be able to distinguish members in compression from those in tension.

He should be able, in the case of a concentrated or uniform load or a part of a beam supported at both ends, to ascertain the proportion of the load transmitted to each point of support.

3rd. The nature, application, and characteristic peculiarities of the following materials in ordinary use for building purposes, viz. :—

Bricks of different kinds in common use, York, Portland, Caen, and Bath stones (or stones of a similar description), granite, pure lime, hydraulic lime, Portland and Roman cement, mortars, concretes, grout, asphalte, timber of different kinds in common use, cast and wrought iron, lead.

4th. Constructive details, as follows :—

The ordinary methods of timbering excavations, such as for foundations to walls, or for laying down sewers; the erection of bricklayer's and mason's scaffolding; the construction of travellers; the use of piles in foundations, hoop-iron bond in brickwork, diagonal and herring-bone courses in ditto, damp-proof courses, bond timber in walls, and the objections to it.

He should know how bricks are laid in hollow walls, window or door

openings with splayed jambs, flues, chimneys, fireplaces, and arches up to about 20-feet span; how mortar joints are finished off, and the thickness usually allowed to them; why bricks and stones ought to be wetted before being laid.

He should be acquainted with the construction of brick ashlar walls, rubber ashlar walls, stone stairs, wooden stairs (both dog-legged and open newel), skylights, fire-proof floors (such as brick arches supported on rolled or cast-iron girders, Fox and Barrett's, and Dennett's patent concrete floors), circular and egg-shaped drains, roofs of iron or wood, for spans up to 60 feet; the fixing of architraves, linings, and skirtings to walls, shutters to windows, lath, plaster, and battening to walls, roof coverings of tiles and zinc, slate ridges and hips.

Examination for Honours.

Written answers will be required to some of the questions.

The candidate will have to furnish a design for a building, or part of a building, in accordance with given conditions, which design he will be allowed to draw out at his own home.

He will be called upon to answer in writing—illustrated by sketches either freehand or to scale, as directed—questions on all the subjects previously enumerated for the elementary and advanced Courses.

He must possess a more complete knowledge of building materials, their application, strength, and how to judge of their quality; and in the case of iron, of the processes of manufacture, and the points to be attended to in order to insure sound castings, and good riveting.

He must be able to solve simple problems in the theory of construction, and to determine the safe dimensions of iron or wooden beams subjected to dead loads.

In ordinary roof trusses and framed structures of a similar description, he must be able to trace the stresses, brought into action by the loads, from the points of application to the points of support, as well as to determine the nature and amount of the stresses on the different members of the truss, and, consequently, the quantity of material required in each part.

In ordinary walls and retaining walls he must be able to ascertain the conditions necessary to stability, neglecting the strength of the mortar.

INDEX.

A

ABUTMENTS, 32
Adamantine clinkers, 7
Adamant plaster, 337
Adamantine, 337
Advantages and disadvantages—
of methods to prevent damp, 52, etc.
of various floors, 100
of slates and tiles, 209
Agglomerate, 367
Aggregate, 367
Air—
amount required, 404
circulation of, 405
cooling of, 407
heating of, 407
pumps, 408
requirements of authorities, 405
supply of fresh, 406
supply to fires, 405
Alkalies in bricks, 2
Alum, 334
Alumina, 2, 365
American—
oak, 97
pine, 95
walnut, 98
Anderson's fibrous asphalte, 57
Angle braces, 156
Angle buildings, to shore, 355
ties, 156
Angles in bricks, 20–26
—— plaster, 336
—— stone, 79, 80
Angles—
beaded and tongued, 223
intersecting brick, 27
irregular brick, 24—26
key-mitred, 224
mitred, 223
mitred and tongued, 223
staff-beaded, 224
tongued, 222
Angus-Smith's coating, 410
Annealing, 166
Annular or annual rings, 88
Apex, 80
Apœnite, 368
Apron lining, 319
Aprons in lead, 195
Arch bricks, 9
bond of, 40
Arches—
terms of, 32
axed, 38
cambered, 34
common, 38
discharging, 36
Dutch, 37
elliptical, 34
equilateral, 35
flat, 34
four-centred, 35
French, 37
Gothic, 35
groined, 36
inverted, 38
relieving, 36
rough, 38
rubber-brick, 38
scheme, 34

Arches (*continued*)—
segmental, 33
semicircular, 34
straight, 35
three-centred, 35
trimmer, 45
Tudor, 35
Archangel deal, 95
Architraves, 288
double-faced, 288
Area walls, 52
Arithmetical calculations, 381
Artificial stones—
Apœnite, 368
Ransome's, 368
Victoria, 368
Ash, 98
Ashlar, 68, 337
Asphalte, Claridge's, 363
damp-courses, etc., 57
Limmer, 57
Seyssel, 363
Val-de-Travers, 363
Astragal and hollow moulded sashes, 277
Automatic flushing, 414
Axed arches, 38
Axed stone-facing, 69

B

BACKS for malm, 3
——, windows, 32, 290
Backs of arches, 32
of slates or tiles, 205
Back flaps, 300
—— linings, 273
Backings, 235, 270
Balk timber, 94
Balusters, 305, 317
Balustrades, 78
Band hinges, 243
Bangor slates, 204
Barefaced tenons, 222
Bars for condensation, 326
Bars of iron—
Best or B, 167
Best Best, BB, 167
Best Best Best, BBB, 167
merchant, 167
Bars of iron (*continued*)—
puddled, 166
Basebed, 64
Bases, 339
Bastard roach, 64
—— stucco, 337
Bathstone—
Box, 63
Combe Down, 63
Corngrit, 63
Corsham, 63
Farleigh Down, 63
Monk's Park, 63
Westwood Ground, 63
Winsley, 63
Baths, 417
Bats, 15
Battens, 94
Battening, 205, 335
Bay-window angles, 24, 25
Bays—
case, 112
tail, 112
Beads—
butt, 255
cock, 231
flush, 255
quirk, 231
return, 231
staff, 231
Bead butt doors, 255
—— flush doors, 255
Beaded angles, 223
—— joints, 233
Bead joint pointing, 44
Beam, straining, 148
Beams, flitched, 117
Beams, trussed, 117
Bearing strain, 372
Bed, natural, 59
Bed of slates, 205
Bedding tiles and slates, 209
Beech, 98
Bessemer steel, 168
Best bar-iron, etc., 167
Bevelled joints, 138
—— halving, 107
—— haunching, 235
—— headings, 121
Binders, 110, 113, 114, 116, 122
Birch, 98

Birdsmouth angles, 8
Birdsmouth quoins, 80
Black bricks, 7
Blind-space, 294, 295
Blister steel, 168
Blocks for invert, 353
Blocks for hoisting, 360
Block in course, 69
Blocking, coarse, 78
Blockings, to stain, 314
Blocked struts, 185
Bloom, 166
Blue sap, 88
Blue bricks, 7
—— —— damp courses, 57
—— —— facing, 54
Boards for lead, 161
—— lear, 160, 161
—— poling, 348
—— scaffolding, 356
—— snow, 162
—— valley, 157
Boasted work, 69
Boiling timber, 92
Boiled oil, 340
Bolection mouldings, 232
—— moulded doors, 256
Bolsover stone, 64
Bolts—
king, 150
ragged, 182
Bolts *versus* rivets, 172
Bonders, 65
Bond of arches, 40
—— bricks: *see* BRICK ANGLES
—— chimney, 17, 50
—— double Flemish, 17
—— English, 17, 30
—— —— garden wall, 18
—— Flemish double, 17, 31
—— —— single, 17
—— Flemish garden wall, 18
—— flues, 50
—— heading, 16
—— raking, 18
—— —— diagonal, 18
—— —— herring-bone, 18
—— single Flemish, 17
—— stretching, 17
Bond of slates, 207
Borax, 334
Borrowed lights, 287
Bossing lead, 188
Bottle-nosed drips, 199
Bottom rails, 252
—— —— of skylights, 325
Boucherie's patent, 94
Box ground stonè, 63
Boxings, 272, 295
Boxing shutters, 295, etc.
Braby's glazing bar, 342
—— Italian roofing, 200
Braces—
angle, 156
in partitions, 125, 131
for scaffolding, 356
Bracketing, Scotch, 338
—— to stairs, 314
—— wood, 338
Bramley Fall stone, 61
Brandering, 335
Breaking load, 371
Breeze bricks, 7
Brick earths, 3
Bricks—
adamantine, 7
angle, 20—26
arch, 9
birdsmouth, 8
black, 7
blue, 7
breeze, 7
bullnose, 8
burrs, 5
camber, 10
Candy's, 10
Cant's, 8
Chuff's, 5
circular, 9
compass, 9
concrete, 7
Dinas, 6
dressed, 8
dust, 7
Dutch clinker, 7
elliptical, 10
Fareham, 7
firebricks, 6
Gannista, 6
gault, 6
glazed, 6
good, 5

Bricks (*continued*)—
grizzles, 5
Guismuyda, 6
hand-made, 4
jamb bricks, 9
Lees Moor bricks, 6
machine-made, 4
malms, 6
moulded, 11
Nuneaton, 7
place, 5
plinth, 9
pressed, 8
rubber, 7
samels, 5
sand-moulded, 4
slop-moulded, 4
soap bricks, 11
sound bricks, 5
split, 11
squint, 8
Staffordshire, 7
stocks, 6
string, 9
Suffolk, 6
Thompson's, 6
Woodville, 7
Brick angles, 20—26
acute, 26
bay window, 25
irregular, 25, 26
obtuse, 25
Brick arches: *see* ARCHES
—— bond: *see* BOND
—— cores, 28
—— earths, 2
—— fenders, 28
—— flues, 50
—— footings, 19
—— intersecting walls, 27
—— nogging, 124
——, manufacture of, 3
—— piers, 27
—— reveals, 29—31
—— sleepers, 28
Brick 9-in. or 1-brick walls, 20, 23, 29, 30
—— 14-in. or 1½ ,, ,, 20, 22, 30, 31
—— 18-in. or 2 ,, ,, 20, 23, 27, 31
—— 22-in. or 2½ ,, ,, 21, 23
Brick-nogged partitions, 124
Bridging joists, 99
Bridle joints, 146
British patent glazing, 342
—— polished plate glass, 341
Broached work, 70
Broad pointing, 42
Built girders, 167
Bulged struts, 185
Bull-nosed angles, 8
—— steps, 306, 321
Burnettising, 93
Burning bricks, 5
—— in lead, 198
Burntwood stone, 61
Burrs, 5
Butting joints, 145
Button rivets, 172
Buttoning, 318, 319
Buxton lime, 333

C

CAEN stone, 64
Calculations of strains—
concentrated loads on cantilevers 381
—— —— girders, 387
distinct loads on cantilevers, 384
—— —— girders, 390
uniform loads on cantilevers, 384
—— —— girders, 388
—— —— roofs, 394, etc.
unsymmetrical loads on roofs, 401
Camber, 145
—— bricks, 10
—— on wood roofs, 145
—— on iron roofs, 187
——, difference made by, 398
Cambered arch, 34
Candy's bricks, 7
Cants, 8
Cantilevers, 166
——, strains on: *see* CALCULATIONS
Carbolineum Avenarius, 71, 94
Carbon in cast iron, 164
—— chemical mixture, 164
—— mechanical mixture, 164
—— in steel, 164
—— in wrought iron, 164
Carpentry defined, 86

Carriages, 314—320
Carton Pierre, 339
Casebay, 112
Cased frames, 272
——, parts of, 272
—— mullions, 278
Casements and frames—
one-light, 280
two-light, 286
four-light, 287
fasteners, 281
French, 284
hung to open—
— - inwards, 280
—— outwards, 282
—— on centres, 283
—— as hoppers, 282
—— folding, 287
hit and miss, 284
pivoted, 283
sliding, 283
in lanterns, 331
Casings—
to doors, 261
double rebated, 265
keyed, 260
loose rebated, 266, 268
panelled, 267
plain, 264
single rebated, 265
skeleton, 266
Cast iron, 165
—— lead, 188
—— steel, 168
Cast iron—
annealing, 166
chairs, 181
characteristics, 165
columns, 169
good, 165
grey, 165
guttering, 158
malleable, 166
manufacture, 166
in roofs, 178
softening, 166
strength, 165
white, 165
Cavetto moulding, 232
Cavity walls, 53
Cedar felt, 106
Cefn stone, 62
Ceilings—
beams, 136
joists, 113, 116, 136
lights, 332
ventilation, 407
Cement—
Keene's, 334
Martin's, 334
Parian, 334
Portland, 338, 365
Roman, 366
selenitic, 366
damp courses, 55
fillets, 209
Cementing walls, 55
Centring, 345
Centre-nailed slating, 207
Cesspools—
drains, 408
lead, 195
wood, 161
Chain riveting, 174
Chair rail, 271
Chalk in foundations, 351, 365
Chambers for inspections, 413
—— as inlets, 413
—— as air outlets, 413
Chamfer, 233
Chamfered doors, 256
stop chamfered, 256
Characteristics of good—
cast iron, 165
common bricks, 6
cements, 365
firebricks, 6
limes, 365
limestones, 62
rivet iron, 170
rubber bricks, 7
sandstone, 61
slates, 202
steel, 167, 168
tiles, 209
timber, 89
wrought iron, 166, 167
Charring timber, 93
Chase mortice, 113
Check throat, 58
Cheeks, 125
Chemical mixture of carbon, 164

Chilmark-stone, 64
Chimney bars, 46
—— bond, 17
Chiselled work, 69
Chopped facing, 69
Christiana deals, 95
Chuffs, 5
Circular bricks, 9
Circular sewers, 352
—— stairs, 85
Circular-headed sashes, 279
—— sash frames, 279
Clamping, 227
—— mitre, 227
Clamps, 5, 366
Claridge's asphalte, 363
Clay, 360, 364
  foul, 3
  limy, 3
  loamy, 3
  marly, 3
  mild, 3
  plastic, 3
  pure, 3
  sandy, 3
  strong, 3
Cleansed face, 70
Cleats, 144, 178
Clips for glass, 327
—— zinc, 200
Close covers, 413
Close lagging, 346
Closers, 15
  king, 15
  queen, 15
Closets, water, 416
Cluster-fruited oak, 96
Coach screws, 177, 186
Coarse stuff, 334
Cocked head, 231
Cogging, 107
Cogged joints, 109, 142
Cold short iron, 167
Collar roofs, 137, 152
Colouring, 339
Combed face, 69
Combination roofs, 150—152
Common rafters, 135
Compact limestones, 62
Compass bricks, 9
Compression, joints for, 140, 180
Concentrated loads, 371, 381, etc.
Concentrated and distributed, 375
Concrete bricks, 7
—— floors, 214
—— mixing, 367
—— proportions, 367
—— pumice, 216
Condensation bars, 326
Conical rivets, 172
Consoles, 158
Constant water supply, 419
Contraction of iron, 167, 171
  preparation for, 183
Cooling iron, 168
—— steel, 168
Cooling fresh air, 407
Coombe Down stone, 63
Copings, 58, 80
Copper clips, 327
Corbelling, 51
Cord for sashes, 272, 277
—— scaffolding, 356
Core brick, 28
—— handrail, 85
Coring flues, 50
Corngrit stone, 63
Cornices, 78, 337
Corrosion of iron, 169
Corrugated tiles, 211
—— zinc, 199
Corsham stone, 63
Cotch-stones, 238
Cottars, 145, 182
Countersunk rivets, 172
Counter lathing, 335
Countess slates, 205, 207
Couple roofs, 135
—— close roofs, 137
Coupling screws, 186
Cover flashings, 194
Covers to manholes, close, 413
—— —— open, 413
Covering to roof, 188, etc.
Covering to stone for protection, 70
Cowls for soil pipes, 414
Craigleith stone, 61
Cramps, 81
Cranes, 360
Creasing "tile," 58
Creosoting, 93
Crich lime, 333

Cross—
garnets, 244
nogging, 105
tonguing, 120, 226
tongued headings, 121
ties, 187
Crown of arches, 32
Culverts, 353
Cup rivets, 172
Cup shakes, 89
Curbs to skylights in slates, 324
—— —— in tiles, 324
Curtail steps, 306, 321
Cut pointing, 42
—— strings, 321
—— and mitred strings, 321
Cyma recta mouldings, 232
Cyma reversa do., 232

D

DADOES, 269
Damp and its prevention, etc., 52
Damp-proof courses, 57
Dantzic timber, 95
Dead loads, 371
Deal—
Norwegian, 95
Red, 94
Russian, 95
Swedish, 95
White, 94
Yellow, 94
Deals, size of, 94
Defects in timber, 89, 90
Dennet's fire-proof floor, 215
Depetor, 337
Derbyshire stone, 61
Derricks, 360
Diagonal bond, 18
—— boarding, 122
—— ties, 186
Dinas bricks, 6
Dinging, 42
Disadvantages: *see* ADVANTAGES
Discharging arches, 36
Distance of lead under slates, 194
—— of drips for lead, 195
—— of wells for lead, 192
Distempering, 339
Distributed loads, 371, 384, etc.
Distributed and concentrated loads, 375
Doatiness, 90
Dogs, 354
Dog-legged stairs, 309
Dolomites, 64
Doors—
braced, 244
double-margined, 261
dwarf, 260
framed, ledged, and braced, 246
folding, 261
jib, 260
ledged, 243
panelled: *see* PANELLED DOORS
sash, 250
sliding, 260
Door casings: *see* CASINGS TO DOORS
Door frames—
segmental-headed, 237
semi-circular, 237
square or flat, 237
Door irons, 239
Door jambs, 236
Dormers, 156
Double—
-eaves courses, 207
-faced architraves, 288
-faced skirtings, 270
Flemish bond, 17
floors, 106, 110, 122
lath, 334
margined doors, 161
rebated casings, 265
riveting, 173
sunk sills, 276
tenons, 222, 252
Doulton & Peto's fire-proof floor, 218
Dovetails in lead, 81
Dovetailing—
common, 226
lap, 226
mitre, 226
secret, 226
Dovetailed halving, 136
—— notch, 107
Dowels, 82, 142
Dowels and mortices, 238
Dowelled flooring, 120
Drafted and broached face, 70

Drafted and broached diamond picked face, 70
Dragged face, 69
Dragons, 156
Drainage—
house, 408
sewer, 408
various systems—
cesspools, 415
sub-irrigation, 416
surface irrigation, 416
Drain pipes—
flushing, 414
glass-lined, 410
glazed, socketed, 410
gradients, 411
jointing, 411
shape of pipes, 410
tests for—
peppermint, 411
smoke, 411
water, 411
ventilation, 413
Dram timber, 95
Draughts—
down, 405
prevention of, 405
up, 405
Dressed bricks, 8
Driers, 340
Drilled rivet holes, 173
Drips, 160, 195
——, bottle-nosed, 199
Dry area walls, 52
Dry dip, 6
—— rot, 93
Drying bricks, 4
Duchess slates, 206, 207
Duraline, 344
Duramen, 88
Dust bricks, 7
Dutch arches, 37
Dutch clinkers, 7
Dwarf doors, 260
Dwelling, a model, 403

E

EAVES, 158, 159, 160
——boarding, 158
Eaves course, 78
——double, 207
——tilter, 156
Egg-shaped sewers, 353
—— ——, proportions of, 353
Elasticity of wrought iron, 167
—— steel, 168
Elbow linings, 290, 294
Elland edge stone, 61
Elliptical arches, 34
—— bricks, 10
Elm and its properties, 96
Elm pads, 51
—— palettes, 51
Elongation of iron, 167, 170
Encallowing, 3
Enclosures to sanitary fittings, 417
Engert & Rolfe's asphalte, 57
English bond, 17
—— —— compared with Flemish bond, 17
English garden wall bond, 18
English oak and its properties and uses, 96
English cluster-fruited oak, 96
—— stalk-fruited oak, 96
Enrichments in plastering, 339
Equilateral arch, 35
Equilibrium in strains, 372
Expansion of iron, 167
——, how to prepare for, 183
Extractors for ventilation, 407
——, gas as, 407
——, warmth as, 407
Extrados of arches, 32

F

FACE of arch, 32
Factor of safety, 371
Factors of safety, 383
Falls of drains, 411
—— gutters, 160
—— for lead and zinc, 191
False headers, 18, 22
Fans to circulate air, 406
Fanlights, 248
hoppers, 249
hung on centres, 250
pivoted, 251
Fareham bricks, 7

Farleigh Down stone, 63
Fascia, 158
Fascines, 351
Fat lime, 333, 339, 364
Fatigue of iron, 167
Fawcett's fire-proof floors, 215
Feather-edged coping, 81
Feldspar, 364
Felt in oak, 88
Fender walls, 28
Fibrous plaster, 339
Figure in oak, 88
Fillistered flooring, 121
Finestuff, 335
Finger-plates, 252
Finishings to doors, 361
—— windows, 290, etc.
Fire, air required for, 405
Fire-bricks, 6
  Dinas, 6
  Lees Moor, 6
  Ganister, 6
  Guismuyda, 6
Fireplaces, etc., 46
Fire-proof floors, 213
  Adamant Company's, 218
  Banks's, 218*a*
  Carlisle, 218*a*
  common, 214
  concrete for, 215
  Dennett's, 215
  Doulton & Peto's, 218
  Fawcett's, 215
  Fox & Barrett's, 215
  Homan & Rodgers', 216
  Hornblower's, 216
  Lindsay's, 216
  Measure's, 217
  Moreland's, 217
  Northcroft's, 217
  Pease's, 218*b*
  Picking's, 218*b*
  Potter's, 218*a*
  stone for, 213
  Whichcord's, 218
Fire-proof partitions, 218*c*
Fished joints in iron and wood, 138
Five-panel doors, 251
Fixed sashes, 278
Flanges of girders, 165
—— ——, strains on, 383
Flare kilns, 366
Flashings—
  cover, 194
  step, 196
Flats, 161, 191
Flat arches, 34
Flatting, 339
Flemish bond—
  double, 17
  garden wall, 18
  single, 17
Fliers, 306
Flights, 305
Flitches, 117, 154
Flitch girders, 177
Floating coat, 344
Flooring—
  dowelled, 120
  fillistered, 121
  folding, 122
  grooved and tongued, 118
  iron-tongued, 118
  ploughed and tongued, 121
  rebated, 119
  —— and filleted, 120
  —— grooved and tongued, 119
  secret, 120
  straight joint, 118
Floors—
  advantages and disadvantages, 100
  double, 110
  framed, 114
  joints, 107, etc.
  naked, 99
  single, 99
  sub, 122
Fluate, 63
Flues, 50
Flushing drains, 414
  amount of, 414
  automatic, 414
  necessity for, 414
Fluxes in bricks, 2
Flying shores, 355
Folding doors, 201
—— flooring, 122
Footings to walls, 19
Forces, polygon of, 394, 401
—— triangle of, 394
Forest of Dean stone, 61
Forge pig iron, 164, 166

Forms of resistance, 379
Foul air, 404
Foul clay, 3
Foundations, 347
  chalk, 351
  clay, 350
  fascines, 351
  good, 348
  gravel, 348
  how to test, 348
  nature of, 348
  piling, 351
  points to be observed and guarded against, 348
  rock, 348
  sand, 349, 351
  shoring, 349
Foundry pig iron, 164
Four-centred arch, 35
—— light casements, 287
—— panelled doors, 251
Fox and Barrett's floors, 215
Fox-wedging, 228
Foxiness, 90
Fractures in cast iron, 165
—— in wrought iron—
    gradual, 167
    sudden, 167
Framed centres, 345
—— doors, 346
—— floors, 114
—— ledged and braced doors, 246
—— partitions, 123, 124
—— structures, strains on, 394, etc.
French arch, 37
—— casements, 284
Frieze rail, 252
—— stone, 78
Frog in bricks, 4
Full-torching, 208
Funicular, 401
Furniture, 252

G

GABER'S scaffolds, 358
  Gables, 155, 157
Galls, rind, 90
Gallic acid, 97
Galvanising iron, 169
Ganister bricks, 6
Garden wall bond, 18
—— English, 18
—— Flemish, 18
Garnets, cross, 244
Gas jets as extractors, 407
Gauge for joiners, 235
—— of slates, 205
—— zinc, 199
Gauged-work in plaster, 336
Gault bricks, 6
Gefle timber, 97
Geometrical stairs, 310
Gibs, 145, 182
Girders—
  continuous, 376
  fixed, 376
  —— and supported, 377
  flitched, 117
  in iron, 165, 167
  in wood, 114, 116
  iron, 116, 117
  protection from fire, 218
  strains on : *see* CALCULATIONS
  supported, 376
  trussed, 117
  wood, 114
Glass—
  British polished plate, 341
  crown, 341
  plate, polished, 341
  —— rough, 341
  polished plate, 341
  rough cast, 341
  —— plate, 341
  sheet, 341
  weight and kinds, 341
Glass-lined pipes, 410
Glazed bricks, manufacture of, 6
—— socketed piping, 410
Glazing, 341
Glazing patents—
  Braby's, 342
  British, 342
  Grover's, 342
  Helliwell's, 344
  Pennycook, 343
  Rendle's, 344
Glued and blocked joints, 224
—— —— steps, 312
"Go" of stairs, 305
Good bricks, 5

Good cast iron, 165
—— cement, 365
—— firebricks, 6
—— lime, 365
—— limestones, 62
—— rivet iron, 170
—— sand stone, 61
—— slates, 202
—— steel, 168
—— tiles, 209
—— timber, 89
—— wrought iron, 167
Gothic arches, 35
Gradient of drains, 410
Grain of oak silver, 88
Graining, 340
Granite, 364
Granular limestones, 62
Graphic calculations, 381
Gravel, 348
Grease traps, 415
Greenheart, 97
Grey cast iron, 164
Grey stone lime, 365
Grizzles, 5
Groined arches, 36
Grooved and tongued flooring, 118
Ground floors, 100
Grounds, framed, 234
—— splayed, 233
Grouting, 41
Grover's patent glazing, 342
Growth of trees, 88
Guismuyda bricks, 6
Gullies, 418
Gunstock styles, 260
Guttering, cast iron, 158, 159
Gutters—
lead, 100
secret, 198
trough, 161
how to lay boards for lead in, 161
Guy ropes, 358

H

HACKS, 5
Hair mortar, 334
Half-round coping, 58
Half-space landing, 305
Halving in joints—
bevelled, 107
dovetailed, 136
Hammer-dressed, 79
Hammered rivets, 172
Handmade bricks, 4
Handrails, 305
—— height of, 316
—— moulded, 316, 317
—— mopstick, 316
—— toad's back, 316
Hangers for spouting, 159
Hardwoods, 87
Hartley's rough-rolled glass, 341
Haunch of arch, 32
Haunched tenon, 221
Haunching, 235
Head—
cast iron, for trusses, 140
of partitions, 125
of slates, 205
stone, 74
Header bricks, 14
—— ——, snap or false, 18
Heading bond, 16
Heading—
bevelled, 121
cross-tongued, 121
joints, 121
rebated and tongued, 121
tongued, 121
Heart shakes, 90
Heel joints, 146
—— straps, 146
Helliwell's glazing, 344
Herring-bone band, 18
—— strutting, 105
Hinges, band, 243
—— Parliament, 302
—— tee, 244
Hip rafters, 155
Hips in lead, 190
Hit-and-miss casements, 284
Hoisting stone tackle, 35
Hollington stone, 62
Hollow walls, 52, 55
Homan & Rodgers' flooring, 216
Honduras mahogany, 97
Honeycomb walls, 28
Hoods in stone, 77

Hoop-iron bond, 51
—— tongued floors, 118
Hopper casements, 282
—— fanlights, 249
Hopton-wood stone, 64
Hornblower's flooring, 216
Horsing up centres, 346
Hot short iron, 167
House drains, 408
Housed joints, 224
—— tenons, 222
Housing, 224
Howley Park stone, 61
Hung folding, 287
—— on centres, 250
—— to open inwards, 280
Hung to open outwards, 282
Hydraulic lime, 365
Hygean rock, 54

I

IGNEOUS rock, 364
Imperial slates, 205
Inbonds, 76
Inlet ventilators, 406
Inside linings, 272
Inspection chambers, 413
—— —— as inlets, 413
—— —— position, 413
Intersecting brick angles, 27
Interties, 128, 154
Intrados of arches, 33
Invert arches, 38
Invert blocks, 353
Iron—
annealing, 166
bars: 167
binders, 116, 117, 122
cast: *see* CAST IRON.
castings for roof, 151
cold short, 167
columns, 169, 183
contraction of, 167, 171
elasticity of, 167
elongation of, 167, 171
expansion of, 167
fatigue of, 167
Iron (*continued*)—
girders, 167
hot short, 167
in bricks, 2
malleable, 166
manufacture of, 165, 165
pig: *see* PIG IRON
protection from fire, 169, 214
puddled bars, 166
puddling, 167
rivet, 170
roofs, 176
rolling, 167
shingling, 166
softening, 166
straps, 129, 130, 144
strength of cast, 165
—— wrought, 167
wrought: *see* WROUGHT IRON
tanks, 416
tongued flooring, 18
roofs, cast iron in, 151
—— details of, 177, etc.
—— wrought iron in, 177
Iron and wood floors compared, 122
Irregular angles in bricks, 24, 25, 26
Irrigation, sub-, 416
—— surface, 416
Italian roofing, Braby's, 200
—— —— zinc, 200
Italian tiles for roofing, 212
—— walnut, 98

J

JACK rafters, 155
Jamb bricks, 9
—— splayed, 29
—— to door frames, 236
—— —— linings, 289
—— —— stones, 75
Janus water bar, 288
Jenny, 361
Jib doors, 260
Joggles, 82
Joinery defined, 86, 219
Joints —
at angles: *see* ANGLES
bevelled, 137

Joints (*continued*)—
bridled, 146
butting, 145
cogged, 109, 142
coupling, 186
dovetailed : *see* DOVETAILING
drainpipe, 410
fished, 138, 174
glued and blocked, 224
heel, 146
housed, 224
joggle, 82
jump, 174
keyed, 139, 227, 229
king truss, 144, 145
lap, 144, 174
mortise, 220
queen truss, 149
rebated, 82
riveted : *see* RIVETED JOINTS
rule joint, 298
saddled, 83
scarfs : *see*, 139, 140, 141
screwed, 186
scribed, 228
soil pipe, 411
strut and beam, 151
tabled, 83, 139
tenon : *see* TENONS
tongued : *see* TONGUED ANGLES
Joists—
bridging, 99, 112, 116
ceiling, 113, 116, 136
trimmed, 104
trimmer, 104
trimming, 104
Jump joints, 174

K

KAWRIE pine, 96
Keene's cement, 334
Kerfs, 3
Ketton stone, 64
Key of arch, 33
Keys and keying, 227, 237
Keyed, 224
—— casings, 266
—— joints, 139
Kick in bricks, 4
Kilns flare, 366
—— tunnel, 366
King bolt, 150, 151
King closers, 15
King-post trusses, 128, 142, 145
—— details of, 144
—— rule for, 143
—— trussed partitions, 128
Kneeler, 81
Knots in timber, 89
Knotting, 340
Kyanising, 94

L

LABELS, 77
Ladies' slates, 205
Laggings, 345
Laid-in mouldings, 230
Lamb's-tongue moulding, 249, 277
Landings for stairs, 305, 318
—— half-space, 305
—— quarter-space, 305
Lanterns, hipped, 330
—— on flats, 331
Lanterns on roofs, 186, 328, 330
Lap carpentry joints, 141
—— dovetails, 226
—— joints in foundations, 348
—— of slates, 205, 206
—— of tiles, 210
Lapping, 141
Larrying, 41
Latches, 244
Lath, 334
—— and half, 334
—— double, 334
Lathing, 336
Lath, plaster, float and set, 336
Laying boards for lead, 161
—— floor boards, 119, 120
Lead aprons, 195
—— around chimney, 196
—— boards for, 161
—— bossing, 188
—— cesspools, 195
—— cover flashings, 194
—— damp-proof courses, 57

Lead distance under slates, 194
—— dots, 198
—— drips, 195
—— falls for, 191
—— flashings, 194, 196
—— flats, 191
—— gutters, 192
—— hips, 190
—— lined tanks, 419
—— plugs, 198
—— raglets for, 198
—— red, 339
—— ridges, 189
—— rolls, 192, 193
—— saddle pieces, 190
—— secret gutters, 198
—— skylights, 325
—— soakers, 196
—— specification for, 188
—— step flashings, 196
—— tingles, 198
—— valleys, 190
—— weight of, 188
—— welts, 198
—— white, 339
Leaf for doors, 261
—— for woods, 87
Lear boards, 156, 160, 161
Ledged and braced doors, 244
—— doors, 243
Ledgers, 356
Lees Moor bricks, 6
Lewises, 362
Lias lime, 365
Lifting shutters, 302
Lime—
  Buxton, 333
  Crich, 333
  fat, 333, 339, 364
  hydraulic, 365
  in bricks, 2
  lias, 365
  poor, 364
  pure, 333
Limestones—
  compact, 62
  granular, 62
  magnesian, 64
  shelly, 64
Limewhite, 339
Limit of elasticity, 167
Limmer asphalte, 363
Limy clay, 3
Lindsay's fire-proof flooring, 216
Linen panels, 258
Linings—
  inside, 272
  jamb, 289
  outside, 272
  panelled, 293
  plain, 289
  soffite, 292
  splayed, 293
  to back, 273
  to doors: *see* CASINGS
  to elbow, 290, 294
  to windows, 289, etc.
Linseed-oil, boiled, 339, 340
—— raw, 339, 340
Loads—
  breaking, 371
  concentrated, 371, 375, 381
  dead, 371
  distributed, 372
  distributed and concentrated, 375
  live, 371
  location of, 375
  safe, 371
  uniform, 372
  unsymmetrical, 401
  working, 371
Loamy clay, 3
Lockrail, 252
—— height of, 252
Long tongues, 227
Loose beads, 249, 341
—— ground, 348
—— rebates to casing, 266, 268
Louvres, 186, 332

M

MACHINE-MADE bricks, 4
McNeill's asphalte, 57
Magnesia in bricks, 2
Magnesian limestones, 64
Mahogany, Honduras, 97
—— Spanish, 98
Malleable iron, 166
Malm, 3
Malms, 6

Manganese in bricks, 2
Manholes for inspection, 413
Mansard roofs, 154
Mansfield stone, red, 61
——, white, 61
Manufacture of bricks, 3
—— of cast iron, 165
—— of cement, 365
—— of lime, 365
—— of steel, 168
—— of tiles, 209
—— of wrought iron, 167
Marble, 367
Marchioness slates, 205
Margin of slates on tiles, 205
Marginal sashes, 279
Marly clay, 3
Martin's cement, 334
Match-boarding, 269
beaded, 233
—— both sides, 233
plain, 233
V-jointed, 233
Matlock-bridge stone, 61
Matrix, 367
Measure's fire-proof floor, 217
Mechanical mixture of carbon, 164
Medullary rays, 88
Meeting styles, 261
Memel, 94
Merchant bar, 167
Mica, 364
Mica-flap ventilators, 407
Middle rail, 252
Mild clay, 3
—— steel, 168
Milled lead, 188
Minus threads, 186
Mitre clamping, 227
Mitred angles, 223
—— dovetails, 226
—— and tongued angles, 223
Mitres, 233
Model dwelling, 403
Monkeys, 352
Monk's Park stone, 63
Mopstick handrail, 316
Morland's fire-proof floor, 217
Mortar-hair, 334
Mortars, 366
proportions, 366
Mortise, chase, 113
Mortises, 237
Moulded both sides, doors, 255
Moulded bricks, 11
Moulded handrail, 316
Mouldings—
beads : *see* BEADS
Bolection, 232
Cavetto, 232
chamfer, 233
cyma recta, 232
cyma reversa, 232
laid-in, 330
ogee, 232
ovolo, 231
planted, 230
quirk ovolo, 232
Scotia, 232
stuck, 230
torus, 231
Mullions, cased, 278
—— stone, 76
Muntins, 252

N

NAKED floors, 99
Natural bed for stone, 59
—— seasoning timber, 90
Neckings, 78
Needles, 356
New work for paint, 340
Newels, 304, 317
New Zealand pine, 96
Nippers for stone, 361
Nogging-piece, 125
Norfolk latches, 244
Northcroft's fire-proof floors, 217
Norwegian deal, 95
Nosings, 230, 304
Notching, 107
—— dovetailed, 107
Nuneaton blue bricks, 7

O

OAK—
American, 97
cluster, 96

Oak (*continued*)—
English, 96
stalk, 96
Stettin, 97
wainscot, 97
Offsets, 19
Ogee moulding, 232
Oil in paint: *see* LINSEED, 339
Oldwork for paint, 340
Onega deals, 95
Open covers to chambers, 413
—— newel stairs, 310
—— slating, 209
—— string, 321
Oregon pine, 96
Origin of members in roof trusses, 133
Outbonds, 76
Outlet ventilators, 407
Outside linings, 272
Oversailing courses, 51
Ovolo moulding, 231
—— quirked, 232
Oxide paint, 340

P

PADS or palettes, 51
Padstones 142
Painting, 339
—— iron and steel, 169
Pan rivets, 172
Pan tiles, 211
Panels: *see* PANELLED DOORS
Panelled casings, 267
—— door lining: *see* CASTINGS
Panelled doors—
—— bead butt, 255
—— —— flush, 255
—— bolection, 256
—— chamfered, 256
—— double-margined, 261
—— five-panelled, 251
—— folding, 21
—— four-panelled, 251
—— linen-panelled, 258
—— moulded and square, 255
—— moulded both sides, 255
—— moulded, raised, and sunk, 258
—— raised panels, 258
Panelled doors (*continued*)—
—— raised and sunk panels, 258
—— sash doors, 259
—— six-panelled, 251
—— square-framed, 254
—— stop-chamfered, 256
shutters: *see* SHUTTERS
window lining: *see* WINDOW LININGS
Papier maché, 339
Parapet walls, 78
Pargetting flues, 50
Parian cement, 334
Parkspring stone, 61
Parliament hinges, 302
Parting bead, 273
—— slip, 273
Partitions—
bricknogged, 124
framed, 123, 124
quartered, 123, 124
sizes for, 101
studded, 123, 124
trussed, 123, 127, 154
Patent glazing: *see* GLAZING
Pearlash, 334
Peastones, 63
Pendants, 318
Penmaenmaur stone, 368
Pennycook glazing, 343
Penrhyn slates, 204
Perching timber, 90, 91
Permanent set, 167
Peter's carbolineum, 71, 94
Petersburg deal, 95
Phosphorus in iron, 167
Piers in bricks, 27
Pig iron, 164
—— forge, 164
—— foundry, 164
—— origin of term and manufacture, 164
Piles, 351, 352
Pile drivers, 351
—— shoes, 352
Piling, 351
Pine: *see* DEAL
American, 95
Kawrie, 96
New Zealand, 96
Oregon, 96
pitch, 96

Pine (*continued*)—
Quebec, 96
St. John's, 96
yellow, 95
Pins in shoring, 356
Pipes—
Angus-Smith coated, 410
falls for, 411
glass-lined, 410
glazed socketed, 410
soil, 416
Pisolites, 63
Pitch of rivets, 173
—— of roofs, 132, 143
—— of slates, 132
—— of tiles, 132, 209
Pitch-pine, 96
Pivoted casements, 283
—— fanlights, 251
Place bricks, 5
Plain-cut quoins, 79
Plain linings to doors, 264
—— —— to windows, 289
Planks, size of, 94
Planted mouldings, 230
Plaster-of-Paris, 333, 366
Plaster work, 333
Plastering, 333
Plastic clay, 3
Plate glass, 341
Plinth blocks, 273
—— bricks, 9
Plinths in stone, 72
Ploughed and tongued, 121
Plugs and plugging, 233
Plumbings, 15
Plus threads, 186
Pocket pieces, 275
Pointed faces, 70
Pointing—
bead joint, 44
broad, 42
cut, 42
rule, 43
straight joint, 42
struck joint, 42
tuck, 44
V-jointed, 43
weather, 42
Poles for scaffolding, 356
Poling boards, 348
Polished face, 70
—— plate glass, 34
Polled-face, 70
Polygon of forces, 394
Poor lime, 364
Portland cement—
artificial, 365
coolness of, 365
manufacture of, 365
natural, 365
storage of, 366
strength of, 366
weight of, 366
Portland stone—
basebed, 64
bastard roach, 64
roach bed, 64
white bed, 64
Portmadoc slates, 204
Posts in partitions, 125
Preservation of timber, 92
Pressed bricks, 8
Pricking up coat, 334
Priming, 339
Princesses, 148
Princess slates, 205
Principal rafters, 142, 144, 146, 148
Principals: *see* TRUSSES
Process of slating, 206, 207
Proportions of ingredients in pain 340
—— concrete, 367
—— mortar, 366
Protection of iron and steel, 169
Puddled bars, 166
Puddling, 166
Pugging floors, 105
Pulley styles, 272
Pulleys, 273
Pumice concrete, 216
Pumice stone for painting, 340
Punched rivet-holes, 172
Punched work, 69
Puncheons, 154
Pure clay, 3
Pure lime, 333
Purlins, 138, 144, 154
Putlogs, 356
Putty, 344
Putty lime, 333, 335
Puzzolana, 369

Q

QUADRUPLE riveting, 173
Quarry bed, 59
Quartered partitions, 123, 124
Quarter-space landings, 305
Quartz, 364
Quebec pine, 96
Queen closers, 15
trusses, 148
—— flat, 152
—— joints of, 149
—— rule for, 148
—— strains on, 154
Queens, 148
Queen-trussed partitions, 128
Quirks, 336
Quirk bead, 231
—— ovolo, 232
Quoin bricks, 11
Quoins—
birdsmouth, 80
chiselled, 79
drafted and broached, 79
—— and diamond picked, 79
panelled, 80
plain-cut, 79
rock-faced, 79
rusticated, 79
scuntion, 80
squint, 80
tooled, 79
vermiculated, 79

R

RAFTERS, 135
—— common, 135
—— hip, 155
—— jack, 156
—— principal, 142, 144, 146, 148
—— valley, 156, 157
Ragged bolts, 132
Raglets, 198
Rails of doors, etc., 246, 252
—— —— bottom, 252
—— —— frieze, 252
—— —— lock, 252
—— —— —— height of, 252
Rails of middle, 252
—— —— top, 252
Raised and sunk panels, 258
—— panels, 258
Raking bond, 18
—— —— diagonal, 18
—— —— herring-bone, 28
Ramps, 313
Rams, 351
Random rubble, 66
Ransome's patent stone, 368
Raw linseed oil, 340
Rays, medullary, 88
Reaction, 372
Reactions, various loads, 372
—— on cantilevers, 375
—— on girders, 373, etc.
—— on roof trusses, 394, 401
Rebated and tongued flooring, 119
—— and filleted flooring, 120
—— —— headings, 121
—— drips, 160
—— flooring, 119
—— joints in stone, 82
Rebates, 238
Reciprocals, 396, 397
Red deal, 94
—— fir, 94
—— lead, 339
Reeding, 231
Relieving arch, 36
Render, float-and-set, 334
Rendering boat, 334
—— slates, 209
Rendle's glazing, 344
Requirements of authorities for air, 404
Return bead, 224, 231
Revealed mullions, 76
Reveals, 29, 30, 31
Ridges, 135
—— lead, 189
—— slate, 208
—— wood, 135
Riga timber, 95
Rindgalls, 90
Rings, annual, 88
Rise of arches, 33
—— iron roofs, 187
—— lead flats, 161
—— slated roofs, 132, 143
—— steps, 306, 307

Rise of tiled roofs, 132, 143
—— wood roofs, 132, 143
Risers, 304
Rivet iron, good characteristics, 170
Rivets—
  button, 172
  conical, 172
  counter-sunk, 172
  cup, 172
  hammered, 172
  pan, 172
  pitch of, 173
  size of, 173
  snap, 172
  staff, 172
Rivets *versus* bolts, 172
Riveted joints—
  butt, 173
  fished double, 173
  —— quadruple, 173
  —— single, 173
  —— triple, 173
  jump, 174
  lap double, 174
  —— quadruple, 173
  —— single, 173
  —— triple, 173
  —— compared with solid, 175
Riveting—
  chain, 174
  double, 173
  hand, 171
  —— compared with machine, 172
  machine, 171
  quadruple, 173
  triple, 173
  zigzag, 174
Roach bed, 64
Robin Hood stone, 61
Robinson's cement, 337
Rock—
  argillaceous, 200
  facing, 69
  igneous, 364
Rocky foundations, 348
Rods—
  king, 150
  queen, 179
  suspension, 178, 181
  tie, 180
Roestones, 63, 64
Rolling iron, 167
Rolls distant apart, 192
—— for lead, 192, 193
—— for zinc, 200
Roman cement and its characteristics, 366
Roof coverings—
  lead, 188
  slate, 200
  tiles, 209
  zinc, 199
Roof trusses—
  distances apart, 142
  origin of members, 132, 133, 134
  pitches of, 143
  positions for, 142
  varieties—
  —— collar, 137, 152
  —— combination, 150, 151, 152
  —— couple, 135
  —— couple close, 136
  —— king post, 142, 146
  —— mansard, 154
  —— queen post, 148
  —— queen post flat, 152
Rot, dry, 93
—— treatment for, 93
—— wet, 93
Rough arches, 38
—— cast, 337, 341
Rough-rolled glass, 341
Rubbed and gauged arches, 38
Rubbed face, 70
Rubber bricks, 7
Rubble walls, 65
—— coursed, 68
—— random, 66
—— —— up to courses, 66
—— squared or coursed, 68
—— —— snecked, 67
—— —— uncoursed, 67
—— —— up to courses, 67
Rule joint pointing, 43
Rule joints, 298
Rules for brick bond, 15
Rules for floors—
  double, 114
  framed, 116
  single, 109
Rules for roofs—
  iron, 187
  king, 143

Rules for roofs (*continued*)—
queen, 148
Rules for slating and tiling, 206
—— for stairs and steps, 307
—— for stone ashlar, 68
Runcorn stone, 62
Running sand, 351
Russian deals, 95
Rusticated quoins, 79

S

SADDLEBACK coping, 38
—— joints, 83
Saddlepiece in lead, 190
Safe load, 371
Safety factor, 371
—— factors, 383
Samels, 5
Sand, 333
Sand-moulded bricks, 4
Sandstones, 60
Sandy clay, 3
Sandy foundations, 349, 351
Sap, 88
Sash—
bars, 232
cords, 272, 277
doors, 259
fasteners, 279
rails, 273
styles, 273
weights, 272
Sash frames—
circular-headed, 279
parts of, 272, 273
segment-headed, 279
square, 279
Venetian, 278
Sashes—
circular, 279
double-hung, 273
fixed, 278
marginal, 279
parts of, 272, 273
single-hung, 273, 275
Scabbled face, 69
Scaffolding, 356
—— gabers, 358
Scaffolding, ordinary, 356
Scagliola, 337
Scappled face, 69
Scarfs for compression, 140
—— for tension, 139
—— for transverse, 140
Schemearch, 24
Scintling, 4
Scotch bracketing, 338
Scotgate ashstone, 61
Scotia moulding, 232
Screeds, 334
Screws, coach, 177, 186
—— coupling, 186
Scribed housing, 228
Scribing, 228, 278
Scuntion quoins, 80
Scutched face, 70
Seasoning timber —
natural process, 90
steaming ——, 92
water ——, 92
Secret dovetails, 226
—— gutters, 198
Secret-nailed flooring, 120
Segmental arches, 33
—— sashes, 279
—— —— and frames, 279
Selenetic cement, 337, 366
Semicircular arches, 34
Septa, transverse, 88
Serpentine, 368
Set-permanent, 167
Setting-coat, 334
Sewers—
circular, 352
culverts, 353
drains, 410
egg-shaped, 353
traps, 408
Seyssel asphalte, 363
Shakes in timber, 89
—— in cup, 89
—— in heart, 90
—— in star, 90
Shape of drains, 410
Shaped backings, 325
Shear legs, 358
Shear steel "double," 168
—— —— "single," 168
Shearing strain, 371

Shearing strain on rivets, 170
Sheet-glass, 341
Sheeting, 349
Shelly limestones, 64
Shingling iron, 166
Shoes—
  cast iron in roof, 151
  for piles, 352
Shoring—
  angle buildings, 354
  buildings, 354, 355
  foundations, 349
  flying shores, 355
Short iron, "cold," 167
—— ·—— "hot," 167
Shouldering slating, 208
Shoulders of tenons, 125
Shutters—
  boxing, 295
  details of various kinds, 295
  external, 302
  folding, 295
  lifting, 302
  shop, 302
  sliding, 302
Siemens steel, 168
Siemens-Martin steel, 168
Silicated stone, 368
Silicia, 2, 365
Sills, 73, 125
  double-sunk, 276
  stone, 73
  straining sill, 148
Silvered grain in oak, 88
Single Flemish bond, 17
—— floors, 99
—— —— rules for, 109
—— lath, 334
—— rebated door casings, 264
—— riveting, 173, 175
—— "Shear," 168
Sinks, 415
Six-panelled doors, 253
Size of rivets, 173
Size of slates, 205
Skeleton casings, 266
Skewbacks, 33
Skirtings, 270
—— double-moulded, 270
Skylights—
  bottom-rails, 323
Skylights (*continued*)—
  varieties and their details, 321, etc.
Slaked lime, 333, 335, 365
Slates, 200
—— back of, 205
—— Bangor, 204
—— bed of, 205
—— characteristics, 202
—— countess, 205
—— damp courses, 57
—— duchess, 206
—— gauge of, 206
—— good, 202
—— head of, 205
—— lap of, 205, 206
—— margin of, 205
— – Penrhyn, 204
—— pitch of, 132
—— Portmadoc, 204
—— ridge, 208
—— sizes of, 205
—— stone, 204
—— tail of, 205
—— tanks, 416
—— Welsh, 204
—— Westmoreland, 203
—— Whitland Abbey, 204
—— varieties of, 205
Slating—
  bedding, 209
  bond of, 207
  centre-nailed, 207
  countess, 207
  duchess, 207
  open, 209
  process of, 206, 207
  rendered, 209
  shouldered, 208
  topnailed, 207
  torched, 208
Sleeper walls, 28
Sliding casements, 283
—— doors, 261
—— shutters, 302
Slip feather, 227
Slop-moulded bricks, 4
Smelting, 164, 188
Snap headers, 18, 22
Snap rivets, 172
Snecked rubble, coursed, 68
—— —— incoursed, 67

Snecked rubble, up to courses, 67
Snow boards, 162
Soakers, 196
Soap bricks, 11
Soderham timber, 95
Soffite of arch, 33
—— of boarding, 158
—— of casings, 267
—— lining, 293
Softening iron, 166
Soil pipes—
glass-lined, 417
lead, 417
ventilators, 417
Solder, 195
Soldered dots, 198
Solid frames : *see* CASEMENTS
stem, 105
steps, 83
Sound boarding, 105
—— bricks, 5
Span of arch, 33
Spandril steps, 83
Spandrils or arches, 33
Spanish mahogany, 97
Specification for lead, 188
—— for new painting, 340
—— for old painting, 340
Spinkwell stone, 61
Splayed jambs, 29
—— linings, 292
—— reveals, 29, etc.
Split bricks, 11
Spouting, 158, 159
Spring steel, 168
Springers, 33, 80
Springing line, 33
Squared rubble : *see* SNECKED
Square-framed doors, 254
—— —— and moulded, 255
Squint angles in brick, 8
—— quoins, 80
Staff beaded angle, 224, 231
Staff rivets, 172
Staircases, 303
Stairs—
details of, 312, 322
dog-legged, 309
geometrical, 310
open-newelled, 310
rules for, 307
Stairs (*continued*)—
solid steps, 83, 322
spandril steps, 83, 322
stone steps, 83, 85
straight, 308
terms in use, 304
wreathed, 310
Stalk-fruited oak, 96
Star shakes, 90
Steaming timber, 92
Steel—
Bessemer, 168
blister, 168
cast, 168
corrosion of, 169
double shear, 168
elasticity of, 168
manufacture of, 168
mild, 168
protection of, 169
qualities of, 168
shear, 168
—— double, 168
Siemens, 168
Siemens-Martin, 168
single, 168
spring, 168
strength of, 167
tempering, 168
tool, 168
Whitworth's, 168
Stemming, pieces, 125
—— solid, 105
Step flashing, 196
Steps : *see* STAIRS
Stettin oak, 97
Stirrup straps, 114, 145
Stock bricks, 6
Stone—
limestones, various, 62
rubble, —— 65, 72
sandstones, —— 60
walling, 65
work and details generally, 72, 85
Stone slates, 204
Stoolings, 73
Stop-chamfered doors, 256
Stop lead, 273
Stopping for paint, 340
Storage of cement, 366
—— of water, 419

Straight arches, 34
—— joint flooring, 118
—— —— pointing, 42
Straight stairs, 308
Straining beam, 148
—— sill, 148
Strains, examples of varieties, 381, etc.
—— *see* CALCULATION
Straps, heel, 146
Straps, stirrup, 145
Strength of—
cast iron, 65
fir, 95
limestone, 62
Memel, 95
oak, 96
sandstones, 60
steel, 67
wrought iron, 67
Stresses—
bearing, 372
compressive, 391
shearing, 371
tensile, 371
transverse, 372
Stretcher bricks, 14
Stretching bond, 17
String courses, 58
Strings, 304
——, cut, 321
—— cut and mitred, 321
—— open, 321
—— outer, 314, 321
—— stone, 78
—— wall, 304, 312
Strong-clay, 3
Struck joint pointing, 42
Strut and beam joints, 151
Struts bulged and blocked, 185
—— in iron, 151, 184
—— in wood, 147, 144, 145
Strutting, 105
Stub tenons, 125
Stucco, bastard, 337
——, trowelled, 335, 337
Stuck moulding, 230
Studded partitions, 123, 124
Studding, 124
Studs, 125
Stump tenons, 222
Styles, 246, 252
Sub-floors, 122
—— irrigation, 416
Suffolk bricks, 6
Sulphate of lime, 366
Sulphur in iron, 167
Surbase, 271
Suspension rods, 178, 181, 184
Swan-necks, 183
Swedish timber, 95
Sycamore, 98
Syphonage, 418
Szerelmy's stone-covering solution, 71

T

TABLE for iron roofs, 187
Tabled joints, 83, 139
Tail bay, 112
—— of slates, 205
Tanks for water, 419
Tar damp courses, 57
Taylor's roofing tiles, 211
Teak, 97
Tempering clay, 3
—— steel, 168
Tenons, 125, 237
—— barefaced, 222
—— double, 222
—— haunched, 221
—— housed, 222
—— stub, 125
—— stump, 222
—— tusk, 109, 126, 148, 156
Tensile stress, 371
Tension, 370
—— joints, 180
—— rods, 180
Terra-cotta—
colour of, 368
manufacture of, 368
qualities of, 368
uses for, 368
Tests for drains—
peppermint, 411
smoke, 411
water, 411
Thompson's bricks, 6
Threads—
minus, 186
Threads, plus, 186
Three-centred arch, 34

Three-coat work, 334
Three-quarter bonders, 65
Throating, 73
Through bonders, 65
Ties—
  angle, 156
  beams, 133, 142
  cross, 187
  diagonal, 186
  dragon, 156
  rods, 180
Tiles—
  advantages and disadvantages of, 209
  corrugated, 211
  creasing, 58
  good characteristics of, 209
  Italian, 212
  pan, 211
  pitch of, 132, 209
  qualities of, 209
  size of, 209
  Taylor's, 211
  Wade and Cherry's, 211
Tile and half, 211
Tiling, 209
Tilter, 156, 160
Timber—
  balk, 94
  boiling and steaming of, 92
  characteristics of good, 89
  Dantzic, 95
  defects, 89
  good timber, 89
  growth of, 88
  Memel, 94
  perching of, 91
  preservation of, 92
  Riga, 95
  rot in, 93
  sap in, 89
  seasoning of, 90
  strength of, 95
  unevenness of colour of, 90
  varieties of, 87
Tingles, 198
Tisbury stone, 64
Toads-back handrail, 316
Tobin ventilators, 406
Tongue—
  cross, 226
  long, 276
Tongued angles, 222, 293
—— flooring, 118
—— headings, 121
Tooled face, 70
Tool steel, 168
Top-nailed slating, 207
Top rails, 252
Top ventilation, 411
Torching, 208
Torus moulded skirting, 231
—— moulding, 231
Transom, 76
Transverse, scarfs for, 140
——, septa, 88
—— stress, 372
Trap, 368
Traps—
  requirements of, 409
  uses of, 409
Travellers, 360
Treads, 304
Trees, ventilation up, 414
Triangle of forces, 394
Trimmed joists, 104
Trimmer arches, 45
—— joists, 104, 317, 319
Trimming, 103, 104, 317, 319
—— joists, 104
Triple riveting, 173
Trough gutters, 161
Trowelled stucco, 335
Trussed girders, or beams, 117, 118, 15
—— partitions, 127
—— purlins, 154
Trusses : *see* ROOFS
Tuck pointing, 44
Tudor arch, 55
Tunnel kilns, 366
Turning piece, 243, 345
Turpentine, 339
Turret steps, 85
Tusk tenon, 109, 126, 148, 156
Two-coat plastering, 334
Two-light windows, 286

U

ULEABURG timber, 95
Underpinning, 362
Undersetting, 362
Unsymmetrical loading, 401

Upcasts, 407
Up draughts, 405

V

V-JOINTS, 233
V-joint boundary, 233
—— pointing, 43
Val-de-travers asphalte, 363
Valleys, lead, 190
—— wood, 156, 157
Valve W.C. apparatus, 416
Varnish, 339
Vectors, 401
Vehicles, 339
Velocity of air, 407
Venetian sashes, 278
Ventilation of—
drains, 413
rooms, 406
soil pipes, 413
Ventilation by fans, 406
Ventilation—
advantages and disadvantages, 405
at ceiling level, 406
at intermediate levels, 406
at skirting ——, 406
extractors, 407
flues, 407
inlets, 407
outlets, 407
pipes, 407
up trees, 414
warmth in, 407
window, 276, 406
Ventilators—
external, 406
mica-flap, 407
Tobin, 406
Verge pointing, 209
Vermiculated quoins, 79
Victoria stone, 369
Voussoir of arches, 33

W

WADE and Cherry tiles, 211
Wainscot oak, 97
Walings, 349
Wall plates, 135, etc.
Walls, hollow, 55
Walnut, American, 98
—— Italian, 98
Warmth in ventilation, 407
Wash-down closets, 413
Wash-out ——, 413
Water bars, 288
Water seasoning, 92
Water supply, 419
cisterns, 419
overflow pipes, 420
storage, 419
risk of freezing, 420
Waterclosets—
valve, 416
wash-down, 416
wash-out, 416
Weather boards, 288
Weather pointing, 42
Weatherings, 76, 78, 81
Webs of girders, 165
Wedges, 194, 237, 313
Wedging, fox, 228
Weight of glass, 341
—— of lead, 188
—— of timber, 95, 96
Weights of sashes, 272
Welsh slates, 204
Welts for lead, 198
Westmoreland slates, 203
Westwood stone, 63
Wet rot, 93
Whichcord's fireproof flooring, 218
Whinstone, 368
Whitbed, 64
White cast iron, 164
—— deal, 94
—— lead, 339
Whitening, 339
Whitewashing, 339
Whitland Abbey slates, 204
Width of stairs, 307
—— of treads, 306, 307
Windledges, 46
Window backs, 32, 289, 290
—— boards, 288
—— fastenings, 279, 281
—— finishings, 290, etc.
—— linings, 289, etc.
Window shutters, 295

Window shutters (*continued*)—
ventilation through, 276
Winders in stairs, 306, 308, 312, 319
Winsley ground stone, 63
Withes, 50
Wood bracketing, 338
—— bricks, 51
—— floors, 99
—— roofs, 132, etc.
Wood and iron floors compared, 122
Woodville bricks, 7
Working load, 371
Wreathed stairs, 310, 320
Wrought iron—
bars : *see*
characteristics of, 167
elasticity of, 167, 170
elongation of, 167, 170
fatigue of, 167
fractures in, 167
hangers and straps, 129, 130, 144
manufacture of, 166
protection of, 169
puddling, 166
rolling, 167
roofs in, 176
shingling, 166
Wrought iron (*continued*)—
strength of, 167
welding, 167

Y

YARD gullies, 418
Yellow deal, 94
—— pine, 95
Yorkshire stone, 61

Z

ZIGZAG riveting, 174
Zinc, 199
—— Braby's, 200
—— clips, 200
—— corrugated, 199
—— gauge, 199
—— Italian roofing, 200
—— ridges, 200
—— rolls, 200
—— roofs, 199
—— sheets, 199

Printed by Hazell, Watson, & Viney, Ld., London and Aylesbury.

USEFUL BOOKS on BUILDING, etc.

Published by CROSBY LOCKWOOD & SON.

ARCHITECTURAL PERSPECTIVE: The Whole Course and Operations of the Draughtsman in Drawing a Large House in Linear Perspective. Illustrated by 43 Folding Plates. By F. O. FERGUSON. 8vo, 3s. 6d, boards.

THE HANDBOOK OF SPECIFICATIONS. By Professor T. L. DONALDSON. 8vo, £1 11s. 6d., cloth.

SPECIFICATIONS FOR PRACTICAL ARCHITECTURE. By A. BARTHOLOMEW and F. ROGERS. Third Edition. 8vo, 15s., cloth.

THE ELEMENTARY PRINCIPLES OF CARPENTRY. By T. TREDGOLD. Seventh Edition. Re-written and Enlarged by E. W. TARN, M.A. With 61 Plates. 4to, 25s., cloth.

The LONDON BUILDING ACT, 1894. With the By-Laws and Regulations of the London County Council, and Introduction, Notes, Cases, and Index. By ALEX. J. DAVID, B.A., LL.M., of the Inner Temple, Barrister-at-Law. Crown 8vo, 3s. 6d., cloth.

THE POCKET TECHNICAL GUIDE, MEASURER, and ESTIMATOR FOR BUILDERS & SURVEYORS. By A. C. BEATON. 1s. 6d.

QUANTITIES & MEASUREMENTS: How to Calculate and Take. By A. C. BEATON. 1s. 6d., cloth.

THE TRADESMAN'S GUIDE TO SUPERFICIAL MEASUREMENT. By J. HAWKINGS. Fcap. 8vo, 3s. 6d., cloth.

PLUMBING: A Text-book to the Practice of the Art or Craft of the Plumber. By W. P. BUCHAN. Seventh Edition, Enlarged. 3s. 6d., cloth.

VENTILATION: A Text-book to the Practice of the Art of Ventilating Buildings. By W. P. BUCHAN. With 170 Illustrations, 3s. 6d.

THE SANITARY ARRANGEMENT OF DWELLING HOUSES. By A. J. WALLIS-TAYLER, A.M.Inst.C.E. Crown 8vo, 2s. 6d., cloth.

SANITARY WORK IN THE SMALLER TOWNS AND IN VILLAGES. By C. SLAGG, A.M.I.C.E. 12mo, 3s., cloth.

HEATING BUILDINGS BY HOT WATER. By WALTER JONES. Second Edition. Crown 8vo, 2s. 6d. net.

PRACTICAL BRICKLAYING. By ADAM HAMMOND. 1s. 6d., cloth.

PRACTICAL BRICKCUTTING AND SETTING. By ADAM HAMMOND. 1s. 6d., cloth.

BRICKWORK. Including Bricklaying, Cutting, and Setting. By F. WALKER. 1s. 6d., cloth.

ROOF-CARPENTRY: Practical Lessons in the Framing of Wood Roofs. By G. COLLINGS. 2s.

THE PRACTICAL PLASTERER: A Compendium of Plain and Ornamental Plaster-Work. By WILFRED KEMP. 2s.

LOCKWOOD'S BUILDER'S, ARCHITECT'S, CONTRACTOR'S, AND ENGINEER'S PRICE-BOOK FOR 1898. Edited by F. T. W. MILLER. Crown 8vo, 4s., cloth.

A BOOK ON BUILDING. By Sir E. BECKETT, Bart. Fcap. 8vo, 5s., cloth.

THE ERECTION OF DWELLING HOUSES. By S. H. BROOKS. Fcap. 8vo, 2s. 6d.

HINTS TO YOUNG ARCHITECTS. By G. WIGHTWICK. Revised by G. H. GUILLAUME. Fcap. 8vo, 3s. 6d., cloth.

THE JOINTS MADE AND USED BY BUILDERS. By W. J. CHRISTY. Fcap. 8vo, 3s.

BUILDING ESTATES. The Development, Sale, Purchase, and Management of Building Land. By F. MAITLAND. Fcap. 8vo, 2s.

CONCRETE: ITS NATURE AND USES. A Book for Architects, Builders, Contractors, and Clerks of Works. By G. L. SUTCLIFFE, A.R.I.B.A. Crown 8vo, 7s. 6d., cloth.

PORTLAND CEMENT FOR USERS. By H. FAIJA, A.M.I.C.E. Fcap. 8vo, 2s., cloth.

PRACTICAL MASONRY: A Guide to the Art of Stone Cutting. By W. R. PURCHASE. Royal 8vo, 134 pages, with 50 Lithographic Plates, comprising nearly 400 separate Diagrams, 7s. 6d., cloth.

CARPENTRY AND JOINERY. By T. TREDGOLD and E. W. TARN, M.A. Sixth Edition. Fcap. 8vo, Text, 3s. 6d. Atlas of 35 Plates, 4to, 6s., cloth.

HOUSE PAINTING, GRAINING, MARBLING, and SIGN-WRITING. By ELLIS A. DAVIDSON. Seventh Edition. 6s., cloth.

A GRAMMAR OF COLOURING, applied to DECORATIVE PAINTING AND THE ARTS. By GEORGE FIELD. Revised by E. A. DAVIDSON. 3s., cloth.

SCHOOL OF PAINTING FOR THE IMITATION OF WOODS AND MARBLES. By A. R. & P. VAN DER BURG. With 24 Coloured Plates. Also 12 Plain Plates, comprising 154 Figures. Folio. £1 11s. 6d.

ELEMENTARY DECORATION. The Interior and Exterior Decoration of Dwelling Houses, etc. By JAMES WILLIAM FACEY. 2s., cloth.

PRACTICAL HOUSE DECORATION. By J. W. FACEY. 2s. 6d., cloth.

MR. TARN'S MANUALS for ARCHITECTURAL STUDENTS.

THE MECHANICS OF ARCHITECTURE:

A Treatise on Applied Mechanics, especially Adapted to the Use of Architects. By E. WYNDHAM TARN, M.A., Author of "The Science of Building," etc Second Edition, Enlarged. Illustrated with 125 Diagrams. Crown 8vo, *7s. 6d.*, cloth.

SUMMARY OF CONTENTS.

CHAPTER I. FORCES IN EQUILIBRIUM.—II. MOMENTS OF FORCES.—III. CENTRE OF GRAVITY.—IV. RESISTANCE OF MATERIALS TO STRESS.—V. DEFLECTION OF BEAMS.—VI. STRENGTH OF PILLARS.—VII. ROOFS, TRUSSES.—VIII. ARCHES.—IX. DOMES, SPIRES.—X. BUTTRESSES, SHORING, RETAINING WALLS, FOUNDATIONS.—XI. EFFECT OF WIND ON BUILDINGS.—XII. MISCELLANEOUS EXAMPLES AND SOLUTIONS.

"A very useful and helpful manual of architectural mechanics. It really contains sufficient to enable a careful and painstaking student to grasp the principles bearing upon the majority of building problems, including such subjects as domes, spires, vaulting, and hammer-beam roofs. . . . Mr. Tarn has added by this volume to the debt of gratitude which is owing to him by architectural students for the many valuable works which he has produced for their use."—*The Builder.*

"Mr. Tarn's latest volume is an addition of solid worth to the ever-increasing list of works bearing on the technical side of the architect's profession. The mechanics in the volume are really mechanics, and are harmoniously wrought in with the distinctive professional matter proper to the subject. The diagrams and type are commendably clear."—*Schoolmaster.*

THE SCIENCE OF BUILDING:

An Elementary Treatise on the Principles of Construction, especially Adapted to the Requirements of Architectural Students. By E. WYNDHAM TARN, M.A., Architect. Third Edition, Revised and Enlarged, with 59 Engravings. Fcap. 8vo, *3s. 6d.*, cloth.

SUMMARY OF CONTENTS.

CHAP. I. MECHANICAL PRINCIPLES.—II. RETAINING WALLS.—III. ARCHES, CUPOLAS, SPIRES.—IV. BUILDING STONES.—V. TIMBER.—VI. IRON.—VII. FLUIDS AT REST AND IN MOTION.—VIII. LIGHTNING CONDUCTORS, APPENDIX, TABLES OF STRENGTH OF MATERIALS, ETC.

"A very valuable book, which we strongly recommend to all students."—*Builder.*

"No architectural student should be without this handbook of constructional knowledge."—*Architect.*

"A valuable handbook to the student who is desirous of qualifying himself for the architectural examinations. As a *repertoire* of the scientific principles of construction in which the architect is concerned, Mr. Tarn's book is unsurpassed."—*Building News.*

PRACTICAL GEOMETRY,

for the Architect, Engineer, and Mechanic. Giving Rules for the Delineation and Application of various Geometrical Lines, Figures, and Curves. By E. WYNDHAM TARN, M.A., Architect, Author of "The Science of Building," etc. Second Edition. With 172 Illustrations. Demy 8vo, 9*s.*, cloth.

"No book with the same object in view has ever been published in which the clearness of the rules laid down and the illustrative diagrams have been so satisfactory."—*Scotsman.*

THE STUDENT'S GUIDE TO THE PRACTICE OF MEASURING AND VALUING ARTIFICERS' WORKS.

By E. DOBSON. Re-written and Enlarged by E. WYNDHAM TARN, M.A. Sixth Edition. With 8 Plates and 63 Woodcuts. Crown 8vo, *7s. 6d.*, cloth.

"Well fulfils the promise of its title-page, and we can thoroughly recommend it to the class for whose use it has been compiled. Mr. Tarn's additions and revisions have much increased the usefulness of the work, and have especially augmented its value to students."—*Engineering.*

"This edition will be found the most complete treatise on the principles of measuring and valuing artificer's work that has yet been published."—*Building News.*

THE CONSTRUCTION OF ROOFS OF WOOD AND IRON:

Deduced chiefly from the works of Robison, Tredgold, and Humber. By E. WYNDHAM TARN, M.A., Architect. Second Edition, Revised. 12mo, *1s. 6d.*, cloth.

"Mr. Tarn is so thoroughly master of his subject, that although the treatise is founded on the works of others, he has given it a distinct value of his own. It will be found valuable by all students."—*Builder.*

LIGHT:

An Introduction to the Science of Optics. Designed for the Use of Students of Architecture, Engineering, and other Applied Sciences. By E. WYNDHAM TARN, M.A., Author of "The Science of Building," etc. 12mo, *1s. 6d.*, cloth.

"The principal facts of the subject are clearly set forth in this useful volume, and students with a good knowledge of elementary mathematics will find little difficulty in mastering all that appear in this book."—*Glasgow Herald.*

London: **CROSBY LOCKWOOD & SON, 7, Stationers' Hall Court, E.C.**

A

CATALOGUE OF BOOKS

INCLUDING NEW AND STANDARD WORKS IN

ENGINEERING: CIVIL, MECHANICAL AND MARINE; ELECTRICITY AND ELECTRICAL ENGINEERING; MINING, METALLURGY; ARCHITECTURE, BUILDING, INDUSTRIAL AND DECORATIVE ARTS; SCIENCE, TRADE AND MANUFACTURES; AGRICULTURE, FARMING, GARDENING; AUCTIONEERING, VALUING AND ESTATE AGENCY; LAW AND MISCELLANEOUS.

PUBLISHED BY

CROSBY LOCKWOOD & SON.

MECHANICAL ENGINEERING, etc.

D. K. Clark's Pocket-Book for Mechanical Engineers.

THE MECHANICAL ENGINEER'S POCKET-BOOK of Tables, Formulæ, Rules, and Data: A Handy Book of Reference for Daily Use in Engineering Practice. By D. KINNEAR CLARK, M. Inst. C.E., Author of "Railway Machinery," "Tramways," &c. Third Edition, Revised. Small 8vo, 700 pages, 6*s.* bound in flexible leather cover, rounded corners.

SUMMARY OF CONTENTS.

MATHEMATICAL TABLES.—MEASUREMENT OF SURFACES AND SOLIDS.—ENGLISH WEIGHTS AND MEASURES.—FRENCH METRIC WEIGHTS AND MEASURES.—FOREIGN WEIGHTS AND MEASURES.—MONEYS.—SPECIFIC GRAVITY, WEIGHT AND VOLUME.—MANUFACTURED METALS.—STEEL PIPES.—BOLTS AND NUTS.—SUNDRY ARTICLES IN WROUGHT AND CAST IRON, COPPER, BRASS, LEAD, TIN, ZINC.—STRENGTH OF MATERIALS.—STRENGTH OF TIMBER.—STRENGTH OF CAST IRON.—STRENGTH OF WROUGHT IRON.—STRENGTH OF STEEL.—TENSILE STRENGTH OF COPPER, LEAD, ETC.—RESISTANCE OF STONES AND OTHER BUILDING MATERIALS.—RIVETED JOINTS IN BOILER PLATES.—BOILER SHELLS.—WIRE ROPES AND HEMP ROPES.—CHAINS AND CHAIN CABLES.—FRAMING.—HARDNESS OF METALS, ALLOYS AND STONES.—LABOUR OF ANIMALS.—MECHANICAL PRINCIPLES.—GRAVITY AND FALL OF BODIES.—ACCELERATING AND RETARDING FORCES.—MILL GEARING, SHAFTING, &C.—TRANSMISSION OF MOTIVE POWER.—HEAT.—COMBUSTION: FUELS.—WARMING, VENTILATION, COOKING STOVES.—STEAM.—STEAM ENGINES AND BOILERS.—RAILWAYS.—TRAMWAYS.—STEAM SHIPS.—PUMPING STEAM ENGINES AND PUMPS.—COAL GAS, GAS ENGINES, &C.—AIR IN MOTION.—COMPRESSED AIR.—HOT AIR ENGINES.—WATER POWER.—SPEED OF CUTTING TOOLS.—COLOURS.—ELECTRICAL ENGINEERING.

*** OPINIONS OF THE PRESS.

"Mr. Clark manifests what is an innate perception of what is likely to be useful in a pocket-book, and he is really unrivalled in the art of condensation. Very requently we find the information on a given subject is supplied by giving a summary description of an experiment, and a statement of the results obtained. There is a very excellent steam table, occupying five-and-a-half pages; and there are rules given for several calculations, which rules cannot be found in other pocket-books, as, for example, that on page 497, for getting at the quantity of water in the shape of priming in any known weight of steam. It is very difficult to hit upon any mechanical engineering subject concerning which this work supplies no information, and the excellent index at the end adds to its utility. In one word, it is an exceedingly handy and efficient tool, possessed of which the engineer will be saved many a wearisome calculation, or yet more wearisome hunt through various text-books and treatises, and, as such, we can heartily recommend it to our readers, who must not run away with the idea that Mr. Clark's Pocket-book is only Molesworth in another form. On the contrary, each contains what is not to be found in the other; and Mr. Clark takes more room and deals at more length with many subjects than Molesworth possibly could."—*The Engineer.*

"It would be found difficult to compress more matter within a similar compass, or produce a book of 650 pages which should be more compact or convenient for pocket reference. . . . Will be appreciated by mechanical engineers of all classes."—*Practical Engineer.*

"Just the kind of work that practical men require to have near to them."—*English Mechanic.*

MR. HUTTON'S PRACTICAL HANDBOOKS.

Handbook for Works' Managers.

THE WORKS' MANAGER'S HANDBOOK of Modern Rules, Tables, and Data. For Engineers, Millwrights, and Boiler Makers; Tool Makers, Machinists, and Metal Workers; Iron and Brass Founders, &c. By W. S. HUTTON, Civil and Mechanical Engineer, Author of "The Practical Engineer's Handbook." Fifth Edition, carefully Revised, with Additions. In One handsome Volume, medium 8vo, price 15*s.* strongly bound.

☞ *The Author having compiled Rules and Data for his own use in a great variety of modern engineering work, and having found his notes extremely useful, decided to publish them—revised to date—believing that a practical work, suited to the* DAILY REQUIREMENTS OF MODERN ENGINEERS, *would be favourably received.*

*** OPINIONS OF THE PRESS.

"Of this edition we may repeat the appreciative remarks we made upon the first and third. Since the appearance of the latter very considerable modifications have been made, although the total number of pages remains almost the same. It is a very useful collection of rules, tables, and workshop and drawing office data."—*The Engineer*, May 10, 1895.

"The author treats every subject from the point of view of one who has collected workshop notes for application in workshop practice, rather than from the theoretical or literary aspect. The volume contains a great deal of that kind of information which is gained only by practical experience, and is seldom written in books."—*The Engineer*, June 5, 1885.

"The volume is an exceedingly useful one, brimful with engineers' notes, memoranda, and rules, and well worthy of being on every mechanical engineer's bookshelf."—*Mechanical World.*

"The information is precisely that likely to be required in practice. . . . The work forms a desirable addition to the library not only of the works' manager, but of anyone connected with general engineering."—*Mining Journal.*

"Brimful of useful information, stated in a concise form, Mr. Hutton's books have met a pressing want among engineers. The book must prove extremely useful to every practical man possessing a copy."—*Practical Engineer.*

New Manual for Practical Engineers.

THE PRACTICAL ENGINEER'S HANDBOOK, Comprising a Treatise on Modern Engines and Boilers, Marine, Locomotive, and Stationary. And containing a large collection of Rules and Practical Data relating to recent Practice in Designing and Constructing all kinds of Engines, Boilers, and other Engineering work. The whole constituting a comprehensive Key to the Board of Trade and other Examinations for Certificates of Competency in Modern Mechanical Engineering. By WALTER S. HUTTON, Civil and Mechanical Engineer, Author of "The Works' Manager's Handbook for Engineers," &c. With upwards of 370 Illustrations. Fifth Edition, Revised, with Additions. Medium 8vo, nearly 500 pp., price 18*s.* strongly bound. [*Just published.*

☞ *This work is designed as a companion to the Author's* "WORKS' MANAGER'S HANDBOOK." *It possesses many new and original features, and contains, like its predecessor, a quantity of matter not originally intended for publication, but collected by the Author for his own use in the construction of a great variety of* MODERN ENGINEERING WORK.

The information is given in a condensed and concise form, and is illustrated by upwards of 370 *Woodcuts; and comprises a quantity of tabulated matter of great value to all engaged in designing, constructing, or estimating for* ENGINES, BOILERS, *and* OTHER ENGINEERING WORK.

*** OPINIONS OF THE PRESS.

"We have kept it at hand for several weeks, referring to it as occasion arose, and we have not on a single occasion consulted its pages without finding the information of which we were in quest."—*Athenæum.*

"A thoroughly good practical handbook, which no engineer can go through without learning something that will be of service to him."—*Marine Engineer.*

"An excellent book of reference for engineers, and a valuable text-book for students of engineering."—*Scotsman.*

"This valuable manual embodies the results and experience of the leading authorities on mechanical engineering."—*Building News.*

"The author has collected together a surprising quantity of rules and practical data, and has shown much judgment in the selections he has made. . . . There is no doubt that this book is one of the most useful of its kind published, and will be a very popular compendium."—*Engineer.*

"A mass of information, set down in simple language, and in such a form that it can be easily referred to at any time. The matter is uniformly good and well chosen, and is greatly elucidated by the illustrations. The book will find its way on to most engineers' shelves, where it will rank as one of the most useful books of reference."—*Practical Engineer.*

"Full of useful information, and should be found on the office shelf of all practical engineers."—*English Mechanic.*

MR. HUTTON'S PRACTICAL HANDBOOKS—*continued.*

Practical Treatise on Modern Steam-Boilers.

STEAM BOILER CONSTRUCTION. A Practical Handbook for Engineers, Boiler-Makers, and Steam Users. Containing a large Collection of Rules and Data relating to Recent Practice in the Design, Construction, and Working of all Kinds of Stationary, Locomotive, and Marine Steam-Boilers. By WALTER S. HUTTON, Civil and Mechanical Engineer, Author of "The Works' Manager's Handbook," "The Practical Engineer's Handbook," &c. With upwards of 300 Illustrations. Second Edition, medium 8vo, 18*s.* cloth.

☞ THIS WORK *is issued in continuation of the Series of Handbooks written by the Author, viz:*—"THE WORKS' MANAGER'S HANDBOOK" *and* "THE PRACTICAL ENGINEER'S HANDBOOK," *which are so highly appreciated by Engineers for the practical nature of their information ; and is consequently written in the same style as those works.*

The Author believes that the concentration, in a convenient form for easy reference, of such a large amount of thoroughly practical information on Steam-Boilers, will be of considerable service to those for whom it is intended, and he trusts the book may be deemed worthy of as favourable a reception as has been accorded to its predecessors.

*** OPINIONS OF THE PRESS.

"Every detail, both in boiler design and management, is clearly laid before the reader. The volume shows that boiler construction has been reduced to the condition of one of the most exact sciences; and such a book is of the utmost value to the *fin de siècle* Engineer and Works' Manager."—*Marine Engineer.*

"There has long been room for a modern handbook on steam boilers; there is not that room now, because Mr. Hutton has filled it. It is a thoroughly practical book for those who are occupied in the construction, design, selection, or use of boilers."—*Engineer.*

"The book is of so important and comprehensive a character that it must find its way into the libraries of every one interested in boiler using or boiler manufacture if they wish to be thoroughly informed. We strongly recommend the book for the intrinsic value of its contents."—*Machinery Market.*

"The value of this book can hardly be over-estimated. The author's rules, formulæ, &c., are all very fresh, and it is impossible to turn to the work and not find what you want. No practical engineer should be without it."—*Colliery Guardian.*

Hutton's "Modernised Templeton."

THE PRACTICAL MECHANICS' WORKSHOP COMPANION. Comprising a great variety of the most useful Rules and Formulæ in Mechanical Science, with numerous Tables of Practical Data and Calculated Results for Facilitating Mechanical Operations. By WILLIAM TEMPLETON, Author of "The Engineer's Practical Assistant," &c. &c. Seventeenth Edition, Revised, Modernised, and considerably Enlarged by WALTER S. HUTTON, C.E., Author of "The Works' Manager's Handbook," "The Practical Engineer's Handbook," &c. Fcap. 8vo, nearly 500 pp., with 8 Plates and upwards of 250 Illustrative Diagrams, 6*s.* strongly bound for workshop or pocket wear and tear.

*** OPINIONS OF THE PRESS.

"In its modernised form Hutton's 'Templeton' should have a wide sale, for it contains much valuable information which the mechanic will often find of use, and not a few tables and notes which he might look for in vain in other works. This modernised edition will be appreciated by all who have learned to value the original editions of 'Templeton.'"—*English Mechanic.*

"It has met with great success in the engineering workshop, as we can testify; and there are a great many men who, in a great measure, owe their rise in life to this little book."—*Building News.*

"This familiar text-book—well known to all mechanics and engineers—is of essential service to the every-day requirements of engineers, millwrights, and the various trades connected with engineering and building. The new modernised edition is worth its weight in gold."—*Building News.* (Second Notice.)

"This well-known and largely-used book contains information, brought up to date, of the sort so useful to the foreman and draughtsman. So much fresh information has been introduced as to constitute it practically a new book. It will be largely used in the office and workshop."—*Mechanical World.*

"The publishers wisely entrusted the task of revision of this popular, valuable, and useful book to Mr. Hutton than whom a more competent man they could not have found."—*Iron.*

Templeton's Engineer's and Machinist's Assistant.

THE ENGINEER'S, MILLWRIGHT'S, AND MACHINIST'S Practical Assistant. A collection of Useful Tables, Rules, and Data. By WILLIAM TEMPLETON. Seventh Edition, with Additions. 18mo, 2*s.* 6*d.* cloth.

"Occupies a foremost place among books of this kind. A more suitable present to an apprentice to any of the mechanical trades could not possibly be made."—*Building News.*

"A deservedly popular work. It should be in the 'drawer' of every mechanic."—*English Mechanic.*

Foley's Office Reference Book for Mechanical Engineers.

THE MECHANICAL ENGINEER'S REFERENCE BOOK, for Machine and Boiler Construction. In Two Parts. Part I. GENERAL ENGINEERING DATA. Part II. BOILER CONSTRUCTION. With 51 Plates and numerous Illustrations. By NELSON FOLEY, M.I.N.A. Second Edition, Revised throughout and much Enlarged. Folio, £3 3*s.* net, half-bound.

SUMMARY OF CONTENTS.

PART I.

MEASURES.—CIRCUMFERENCES AND AREAS, &c., SQUARES, CUBES, FOURTH POWERS.—SQUARE AND CUBE ROOTS.—SURFACE OF TUBES.—RECIPROCALS.—LOGARITHMS.—MENSURATION.—SPECIFIC GRAVITIES AND WEIGHTS.—WORK AND POWER.—HEAT.—COMBUSTION.—EXPANSION AND CONTRACTION.—EXPANSION OF GASES.—STEAM.—STATIC FORCES.—GRAVITATION AND ATTRACTION.—MOTION AND COMPUTATION OF RESULTING FORCES.—ACCUMULATED WORK.—CENTRE AND RADIUS OF GYRATION.—MOMENT OF INERTIA.—CENTRE OF OSCILLATION.—ELECTRICITY.—STRENGTH OF MATERIALS.—ELASTICITY.—TEST SHEETS OF METALS.—FRICTION.—TRANSMISSION OF POWER.—FLOW OF LIQUIDS.—FLOW OF GASES.—AIR PUMPS, SURFACE CONDENSERS, &c.—SPEED OF STEAMSHIPS.—PROPELLERS.—CUTTING TOOLS.—FLANGES.—COPPER SHEETS AND TUBES.—SCREWS, NUTS, BOLT HEADS, &c.—VARIOUS RECIPES AND MISCELLANEOUS MATTER—WITH DIAGRAMS FOR VALVE-GEAR, BELTING AND ROPES, DISCHARGE AND SUCTION PIPES, SCREW PROPELLERS, AND COPPER PIPES.

PART II.

TREATING OF POWER OF BOILERS.—USEFUL RATIOS.—NOTES ON CONSTRUCTION.—CYLINDRICAL BOILER SHELLS.—CIRCULAR FURNACES.—FLAT PLATES.—STAYS.—GIRDERS.—SCREWS.—HYDRAULIC TESTS.—RIVETING.—BOILER SETTING, CHIMNEYS, AND MOUNTINGS.—FUELS, &c.—EXAMPLES OF BOILERS AND SPEEDS OF STEAMSHIPS.—NOMINAL AND NORMAL HORSE POWER.—WITH DIAGRAMS FOR ALL BOILER CALCULATIONS AND DRAWINGS OF MANY VARIETIES OF BOILERS

*** OPINIONS OF THE PRESS.

"The book is one which every mechanical engineer may, with advantage to himself, add to his library."—*Industries.*

"Mr. Foley is well fitted to compile such a work. . . . The diagrams are a great feature of the work. . . . Regarding the whole work, it may be very fairly stated that Mr. Foley has produced a volume which will undoubtedly fulfil the desire of the author and become indispensable to all mechanical engineers."—*Marine Engineer.*

"We have carefully examined this work, and pronounce it a most excellent reference book for the use of marine engineers."—*Journal of American Society of Naval Engineers.*

"A veritable monument of industry on the part of Mr. Foley, who has succeeded in producing what is simply invaluable to the engineering profession."—*Steamship.*

Coal and Speed Tables.

A POCKET BOOK OF COAL AND SPEED TABLES, for Engineers and Steam-users. By NELSON FOLEY, Author of "The Mechanical Engineer's Reference Book." Pocket-size, 3*s.* 6*d.* cloth.

"These tables are designed to meet the requirements of every-day use; they are of sufficient scope for most practical purposes, and may be commended to engineers and users of steam."—*Iron.*

"This pocket-book well merits the attention of the practical engineer. Mr. Foley has compiled a very useful set of tables, the information contained in which is frequently required by engineers, coal consumers, and users of steam."—*Iron and Coal Trades Review.*

Steam Engine.

TEXT-BOOK ON THE STEAM ENGINE. With a Supplement on GAS ENGINES, and PART II. ON HEAT ENGINES. By T. M. GOODEVE, M.A., Barrister-at-Law, Professor of Mechanics at the Royal College of Science, London; Author of "The Principles of Mechanics," "The Elements of Mechanism," &c. Thirteenth Edition. Crown 8vo, 6*s.* cloth.

"Professor Goodeve has given us a treatise on the steam engine, which will bear comparison with anything written by Huxley or Maxwell, and we can award it no higher praise."—*Engineer.*

"Mr. Goodeve's text-book is a work of which every young engineer should possess himself."—*Mining Journal.*

Gas Engines.

ON GAS ENGINES. With Appendix describing a Recent Engine with Tube Igniter. By T. M. GOODEVE, M.A. Crown 8vo, 2*s.* 6*d.* cloth.

"Like all Mr. Goodeve's writings, the present is no exception in point of general excellence. It is a valuable little volume."—*Mechanical World.*

Steam Boilers.

A TREATISE ON STEAM BOILERS: Their Strength, Construction, and Economical Working. By R. WILSON, C.E. Fifth Edition. 12mo, 6*s.* cloth.

"The best treatise that has ever been published on steam boilers."—*Engineer.*

"The author shows himself perfect master of his subject, and we heartily recommend all employing steam power to possess themselves of the work."—*Ryland's Iron Trade Circular.*

Steam Engine Design.

A HANDBOOK ON THE STEAM ENGINE, with especial Reference to Small and Medium-sized Engines. For the Use of Engine Makers, Mechanical Draughtsmen, Engineering Students, and Users of Steam Power. By HERMAN HEADER, C.E. Translated from the German with considerable Additions and Alterations, by H. H. P. POWLES, A.M.I.C.E., M.I.M.E. Second Edition, Revised. With nearly 1,100 Illustrations. Crown 8vo, 9*s.* cloth.

"A perfect encyclopædia of the steam engine and its details, and one which must take a permanent place in English drawing-offices and workshops."—*A Foreman Pattern-maker.*

"This is an excellent book, and should be in the hands of all who are interested in the construction and design of medium-sized stationary engines. . . . A careful study of its contents and the arrangement of the sections leads to the conclusion that there is probably no other book like it in this country. The volume aims at showing the results of practical experience, and it certainly may claim a complete achievement of this idea."—*Nature.*

"There can be no question as to its value. We cordially commend it to all concerned in the design and construction of the steam engine."—*Mechanical World.*

Boiler Chimneys.

BOILER AND FACTORY CHIMNEYS: Their Draught-Power and Stability. With a Chapter on *Lightning Conductors.* By ROBERT WILSON, A.I.C.E., Author of "A Treatise on Steam Boilers," &c. Crown 8vo, 3*s.* 6*d.* cloth.

"A valuable contribution to the literature of scientific building."—*The Builder.*

Boiler Making.

BOILER-MAKER'S READY RECKONER AND ASSISTANT. With Examples of Practical Geometry and Templating, for the Use of Platers, Smiths, and Riveters. By JOHN COURTNEY, Edited by D. K. CLARK, M.I.C.E. Third Edition, 480 pp., with 140 Illustrations. Fcap. 8vo, 7*s.* half-bound.

"No workman or apprentice should be without this book."—*Iron Trade Circular.*

Refrigerating Machinery.

REFRIGERATING AND ICE-MAKING MACHINERY: A Descriptive Treatise for the Use of Persons Employing Refrigerating and Ice-Making Installations, and others. By A. J. WALLIS-TAYLER, C.E., Assoc. Member Inst. C.E. With Illustrations. Crown 8vo, 7*s.* 6*d.* cloth. [*Just published.*

"Practical, explicit and profusely illustrated."—*Glasgow Herald.*

"We recommend the book, which gives the cost of various systems and illustrations showing details of parts of machinery and general arrangements of complete installations."—*Builder.*

"May be recommended as a useful description of the machinery, the processes, and of the facts, figures, and tabulated physics of refrigerating. It is one of the best compilations on the subject."—*Engineer.*

Hydraulic Machinery.

HYDRAULIC MACHINERY Employed in the Concentration and Transmission of Power. By G. CROYDON MARKS, A.M.I.C.E., A.M.I.M.E. New Edition, Enlarged. Crown 8vo. [*In the press.*

Locomotive Engine Development.

THE LOCOMOTIVE ENGINE AND ITS DEVELOPMENT. A Popular Treatise on the Gradual Improvements made in Railway Engines between 1803 and 1896. By CLEMENT E. STRETTON, C.E. Fifth Edition, Revised and Enlarged. With 120 Illustrations. Crown 8vo, 3*s.* 6*d.* cloth. [*Just published.*

"Students of railway history and all who are interested in the evolution of the modern locomotive will find much to attract and entertain in this volume."—*The Times.*

"The author of this work is well known to the railway world, and no one, probably, has a better knowledge of the history and development of the locomotive. The volume before us should be of value to all connected with the railway system of this country."—*Nature.*

Estimating for Engineering Work, &c.

ENGINEERING ESTIMATES, COSTS, AND ACCOUNTS: A Guide to Commercial Engineering. With numerous Examples of Estimates and Costs of Millwright Work, Miscellaneous Productions, Steam Engines and Steam Boilers; and a Section on the Preparation of Costs Accounts. By A GENERAL MANAGER. Second Edition. Demy 8vo, 12*s.* cloth. [*Just published.*

"This is an excellent and very useful book, covering subject-matter in constant requisition in every factory and workshop. . . . . The book is invaluable, not only to the young engineer, but also to the estimate department of every works."—*Builder.*

"We accord the work unqualified praise. The information is given in a plain, straightforward manner, and bears throughout evidence of the intimate practical acquaintance of the author with every phrase of commercial engineering."—*Mechanical World.*

Boiler Making.

PLATING AND BOILER MAKING: A Practical Handbook for Workshop Operations. By JOSEPH G. HORNER, A.M.I.M.E. ("Foreman Pattern Maker"), Author of "Pattern Making," &c. 380 pages, with 338 Illustrations. Crown 8vo, 7*s.* 6*d.* cloth. [*Just published.*

"The latest production from the pen of this writer is characterised by that evidence of close acquaintance with workshop methods which will render the book exceedingly acceptable to the practical hand. We have no hesitation in commending the work as a serviceable and practical handbook on a subject which has not hitherto received much attention from those qualified to deal with it in a satisfactory manner."—*Mechanical World.*

Engineering Construction.

PATTERN-MAKING: A Practical Treatise, embracing the Main Types of Engineering Construction and including Gearing, both Hand and Machine-made, Engine Work, Sheaves and Pulleys, Pipes and Columns, Screws, Machine Parts, Pumps and Cocks, the Moulding of Patterns in Loam and Greensand, &c., together with the methods of Estimating the weight of Castings; to which is added an Appendix of Tables for Workshop Reference. By JOSEPH G. HORNER, A.M.I.M.E. ("Foreman Pattern Maker"). Second Edition, thoroughly Revised and much Enlarged. With 450 Illustrations. Crown 8vo, 7*s.* 6*d.* cloth.

"A well-written technical guide, evident y written by a man who understands and has practised what he has written about. . . . . We cordially recommend it to engineering students, young journeymen, and others desirous of being initiated into the mysteries of pattern-making."—*Builder.*

"More than 400 illustrations help to explain the text, which is, however, always clear and explicit, thus rendering the work an excellent *vade mecum* for the apprentice who desires to become master of his trade."—*English Mechanic.*

Dictionary of Mechanical Engineering Terms.

MECHANICAL ENGINEERING TERMS (Lockwood's Dictionary of). Embracing those current in the Drawing Office, Pattern Shop, Foundry, Fitting, Turning, Smiths', and Boiler Shops, &c. &c. Comprising upwards of 6,000 Definitions. Edited by JOSEPH G. HORNER, A.M.I.M.E. ("Foreman Pattern Maker"), Author of "Pattern Making," &c. Second Edition, Revised, with Additions. Crown 8vo, 7*s.* 6*d.* cloth.

"Just the sort of handy dictionary required by the various trades engaged in mechanical engineering. The practical engineering pupil will find the book of great value in his studies, and every foreman engineer and mechanic should have a copy."—*Building News.*

"Not merely a dictionary, but, to a certain extent, also a most valuable guide. It strikes us as a happy idea to combine with a definition of the phrase useful information on the subject of which it treats."—*Machinery Market.*

Mill Gearing.

TOOTHED GEARING: A Practical Handbook for Offices and Workshops. By JOSEPH HORNER, A.M.I.M.E. ("Foreman Pattern Maker"), Author of "Pattern Making," &c. With 184 Illustrations. Crown 8vo, 6*s.* cloth.

"We must give the book our unqualified praise for its thoroughness of treatment and we can heartily recommend it to all interested as the most practical book on the subject yet written."—*Mechanical World.*

Fire Engineering.

FIRES, FIRE-ENGINES, AND FIRE-BRIGADES. With a History of Fire-Engines, their Construction, Use, and Management; Remarks on Fire-Proof Buildings, and the Preservation of Life from Fire; Statistics of the Fire Appliances in English Towns; Foreign Fire Systems; Hints on Fire-Brigades, &c. &c. By CHARLES F. T. YOUNG, C.E. With Illustrations, 544 pp., demy 8vo, £1 4*s.* cloth.

"To such of our readers as are interested in the subject of fires and fire apparatus, we can most heartily commend this book. It is really the only English work we now have upon the subject."—*Engineering.*

Motor-Cars, &c.

MOTOR CARS OR POWER CARRIAGES FOR COMMON ROADS. By A. J. WALLIS-TAYLER, Assoc. Memb. Inst. C.E., Author of "Modern Cycles," &c. Including Early and Recent Examples of Steam Road Carriages, Internal Combustion or Explosive Engine Carriages, Electric Motor Carriages, Miscellaneous Motor Cars, Auto-Car Bill, Rules and Regulations, &c. With numerous Illustrations. Crown 8vo, 4*s.* 6*d.* cloth. [*Just published.*

Stone-working Machinery.

STONE-WORKING MACHINERY, and the Rapid and Economical Conversion of Stone. With Hints on the Arrangement and Management of Stone Works. By M. POWIS BALE, M.I.M.E. With Illustrations. Crown 8vo, 9*s*.

"The book should be in the hands of every mason or student of stonework."—*Colliery Guardian.*

"A capital handbook for all who manipulate stone for building or ornamental purposes."—*Machinery Market.*

Pump Construction and Management.

PUMPS AND PUMPING: A Handbook for Pump Users. Being Notes on Selection, Construction, and Management. By M. POWIS BALE, M.I.M.E. Third Edition, Revised. Crown 8vo, 2*s*. 6*d*. cloth. [*Just published.*

"The matter is set forth as concisely as possible. In fact, condensation rather than diffuseness has been the author's aim throughout; yet he does not seem to have omitted anything likely to be of use."—*Journal of Gas Lighting.*

"Thoroughly practical and simply and clearly written."—*Glasgow Herald.*

Milling Machinery, &c.

MILLING MACHINES AND PROCESSES: A Practical Treatise on Shaping Metals by Rotary Cutters. Including Information on Making and Grinding the Cutters. By PAUL N. HASLUCK, Author of "Lathe-Work." With upwards of 300 Engravings. Large crown 8vo, 352 pages, 12*s*. 6*d*. cloth.

"A new departure in engineering literature. . . . We can recommend this work to all interested in milling machines; it is what it professes to be—a practical treatise."—*Engineer.*

"A capital and reliable book which will no doubt be of considerable service both to those who are already acquainted with the process as well as to those who contemplate its adoption."—*Industries.*

Turning.

LATHE-WORK: A Practical Treatise on the Tools, Appliances, and Processes employed in the Art of Turning. By PAUL N. HASLUCK. Fifth Edition. Crown 8vo, 5*s*. cloth.

"Written by a man who knows not only how work ought to be done, but who also knows how to do it, and how to convey his knowledge to others. To all turners this book would be valuable."—*Engineering.*

"We can safely recommend the work to young engineers. To the amateur it will simply be invaluable. To the student it will convey a great deal of useful information."—*Engineer.*

Screw-Cutting.

SCREW THREADS: And Methods of Producing Them. With numerous Tables and complete Directions for using Screw-Cutting Lathes. By PAUL N. HASLUCK, Author of "Lathe-Work," &c. With Seventy-four Illustrations. Fourth Edition, Re-written and Enlarged. Waistcoat-pocket size, 1*s*. 6*d*.

"Full of useful information, hints and practical criticism. Taps, dies, and screwing tools generally are illustrated and their action described."—*Mechanical World.*

"It is a complete compendium of all the details of the screw-cutting lathe: in fact a *multum-in-parvo* on all the subjects it treats upon."—*Carpenter and Builder.*

Smith's Tables for Mechanics, &c.

TABLES & MEMORANDA FOR MECHANICS, ENGINEERS, Architects, Builders, &c. Selected and Arranged by FRANCIS SMITH. Sixth Edition, Revised, including ELECTRICAL TABLES, FORMULÆ, AND MEMORANDA. Waistcoat-pocket size, 1*s*. 6*d*. limp leather. [*Just published.*

"It would, perhaps, be as difficult to make a small pocket-book selection of notes and formulæ to suit ALL engineers as it would be to make a universal medicine; but Mr. Smith's waistcoat-pocket collection may be looked upon as a successful attempt."—*Engineer.*

"The best example we have ever seen of 270 pages of useful matter packed into the dimensions of a card-case."—*Building News.* "A veritable pocket treasury of knowledge."—*Iron.*

French-English Glossary for Engineers, &c.

POCKET GLOSSARY OF TECHNICAL TERMS: English-French, French-English; with Tables suitable for the Architectural, Engineering, Manufacturing, and Nautical Professions. By JOHN JAMES FLETCHER, Engineer and Surveyor. Second Edition, Revised and Enlarged, 200 pp. Waistcoat-pocket size, 1*s*. 6*d*. limp leather.

"It is a very great advantage for readers and correspondents in France and England to have so large a number of the words relating to engineering and manufacturers collected in a liliputian volume. The little book will be useful both to students and travellers."—*Architect.*

"The glossary of terms is very complete, and many of the Tables are new and well arranged. We cordially commend the book."—*Mechanical World.*

Year-Book of Engineering Formulæ, &c.

THE ENGINEER'S YEAR-BOOK FOR 1897. Comprising Formulæ, Rules, Tables, Data and Memoranda in Civil, Mechanical, Electrical, Marine and Mine Engineering. By H. R. KEMPE, A.M.Inst.C.E., M.I.E.E., Technical Officer of the Engineer-in-Chief's Office, General Post Office, London, Author of "A Handbook of Electrical Testing," "The Electrical Engineer's Pocket-Book," &c. With about 850 Illustrations, specially Engraved for the work. Crown 8vo, 670 pages, 8*s.* leather. [*Just published.*

"Represents an enormous quantity of work, and forms a desirable book of reference."—*The Engineer.*

"The volume is distinctly in advance of most similar publications in this country."—*Engineering.*

"This valuable and well-designed book of reference meets the demands of all descriptions of engineers."—*Saturday Review.*

"Teems with up-to-date information in every branch of engineering and construction."—*Building News.*

"The needs of the engineering profession could hardly be supplied in a more admirable, complete and convenient form. To say that it more than sustains all comparisons is praise of the highest sort, and that may justly be said of it."—*Mining Journal.*

"There is certainly room for the new comer, which supplies explanations and directions, as well as formulæ and tables. It deserves to become one of the most successful of the technical annuals."—*Architect.*

"Brings together with great skill all the technical information which an engineer has to use day by day. It is in every way admirably equipped, and is sure to prove successful."—*Scotsman.*

"The up-to-dateness of Mr. Kempe's compilation is a quality that will not be lost on the busy people for whom the work is intended."—*Glasgow Herald.*

Portable Engines.

THE PORTABLE ENGINE: Its Construction and Management: A Practical Manual for Owners and Users of Steam Engines generally. By WILLIAM DYSON WANSBROUGH. Crown 8vo, 3*s.* 6*d.* cloth.

"This is a work of value to those who use steam machinery. . . . Should be read by every one who has a steam engine, on a farm or elsewhere."—*Mark Lane Express.*

"We cordially commend this work to buyers and owners of steam engines, and to those who have to do with their construction or use."—*Timber Trades Journal.*

"Such a general knowledge of the steam-engine as Mr. Wansbrough furnishes to the reader should be acquired by all intelligent owners and others who use the steam engine."—*Building News.*

"An excellent text-book of this useful form of engine. The 'Hints to Purchasers' contain a good deal of common-sense and practical wisdom."—*English Mechanic.*

Iron and Steel.

"IRON AND STEEL": A Work for the Forge, Foundry, Factory, and Office. Containing ready, useful, and trustworthy Information for Ironmasters and their Stock-takers; Managers of Bar, Rail, Plate, and Sheet Rolling Mills; Iron and Metal Founders; Iron Ship and Bridge Builders; Mechanical, Mining, and Consulting Engineers; Architects, Contractors, Builders, &c. By CHARLES HOARE, Author of "The Slide Rule," &c. Ninth Edition. 32mo, 6*s.* leather.

"For comprehensiveness the book has not its equal."—*Iron.*

"One of the best of the pocket books."—*English Mechanic.*

Elementary Mechanics.

CONDENSED MECHANICS. A Selection of Formulæ, Rules, Tables, and Data for the Use of Engineering Students, Science Classes, &c. In accordance with the Requirements of the Science and Art Department. By W. G. CRAWFORD HUGHES, A.M.I.C.E. Crown 8vo, 2*s.* 6*d.* cloth.

"The book is well fitted for those who are either confronted with practical problems in their work, or are preparing for examination and wish to refresh their knowledge by going through their formulæ again."—*Marine Engineer.*

"It is well arranged, and meets the wants of those for whom it is intended."—*Railway News.*

Steam.

THE SAFE USE OF STEAM. Containing Rules for Unprofessional Steam-users. By an ENGINEER. Seventh Edition. Sewed, 6*d.*

"If steam-users would but learn this little book by heart, boiler explosions would become sensations by their rarity."—*English Mechanic.*

Warming.

HEATING BY HOT WATER; with Information and Suggestions on the best Methods of Heating Public, Private and Horticultural Buildings. By WALTER JONES. Second Edition. With 96 Illustrations, crown 8vo, 2*s.* 6*d.* *net.*

"We confidently recommend all interested in heating by hot water to secure a copy of this valuable little treatise."—*The Plumber and Decorator.*

CIVIL ENGINEERING, SURVEYING, etc.

Light Railways.

LIGHT RAILWAYS FOR THE UNITED KINGDOM, India, and the Colonies ; A Practical Handbook setting forth the Principles on which Light Railways should be Constructed, Worked and Financed ; and detailing the cost of Construction, Equipment, Revenue and Working Expenses of Local Railways already established in the above-mentioned countries, and in Belgium, France, Switzerland &c. By J. C. MACKAY, F.G.S., A.M.Inst.C.E. Illustrated with Plates and Diagrams. Medium 8vo, 15*s.* cloth. [*Just published.*

"Mr. Mackay's volume is clearly and concisely written, admirably arranged, and freely illustrated. The book is exactly what has been long wanted. We recommend it to all interested in the subject. It is sure to have a wide sale."—*Railway News.*

"Those who desire to have within reach general information concerning almost all the light railway systems in the world will do well to buy Mr. Mackay's book."—*Engineer.*

"This work appears very opportunely, when the extension of the system on a large scale to England is at last being mooted. In its pages we find all the information that the heart of man can desire on the subject. . . . every detail in its story, founded on the experience of other countries and applied to the possibilities of England, is put before us."—*Spectator.*

Tunnelling.

PRACTICAL TUNNELLING. Explaining in detail Setting-out the Works, Shaft-sinking, and Heading-driving, Ranging the Lines and Levelling underground, Sub-Excavating, Timbering and the Construction of the Brickwork of Tunnels, with the amount of Labour required for, and the Cost of, the various portions of the work. By FREDERICK W. SIMMS, M.Inst.C.E. Fourth Edition. Revised and Further Extended, including the most Recent (1895) Examples of Sub-aqueous and other Tunnels by D. KINNEAR CLARK, M.Inst.C.E. Imperial 8vo, with 34 Folding Plates and other Illustrations. £2 2*s.*, cloth. [*Just published.*

"The present (1896) edition has been brought right up to date, and is thus rendered a work to which civil engineers generally should have ready access, and to which engineers who have construction work can hardly afford to be without, but which to the younger members of the profession is invaluable, as from its pages they can learn the state to which the science of tunnelling has attained."—*Railway News.*

"The estimation in which Mr. Simms's book on tunnelling has been held for many years cannot be more truly expressed than in the words of the late Prof. Rankine: 'The best source of information on the subject of tunnels is Mr. F. W. Simms's work on Practical Tunnelling.'"—*Architect.*

Water Supply and Water-Works.

THE WATER SUPPLY OF TOWNS and the Construction of Water-Works: A Practical Treatise for the Use of Engineers and Students of Engineering. By W. K. BURTON, A.M.Inst.C.E., Professor of Sanitary Engineering in the Imperial University, Tokyo, Japan, and Consulting Engineer to the Tokyo Water-Works. With an Appendix on THE EFFECTS OF EARTHQUAKES ON WATER-WORKS, by Professor JOHN MILNE, F.R.S. With numerous Plates and Illustrations. Super-royal 8vo, 25*s.* buckram.

I. INTRODUCTORY. — II. DIFFERENT QUALITIES OF WATER.—III. QUANTITY OF WATER TO BE PROVIDED.—IV. ON ASCERTAINING WHETHER A PROPOSED SOURCE OF SUPPLY IS SUFFICIENT. —V. ON ESTIMATING THE STORAGE CAPACITY REQUIRED TO BE PROVIDED.—VI. CLASSIFICATION OF WATERWORKS.—VII. IMPOUNDING RESERVOIRS. — VIII. EARTHWORK DAMS. — IX. MASONRY DAMS.—X. THE PURIFICATION OF WATER. — XI. SETTLING RESERVOIRS. — XII. SAND FILTRATION. — XIII. PURIFICATION OF WATER BY ACTION OF IRON, SOFTENING OF WATER BY ACTION OF LIME, NATURAL FILTRATION. — XIV.—SERVICE OR CLEAN WATER RESERVOIRS—WATER TOWERS—STAND PIPES.—XV. THE CONNECTION OF SETTLING RESERVOIRS, FILTER BEDS AND SERVICE RESERVOIRS.—XVI. PUMPING MACHINERY.—XVII. FLOW OF WATER IN CONDUITS —PIPES AND OPEN CHANNELS.—XVIII. DISTRIBUTION SYSTEMS.—XIX. SPECIAL PROVISIONS FOR THE EXTINCTION OF FIRE.—XX. PIPES FOR WATERWORKS.—XXI. PREVENTION OF WASTE OF WATER. — XXII. VARIOUS APPLICATIONS USED IN CONNECTION WITH WATERWORKS.

APPENDIX. By PROF. JOHN MILNE, F.R.S. —CONSIDERATIONS CONCERNING THE PROBABLE EFFECTS OF EARTHQUAKES ON WATER-WORKS, AND THE SPECIAL PRECAUTIONS TO BE TAKEN IN EARTHQUAKE COUNTRIES.

"The chapter upon filtration of water is very complete, and the details of construction well illustrated. . . . The work should be specially valuable to civil engineers engaged in work in Japan, but the interest is by no means confined to that locality."—*Engineer.*

"We congratulate the author upon the practical commonsense shown in the preparation of this work. . . . The plates and diagrams have evidently been prepared with great care, and cannot fail to be of great assistance to the student."—*Builder.*

"The whole art of waterworks construction is dealt with in a clear and comprehensive fashion in this handsome volume. . . . Mr. Burton's practical treatise shows in all its sections the fruit of independent study and individual experience. It is largely based upon his own practice in the branch of engineering of which it treats."—*Saturday Review.*

The Water-Supply of Cities and Towns.

THE WATER SUPPLY OF CITIES AND TOWNS (A Comprehensive Treatise on). By WILLIAM HUMBER, A.-M.Inst.C.E., and M.Inst.M.E., Author of "Cast and Wrought Iron Bridge Construction," &c. &c. Illustrated with 50 Double Plates, 1 Single Plate, Coloured Frontispiece, and upwards of 250 Woodcuts, and containing 400 pages of Text. Imp. 4to, £6 6*s.* elegantly and substantially half-bound in morocco.

LIST OF CONTENTS.

I. HISTORICAL SKETCH OF SOME OF THE MEANS THAT HAVE BEEN ADOPTED FOR THE SUPPLY OF WATER TO CITIES AND TOWNS.—II. WATER AND THE FOREIGN MATTER USUALLY ASSOCIATED WITH IT.—III. RAINFALL AND EVAPORATION.—IV. SPRINGS AND THE WATER-BEARING FORMATIONS OF VARIOUS DISTRICTS.—V. MEASUREMENT AND ESTIMATION OF THE FLOW OF WATER.—VI. ON THE SELECTION OF THE SOURCE OF SUPPLY.—VII. WELLS.—VIII. RESERVOIRS.—IX. THE PURIFICATION OF WATER.—X. PUMPS.—XI. PUMPING MACHINERY.—XII. CONDUITS.—XIII. DISTRIBUTION OF WATER.—XIV. METERS, SERVICE PIPES, AND HOUSE FITTINGS. XV. THE LAW AND ECONOMY OF WATER WORKS.—XVI. CONSTANT AND INTERMITTENT SUPPLY.—XVII. DESCRIPTION OF PLATES.—APPENDICES, GIVING TABLES OF RATES OF SUPPLY, VELOCITIES, &C. &C., TOGETHER WITH SPECIFICATIONS OF SEVERAL WORKS ILLUSTRATED, AMONG WHICH WILL BE FOUND: ABERDEEN, BIDEFORD, CANTERBURY, DUNDEE, HALIFAX, LAMBETH ROTHERHAM, DUBLIN, AND OTHERS.

"The most systematic and valuable work upon water supply hitherto produced in English, or in any other language. . . . Mr. Humber's work is characterised almost throughout by an exhaustiveness much more distinctive of French and German than of English technical treatises."—*Engineer.*

Water Supply.

RURAL WATER SUPPLY: A Practical Handbook on the Supply of Water and Construction of Waterworks for small Country Districts. By ALLAN GREENWELL, A.M.I.C.E., and W. T. CURRY, A.M.I.C.E., F.G.S. With Illustrations. Crown 8vo, 5*s.* cloth. [*Just published.*

"We conscientiously recommend it as a very useful book for those concerned in obtaining water for small districts, giving a great deal of practical information in a small compass."—*Builder.*

"The volume contains valuable information upon all matters connected with water supply. . . It is full of details on points which are continually before waterworks engineers."—*Nature.*

Hydraulic Tables.

HYDRAULIC TABLES, CO-EFFICIENTS, AND FORMULÆ for Finding the Discharge of Water from Orifices, Notches, Weirs, Pipes, and Rivers. With New Formulæ, Tables, and General Information on Rain-fall, Catchment-Basins, Drainage, Sewerage, Water Supply for Towns and Mill Power. By JOHN NEVILLE, Civil Engineer, M.R.I.A. Third Edition, carefully revised, with considerable Additions. Numerous Illustrations. Crown 8vo, 14*s.* cloth.

"It is, of all English books on the subject, the one nearest to completeness . . . . From the good arrangement of the matter, the clear explanations and abundance of formulæ, the carefully calculated tables, and, above all, the thorough acquaintance with both theory and construction, which is displayed from first to last, the book will be found to be an acquisition."—*Architect.*

Hydraulics.

HYDRAULIC MANUAL. Consisting of Working Tables and Explanatory Text. Intended as a Guide in Hydraulic Calculations and Field Operations. By LOWIS D'A. JACKSON, Author of "Aid to Survey Practice," "Modern Metrology," &c. Fourth Edition, Enlarged. Large crown 8vo, 16*s.* cloth.

"The author has had a wide experience in hydraulic engineering and has been a careful observer of the facts which have come under his notice, and from the great mass of material at his command he has constructed a manual which may be accepted as a trustworthy guide to this branch of the engineer's profession."—*Engineering.*

"The most useful feature of this work is its freedom from what is superannuated, and its thorough adoption of recent experiments; the text is in fact in great part a short account of the great modern experiments."—*Nature.*

Water Storage, Conveyance, and Utilisation.

WATER ENGINEERING: A Practical Treatise on the Measurement, Storage, Conveyance, and Utilisation of Water for the Supply of Towns, for Mill Power, and for other Purposes. By CHARLES SLAGG, A.-M.Inst.C.E. Second Edition. Crown 8vo, 7*s.* 6*d.* cloth.

"As a small practical treatise on the water supply of towns, and on some applications of water-power, the work is in many respects excellent."—*Engineering.*

"The author has collated the results deduced from the experiments of the most eminent authorities, and has presented them in a compact and practical form, accompanied by very clear and detailed explanations. . . The application of water as a motive power is treated very carefully and exhaustively."—*Builder.*

Construction of Masonry Dams.

MASONRY DAMS FROM INCEPTION TO COMPLETION. Including numerous Formulæ, Forms of Specification and Tender, Pocket Diagram of Forces, &c. For the use of Civil and Mining Engineers. By C. F. COURTNEY, M.Inst.C.E. 8vo, 9*s.* cloth. [*Just published.*

River Engineering.

RIVER BARS: The Causes of their Formation, and their Treatment by "Induced Tidal Scour;" with a Description of the Successful Reduction by this Method of the Bar at Dublin. By I. J. MANN, Assist. Eng. to the Dublin Port and Docks Board. Royal 8vo, 7*s.* 6*d.* cloth.

"We recommend all interested in harbour works—and, indeed, those concerned in the improvements of rivers generally—to read Mr. Mann's interesting work on the treatment of river bars."—*Engineer.*

Drainage.

DRAINAGE OF LANDS, TOWNS, AND BUILDINGS. By G. D. DEMPSEY, C.E. Revised, with large Additions on RECENT PRACTICE IN DRAINAGE ENGINEERING, by D. KINNEAR CLARK, M.Inst. C.E., Author of "Tramways: their Construction and Working." Fcap. 8vo, 4*s.* 6*d.* cloth.

"The new matter added to Mr. Dempsey's excellent work is characterised by the comprehensive grasp and accuracy of detail for which the name of Mr. D. K. Clark is a sufficient voucher."—*Athenæum.*

Tramways and their Working.

TRAMWAYS: THEIR CONSTRUCTION AND WORKING. Embracing a Comprehensive History of the System; with an exhaustive Analysis of the Various Modes of Traction, including Horse Power, Steam, Cable Traction, Electric Traction, &c.; a Description of the Varieties of Rolling Stock; and ample Details of Cost and Working Expenses. New Edition, Thoroughly Revised, and Including the Progress recently made in Tramway Construction, &c. &c. By D. KINNEAR CLARK, M.Inst. C.E. With 400 Illustrations. 8vo, 780 pages. Price 28*s.*, buckram. [*Just published.*

"Although described as a new edition, this book is really a new one, a large part of it, which covers historical ground, having been re-written and amplified; while the parts which relate to all that has been done since 1882 appear in this edition only. It is sixteen years since the first edition appeared, and twelve years since the supplementary volume to the first book was published. After a lapse, then, of twelve years, it is obvious that the author has at his disposal a vast quantity of descriptive and statistical information, with which he may, and has, produced a volume of great value to all interested in tramway construction and working. The new volume is one which will rank, among tramway engineers and those interested in tramway working, with his world-famed book on railway machinery."—*The Engineer,* March 8, 1895.

Student's Text-Book on Surveying.

PRACTICAL SURVEYING: A Text-Book for Students preparing for Examinations or for Survey-work in the Colonies. By GEORGE W. USILL, A.M.I.C.E. With 4 Plates and upwards of 330 Illustrations. Fourth Edition, Revised and Enlarged. Including Tables of Natural Sines, Tangents, Secants, &c. Crown 8vo, 7*s.* 6*d.* cloth; or, on THIN PAPER, bound in limp leather, gilt edges, rounded corners, for pocket use, price 12*s.* 6*d.*

"The best forms of instruments are described as to their construction, uses and modes of employment, and there are innumerable hints on work and equipment such as the author, in his experience as surveyor, draughtsman and teacher, has found necessary, and which the student in his inexperience will find most serviceable."—*Engineer.*

"The latest treatise in the English language on surveying, and we have no hesitation in saying that the student will find it a better guide than any of its predecessors. Deserves to be recognised as the first book which should be put in the hands of a pupil of Civil Engineering."—*Architect.*

Survey Practice.

AID TO SURVEY PRACTICE: for Reference in Surveying, Levelling, and Setting-out; and in Route Surveys of Travellers by Land and Sea. With Tables, Illustrations, and Records. By LOWIS D'A. JACKSON, A.M.I.C.E. Second Edition, Enlarged. Large crown 8vo, 12*s.* 6*d.* cloth.

"Mr. Jackson has produced a valuable *vade-mecum* for the surveyor. We can recommend this book as containing an admirable supplement to the teaching of the accomplished surveyor."—*Athenæum.*

"As a text-book we should advise all surveyors to place it in their libraries, and study well the matured instructions afforded in its pages."—*Colliery Guardian.*

"The author brings to his work a fortunate union of theory and practical experience which, aided by a clear and lucid style of writing, renders the book a very useful one."—*Builder.*

Engineers' Field-Book.

FIELD-BOOK FOR ENGINEERS, MINING SURVEYORS, &c. Consisting of a Series of Tables, with Rules, Explanations of Systems, and use of Theodolite for Traverse Surveying and Plotting the Work with minute accuracy by means of Straight Edge and Set Square only; Levelling with the Theodolite, Casting-out and Reducing Levels to Datum, and Plotting Sections in the ordinary manner; Setting-out Curves with the Theodolite by Tangential Angles and Multiples with Right and Left-hand Readings of the Instrument; Setting-out Curves without Theodolite on the System of Tangential Angles by Sets of Tangents and Offsets; and Earthwork Tables to 80 feet deep, calculated for every 6 inches in depth. By W. DAVIS HASKOLL, C.E. With numerous Woodcuts. Fourth Edition, Enlarged. Crown 8vo, 12*s.* cloth.

"The book is very handy; the separate tables of sines and tangents to every minute will make it useful for many other purposes, the genuine traverse tables existing all the same."—*Athenæum.*

"Every person engaged in engineering field operations will estimate the importance of such a work and the amount of valuable time which will be saved by reference to a set of reliable tables prepared with the accuracy and fulness of those given in this volume."—*Railway News.*

Surveying, Land and Marine.

LAND AND MARINE SURVEYING, in Reference to the Preparation of Plans for Roads and Railways; Canals, Rivers, Towns' Water Supplies; Docks and Harbours. With Description and Use of Surveying Instruments. By W. DAVIS HASKOLL, C.E., Author of "Bridge and Viaduct Construction," &c. Second Edition, Revised, with Additions. Large crown 8vo, 9*s.* cloth.

"This book must prove of great value to the student. We have no hesitation in recommending it, feeling assured that it will more than repay a careful study."—*Mechanical World.*

"A most useful and well arranged book for the aid of a student. We can strongly recommend it as a carefully-written and valuable text-book. It enjoys a well-deserved repute among surveyors."—*Builder.*

"This volume cannot fail to prove of the utmost practical utility. It may be safely recommended to all students who aspire to become clean and expert surveyors."—*Mining Journal.*

Levelling.

PRINCIPLES AND PRACTICE OF LEVELLING. Showing its Application to purposes of Railway and Civil Engineering in the Construction of Roads; with Mr. TELFORD'S Rules for the same. By FREDERICK W. SIMMS, F.G.S., M. Inst. C.E. Seventh Edition, with the addition of LAW'S Practical Examples for Setting-out Railway Curves, and TRAUTWINE'S Field Practice of Laying-out Circular Curves. With 7 Plates and numerous Woodcuts, 8vo, 8*s.* 6*d.* cloth. *** TRAUTWINE on CURVES may be had separate, 5*s.*

"The text-book on levelling in most of our engineering schools and colleges."—*Engineer.*

"The publishers have rendered a substantial service to the profession, especially to the younger members, by bringing out the present edition of Mr. Simms's useful work."—*Engineering.*

Trigonometrical Surveying.

AN OUTLINE OF THE METHOD OF CONDUCTING A TRIGONOMETRICAL SURVEY, for the Formation of Geographical and Topographical Maps and Plans, Military Reconnaissance, LEVELLING, &c., with Useful Problems, Formulæ, and Tables. By Lieut.-General FROME, R.E. Fourth Edition, Revised and partly Re-written by Major-General Sir CHARLES WARREN, G.C.M.G., R.E. With 19 Plates and 115 Woodcuts, royal 8vo, 16*s.* cloth.

"No words of praise from us can strengthen the position so well and so steadily maintained by this work. Sir Charles Warren has revised the entire work, and made such additions as were necessary to bring every portion of the contents up to the present date."—*Broad Arrow.*

Curves, Tables for Setting-out.

TABLES OF TANGENTIAL ANGLES AND MULTIPLES FOR SETTING-OUT CURVES from 5 to 200 Radius. By A. BEAZELEY, M. Inst. C.E. 4th Edition. Printed on 48 Cards, and sold in a cloth box, waistcoat-pocket size, 3*s.* 6*d.*

"Each table is printed on a small card, which, being placed on the theodolite, leaves the hands free to manipulate the instrument—no small advantage as regards the rapidity of work."—*Engineer.*

"Very handy: a man may know that all his day's work must fall on two of these cards, which he puts into his own card-case, and leaves the rest behind."—*Athenæum.*

Earthwork.

HANDY GENERAL EARTHWORK TABLES. Giving the Contents in Cubic Yards of Centre and Slopes of Cuttings and Embankments from 3 inches to 80 feet in Depth or Height, for use with either 66 feet Chain or 100 feet Chain. By J. H. WATSON BUCK, M. Inst. C.E. On a Sheet mounted in cloth case, 3*s.* 6*d.* [*Just published.*

Earthwork.

EARTHWORK TABLES. Showing the Contents in Cubic Yards of Embankments, Cuttings, &c., of Heights or Depths up to an average of 80 feet. By JOSEPH BROADBENT, C.E., and FRANCIS CAMPIN, C.E. Crown 8vo, 5*s.* cloth.

"The way in which accuracy is attained, by a simple division of each cross section into three elements, two in which are constant and one variable, is ingenious."—*Athenæum.*

Earthwork, Measurement of.

A MANUAL ON EARTHWORK. By ALEX. J. S. GRAHAM, C.E. With numerous Diagrams. Second Edition. 18mo, 2*s.* 6*d.* cloth.

Tunnel Shafts.

THE CONSTRUCTION OF LARGE TUNNEL SHAFTS: A Practical and Theoretical Essay. By J. H. WATSON BUCK, M.Inst.C.E., Resident Engineer, L. and N. W. R. With Folding Plates, 8vo, 12*s.* cloth.

"Many of the methods given are of extreme practical value to the mason, and the observations on the form of arch, the rules for ordering the stone, and the construction of the templates, will be found of considerable use. We commend the book to the engineering profession."—*Building News.*

"Will be regarded by civil engineers as of the utmost value, and calculated to save much time and obviate many mistakes."—*Colliery Guardian.*

Cast and Wrought Iron Bridge Construction.

CAST AND WROUGHT IRON BRIDGE CONSTRUCTION (A Complete and Practical Treatise on), including Iron Foundations. In Three Parts—Theoretical, Practical, and Descriptive. By WILLIAM HUMBER, A.-M.Inst.C.E., and M.Inst.M.E. Third Edition, revised and much improved, with 115 Double Plates (20 of which now first appear in this edition), and numerous Additions to the Text. In 2 vols., imp. 4to, £6 16*s.* 6*d.* half-bound in morocco.

"A very valuable contribution to the standard literature of civil engineering. In addition to elevations, plans, and sections, large scale details are given, which very much enhance the instructive worth of those illustrations."—*Civil Engineer and Architect's Journal.*

"Mr. Humber's stately volumes, lately issued—in which the most important bridges erected during the last five years, under the direction of the late Mr. Brunel, Sir W. Cubitt, Mr. Hawkshaw, Mr. Page, Mr. Fowler, Mr. Hemans, and others among our most eminent engineers, are drawn and specified in great detail."—*Engineer.*

Oblique Bridges.

ESSAY ON OBLIQUE BRIDGES (Practical and Theoretical). With 13 large Plates. By the late GEORGE WATSON BUCK, M.I.C.E. Fourth Edition, revised by his Son, J. H. WATSON BUCK, M.I.C.E.; and with the addition of Description to Diagrams for Facilitating the Construction of Oblique Bridges, by W. H. BARLOW, M.I.C.E. Royal 8vo, 12*s.* cloth.

"The standard text-book for all engineers regarding skew arches is Mr. Buck's treatise, and it would be impossible to consult a better."—*Engineer.*

"Mr. Buck's treatise is recognised as a standard text-book, and his treatment has divested the subject of many of the intricacies supposed to belong to it. As a guide to the engineer and architect, on a confessedly difficult subject, Mr. Buck's work is unsurpassed."—*Building News.*

Oblique Arches.

THE CONSTRUCTION OF OBLIQUE ARCHES (A Practical Treatise on). By JOHN HART. Third Edition, with Plates. Imperial 8vo, 8*s.* cloth.

Statics, Graphic and Analytic.

GRAPHIC AND ANALYTIC STATICS, in their Practical Application to the Treatment of Stresses in Roofs, Solid Girders, Lattice, Bowstring, and Suspension Bridges, Braced Iron Arches and Piers, and other Frameworks. By R. HUDSON GRAHAM, C.E. Containing Diagrams and Plates to Scale. With numerous Examples, many taken from existing Structures. Specially arranged for Class-work in Colleges and Universities. Second Edition, Revised and Enlarged. 8vo, 16*s.* cloth.

"Mr. Graham's book will find a place wherever graphic and analytic statics are used or studied."—*Engineer.*

"The work is excellent from a practical point of view, and has evidently been prepared with much care. The directions for working are ample, and are illustrated by an abundance of well-selected examples. It is an excellent text-book for the practical draughtsman."—*Athenæum.*

Girders, Strength of.

GRAPHIC TABLE for Facilitating the Computation of the Weights of Wrought Iron and Steel Girders, &c., for Parliamentary and other Estimates. By J. H. WATSON BUCK, M. Inst. C.E. On a Sheet, 2*s.* 6*d.*

Strains, Calculation of.

A HANDY BOOK FOR THE CALCULATION OF STRAINS in Girders and Similar Structures and their Strength. Consisting of Formulæ and Corresponding Diagrams, with numerous details for Practical Application, &c. By WILLIAM HUMBER, A.-M.Inst.C.E., &c. Fifth Edition. Crown 8vo, with nearly 100 Woodcuts and 3 Plates, *7s. 6d.* cloth.

"The formulæ are neatly expressed, and the diagrams good."—*Athenæum.*

"We heartily commend this really *handy* book to our engineer and architect readers."—*English Mechanic.*

Trusses.

TRUSSES OF WOOD AND IRON. Practical Applications of Science in Determining the Stresses, Breaking Weights, Safe Loads, Scantlings, and Details of Construction. With Complete Working Drawings. By WILLIAM GRIFFITHS, Surveyor, Assistant Master, Tranmere School of Science and Art. Oblong 8vo, *4s. 6d.* cloth.

"This handy little book enters so minutely into every detail connected with the construction of roof trusses that no student need be ignorant of these matters."—*Practical Engineer.*

Strains in Ironwork.

THE STRAINS ON STRUCTURES OF IRONWORK; with Practical Remarks on Iron Construction. By F. W. SHEILDS, M.I.C.E. 8vo, *5s.* cl.

Barlow's Strength of Materials, Enlarged by Humber.

A TREATISE ON THE STRENGTH OF MATERIALS; with Rules for application in Architecture, the Construction of Suspension Bridges, Railways, &c. By PETER BARLOW, F.R.S. A New Edition, revised by his Sons, P. W. BARLOW, F.R.S., and W. H. BARLOW, F.R.S.; to which are added, Experiments by HODGKINSON, FAIRBAIRN, and KIRKALDY; and Formulæ for Calculating Girders, &c. Arranged and Edited by WM. HUMBER, A.-M.Inst.C.E. Demy 8vo, 400 pp., with 19 large Plates and numerous Woodcuts, *18s.* cloth.

"Valuable alike to the student, tyro, and the experienced practitioner, it will always rank in future as it has hitherto done, as the standard treatise on that particular subject."—*Engineer.*

"As a scientific work of the first class, it deserves a foremost place on the bookshelves of every civil engineer and practical mechanic."—*English Mechanic.*

Cast Iron and other Metals, Strength of.

STRENGTH OF CAST IRON AND OTHER METALS. By THOMAS TREDGOLD, C.E. Fifth Edition, including HODGKINSON'S Experimental Researches. 8vo, *12s.* cloth.

Railway Working.

SAFE RAILWAY WORKING: A Treatise on Railway Accidents, their Cause and Prevention; with a Description of Modern Appliances and Systems. By CLEMENT E. STRETTON, C.E., Vice-President and Consulting Engineer, Amalgamated Society of Railway Servants. With Illustrations and Coloured Plates. Third Edition, Enlarged. Crown 8vo, *3s. 6d.* cloth.

"A book for the engineer, the directors, the managers; and, in short, all who wish for information on railway matters will find a perfect encyclopædia in 'Safe Railway Working.'"—*Railway Review.*

"We commend the remarks on railway signalling to all railway managers, especially where a uniform code and practice is advocated."—*Herepath's Railway Journal.*

"The author may be congratulated on having collected, in a very convenient form, much valuable information on the principal questions affecting the safe working of railways."—*Railway Engineer.*

Heat, Expansion by.

EXPANSION OF STRUCTURES BY HEAT. By JOHN KEILY, C.E., late of the Indian Public Works Department. Crown 8vo, *3s. 6d.* cloth.

"The aim the author has set before him, viz., to show the effects of heat upon metallic and other structures, is a laudable one, for this is a branch of physics upon which the engineer or architect can find but little reliable and comprehensive data in books."—*Builder.*

Field Fortification.

A TREATISE ON FIELD FORTIFICATION, The Attack of Fortresses, Military Mining, and Reconnoitring. By Professor Colonel I. S. MACAULAY. Sixth Edition, crown 8vo, with separate Atlas of 12 Plates, *12s.* cloth.

MR. HUMBER'S GREAT WORK ON MODERN ENGINEERING.

Complete in Four Volumes, imperial 4to, price £12 12s. half-morocco. Each volume sold separately as follows :—

RECORD OF THE PROGRESS OF MODERN ENGINEERING.

FIRST SERIES. Comprising Civil, Mechanical, Marine, Hydraulic, Railway, Bridge, and other Engineering Works, &c. By WILLIAM HUMBER, A.-M.Inst.C.E., &c. Imp. 4to, with 36 Double Plates, drawn to a large scale, Photographic Portrait of John Hawkshaw, C.E., F.R.S., &c., and copious descriptive Letterpress, Specifications, &c., £3 3s. half-morocco.

LIST OF THE PLATES AND DIAGRAMS.

VICTORIA STATION AND ROOF, L. B. & S. C. R. (8 PLATES): SOUTHPORT PIER (2 PLATES); VICTORIA STATION AND ROOF, L. C. & D. AND G. W. R. (6 PLATES); ROOF OF CREMORNE MUSIC HALL; BRIDGE OVER G. N. RAILWAY; ROOF OF STATION, DUTCH RHENISH RAIL (2 PLATES); BRIDGE OVER THE THAMES, WEST LONDON EXTENSION RAILWAY (5 PLATES); ARMOUR PLATES: SUSPENSION BRIDGE, THAMES (4 PLATES); THE ALLEN ENGINE; SUSPENSION BRIDGE, AVON (3 PLATES); UNDERGROUND RAILWAY (3 PLATES).

"Handsomely lithographed and printed. It will find favour with many who desire to preserve in a permanent form copies of the plans and specifications prepared for the guidance of the contractors for many important engineering works."—*Engineer.*

HUMBER'S PROGRESS OF MODERN ENGINEERING. SECOND SRRIES.

Imp. 4to, with 3 Double Plates, Photographic Portrait of Robert Stephenson, C.E., M.P., F.R.S., &c., and copious descriptive Letterpress, Specifications, &c., £3 3s. half-morocco.

LIST OF THE PLATES AND DIAGRAMS.

BIRKENHEAD DOCKS, LOW WATER BASIN (15 PLATES); CHARING CROSS STATION ROOF, C. C. RAILWAY (3 PLATES); DIGSWELL VIADUCT, GREAT NORTHERN RAILWAY; ROBBERY WOOD VIADUCT, GREAT NORTHERN RAILWAY; IRON PERMANENT WAY; CLYDACH VIADUCT; MERTHYR, TREDEGAR, AND ABERGAVENNY RAILWAY; EBBW VIADUCT, MERTHYR, TREDEGAR, AND ABERGAVENNY RAILWAY; COLLEGE WOOD VIADUCT, CORNWALL RAILWAY; DUBLIN WINTER PALACE ROOF (3 PLATES); BRIDGE OVER THE THAMES, L. C. and D. RAILWAY (6 PLATES); ALBERT HARBOUR, GREENOCK (4 PLATES).

"Mr. Humber has done the profession good and true service, by the fine collection of examples he has here brought before the profession and the public."—*Practical Mechanic's Journal.*

HUMBER'S PROGRESS OF MODERN ENGINEERING. THIRD SERIES.

Imp. 4to, with 40 Double Plates, Photographic Portrait of J. R. M'Clean, late Pres. Inst. C.E., and copious descriptive Letterpress, Specifications, &c., £3 3s. half-morocco.

LIST OF THE PLATES AND DIAGRAMS.

MAIN DRAINAGE, METROPOLIS.—*North Side.*—MAP SHOWING INTERCEPTION OF SEWERS; MIDDLE LEVEL SEWER (2 PLATES); OUTFALL SEWER, BRIDGE OVER RIVER LEA (3 PLATES); OUTFALL SEWER, BRIDGE OVER MARSH LANE, NORTH WOOLWICH RAILWAY, AND BOW AND BARKING RAILWAY JUNCTION; OUTFALL SEWER, BRIDGE OVER BOW AND BARKING RAILWAY (3 PLATES); OUTFALL SEWER, BRIDGE OVER EAST LONDON WATERWORKS' FEEDER (2 PLATES); OUTFALL SEWER RESERVOIR (2 PLATES); OUTFALL SEWER, TUMBLING BAY AND OUTLET; OUTFALL SEWER, PENSTOCKS. *South Side.*—OUTFALL SEWER, BERMONDSEY BRANCH (2 PLATES); OUTFALL SEWER, RESERVOIR AND OUTLET (4 PLATES); OUTFALL SEWER, FILTH HOIST; SECTIONS OF SEWERS (NORTH AND SOUTH SIDES).

THAMES EMBANKMENT.—SECTION OF RIVER WALL; STEAMBOAT PIER, WESTMINSTER (2 PLATES); LANDING STAIRS BETWEEN CHARING CROSS AND WATERLOO BRIDGES; YORK GATE (2 PLATES); OVERFLOW AND OUTLET AT SAVOY STREET SEWER (3 PLATES); STEAMBOAT PIER, WATERLOO BRIDGE (3 PLATES); JUNCTION OF SEWERS, PLANS AND SECTIONS; GULLIES, PLANS, AND SECTIONS; ROLLING STOCK; GRANITE AND IRON FORTS.

"The drawings have a constantly increasing value, and whoever desires to possess clear representations of the two great works carried out by our Metropolitan Board will obtain Mr. Humber's volume."—*Engineer.*

HUMBER'S PROGRESS OF MODERN ENGINEERING. FOURTH SERIES.

Imp. 4to, with 36 Double Plates, Photographic Portrait of John Fowler, late Pres. Inst. C.E., and copious descriptive Letterpress, Specifications, &c., £3 3s. half-morocco.

LIST OF THE PLATES AND DIAGRAMS.

ABBEY MILLS PUMPING STATION, MAIN DRAINAGE, METROPOLIS (4 PLATES); BARROW DOCKS (5 PLATES); MANQUIS VIADUCT, SANTIAGO AND VALPARAISO RAILWAY (2 PLATES); ADAM'S LOCOMOTIVE, ST. HELEN'S CANAL RAILWAY (2 PLATES); CANNON STREET STATION ROOF, CHARING CROSS RAILWAY (3 PLATES); ROAD BRIDGE OVER THE RIVER MOKA (2 PLATES); TELEGRAPHIC APPARATUS FOR MESOPOTAMIA; VIADUCT OVER THE RIVER WYE, MIDLAND RAILWAY (3 PLATES); ST. GERMANS VIADUCT, CORNWALL RAILWAY (2 PLATES); WROUGHT-IRON CYLINDER FOR DIVING BELL; MILLWALL DOCKS (6 PLATES); MILROY'S PATENT EXCAVATOR; METROPOLITAN DISTRICT RAILWAY (6 PLATES); HARBOURS, PORTS, AND BREAKWATERS (3 PLATES).

"We gladly welcome another year's issue of this valuable publication from the able pen of Mr. Humber. The accuracy and general excellence of this work are well known, while its usefulness in giving the measurements and details of some of the latest examples of engineering, as carried out by the most eminent men in the profession, cannot be too highly prized."—*Artizan.*

THE POPULAR WORKS OF MICHAEL REYNOLDS

("THE ENGINE DRIVER'S FRIEND").

Locomotive-Engine Driving.

LOCOMOTIVE ENGINE DRIVING: A Practical Manual for Engineers in Charge of Locomotive Engines. By MICHAEL REYNOLDS, Member of the Society of Engineers, formerly Locomotive Inspector, L. B. and S. C. R. Ninth Edition. Including a KEY TO THE LOCOMOTIVE ENGINE. With Illustrations and Portrait of Author. Crown 8vo, 4*s.* 6*d.* cloth.

"Mr. Reynolds has supplied a want, and has supplied it well. We can confidently recommend the book not only to the practical driver, but to everyone who takes an interest in the performance of locomotive engines."—*The Engineer.*

"Mr. Reynolds has opened a new chapter in the literature of the day. This admirable practical treatise, of the practical utility of which we have to speak in terms of warm commendation."—*Athenæum.*

"Evidently the work of one who knows his subject thoroughly."—*Railway Service Gazette.*

"Were the cautions and rules given in the book to become part of the every-day working of our engine-drivers, we might have fewer distressing accidents to deplore."—*Scotsman.*

Stationary Engine Driving.

STATIONARY ENGINE DRIVING: A Practical Manual for Engineers in Charge of Stationary Engines. By MICHAEL REYNOLDS. Fifth Edition, Enlarged. With Plates and Woodcuts. Crown 8vo, 4*s.* 6*d.* cloth.

"The author is thoroughly acquainted with his subjects, and his advice on the various points treated is clear and practical. . . . . He has produced a manual which is an exceedingly useful one for the class for whom it is specially intended."—*Engineering.*

"Our author leaves no stone unturned. He is determined that his readers shall not only know something about the stationary engine, but all about it."—*Engineer.*

"An engineman who has mastered the contents of Mr. Reynolds's book will require but little actual experience with boilers and engines before he can be trusted to look after them."—*English Mechanic.*

The Engineer, Fireman, and Engine-Boy.

THE MODEL LOCOMOTIVE ENGINEER, Fireman, and Engine-Boy. Comprising a Historical Notice of the Pioneer Locomotive Engines and their Inventors. By MICHAEL REYNOLDS. Second Edition, with Revised Appendix. With numerous Illustrations, and Portrait of George Stephenson. Crown 8vo, 4*s.* 6*d.* cloth. [*Just published.*

"From the technical knowledge of the author, it will appeal to the railway man of to-day more forcibly than anything written by Dr. Smiles. . . . . The volume contains information of a technical kind, and facts that every driver should be familiar with."—*English Mechanic.*

"We should be glad to see this book in the possession of everyone in the kingdom who has ever laid, or is to lay, hands on a locomotive engine."—*Iron.*

Continuous Railway Brakes.

CONTINUOUS RAILWAY BRAKES: A Practical Treatise on the several Systems in Use in the United Kingdom: their Construction and Performance. With copious Illustrations and numerous Tables. By MICHAEL REYNOLDS. Large crown 8vo, 9*s.* cloth.

"A popular explanation of the different brakes. It will be of great assistance in forming public opinion, and will be studied with benefit by those who take an interest in the brake."—*English Mechanic.*

"Written with sufficient technical detail to enable the principal and relative connection of the various parts of each particular brake to be readily grasped."—*Mechanical World.*

Engine-Driving Life.

ENGINE-DRIVING LIFE: Stirring Adventures and Incidents in the Lives of Locomotive Engine-Drivers. By MICHAEL REYNOLDS. Third and Cheaper Edition. Crown 8vo, 1*s.* 6*d.* cloth.

"From first to last perfectly fascinating. Wilkie Collins's most thrilling conceptions are thrown into the shade by true incidents, endless in their variety, related in every page."—*North British Mail.*

"Anyone who wishes to get a real insight into railway life cannot do better than read 'Engine-Driving Life' for himself, and if he once takes it up he will find that the author's enthusiasm and real love of the engine-driving profession will carry him on till he has read every page."—*Saturday Review.*

Pocket Companion for Enginemen.

THE ENGINEMAN'S POCKET COMPANION and Practical Educator for Enginemen, Boiler Attendants, and Mechanics. By MICHAEL REYNOLDS. With Forty-five Illustrations and numerous Diagrams. Third Edition, Revised. Royal 18mo, 3*s.* 6*d.* strongly bound for pocket wear.

"This admirable work is well suited to accomplish its object, being the honest workmanship of a competent engineer."—*Glasgow Herald.*

"A most meritorious work, giving in a succinct and practical form all the information an engine-minder desirous of mastering the scientific principles of his daily calling would require."—*The Miller.*

"A boon to those who are striving to become efficient mechanics."—*Daily Chronicle.*

MARINE ENGINEERING, SHIPBUILDING, NAVIGATION, etc.

Pocket-Book for Naval Architects and Shipbuilders.

NAVAL ARCHITECT'S & SHIPBUILDER'S POCKET-BOOK of Formulæ, Rules, and Tables, and Marine Engineer's and Surveyor's Handy Book of Reference. By CLEMENT MACKROW, M.I.N.A. Sixth Edition, Revised, 700 pages, with 300 Illustrations. Fcap., 12*s.* 6*d.* leather.

SUMMARY OF CONTENTS.

SIGNS AND SYMBOLS, DECIMAL FRACTIONS.—TRIGONOMETRY.—PRACTICAL GEOMETRY.—MENSURATION.—CENTRES AND MOMENTS OF FIGURES.—MOMENTS OF INERTIA AND RADII OF GYRATION.—ALGEBRAICAL EXPRESSIONS FOR SIMPSON'S RULES.—MECHANICAL PRINCIPLES.—CENTRE OF GRAVITY.—LAWS OF MOTION.—DISPLACEMENT, CENTRE OF BUOYANCY.—CENTRE OF GRAVITY OF SHIP'S HULL.—STABILITY CURVES AND METACENTRES.—SEA AND SHALLOW-WATER WAVES.—ROLLING OF SHIPS.—PROPULSION AND RESISTANCE OF VESSELS.—SPEED TRIALS.—SAILING, CENTRE OF EFFORT.—DISTANCES DOWN RIVERS, COAST LINES.—STEERING AND RUDDERS OF VESSELS.—LAUNCHING CALCULATIONS AND VELOCITIES.—WEIGHT OF MATERIAL AND GEAR.—GUN PARTICULARS AND WEIGHT.—STANDARD GAUGES.—RIVETED JOINTS AND RIVETING.—STRENGTH AND TESTS OF MATERIALS.—BINDING AND SHEARING STRESSES, ETC.—STRENGTH OF SHAFTING, PILLARS, WHEELS, ETC.—HYDRAULIC DATA, ETC.—CONIC SECTIONS, CATENARIAN CURVES.—MECHANICAL POWERS, WORK.—BOARD OF TRADE REGULATIONS FOR BOILERS AND ENGINES.—BOARD OF TRADE REGULATIONS FOR SHIPS.—LLOYD'S RULES FOR BOILERS.—LLOYD'S WEIGHT OF CHAINS.—LLOYD'S SCANTLINGS FOR SHIPS.—DATA OF ENGINES AND VESSELS.—SHIPS' FITTINGS AND TESTS.—SEASONING PRESERVING TIMBER—MEASUREMENT OF TIMBER.—ALLOYS, PAINTS, VARNISHES.—DATA FOR STOWAGE.—ADMIRALTY TRANSPORT REGULATIONS.—RULES FOR HORSE-POWER, SCREW PROPELLERS, ETC.—PERCENTAGES FOR BUTT STRAPS, ETC.—PARTICULARS OF YACHTS.—MASTING AND RIGGING VESSELS.—DISTANCES OF FOREIGN PORTS.—TONNAGE TABLES.—VOCABULARY OF FRENCH AND ENGLISH TERMS.—ENGLISH WEIGHTS AND MEASURES.—FOREIGN WEIGHTS AND MEASURES.—DECIMAL EQUIVALENTS.—FOREIGN MONEY.—DISCOUNT AND WAGE TABLES.—USEFUL NUMBERS AND READY RECKONERS.—TABLES OF CIRCULAR MEASURES.—TABLES OF AREAS OF AND CIRCUMFERENCES OF CIRCLES.—TABLES OF AREAS OF SEGMENTS OF CIRCLES.—TABLES OF SQUARES AND CUBES AND ROOTS OF NUMBERS.—TABLES OF LOGARITHMS OF NUMBERS.—TABLES OF HYPERBOLIC LOGARITHMS.—TABLES OF NATURAL SINES, TANGENTS, ETC.—TABLES OF LOGARITHMIC SINES, TANGENTS, ETC.

"In these days of advanced knowledge a work like this is of the greatest value. It contains a vast amount of information. We unhesitatingly say that it is the most valuable compilation for its specific purpose that has ever been printed. No naval architect, engineer, surveyor, or seaman, wood or iron shipbuilder, can afford to be without this work."—*Nautical Magazine.*

"Should be used by all who are engaged in the construction or design of vessels. . . . Will be found to contain the most useful tables and formulæ required by shipbuilders, carefully collected from the best authorities, and put together in a popular and simple form. The book is one of exceptional merit."—*Engineer.*

"The professional shipbuilder has now, in a convenient and accessible form, reliable data for solving many of the numerous problems that present themselves in the course of his work."—*Iron.*

"There is no doubt that a pocket-book of this description must be a necessity in the shipbuilding trade. . . . The volume contains a mass of useful information clearly expressed and presented in a handy form."—*Marine Engineer.*

Marine Engineering.

MARINE ENGINES AND STEAM VESSELS: A Treatise on. By ROBERT MURRAY, C.E. Eighth Edition, thoroughly Revised, with considerable Additions by the Author and by GEORGE CARLISLE, C.E., Senior Surveyor to the Board of Trade at Liverpool. 12mo, 4*s.* 6*d.* cloth.

"Well adapted to give the young steamship engineer or marine engine and boiler maker a general introduction into his practical work."—*Mechanical World.*

"We feel sure that this thoroughly revised edition will continue to be as popular in the future as it has been in the past, as, for its size, it contains more useful information than any similar treatise."—*Industries.*

"The information given is both sound and sensible, and well qualified to direct young sea-going hands on the straight road to the extra chief's certificate. . . . Most useful to surveyors, inspectors, draughtsmen, and all young engineers who take an interest in their profession."—*Glasgow Herald.*

English-French Dictionary of Sea Terms.

SEA TERMS, PHRASES, AND WORDS (Technical Dictionary of) used in the English and French Languages. (English-French, French-English). For the Use of Seamen, Engineers, Pilots, Ship-builders, Shipowners and Ship-brokers. Compiled by W. PIRRIE, late of the African Steamship Company. Fcap. 8vo, 5*s.* cloth limp. [*Just published.*

"This volume will be highly appreciated by seamen, engineers, pilots, shipbuilders and shipowners. It will be found wonderfully accurate and complete."—*Scotsman.*

"A very useful dictionary, which has long been wanted by French and English engineers, masters, officers and others."—*Shipping World.*

Electric Lighting of Ships.

ELECTRIC SHIP LIGHTING: A Handbook on the Practical Fitting and Running of Ship's Electrical Plant, for the Use of Shipowners and Builders, Marine Electricians and Sea-going Engineers in Charge. By J. W. URQUHART, Author of "Electric Light," "Dynamo Construction," &c. With numerous Illustrations. Crown 8vo, 7*s.* 6*d.* cloth.

Pocket-Book for Marine Engineers.

MARINE ENGINEERS' POCKET-BOOK of useful Tables and Formulæ. By FRANK PROCTOR, A.I.N.A. Third Edition. Royal 32mo, leather, gilt edges, with strap, 4*s.*

"We recommend it to our readers as going far to supply a long-felt want."—*Naval Science.*

"A most useful companion to all marine engineers."—*United Service Gazette.*

Introduction to Marine Engineering.

ELEMENTARY ENGINEERING: A Manual for Young Marine Engineers and Apprentices. In the Form of Questions and Answers on Metals, Alloys, Strength of Materials, Construction and Management of Marine Engines and Boilers, Geometry, &c. &c. With an Appendix of Useful Tables. By JOHN SHERREN BREWER, Government Marine Surveyor, Hongkong. Third Edition, small crown 8vo, 1*s.* 6*d.* cloth.

"Contains much valuable information for the class for whom it is intended, especially in the chapters on the management of boilers and engines."—*Nautical Magazine.*

"A useful introduction to the more elaborate text books."—*Scotsman.*

"To a student who has the requisite desire and resolve to attain a thorough knowledge, Mr. Brewer offers decidedly useful help."—*Athenæum.*

Navigation.

PRACTICAL NAVIGATION. Consisting of THE SAILOR'S SEA-BOOK, by JAMES GREENWOOD and W. H. ROSSER; together with the requisite Mathematical and Nautical Tables for the Working of the Problems, by HENRY LAW, C.E., and Professor J. R. YOUNG. Illustrated. 12mo, 7*s.* strongly half-bound.

Drawing for Marine Engineers.

LOCKIE'S MARINE ENGINEER'S DRAWING-BOOK. Adapted to the Requirements of the Board of Trade Examinations. By JOHN LOCKIE, C.E. With 22 Plates, Drawn to Scale. Royal 8vo, 3*s.* 6*d.* cloth.

"The student who learns from these drawings will have nothing to unlearn."—*Engineer.*

"The examples chosen are essentially practical, and are such as should prove of service to engineers generally, while admirably fulfilling their specific purpose."—*Mechanical World.*

Sailmaking.

THE ART AND SCIENCE OF SAILMAKING. By SAMUEL B. SADLER, Practical Sailmaker, late in the employment of Messrs. Ratsey and Lapthorne, of Cowes and Gosport. With Plates and other Illustrations. Small 4to, 12*s.* 6*d.* cloth.

"This extremely practical work gives a complete education in all the branches of the manufacture, cutting out, roping, seaming, and goring. It is copiously illustrated, and will form a first-rate text-book and guide."—*Portsmouth Times.*

"The author of this work has rendered a distinct service to all interested in the art of sailmaking. The subject of which he treats is a congenial one. Mr. Sadler is a practical sailmaker, and has devoted years of careful observation and study to the subject; and the results of the experience thus gained he has set forth in the volume before us."—*Steamship.*

Chain Cables.

CHAIN CABLES AND CHAINS. Comprising Sizes and Curves of Links, Studs, &c., Iron for Cables and Chains, Chain Cable and Chain Making, Forming and Welding Links, Strength of Cables and Chains, Certificates for Cables, Marking Cables, Prices of Chain Cables and Chains, Historical Notes, Acts of Parliament, Statutory Tests, Charges for Testing, List of Manufacturers of Cables, &c. &c. By THOMAS W. TRAILL, F.E.R.N., M.Inst.C.E., Engineer-Surveyor-in-Chief, Board of Trade, Inspector of Chain Cable and Anchor Proving Establishments, and General Superintendent, Lloyd's Committee on Proving Establishments. With numerous Tables, Illustrations, and Lithographic Drawings. Folio, £2 2*s.* cloth, bevelled boards.

"It contains a vast amount of valuable information. Nothing seems to be wanting to make it a complete and standard work of reference on the subject."—*Nautical Magazine.*

MINING AND METALLURGY.

Colliery Management, &c.

COLLIERY WORKING AND MANAGEMENT: Comprising the Duties of a Colliery Manager, the Oversight and Arrangement of Labour and Wages, and the different Systems of Working Coal Seams. By H. F. BULMAN and R. A. S. REDMAYNE. 350 pages, with 28 Plates and other Illustrations, including Underground Photographs. Medium 8vo, 15*s.* cloth. [*Just published.*

"This is, indeed, an admirable Handbook for Colliery Managers, in fact, it is an indispensable adjunct to a Colliery Manager's education, as well as being a most useful and interesting work on the subject for all who in any way have to do with coal mining. The underground photographs are an attractive feature of the work, being very life-like and necessarily true representations of the scenes they depict."—*Colliery Guardian.*

"Mr. Bulman and Mr. Redmayne, who are both experienced Colliery Managers of great literary ability are to be congratulated on having supplied an authoritative work dealing with a side of the subject of coal mining which has hitherto received but scant treatment. The authors elucidate their text by 119 woodcuts and 28 plates, most of the latter being admirable reproductions of photographs taken underground with the aid of the magnesium flash-light. These illustrations are excellent."—*Nature.*

Inflammable Gases.

INFLAMMABLE GAS AND VAPOUR IN THE AIR (the Detection and Measurement of). By FRANK CLOWES, D.Sc., Lond., F.I.C., Prof. of Chemistry in the University College, Nottingham. With a Chapter on THE DETECTION AND MEASUREMENT OF PETROLEUM VAPOUR by BOVERTON REDWOOD, F.R.S.E., Consulting Adviser, to the Corporation of London under the Petroleum Acts. Crown 8vo, cloth, 5*s.* net. [*Just published.*

"Professor Clowes has given us a volume on a subject of much industrial importance. . . . those interested in these matters may be recommended to study this book, which is easy of comprehension and contains many good things."—*The Engineer.*

"A convenient summary of the work on which Professor Clowes has been engaged for some considerable time. . . It is hardly necessary to say that any work on these subjects with these names on the title-page must be a valuable one, and one that no mining engineer—certainly no coal miner—can afford to ignore or to leave unread."—*Mining Journal.*

Mining Machinery.

MACHINERY FOR METALLIFEROUS MINES: A Practical Treatise for Mining Engineers, Metallurgists and Managers of Mines. By E. HENRY DAVIES, M.E., F.G.S. Crown 8vo, 580 pp., with upwards of 300 Illustrations. 12*s.* 6*d.* cloth. [*Just published.*

"Mr. Davies, in this handsome volume, has done the advanced student and the manager of mines good service. Almost every kind of machinery in actual use is carefully described, and the woodcuts and plates are good."—*Athenæum.*

"From cover to cover the work exhibits all the same characteristics which excite the confidence and attract the attention of the student as he peruses the first page. The work may safely be recommended. By its publication the literature connected with the industry will be enriched, and the reputation of its author enhanced."—*Mining Journal.*

Metalliferous Minerals and Mining.

METALLIFEROUS MINERALS AND MINING. By D. C. DAVIES, F.G.S., Mining Engineer, &c., Author of "A Treatise on Slate and Slate Quarrying." Fifth Edition, thoroughly Revised and much Enlarged by his Son, E. HENRY DAVIES, M.E., F.G.S. With about 150 Illustrations. Crown 8vo, 12*s.* 6*d.* cloth.

"Neither the practical miner nor the general reader, interested in mines, can have a better book for his companion and his guide."—*Mining Journal.*

"We are doing our readers a service in calling their attention to this valuable work."—*Mining World.*

"As a history of the present state of mining throughout the world this book has a real value, and it supplies an actual want."—*Athenæum.*

Earthy Minerals and Mining.

EARTHY AND OTHER MINERALS AND MINING. By D. C. DAVIES, F.G.S., Author of "Metalliferous Minerals," &c. Third Edition, Revised and Enlarged, by his Son, E. HENRY DAVIES, M.E., F.G.S. With about 100 Illustrations. Crown 8vo, 12*s.* 6*d.* cloth.

"We do not remember to have met with any English work on mining matters that contains the same amount of information packed in equally convenient form."—*Academy.*

"We should be inclined to rank it as among the very best of the handy technical and trades manuals which have recently appeared."—*British Quarterly Review.*

Metalliferous Mining in the United Kingdom.

BRITISH MINING: A Treatise on the History, Discovery, Practical Development, and Future Prospects of Metalliferous Mines in the United Kingdom. By ROBERT HUNT, F.R.S., late Keeper of Mining Records. Upwards of 950 pp., with 230 Illustrations. Second Edition, Revised. Super-royal 8vo, £2 2*s.* cloth.

"The book is a treasure-house of statistical information on mining subjects, and we know of no other work embodying so great a mass of matter of this kind. Were this the only merit of Mr. Hunt's volume it would be sufficient to render it indispensable in the library of everyone interested in the development of the mining and metallurgical industries of this country."—*Athenæum.*

"A mass of information not elsewhere available, and of the greatest value to those who may be interested in our great mineral industries."—*Engineer.*

Underground Pumping Machinery.

MINE DRAINAGE: Being a Complete and Practical Treatise on Direct-Acting Underground Steam Pumping Machinery, with a Description of a large number of the best known Engines, their General Utility and the Special Sphere of their Action, the Mode of their Application, and their merits compared with other forms of Pumping Machinery. By STEPHEN MICHELL. 8vo, 15*s.* cloth.

"Will be highly esteemed by colliery owners and lessees, mining engineers, and students generally who require to be acquainted with the best means of securing the drainage of mines. It is a most valuable work, and stands almost alone in the literature of steam pumping machinery."—*Colliery Guardian.*

"Much valuable information is given, so that the book is thoroughly worthy of an extensive circulation amongst practical men and purchasers of machinery."—*Mining Journal.*

Prospecting for Gold and other Metals.

THE PROSPECTOR'S HANDBOOK: A Guide for the Prospector and Traveller in Search of Metal-Bearing or other Valuable Minerals. By J. W. ANDERSON, M.A. (Camb.), F.R.G.S., Author of "Fiji and New Caledonia." Seventh Edition, thoroughly Revised and much Enlarged. Small crown 8vo, 3*s.* 6*d.* cloth; or, 4*s.* 6*d.* leather, pocket-book form, with tuck. [*Just published.*

"Will supply a much felt want, especially among Colonists, in whose way are so often thrown many mineralogical specimens the value of which it is difficult to determine."—*Engineer.*

"How to find commercial minerals, and how to identify them when they are found, are the leading points to which attention is directed. The author has managed to pack as much practical detail into his pages as would supply material for a book three times its size."—*Mining Journal.*

Mining Notes and Formulæ.

NOTES AND FORMULÆ FOR MINING STUDENTS. By JOHN HERMAN MERIVALE, M.A., Certificated Colliery Manager, Professor of Mining in the Durham College of Science, Newcastle-upon-Tyne. Third Edition, Revised and Enlarged. Small crown 8vo, 2*s.* 6*d.* cloth.

"The author has done his work in a creditable manner, and has produced a book that will be of service to students, and those who are practically engaged in mining operations."—*Engineer.*

Handybook for Miners.

THE MINER'S HANDBOOK: A Handy Book of Reference on the subjects of Mineral Deposits, Mining Operations, Ore Dressing, &c. For the Use of Students and others interested in Mining matters. Compiled by JOHN MILNE, F.R.S., Professor of Mining in the Imperial University of Japan. Revised Edition. Fcap. 8vo, 7*s.* 6*d.* leather.

"Professor Milne's handbook is sure to be received with favour by all connected with mining, and will be extremely popular among students."—*Athenæum.*

Miners' and Metallurgists' Pocket-Book.

A POCKET-BOOK FOR MINERS AND METALLURGISTS. Comprising Rules, Formulæ, Tables, and Notes, for Use in Field and Office Work. By F. DANVERS POWER, F.G.S., M.E. Fcap. 8vo, 9*s.* leather.

"This excellent book is an admirable example of its kind, and ought to find a large sale amongst English-speaking prospectors and mining engineers."—*Engineering.*

Mineral Surveying and Valuing.

MINERAL SURVEYOR and VALUER'S COMPLETE GUIDE Comprising a Treatise on Improved Mining Surveying and the Valuation of Mining Properties, with New Traverse Tables. By WM. LINTERN. Third Edition, Enlarged. 12mo, 3*s.* 6*d.* cloth.

Colliery Management.

THE COLLIERY MANAGER'S HANDBOOK: A Comprehensive Treatise on the Laying-out and Working of Collieries, Designed as a Book of Reference for Colliery Managers, and for the Use of Coal-Mining Students preparing for First-class Certificates. By CALEB PAMELY, Mining Engineer and Surveyor; Member of the North of England Institute of Mining and Mechanical Engineers; and Member of the South Wales Institute of Mining Engineers. With nearly 700 Plans, Diagrams, and other Illustrations. Third Edition, Revised and Enlarged, medium 8vo, about 900 pp. Price £1 5*s.* strongly bound.

SUMMARY OF CONTENTS.

GEOLOGY.—SEARCH FOR COAL.—MINERAL LEASES AND OTHER HOLDINGS.—SHAFT SINKING.—FITTING UP THE SHAFT AND SURFACE ARRANGEMENTS.—STEAM BOILERS AND THEIR FITTINGS.—TIMBERING AND WALLING.—NARROW WORK AND METHODS OF WORKING.—UNDERGROUND CONVEYANCE.—DRAINAGE.—THE GASES MET WITH IN MINES; VENTILATION.—ON THE FRICTION OF AIR IN MINES.—THE PRIESTMAN OIL ENGINE; PETROLEUM AND NATURAL GAS.—SURVEYING AND PLANNING.—SAFETY LAMPS AND FIRE-DAMP DETECTORS.—SUNDRY AND INCIDENTAL OPERATIONS AND APPLIANCES.—COLLIERY EXPLOSIONS.—MISCELLANEOUS QUESTIONS AND ANSWERS.—*Appendix:* SUMMARY OF REPORT OF H.M. COMMISSIONERS ON ACCIDENTS IN MINES.

"Mr. Pamely has not only given us a comprehensive reference book of a very high order, suitable to the requirements of mining engineers and colliery managers, but has also provided mining students with a class-book that is as interesting as it is instructive."—*Colliery Manager.*

"Mr. Pamely's work is eminently suited to the purpose for which it is intended—being clear, interesting, exhaustive, rich in detail, and up to date, giving descriptions of the latest machines in every department. A mining engineer could scarcely go wrong who followed this work."—*Colliery Guardian.*

"This is the most complete 'all-round' work on coal-mining published in the English language. . . . No library of coal-mining books is complete without it."—*Colliery Engineer* (Scranton, Pa., U.S.A.).

Coal and Iron.

COAL & IRON INDUSTRIES OF THE UNITED KINGDOM. Comprising a Description of the Coal Fields, and of the Principal Seams of Coal, with Returns of their Produce and its Distribution, and Analyses of Special Varieties. Also, an Account of the occurrence of Iron Ores in Veins or Seams; Analyses of each Variety; and a History of the Rise and Progress of Pig Iron Manufacture. By RICHARD MEADE. 8vo, £1 8*s.* cloth.

"Of this book we may unreservedly say that it is the best of its class which we have ever met. . . . A book of reference which no one engaged in the iron or coal trades should omit from his library."—*Iron and Coal Trades' Review.*

Coal Mining.

COAL AND COAL MINING, A Rudimentary Treatise on. By the late Sir WARINGTON W. SMYTH, M.A., F.R.S., &c., Chief Inspector of the Mines of the Crown. Seventh Edition, Revised and Enlarged. With numerous Illustrations, 12mo, 3*s.* 6*d.* cloth.

"As an outline is given of every known coal-field in this and other countries, as well as of the principal methods of working, the book will doubtless interest a very large number of readers."—*Mining Journal.*

Asbestos and its Uses.

ASBESTOS: Its Properties, Occurrence, and Uses. With some Account of the Mines of Italy and Canada. By ROBERT H. JONES. With Eight Collotype Plates and other Illustrations. Crown 8vo, 12*s.* 6*d.* cloth.

"An interesting and invaluable work."—*Colliery Guardian.*

Subterraneous Surveying.

SUBTERRANEOUS SURVEYING, Elementary and Practical Treatise on; with and without the Magnetic Needle. By THOMAS FENWICK, Surveyor of Mines, and THOMAS BAKER, C.E. Illustrated. 12mo, 2*s.* 6*d.* cloth.

Granite Quarrying.

GRANITES AND OUR GRANITE INDUSTRIES. By GEORGE F. HARRIS, F.G.S., Membre de la Société Belge de Géologie, Lecturer on Economic Geology at the Birkbeck Institution, &c. With Illustrations. Crown 8vo, 2*s.* 6*d.* cloth.

"A clearly and well-written manual for persons engaged or interested in the granite industry."—*Scotsman.*

Gold, Metallurgy of.

THE METALLURGY OF GOLD: A Practical Treatise on the Metallurgical Treatment of Gold-bearing Ores. Including the Processes of Concentration, Chlorination, and Extraction by Cyanide, and the Assaying, Melting, and Refining of Gold. By M. EISSLER, Mining Engineer and Metallurgical Chemist, formerly Assistant Assayer of the U.S. Mint, San Francisco. Fourth Edition, Enlarged. With about 250 Illustrations and numerous Folding Plates and Working Drawings. Large crown 8vo, 16*s.* cloth. [*Just published.*

"This book thoroughly deserves its title of a 'Practical Treatise.' The whole process of gold milling, from the breaking of the quartz to the assay of the bullion, is described in clear and orderly narrative and with much, but not too much, fulness of detail."—*Saturday Review.*

"The work is a storehouse of information and valuable data, and we strongly recommend it to all professional men engaged in the gold-mining industry."—*Mining Journal.*

Gold Extraction.

THE CYANIDE PROCESS OF GOLD EXTRACTION; and its Practical Application on the Witwatersrand Gold Fields in South Africa. By M. EISSLER, M.E., Author of "The Metallurgy of Gold," &c. With Diagrams and Working Drawings. Large crown 8vo, 7*s.* 6*d.* cloth. [*Just published.*

"This book is just what was needed to acquaint mining men with the actual working of a process which is not only the most popular, but is, as a general rule, the most successful for the extraction of gold from tailings."—*Mining Journal.*

"The work will prove invaluable to all interested in gold mining, whether metallurgists or as investors."—*Chemical News.*

Silver, Metallurgy of.

THE METALLURGY OF SILVER: A Practical Treatise on the Amalgamation, Roasting, and Lixiviation of Silver Ores. Including the Assaying, Melting, and Refining of Silver Bullion. By M. EISSLER, Author of "The Metallurgy of Gold," &c. Third Edition. Crown 8vo, 10*s.* 6*d.* cloth.

"A practical treatise, and a technical work which we are convinced will supply a long felt want amongst practical men, and at the same time be of value to students and others indirectly connected with the industries."—*Mining Journal.*

"From first to last the book is thoroughly sound and reliable."—*Colliery Guardian.*

"For chemists, practical miners, assayers, and investors alike, we do not know of any work on the subject so handy and yet so comprehensive."—*Glasgow Herald.*

Lead, Metallurgy of.

THE METALLURGY OF ARGENTIFEROUS LEAD: A Practical Treatise on the Smelting of Silver-Lead Ores and the Refining of Lead Bullion. Including Reports on various Smelting Establishments and Descriptions of Modern Smelting Furnaces and Plants in Europe and America. By M. EISSLER, M.E., Author of "The Metallurgy of Gold," &c. Crown 8vo, 400 pp., with 183 Illustrations, 12*s.* 6*d.* cloth.

"The numerous metallurgical processes, which are fully and extensively treated of, embrace all the stages experienced in the passage of the lead from the various natural states to its issue from the refinery as an article of commerce."—*Practical Engineer.*

"The present volume fully maintains the reputation of the author. Those who wish to obtain a thorough insight into the present state of this industry cannot do better than read this volume, and all mining engineers cannot fail to find many useful hints and suggestions in it."—*Industries.*

Iron, Metallurgy of.

METALLURGY OF IRON. By H. BAUERMAN, F.G.S., A.R.S.M. Sixth Edition, Revised and Enlarged. 12mo, 5*s.* cloth.

Iron Mining.

THE IRON ORES OF GREAT BRITAIN AND IRELAND: Their Mode of Occurrence, Age and Origin, and the Methods of Searching for and Working Them. With a Notice of some of the Iron Ores of Spain. By J. D. KENDALL, F.G.S., Mining Engineer. Crown 8vo, 16*s.* cloth.

"The author has a thorough practical knowledge of his subject, and has supplemented a careful study of the available literature by unpublished information derived from his own observations. The result is a very useful volume which cannot fail to be of value to all interested in the iron industry of the country."—*Industries.*

ELECTRICITY, ELECTRICAL ENGINEERING, ETC.

Submarine Telegraphy.

SUBMARINE TELEGRAPHS: Their History, Construction and Working. By CHARLES BRIGHT, F.R.S.E. Super royal 8vo, about 600 pages, fully illustrated. [*In the press.*

[*To Subscribers before publication £2 2s. net; after publication the price will be raised to £3 3s. net.*]

Electrical Engineering.

THE ELECTRICAL ENGINEER'S POCKET-BOOK of Modern Rules, Formulæ, Tables, and Data. By H. R. KEMPE, M. Inst. E.E., A. M. Inst. C.E., Technical Officer, Postal Telegraphs, Author of "A Handbook of Electrical Testing," "The Engineer's Year-Book," &c. Second Edition, Thoroughly Revised, with Additions. With numerous Illustrations. Royal 32mo, oblong, 5*s.* leather.

"There is very little in the shape of formulæ or data which the electrician is likely to want in a hurry which cannot be found in its pages."—*Practical Engineer.*

"A very useful book of reference for daily use in practical electrical engineering and its various applications to the industries of the present day."—*Iron.*

"It is the best book of its kind."—*Electrical Engineer.*

"The Electrical Engineer's Pocket-Book is a good one."—*Electrician.*

"Strongly recommended to those engaged in the electrical industries."—*Electrical Review.*

Electric Lighting.

ELECTRIC LIGHT FITTING: A Handbook for Working Electrical Engineers, embodying Practical Notes on Installation Management. By J. W. URQUHART, Electrician, Author of "Electric Light," &c. With numerous Illusts. Second Edition, Revised, with Additional Chapters. Crown 8vo, 5*s.* cloth.

"This volume deals with what may be termed the mechanics of electric lighting, and is addressed to men who are already engaged in the work, or are training for it. The work traverses a great deal of ground, and may be read as a sequel to the same author's useful work on 'Electric Light.'"—*Electrician.*

"This is an attempt to state in the simplest language the precautions which should be adopted in installing the electric light, and to give information for the guidance of those who have to run the plant when installed. The book is well worth the perusal of the workman, for whom it is written."—*Electrical Review.*

"Eminently practical and useful. . . . . Ought to be in the hands of everyone in charge of an electric light plant."—*Electrical Engineer.*

Electric Light.

ELECTRIC LIGHT: Its Production and Use, Embodying Plain Directions for the Treatment of Dynamo-Electric Machines, Batteries, Accumulators, and Electric Lamps. By J. W. URQUHART, C.E., Author of "Electric Light Fitting," "Electroplating," &c. Fifth Edition, carefully Revised, with Large Additions and 145 Illustrations. Crown 8vo, 7*s.* 6*d.* cloth.

"The whole ground of electric lighting is more or less covered and explained in a very clear and concise manner."—*Electrical Review.*

"Contains a good deal of very interesting information, especially in the parts where the author gives dimensions and working costs."—*Electrical Engineer.*

"A *vade-mecum* of the salient facts connected with the science of electric lighting."—*Electrician.*

"You cannot for your purpose have a better book than 'Electric Light,' by Urquhart."—*Engineer.*

"The book is by far the best that we have yet met with on the subject."—*Athenæum.*

Construction of Dynamos.

DYNAMO CONSTRUCTION: A Practical Handbook for the Use of Engineer Constructors and Electricians-in-Charge. Embracing Framework Building, Field Magnet and Armature Winding and Grouping, Compounding, &c. With Examples of leading English, American, and Continental Dynamos and Motors. By J. W. URQUHART, Author of "Electric Light," &c. Second Edition, Enlarged. With 114 Illustrations. Crown 8vo, 7*s.* 6*d.* cloth.

"Mr. Urquhart's book is the first one which deals with these matters in such a way that the engineering student can understand them. The book is very readable, and the author leads his readers up to difficult subjects by reasonably simple tests."—*Engineering Review.*

"'Dynamo Construction' more than sustains the high character of the author's previous publications. It is sure to be widely read by the large and rapidly-increasing number of practical electricians."—*Glasgow Herald.*

"A book for which a demand has long existed."—*Mechanical World.*

Dynamo Management.

THE MANAGEMENT OF DYNAMOS: A Handybook of Theory and Practice for the Use of Mechanics, Engineers, Students and others in Charge of Dynamos. By G. W. LUMMIS PATERSON. With numerous Illustrations. Crown 8vo, 3*s.* 6*d.* cloth.

"An example which deserves to be taken as a model by other authors. The subject is treated in a manner which any intelligent man who is fit to be entrusted with charge of an engine should be able to understand. It is a useful book to all who make, tend or employ electric machinery."—*Architect.*

A New Dictionary of Electricity.

THE STANDARD ELECTRICAL DICTIONARY. A Popular Dictionary of Words and Terms Used in the Practice of Electrical Engineering. Containing upwards of 3,000 Definitions. By T. O'CONOR SLOANE, A.M., Ph.D. Crown 8vo, 630 pp., 350 Illustrations, 7*s.* 6*d.* cloth.

"The work has many attractive features in it, and is, beyond doubt, a well put together and useful publication. The amount of ground covered may be gathered from the fact that in the index about 5,000 references will be found."—*Electrical Review.*

Electric Lighting of Ships.

ELECTRIC SHIP-LIGHTING: A Handbook on the Practical Fitting and Running of Ship's Electrical Plant. For the Use of Shipowners and Builders, Marine Electricians, and Sea-going Engineers in Charge. By J. W. URQUHART, C.E. With 88 Illustrations, crown 8vo, 7*s.* 6*d.* cloth.

"The subject of ship electric lighting is one of vast importance, and Mr. Urquhart is to be highly complimented for placing such a valuable work at the service of marine electricians."—*The Steamship.*

Country House Electric Lighting.

ELECTRIC LIGHT FOR COUNTRY HOUSES: A Practical Handbook on the Erection and Running of Small Installations, with Particulars of the Cost of Plant and Working. By J. H. KNIGHT. Crown 8vo, 1*s.* wrapper.

"The book contains excellent advice and many practical hints for the help of those who wish to light their own houses."—*Building News.*

Electric Lighting.

ELEMENTARY PRINCIPLES OF ELECTRIC LIGHTING. By ALAN A. CAMPBELL SWINTON, Associate I.E.E. Third Edition, Enlarged and Revised. With Sixteen Illustrations. Crown 8vo, 1*s.* 6*d.* cloth.

"Anyone who desires a short and thoroughly clear exposition of the elementary principles of electric-lighting cannot do better than read this little work."—*Bradford Observer.*

Dynamic Electricity.

ELEMENTS OF DYNAMIC ELECTRICITY & MAGNETISM. By PHILIP ATKINSON, A.M., Ph.D., Author of "Elements of Static Electricity," &c. Crown 8vo, 417 pp., with 120 Illustrations, 10*s.* 6*d.* cloth.

Electric Motors, &c.

THE ELECTRIC TRANSFORMATION OF POWER and its Application by the Electric Motor, including Electric Railway Construction. By P. ATKINSON, A.M., Ph.D. With 96 Illustrations. Crown 8vo, 7*s.* 6*d.* cloth.

Dynamo Construction.

HOW TO MAKE A DYNAMO: A Practical Treatise for Amateurs. Containing numerous Illustrations and Detailed Instructions for Constructing a Small Dynamo to Produce the Electric Light. By ALFRED CROFTS. Fifth Edition, Revised and Enlarged. Crown 8vo, 2*s.* cloth. [*Just published.*

"The instructions given in this unpretentious little book are sufficiently clear and explicit to enable any amateur mechanic possessed of average skill and the usual tools to be found in an amateur's workshop, to build a practical dynamo machine."—*Electrician.*

Text-Book of Electricity.

THE STUDENT'S TEXT-BOOK OF ELECTRICITY. By H. M. NOAD, F.R.S. Cheaper Edition. 650 pp., with 470 Illustrations. Crown 8vo, 9*s.* cloth.

ARCHITECTURE, BUILDING, etc.

Building Construction.

PRACTICAL BUILDING CONSTRUCTION: A Handbook for Students Preparing for Examinations, and a Book of Reference for Persons Engaged in Building. By JOHN PARNELL ALLEN, Surveyor, Lecturer on Building Construction at the Durham College of Science, Newcastle-on-Tyne. Medium 8vo, 450 pages, with 1,000 Illustrations. 12*s.* 6*d.* cloth.

"The most complete exposition of building construction we have seen. It contains all that is necessary to prepare students for the various examinations in building construction."—*Building News.*

"The author depends nearly as much on his diagrams as on his type. The pages suggest the hand of a man of experience in building operations—and the volume must be a blessing to many teachers as well as to students."—*The Architect.*

"The work is sure to prove a formidable rival to great and small competitors alike, and bids fair to take a permanent place as a favourite students' text-book. The large number of illustrations deserve particular mention for the great merit they possess for purposes of reference, in exactly corresponding to convenient scales."—*Jour. Inst. Brit. Archts.*

Masonry.

PRACTICAL MASONRY: A Guide to the Art of Stone Cutting. Comprising the Construction, Setting-Out, and Working of Stairs, Circular Work, Arches, Niches, Domes, Pendentives, Vaults, Tracery Windows, &c. &c. For the Use of Students, Masons, and other Workmen. By WILLIAM R. PURCHASE, Building Inspector to the Town of Hove. Royal 8vo, 134 pages, with 50 Lithographic Plates, comprising nearly 400 separate Diagrams, 7*s.* 6*d.* cloth.

"Mr. Purchase's 'Practical Masonry' will undoubtedly be found useful to all interested in this important subject, whether theoretically or practically. Most of the examples given are from actual work carried out, the diagrams being carefully drawn. The book is a practical treatise on the subject, the author himself having commenced as an operative mason, and afterwards acted as foreman mason on many large and important buildings prior to the attainment of his present position. It should be found of general utility to architectural students and others, as well as to those to whom it is specially addressed."—*Journal of the Royal Institute of British Architects.*

"The author has evidently devoted much time and conscientious labour in the production of his book, which will be found very serviceable to students, masons, and other workmen, while its value is much enhanced by the capital illustrations, consisting of fifty lithographic plates, comprising about 400 diagrams."—*Illustrated Carpenter and Builder.*

Concrete.

CONCRETE: ITS NATURE AND USES. A Book for Architects, Builders, Contractors, and Clerks of Works. By GEORGE L. SUTCLIFFE, A.R.I.B.A. 350 pages, with numerous Illustrations. Crown 8vo, 7*s.* 6*d.* cloth.

"The author treats a difficult subject in a lucid manner. The manual fills a long felt gap. It is careful and exhaustive; equally useful as a student's guide and an architect's book of reference."—*Journal of Royal Institution of British Architects.*

"There is room for this new book, which will probably be for some time the standard work on the subject for a builder's purpose."—*Glasgow Herald.*

Mechanics for Architects.

THE MECHANICS OF ARCHITECTURE: A Treatise on Applied Mechanics, especially Adapted to the Use of Architects. By E. W. TARN, M.A., Author of "The Science of Building," &c. Second Edition, Enlarged. Illustrated with 125 Diagrams. Crown 8vo, 7*s.* 6*d.* cloth.

"The book is a very useful and helpful manual of architectural mechanics, and really contains sufficient to enable a careful and painstaking student to grasp the principles bearing upon the majority of building problems. . . . Mr. Tarn has added, by this volume, to the debt of gratitude which is owing to him by architectural students for the many valuable works which he has produced for their use."—*The Builder.*

"The mechanics in the volume are really mechanics, and are harmoniously wrought in with the distinctive professional matter proper to the subject. The diagrams and type are commendably clear."—*The Schoolmaster.*

The New Builder's Price Book, 1897.

LOCKWOOD'S BUILDER'S PRICE BOOK FOR 1897. A Comprehensive Handbook of the Latest Prices and Data for Builders, Architects, Engineers, and Contractors. Re-constructed, Re-written, and Greatly Enlarged. By FRANCIS T. W. MILLER. 800 closely-printed pages, crown 8vo, 4*s.* cloth.

"This book is a very useful one, and should find a place in every English office connected with the building and engineering professions."—*Industries.*

"An excellent book of reference."—*Architect.*

"In its new and revised form this Price Book is what a work of this kind should be—comprehensive, reliable, well arranged, legible, and well bound."—*British Architect.*

The New London Building Act.

THE LONDON BUILDING ACT, 1894. With the By-Laws and Regulations of the London County Council, and Introduction, Notes, Cases and Index. By ALEX. J. DAVID, B.A., LL.M., of the Inner Temple, Barrister-at-Law. Crown 8vo, 3*s.* 6*d.* cloth.

"To all architects and district surveyors and builders, Mr. David's manual will be welcome."—*Building News.*

"The volume will doubtless be eagerly consulted by the building fraternity."—*Illustrated Carpenter and Builder.*

Designing Buildings.

THE DESIGN OF BUILDINGS: Being Elementary Notes on the Planning, Sanitation and Ornamentive Formation of Structures, based on Modern Practice. Illustrated with Nine Folding Plates. By W. WOODLEY. 8vo, 6*s.* cloth.

Sir William Chambers's Treatise on Civil Architecture.

THE DECORATIVE PART OF CIVIL ARCHITECTURE. By Sir WILLIAM CHAMBERS, F.R.S. With Portrait, Illustrations, Notes, and an EXAMINATION OF GRECIAN ARCHITECTURE, by JOSEPH GWILT, F.S.A. Revised and Edited by W. H. LEEDS. 66 Plates, 4to, 21*s.* cloth.

Villa Architecture.

A HANDY BOOK OF VILLA ARCHITECTURE: Being a Series of Designs for Villa Residences in various Styles. With Outline Specifications and Estimates. By C. WICKES, Architect, Author of "The Spires and Towers of England," &c. 61 Plates, 4to, £1 11*s.* 6*d.* half-morocco, gilt edges.

"The whole of the designs bear evidence of their being the work of an artistic architect, and they will prove very valuable and suggestive."—*Building News.*

Text-Book for Architects.

THE ARCHITECT'S GUIDE: Being a Text-book of Useful Information for Architects, Engineers, Surveyors, Contractors, Clerks of Works, &c. &c. By FREDERICK ROGERS, Architect. Third Edition. Cr. 8vo, 3*s.* 6*d.* cloth.

"As a text-book of useful information for architects, engineers, surveyors, &c., it would be hard to find a handier or more complete little volume."—*Standard.*

Linear Perspective.

ARCHITECTURAL PERSPECTIVE. The whole Course and Operations of the Draughtsman in Drawing a Large House in Linear Perspective. Illustrated by 43 Folding Plates. By F. O. FERGUSON. Second Edition, Enlarged. 8vo, 3*s.* 6*d.* boards.

"It is the most intelligible of the treatises on this ill-treated subject that I have met with."—E. INGRESS BELL, ESQ., *in the R.I.B.A. Journal.*

Architectural Drawing.

PRACTICAL RULES ON DRAWING, for the Operative Builder and Young Student in Architecture. By GEORGE PYNE. 14 Plates, 4to, 7*s.*6*d.* bds.

Designing, Measuring, and Valuing.

MEASURING AND VALUING ARTIFICER'S WORK (The Student's Guide to the Practice of). Containing Directions for taking Dimensions, Abstracting the same, and bringing the Quantities into Bill, with Tables of Constants for Valuation of Labour, and for the Calculation of Areas and Solidities. Originally edited by E. DOBSON, Architect. With Additions by E. W. TARN, M.A. Sixth Edition. With 8 Plates and 63 Woodcuts. Crown 8vo, 7*s.* 6*d.* cloth.

"This edition will be found the most complete treatise on the principles of measuring and valuing artificers' work that has yet been published."—*Building News.*

Pocket Estimator and Technical Guide.

POCKET TECHNICAL GUIDE, MEASURER, & ESTIMATOR for Builders and Surveyors. Containing Technical Directions for Measuring Work in all the Building Trades, Complete Specifications for Houses, Roads, and Drains, and an Easy Method of Estimating the parts of a Building collectively. By A. C. BEATON. Eighth Edition. Waistcoat-pocket size, 1*s.* 6*d.* gilt edges.

"No builder, architect, surveyor, or valuer should be without his 'Beaton.'"—*Building News.*

Constructional Steel Work, &c.

CONSTRUCTIONAL IRON AND STEEL WORK. As Applied to Public, Private and Domestic Buildings. A Practical Treatise for Architects, Students and Builders. By F. CAMPIN. Crown 8vo, 3*s.* 6*d.* cloth. [*Just published.*

"Anyone who wants a book on ironwork, as employed in buildings for stanchions, columns and beams, will find the present volume to be suitable. The author has had long and varied experience in designing this class of work. The illustrations have the character of working drawings. This practical book may be counted a most valuable work."—*British Architect.*

Bartholomew and Rogers' Specifications.

SPECIFICATIONS FOR PRACTICAL ARCHITECTURE. A Guide to the Architect, Engineer, Surveyor, and Builder. With an Essay on the Structure and Science of Modern Buildings. Upon the Basis of the Work by ALFRED BARTHOLOMEW, thoroughly Revised, Corrected, and greatly added to by FREDERICK ROGERS, Architect. Third Edition, Revised. 8vo, 15*s.* cloth.

"The work is too well known to need any recommendation from us. It is one of the books with which every young architect must be equipped."—*Architect.*

Construction.

THE SCIENCE OF BUILDING: An Elementary Treatise on the Principles of Construction. By E. WYNDHAM TARN, M.A., Architect. Third Edition, Revised and Enlarged, with 59 Engravings. Fcap. 8vo, 4*s.* cloth.

"A very valuable book, which we strongly recommend to all students."—*Builder.*

House Building and Repairing.

THE HOUSE-OWNER'S ESTIMATOR; or, What will it Cost to Build, Alter, or Repair? A Price Book for Unprofessional People, as well as the Architectural Surveyor and Builder. By J. D. SIMON. Edited by F. T. W. MILLER, A.R.I.B.A. Fourth Edition. Crown 8vo, 3*s.* 6*d.* cloth.

"In two years it will repay its cost a hundred times over."—*Field.*

Building; Civil and Ecclesiastical.

A BOOK ON BUILDING, Civil and Ecclesiastical, including Church Restoration; with the Theory of Domes and the Great Pyramid, &c. By Sir EDMUND BECKETT, Bart., LL.D., F.R.A.S. Second Edit. Fcap. 8vo, 4*s.* 6*d.* cloth.

"A book which is always amusing and nearly always instructive."—*The Times.*

Sanitary Houses, etc.

THE SANITARY ARRANGEMENT OF DWELLING HOUSES: A Handbook for Householders and Owners of Houses. By A. J. WALLIS-TAYLER, A.M.Inst. C.E. With numerous Illustrations. Crown 8vo, 2*s.* 6*d.* cloth.

"This book will be largely read; it will be of considerable service to the public. It is well arranged, easily read, and for the most part devoid of technical terms."—*Lancet.*

Ventilation of Buildings.

VENTILATION. A Text-Book to the Practice of the Art of Ventilating Buildings. By W. P. BUCHAN, R.P. 12mo, 4*s* cloth.

"Contains a great amount of useful practical information, as thoroughly interesting as it is technically reliable."—*British Architect.*

The Art of Plumbing.

PLUMBING. A Text-Book to the Practice of the Art or Craft of the Plumber. By W. P. BUCHAN, R.P. Seventh Edition, Enlarged. Crown 8vo, 3*s.* 6*d.* cloth.

"A text book which may be safely put in the hands of every young plumber."—*Builder.*

Geometry for the Architect, Engineer, &c.

PRACTICAL GEOMETRY, for the Architect, Engineer, and Mechanic. Giving Rules for the Delineation and Application of various Geometrical Lines, Figures, and Curves. By E. W. TARN, M.A., Architect. 8vo, 9*s.* cloth.

"No book with the same objects in view has ever been published in which the clearness of the rules laid down and the illustrative diagrams have been so satisfactory."—*Scotsman.*

The Science of Geometry.

THE GEOMETRY OF COMPASSES; or, Problems Resolved by the mere Description of Circles, and the use of Coloured Diagrams and Symbols. By OLIVER BYRNE. Coloured Plates. Crown 8vo, 3*s.* 6*d.* cloth.

CARPENTRY, TIMBER, etc.

Tredgold's Carpentry, Revised and Enlarged by Tarn.

THE ELEMENTARY PRINCIPLES OF CARPENTRY: A Treatise on the Pressure and Equilibrium of Timber Framing, the Resistance of Timber, and the Construction of Floors, Arches, Bridges, Roofs, Uniting Iron and Stone with Timber, &c. To which is added an Essay on the Nature and Properties of Timber, &c., with Descriptions of the kinds of Wood used in Building; also numerous Tables of the Scantlings of Timber for different purposes, the Specific Gravities of Materials, &c. By THOMAS TREDGOLD, C.E. With an Appendix of Specimens of Various Roofs of Iron and Stone, Illustrated. Seventh Edition, thoroughly Revised and considerably Enlarged by E. WYNDHAM TARN, M.A., Author of "The Science of Building," &c. With 61 Plates, Portrait of the Author, and several Woodcuts. In One large Vol., 4to, 25*s.* cloth.

"Ought to be in every architect's and every builder's library."—*Builder.*

"A work whose monumental excellence must commend it wherever skilful carpentry is concerned. The author's principles are rather confirmed than impaired by time. The additional plates are of great intrinsic value."—*Building News.*

Woodworking Machinery.

WOODWORKING MACHINERY: Its Rise, Progress, and Construction. With Hints on the Management of Saw Mills and the Economical Conversion of Timber. Illustrated with Examples of Recent Designs by leading English, French, and American Engineers. By M. POWIS BALE, A.M.Inst.C.E., M.I.M.E. Second Edition, Revised, with large Additions, large crown 8vo, 440 pp., 9*s.* cloth.

"Mr. Bale is evidently an expert on the subject, and he has collected so much information that his book is all-sufficient for builders and others engaged in the conversion of timber."—*Architect.*

"The most comprehensive compendium of wood-working machinery we have seen. The author is a thorough master of his subject."—*Building News.*

Saw Mills.

SAW MILLS: Their Arrangement and Management, and the Economical Conversion of Timber. (A Companion Volume to "Woodworking Machinery.") By M. POWIS BALE, A.M.Inst.C.E. Second Edition, Revised. Crown 8vo, 10*s.* 6*d.* cloth. [*Just published.*

"The *administration* of a large sawing establishment is discussed, and the subject examined from a financial standpoint. Hence the size, shape, order, and disposition of saw-mills and the like are gone into in detail, and the course of the timber is traced from its reception to its delivery in its converted state. We could not desire a more complete or practical treatise."—*Builder.*

Nicholson's Carpentry.

THE CARPENTER'S NEW GUIDE; or, Book of Lines for Carpenters; comprising all the Elementary Principles essential for acquiring a knowledge of Carpentry. Founded on the late PETER NICHOLSON'S standard work. A New Edition, Revised by ARTHUR ASHPITEL, F.S.A. Together with Practical Rules on Drawing, by GEORGE PYNE. With 74 Plates, 4to, £1 1*s.* cloth.

Handrailing and Stairbuilding.

A PRACTICAL TREATISE ON HANDRAILING: Showing New and Simple Methods for Finding the Pitch of the Plank, Drawing the Moulds, Bevelling, Jointing-up, and Squaring the Wreath. By GEORGE COLLINGS. Second Edition, Revised and Enlarged, to which is added A TREATISE ON STAIR-BUILDING. With Plates and Diagrams. 12mo, 2*s.* 6*d.* cloth.

"Will be found of practical utility in the execution of this difficult branch of joinery."—*Builder.*

"Almost every difficult phase of this somewhat intricate branch of joinery is elucidated by the aid of plates and explanatory letterpress."—*Furniture Gazette.*

Circular Work.

CIRCULAR WORK IN CARPENTRY AND JOINERY: A Practical Treatise on Circular Work of Single and Double Curvature. By GEORGE COLLINGS. With Diagrams. Second Edition, 12mo, 2*s.* 6*d.* cloth.

"An excellent example of what a book of this kind should be. Cheap in price, clear in definition, and practical in the examples selected."—*Builder.*

Handrailing.

HANDRAILING COMPLETE IN EIGHT LESSONS. On the Square-Cut System. By J. S. GOLDTHORP, Teacher of Geometry and Building Construction at the Halifax Mechanic's Institute. With Eight Plates and over 150 Practical Exercises. 4to, 3*s.* 6*d.* cloth.

"Likely to be of considerable value to joiners and others who take a pride in good work. The arrangement of the book is excellent. We heartily commend it to teachers and students."—*Timber Trades Journal.*

Timber Merchant's Companion.

TIMBER MERCHANT'S and BUILDER'S COMPANION. Containing New and Copious Tables of the Reduced Weight and Measurement of Deals and Battens, of all sizes, from One to a Thousand Pieces, and the relative Price that each size bears per Lineal Foot to any given Price per Petersburgh Standard Hundred; the Price per Cube Foot of Square Timber to any given Price per Load of 50 Feet; the proportionate Value of Deals and Battens by the Standard, to Square Timber by the Load of 50 Feet; the readiest mode of ascertaining the Price of Scantling per Lineal Foot of any size, to any given Figure per Cube Foot, &c. &c. By WILLIAM DOWSING. Fourth Edition, Revised and Corrected. Crown 8vo, 3*s.* cloth.

"Everything is as concise and clear as it can possibly be made. There can be no doubt that every timber merchant and builder ought to possess it."—*Hull Advertiser.*

"We are glad to see a fourth edition of these admirable tables, which for correctness and simplicity of arrangement leave nothing to be desired."—*Timber Trades' Journal.*

Practical Timber Merchant.

THE PRACTICAL TIMBER MERCHANT: Being a Guide for the use of Building Contractors, Surveyors, Builders, &c., comprising useful Tables for all purposes connected with the Timber Trade, Marks of Wood, Essay on the Strength of Timber, Remarks on the Growth of Timber, &c. By W. RICHARDSON. Second Edition. Fcap. 8vo, 3*s.* 6*d.* cloth.

"This handy manual contains much valuable information for the use of timber merchants, builders, foresters, and all others connected with the growth, sale, and manufacture of timber."—*Journal of Forestry*

Packing-Case Makers, Tables for.

PACKING-CASE TABLES; showing the number of Superficial Feet in Boxes or Packing-Cases, from six inches square and upwards. By W. RICHARDSON, Timber Broker. Third Edition. Oblong 4to, 3*s.* 6*d.* cloth.

"Invaluable labour-saving tables."—*Ironmonger.* "Will save much labour and calculation."—*Grocer*

Superficial Measurement.

TRADESMAN'S GUIDE to SUPERFICIAL MEASUREMENT. Tables calculated from 1 to 200 inches in length, by 1 to 108 inches in breadth. For the use of Architects, Surveyors, Engineers, Timber Merchants, Builders, &c. By JAMES HAWKINGS. Fourth Edition. Fcap., 3*s.* 6*d.* cloth.

"A useful collection of tables to facilitate rapid calculation of surfaces. The exact area of any surface of which the limits have been ascertained can be instantly determined. The book will be found of the greatest utility to all engaged in building operations."—*Scotsman.*

"These tables will be found of great assistance to all who require to make calculations in superficial measurement."—*English Mechanic.*

Forestry.

THE ELEMENTS OF FORESTRY. Designed to afford Information concerning the Planting and Care of Forest Trees for Ornament or Profit, with suggestions upon the Creation and Care of Woodlands. By F. B. HOUGH. Large crown 8vo, 10*s.* cloth.

Timber Importer's Guide.

THE TIMBER IMPORTER'S, TIMBER MERCHANT'S, and Builder's Standard Guide. By RICHARD E. GRANDY. Comprising:—An Analysis of Deal Standards, Home and Foreign, with Comparative Values and Tabular Arrangements for fixing Net Landed Cost on Baltic and North American Deals, including all intermediate Expenses, Freight, Insurance, &c. &c.; together with copious Information for the Retailer and Builder. Third Edition, Revised. 12mo, 2*s.* cloth.

"Everything it pretends to be: built up gradually, it leads one from a forest to a treenail, and throws in as a makeweight, a host of material concerning bricks, columns, cisterns, &c."—*English Mechanic.*

DECORATIVE ARTS, etc.

Woods and Marbles, Imitation of.

SCHOOL OF PAINTING FOR THE IMITATION OF WOODS AND MARBLES, as Taught and Practised by A. R. VAN DER BURG and P. VAN DER BURG, Directors of the Rotterdam Painting Institution. Royal folio, 18½ by 12½ in., Illustrated with 24 full-size Coloured Plates; also 12 plain Plates, comprising 154 Figures. Second and Cheaper Edition. Price £1 11*s.* 6*d.*

LIST OF PLATES.

VARIOUS TOOLS REQUIRED FOR WOOD PAINTING.—2, 3. WALNUT; PRELIMINARY STAGES OF GRAINING AND FINISHED SPECIMEN.—4. TOOLS USED FOR MARBLE PAINTING AND METHOD OF MANIPULATION.—5, 6. ST. REMI MARBLE; EARLIER OPERATIONS AND FINISHED SPECIMEN.—7. METHODS OF SKETCHING DIFFERENT GRAINS, KNOTS, &C.—8, 9, ASH: PRELIMINARY STAGES AND FINISHED SPECIMEN.—10. METHODS OF SKETCHING MARBLE GRAINS.—11, 12. BRECHE MARBLE; PRELIMINARY STAGES OF WORKING AND FINISHED SPECIMEN.—13. MAPLE; METHODS OF PRODUCING THE DIFFERENT GRAINS.—14, 15. BIRD'S-EYE MAPLE; PRELIMINARY STAGES AND FINISHED SPECIMEN.—16. METHODS OF SKETCHING THE DIFFERENT SPECIES OF WHITE MARBLE.—17, 18. WHITE MARBLE; PRELIMINARY STAGES OF PROCESS AND FINISHED SPECIMEN.—19. MAHOGANY; SPECIMENS OF VARIOUS GRAINS AND METHODS OF MANIPULATION.—20, 21. MAHOGANY; EARLIER STAGES AND FINISHED SPECIMEN.—22, 23, 24. SIENNA MARBLE; VARIETIES OF GRAIN, PRELIMINARY STAGES AND FINISHED SPECIMEN.—25, 26, 27. JUNIPER WOOD; METHODS OF PRODUCING GRAIN, &C.; PRELIMINARY STAGES AND FINISHED SPECIMEN.—28, 29 30. VERT DE MER MARBLE; VARIETIES OF GRAIN AND METHODS OF WORKING, UNFINISHED AND FINISHED SPECIMENS.—31, 32, 33. OAK; VARIETIES OF GRAIN, TOOLS EMPLOYED AND METHODS OF MANIPULATION, PRELIMINARY STAGES AND FINISHED SPECIMEN.—34, 35, 36, WAULSORT MARBLE; VARIETIES OF GRAIN, UNFINISHED AND FINISHED SPECIMENS.

"Those who desire to attain skill in the art of painting woods and marbles will find advantage in consulting this book. . . . Some of the Working Men's Clubs should give their young men the opportunity to study it."—*Builder.*

"A comprehensive guide to the art. The explanations of the processes, the manipulation and management of the colours, and the beautifully executed plates will not be the least valuable to the student who aims at making his work a faithful transcript of nature."—*Building News.*

"Students and novices are fortunate who are able to become the possessors of so noble a work."—*The Architect.*

House Decoration.

ELEMENTARY DECORATION: A Guide to the Simpler Forms of Everyday Art. Together with PRACTICAL HOUSE DECORATION. By JAMES W. FACEY. With numerous Illustrations. In One Vol., 5*s.* strongly half-bound.

House-Painting, Graining, etc.

HOUSE-PAINTING, GRAINING, MARBLING, AND SIGN WRITING, A Practical Manual of. By ELLIS A. DAVIDSON. Seventh Edition. With Coloured Plates and Wood Engravings. 12mo, 6*s.* cloth boards.

"A mass of information, of use to the amateur and of value to the practical man."—*English Mechanic.*

Decorators, Receipts for.

THE DECORATOR'S ASSISTANT: A Modern Guide for Decorative Artists and Amateurs, Painters, Writers, Gilders, &c. Containing upwards of 600 Receipts, Rules and Instructions; with a variety of Information for General Work connected with every Class of Interior and Exterior Decorations, &c., Sixth Edition. 152 pp., crown 8vo, 1*s.* in wrapper.

"Full of receipts of value to decorators, painters, gilders, &c. The book contains the gist of larger treatises on colour and technical processes. It would be difficult to meet with a work so full of varied information on the painter's art."—*Building News.*

British and Foreign Marbles.

MARBLE DECORATION and the Terminology of British and Foreign Marbles. A Handbook for Students. By GEORGE H. BLAGROVE, Author of "Shoring and its Application," &c. With 28 Illustrations. Crown 8vo, 3*s.* 6*d.* cloth.

"This most useful and much wanted handbook should be in the hands of every architect and builder."—*Building World.*

"A carefully and usefully written treatise; the work is essentially practical."—*Scotsman.*

DELAMOTTE'S WORKS ON ILLUMINATION AND ALPHABETS.

A PRIMER OF THE ART OF ILLUMINATION, for the Use of Beginners; with a Rudimentary Treatise on the Art, Practical Directions for its Exercise, and Examples taken from Illuminated MSS., printed in Gold and Colours. By F. DELAMOTTE. New and Cheaper Edition. Small 4to, 6*s.* ornamental boards.

"The examples of ancient MSS. recommended to the student, which, with much good sense, the author chooses from collections accessible to all, are selected with judgment and knowledge, as well as taste."—*Athenæum.*

ORNAMENTAL ALPHABETS, Ancient and Mediæval, from the Eighth Century, with Numerals; including Gothic, Church-Text, large and small, German, Italian, Arabesque, Initials for Illumination, Monograms, Crosses, &c. &c., for the use of Architectural and Engineering Draughtsmen, Missal Painters, Masons, Decorative Painters, Lithographers, Engravers, Carvers, &c. &c. Collected and Engraved by F. DELAMOTTE, and printed in Colours. New and Cheaper Edition. Royal 8vo, oblong, 2*s.* 6*d.* ornamental boards.

"For those who insert enamelled sentences round gilded chalices, who blazon shop legends over shop-doors, who letter church walls with pithy sentences from the Decalogue, this book will be useful."—*Athenæum.*

EXAMPLES OF MODERN ALPHABETS, Plain and Ornamental, including German, Old English, Saxon, Italic, Perspective, Greek, Hebrew, Court Hand, Engrossing, Tuscan, Riband, Gothic, Rustic, and Arabesque; with several Original Designs, and an Analysis of the Roman and Old English Alphabets, large and small, and Numerals, for the use of Draughtsmen, Surveyors, Masons, Decorative Painters, Lithographers, Engravers, Carvers, &c. Collected and Engraved by F. DELAMOTTE, and printed in Colours. New and Cheaper Edition. Royal 8vo, oblong, 2*s.* 6*d.* ornamental boards.

"There is comprised in it every possible shape into which the letters of the alphabet and numerals can be formed, and the talent which has been expended in the conception of the various plain and ornamental letters is wonderful."—*Standard.*

MEDIÆVAL ALPHABETS & INITIALS FOR ILLUMINATORS. By F. G. DELAMOTTE. Containing 21 Plates and Illuminated Title, printed in Gold and Colours. With an Introduction by J. WILLIS BROOKS. Fourth and Cheaper Edition. Small 4to, 4*s.* ornamental boards.

"A volume in which the letters of the alphabet come forth glorified in gilding and all the colours of the prism interwoven and intertwined and intermingled."—*Sun.*

THE EMBROIDERER'S BOOK OF DESIGN. Containing Initials, Emblems, Cyphers, Monograms, Ornamental Borders, Ecclesiastical Devices, Mediæval and Modern Alphabets, and National Emblems. Collected by F. DELAMOTTE, and printed in Colours. Oblong royal 8vo, 1*s.* 6*d.* ornamental wrapper.

"The book will be of great assistance to ladies and young children who are endowed with the art of plying the needle in this most ornamental and useful pretty work."—*East Anglian Times.*

Wood Carving.

INSTRUCTIONS IN WOOD-CARVING FOR AMATEURS; with Hints on Design. By A LADY. With Ten Plates. New and Cheaper Edition. Crown 8vo, 2*s.* in emblematic wrapper.

"The handicraft of the wood-carver, so well as a book can impart it, may be learnt from 'A Lady's publication."—*Athenæum.*

Painting, Fine Art.

PAINTING POPULARLY EXPLAINED. By THOMAS JOHN GULLICK, Painter, and JOHN TIMBS, F.S.A. Including Fresco, Oil, Mosaic, Water Colour, Water-Glass, Tempera, Encaustic, Miniature, Painting on Ivory, Vellum, Pottery, Enamel, Glass, &c. Fifth Edition. Crown 8vo, 5*s.* cloth.

*** *Adopted as a Prize book at South Kensington.*

"Much may be learned, even by those who fancy they do not require to be taught, from the careful perusal of this unpretending but comprehensive treatise."—*Art Journal.*

NATURAL SCIENCE, etc.

The Heavens and their Origin.

THE VISIBLE UNIVERSE: Chapters on the Origin and Construction of the Heavens. By J. E. GORE, F.R.A.S., Author of "Star Groups," &c. Illustrated by 6 Stellar Photographs and 12 Plates. Demy 8vo, 16*s.* cloth.

"A valuable and lucid summary of recent astronomical theory, rendered more valuable and attractive by a series of stellar photographs and other illustrations."—*The Times.*

"In presenting a clear and concise account of the present state of our knowledge, Mr. Gore has made a valuable addition to the literature of the subject."—*Nature.*

"Mr. Gore's 'Visible Universe' is one of the finest works on astronomical science that has recently appeared in our language. In spirit and in method it is scientific from cover to cover, but the style is so clear and attractive that it will be as acceptable and as readable to those who make no scientific pretensions as to those who devote themselves specially to matters astronomical."—*Leeds Mercury.*

The Constellations.

STAR GROUPS: A Student's Guide to the Constellations. By J. ELLARD GORE, F.R.A.S., M.R.I.A., &c., Author of "The Visible Universe,' "The Scenery of the Heavens," &c. With 30 Maps. Small 4to, 5*s.* cloth.

"The volume contains thirty maps showing stars of the sixth magnitude—the usual naked-eye limit—and each is accompanied by a brief commentary, adapted to facilitate recognition and bring to notice objects of special interest. For the purpose of a preliminary survey of the 'midnight pomp' of the heavens, nothing could be better than a set of delineations averaging scarcely twenty square inches in area, and including nothing that cannot at once be identified."—*Saturday Review.*

Astronomical Terms.

AN ASTRONOMICAL GLOSSARY; or, Dictionary of Terms used in Astronomy. With Tables of Data and Lists of Remarkable and Interesting Celestial Objects. By J. ELLARD GORE, F.R.A.S., Author of "The Visible Universe," &c. Small crown 8vo, 2*s.* 6*d.* cloth.

"A very useful little work for beginners in astronomy, and not to be despised by more advanced students."—*The Times.*

"A very handy book . . . the utility of which is much increased by its valuable tables of astronomical data."—*Athenæum.*

The Microscope.

THE MICROSCOPE: Its Construction and Management. Including Technique, Photo-micrography, and the Past and Future of the Microscope. By Dr. HENRI VAN HEURCK. Re-Edited and Augmented from the Fourth French Edition, and Translated by WYNNE E. BAXTER, F.G.S. 400 pages, with upwards of 250 Woodcuts, imp. 8vo, 18*s.*, cloth.

"A translation of a well-known work, at once popular and comprehensive."—*Times.*

"The translation is as felicitous as it is accurate."—*Nature.*

The Microscope.

PHOTO-MICROGRAPHY. By Dr. H. VAN HEURCK. Extracted from the above Work. Royal 8vo, with Illustrations, 1*s.* sewed.

Astronomy.

ASTRONOMY. By the late Rev. ROBERT MAIN, M.A., F.R.S. Third Edition, Revised by WILLIAM THYNNE LYNN, B.A., F.R.A.S., formerly of the Royal Observatory, Greenwich. 12mo, 2*s.* cloth.

"A sound and simple treatise, very carefully edited, and a capital book for beginners."—*Knowledge.*

"Accurately brought down to the requirements of the present time by Mr. Lynn."—*Educational Times.*

Recent and Fossil Shells.

A MANUAL OF THE MOLLUSCA: Being a Treatise on Recent and Fossil Shells. By S. P. WOODWARD, A.L.S., F.G.S. With an Appendix on RECENT AND FOSSIL CONCHOLOGICAL DISCOVERIES by RALPH TATE, A.L.S., F.G.S. With 23 Plates and upwards of 300 Woodcuts. Reprint of Fourth Edition (1880). Crown 8vo, 7*s.* 6*d.* cloth.

"A most valuable storehouse of conchological and geological information."—*Science Gossip.*

Geology and Genesis.

THE TWIN RECORDS OF CREATION; or Geology and Genesis, their Perfect Harmony and Wonderful Concord. By G. W. V. LE VAUX. 8vo, 5*s.* cl.

'A valuable contribution to the evidences of Revelation, and disposes very conclusively of the arguments of those who would set God's Works against God's Word. No real difficulty is shirked, and no sophistry is left unexposed."—*The Rock.*

Mechanics.

HANDBOOK OF MECHANICS. By Dr. LARDNER. Enlarged and re-written by BENJAMIN LOEWY, F.R.A.S. 378 Illusts. Post 8vo, 6*s.* cloth.

"The perspicuity of the original has been retained, and chapters which had become obsolete have been replaced by others of more modern character. The explanations throughout are studiously popular, and care has been taken to show the application of the various branches of physics to the industrial arts, and to the practical business of life."—*Mining Journal.*

Hydrostatics, &c.

HANDBOOK OF HYDROSTATICS AND PNEUMATICS. By Dr. LARDNER. New Edition, Revised and Enlarged by BENJAMIN LOEWY, F.R.A.S. With 236 Illustrations. Post 8vo, 5*s.* cloth.

"For those 'who desire to attain an accurate knowledge of physical science without the profound methods of mathematical investigation,' this work is well adapted."—*Chemical News.*

Heat.

HANDBOOK OF HEAT. By Dr. LARDNER. Edited and re-written by BENJAMIN LOEWY, F.R.A.S., &c. 117 Illustrations. Post 8vo, 6*s.* cloth.

"The style is always clear and precise, and conveys instruction without leaving any cloudiness or lurking doubts behind."—*Engineering.*

Optics.

HANDBOOK OF OPTICS. By Dr. LARDNER. New Edition. Edited by T. OLVER HARDING, B.A. Lond. With 298 Illustrations. Small 8vo, 448 pages, 5*s.* cloth.

"Written by one of the ablest English scientific writers, beautifully and elaborately illustrated."—*Mechanic's Magazine.*

Electricity, &c.

HANDBOOK OF ELECTRICITY, MAGNETISM, and Acoustics. By Dr. LARDNER. Edited by GEO. CAREY FOSTER, B.A., F.C.S. With 400 Illustrations. Small 8vo, 5*s.* cloth.

"The book could not have been entrusted to anyone better calculated to preserve the terse and lucid style of Lardner, while correcting his errors and bringing up his work to the present state of scientific knowledge."—*Popular Science Review.*

Astronomy.

HANDBOOK OF ASTRONOMY. By Dr. LARDNER. Fourth Edition. Revised and Edited by EDWIN DUNKIN, F.R.A.S., Royal Observatory, Greenwich. With 38 Plates and upwards of 100 Woodcuts. 8vo, 9*s.* 6*d.* cloth.

"Probably no other book contains the same amount of information in so compendious and well-arranged a form—certainly none at the price at which this is offered to the public."—*Athenæum.*

"We can do no other than pronounce this work a most valuable manual of astronomy, and we strongly recommend it to all who wish to acquire a general—but at the same time correct—acquaintance with this sublime science."—*Quarterly Journal of Science.*

Cyclopædia of Science.

MUSEUM OF SCIENCE AND ART. Edited by Dr. LARDNER. With upwards of 1,200 Engravings on Wood. In Six Double Volumes, £1 1*s.* in a new and elegant cloth binding; or handsomely bound in half-morocco, 31*s.* 6*d.*

"A cheap and interesting publication, alike informing and attractive. The papers combine subjects of importance and great scientific knowledge, considerable inductive powers, and a popular style of treatment."—*Spectator.*

Separate books formed from the above.

Common Things Explained. 5*s.*
The Microscope. 2*s.* cloth.
Popular Geology. 2*s.* 6*d.* cloth.
Popular Physics. 2*s.* 6*d.* cloth.
Steam and its Uses. 2*s.* cloth.
Popular Astronomy. 4*s.* 6*d.* cloth.
The Bee and White Ants. 2*s.* cloth.
The Electric Telegraph. 1*s.* 6*d.*

NATURAL PHILOSOPHY FOR SCHOOLS. By Dr. LARDNER. Fcap. 8vo, 3*s.* 6*d.*

"A very convenient class-book for junior students in private schools."—*British Quarterly Review.*

ANIMAL PHYSIOLOGY FOR SCHOOLS. By Dr. LARDNER. Fcap. 8vo, 3*s.* 6*d.*

"Clearly written, well arranged, and excellently illustrated."—*Gardener's Chronicle.*

THE ELECTRIC TELEGRAPH. By Dr. LARDNER. Revised by E. B. BRIGHT, F.R.A.S. Fcap. 8vo, 2*s.* 6*d.* cloth.

"One of the most readable books extant on the Electric Telegraph."—*English Mechanic.*

CHEMICAL MANUFACTURES, CHEMISTRY, etc.

Water.

WATER AND ITS PURIFICATION. A Handbook for the Use of Local Authorities, Sanitary Officers, and others interested in Water Supply. By SAMUEL RIDEAL, D.Sc., Lond., F.I.C. With numerous Illustrations and Tables. Crown 8vo, 7*s.* 6*d.* cloth. [*Just published.*

Chemistry for Engineers, etc.

ENGINEERING CHEMISTRY: A Practical Treatise for the Use of Analytical Chemists, Engineers, Iron Masters, Iron Founders, Students and others. Comprising Methods of Analysis and Valuation of the Principal Materials used in Engineering Work, with numerous Analyses, Examples and Suggestions. By H. JOSHUA PHILLIPS, F.I.C., F.C.S., Formerly Analytical and Consulting Chemist to the Great Eastern Railway. Second Edition, Revised and Enlarged. Crown 8vo, 400 pp., with Illustrations, 10*s.* 6*d.* cloth.

"In this work the author has rendered no small service to a numerous body of practical men. . . . The analytical methods may be pronounced most satisfactory, being as accurate as the despatch required of engineering chemists permits."—*Chemical News.*

"Those in search of a handy treatise on the subject of analytical chemistry as applied to the every-day requirements of workshop practice will find this volume of great assistance."—*Iron.*

"The book will be very useful to those who require a handy and concise *résumé* of approved methods of analysing and valuing metals, oils, fuels, &c. It is, in fact, a work for chemists, a guide to the routine of the engineering laboratory. . . . The book is full of good things. As a handbook of technical analysis, it is very welcome."—*Builder.*

"The analytical methods given are, as a whole, such as are likely to give rapid and trustworthy results in experienced hands. . . . There is much excellent descriptive matter in the work, the chapter on 'Oils and Lubrication' being specially noticeable in this respect."—*Engineer.*

Nitro-Explosives.

NITRO-EXPLOSIVES. A Practical Treatise concerning the Properties, Manufacture, and Analysis of Nitrated Substances, including the Fulminates, Smokeless Powders and Celluloid. By P. GERALD SANFORD, F.I.C. Consulting Chemist to the Cotton Powder Company, Limited, &c. With Illustrations. Crown 8vo, 9*s.* cloth. [*Just published.*

"Anyone having the requisite apparatus and materials could make nitro-glycerine or gun-cotton, to say nothing of other explosives, by the aid of the instructions contained in this volume. This is one of the very few text-books in which can be found just what is wanted. Mr. Sanford goes steadily through the whole list of explosives commonly used, he names any given explosive and tells us of what it is composed and how it is manufactured. The book is excellent throughout."—*The Engineer.*

"A good straightforward treatise on an important subject. Mr. Sanford has had unusual opportunities for making himself acquainted with the minutiæ of the manufacture of these explosives, and has set down his knowledge in a simple, easy, intelligible fashion that renders his book a valuable contribution to the literature of explosives."—*Mining Journal.*

"A thoroughly practical account of the manufacture, properties, &c., of nitro-explosives. It is an admirable work, which reflects the highest credit on the author."—*Colliery Guardian.*

Explosives.

A HANDBOOK ON MODERN EXPLOSIVES. A Practical Treatise on the Manufacture and Use of Dynamite, Gun-Cotton, Nitro-Glycerine and other Explosive Compounds, including Collodion-Cotton. With Chapters on Explosives in Practical Application. By M. EISSLER, Mining Engineer and Metallurgical Chemist, Author of "The Metallurgy of Gold," "The Metallurgy of Silver," &c. Second Edition, Enlarged. With 150 Illustrations. Crown 8vo, 12*s.* 6*d.* cloth. [*Just published.*

"Useful not only to the miner, but also to officers of both services to whom blasting and the use of explosives generally may at any time become a necessary auxiliary."—*Nature.*

"A veritable mine of information on the subject of explosives employed for military, mining and blasting purposes."—*Army and Navy Gazette.*

Explosives and Dangerous Goods.

DANGEROUS GOODS: Their Sources and Properties, Modes of Storage and Transport. With Notes and Comments on Accidents arising therefrom, together with the Government and Railway Classifications. Acts of Parliament, &c. A Guide for the Use of Government and Railway Officials, Steamship Owners, Insurance Companies and Manufacturers and Users of Explosives and Dangerous Goods. By H. JOSHUA PHILLIPS, F.I.C., F.C.S., Author of "Engineering, Chemistry," &c. Crown 8vo, 374 pages, 9*s.* cloth.

The Alkali Trade, Manufacture of Sulphuric Acid, &c.

A MANUAL OF THE ALKALI TRADE, including the Manufacture of Sulphuric Acid, Sulphate of Soda, and Bleaching Powder. By JOHN LOMAS, Alkali Manufacturer, Newcastle-upon-Tyne and London. With 232 Illustrations and Working Drawings, and containing 390 pages of Text. Second Edition, with Additions. Super-royal 8vo, £1 10*s.* cloth.

"This book is written by a manufacturer for manufacturers. The working details of the most approved forms of apparatus are given, and these are accompanied by no less than 232 wood engravings, all of which may be used for the purposes of construction. Every step in the manufacture is very fully described in this manual, and each improvement explained."—*Athenæum.*

"We find not merely a sound and luminous explanation of the chemical principles of the trade, but a notice of numerous matters which have a most important bearing on the successful conduct of alkali works, but which are generally overlooked by even experienced technological authors."—*Chemical Review.*

The Blowpipe.

THE BLOWPIPE IN CHEMISTRY, MINERALOGY, and Geology. Containing all known Methods of Anhydrous Analysis, many Working Examples, and Instructions for Making Apparatus. By Lieut.-Colonel W. A. ROSS, R.A., F.G.S. With 120 Illustrations. Second Edition, Enlarged. Crown 8vo, 5*s.* cloth.

"The student who goes conscientiously through the course of experimentation here laid down will gain a better insight into inorganic chemistry and mineralogy than if he had 'got up' any of the best text-books of the day, and passed any number of examinations in their contents."—*Chemical News.*

Commercial Chemical Analysis.

THE COMMERCIAL HANDBOOK of CHEMICAL ANALYSIS; or, Practical Instructions for the determination of the Intrinsic or Commercial Value of Substances used in Manufactures, in Trades, and in the Arts. By A. NORMANDY, New Edition by H. M. NOAD, Ph.D., F.R.S. Crown 8vo, 12*s.* 6*d.* cloth.

"We strongly recommend this book to our readers as a guide, alike indispensable to the housewife as to the pharmaceutical practitioner."—*Medical Times.*

Dye-Wares and Colours.

THE MANUAL OF COLOURS AND DYE-WARES: Their Properties, Applications, Valuations, Impurities, and Sophistications. For the use of Dyers, Printers, Drysalters, Brokers, &c. By J. W. SLATER. Second Edition, Revised and greatly Enlarged, crown 8vo, 7*s.* 6*d.* cloth.

"A complete encyclopædia of the *materia tinctoria.* The information given respecting each article is full and precise, and the methods of determining the value of articles such as these, so liable to sophistication, are given with clearness, and are practical as well as valuable."—*Chemist and Druggist.*

"There is no other work which covers precisely the same ground. To students preparing for examinations in dyeing and printing it will prove exceedingly useful."—*Chemical News.*

Modern Brewing and Malting.

A HANDYBOOK FOR BREWERS: Being a Practical Guide to the Art of Brewing and Malting. Embracing the Conclusions of Modern Research which bear upon the Practice of Brewing. By HERBERT EDWARDS WRIGHT. M.A. Second Edition, Enlarged. Crown 8vo, 530 pp., 12*s.* 6*d.* cloth.

"May be consulted with advantage by the student who is preparing himself for examinational tests, while the scientific brewer will find in it a *résumé* of all the most important discoveries of modern times. The work is written throughout in a clear and concise manner, and the author takes great care to discriminate between vague theories and well-established facts."—*Brewers' Journal.*

"We have great pleasure in recommending this handybook, and have no hesitation in saying that it is one of the best—if not the best—which has yet been written on the subject of beer-brewing in this country, it should have a place on the shelves of every brewer's library."—*Brewer's Guardian.*

"Although the requirements of the student are primarily considered, an acquaintance of half-an-hour's duration cannot fail to impress the practical brewer with the sense of having found a trustworthy guide and practical counsellor in brewery matters."—*Chemical Trade Journal.*

Analysis and Valuation of Fuels.

FUELS: SOLID, LIQUID, AND GASEOUS: Their Analysis and Valuation. For the Use of Chemists and Engineers. By H. J. PHILLIPS, F.C.S., Formerly Analytical and Consulting Chemist to the Great Eastern Railway. Third Edition, Revised and Enlarged. Crown 8vo, 2*s.* cloth.

"Ought to have its place in the laboratory of every metallurgical establishment, and wherever fuel is used on a large scale."—*Chemical News.*

Pigments.

THE ARTISTS' MANUAL OF PIGMENTS. Showing their Composition, Conditions of Permanency, Non-Permanency, and Adulterations; Effects in Combination with Each Other and with Vehicles; and the most Reliable Tests of Purity. By H. C. STANDAGE. Third Edition, crown 8vo, 2*s.* 6*d.* cloth.

"This work is indeed *multum-in-parvo*, and we can, with good conscience, recommend it to all who come in contact with pigments, whether as makers, dealers, or users."—*Chemical Review.*

Gauging. Tables and Rules for Revenue Officers, Brewers, &c.

A POCKET-BOOK OF MENSURATION AND GAUGING: Containing Tables, Rules, and Memoranda for Revenue Officers, Brewers, Spirit Merchants, &c. By J. B. MANT (Inland Revenue). Second Edition, Revised. 18mo, 4*s.* leather.

"This handy and useful book is adapted to the requirements of the Inland Revenue Department, and will be a favourite book of reference. The range of subjects is comprehensive, and the arrangement simple and clear."—*Civilian.* "Should be in the hands of every practical brewer."—*Brewers' Journal.*

INDUSTRIAL ARTS, TRADES AND MANUFACTURES.

Cycle Manufacture.

MODERN CYCLES: A Practical Handbook on their Construction and Repair. By A. J. WALLIS-TAYLER, A.M.Inst.C.E. Author of "Refrigerating Machinery," &c. With upwards of 300 Illustrations. Crown 8vo, 10*s.* 6*d.* cloth. [*Just published.*

Tea Growing and Manufacture.

TEA: A Text Book of Tea Planting and Manufacture. Comprising Chapters on the History and Development of the Industry, the Cultivation of the Plant, the Preparation of the Leaf for the Market, the Botany and Chemistry of Tea, &c. With some Account of the Laws affecting Labour in Tea Gardens in Assam and elsewhere. By DAVID CROLE, late of the Jokai Tea Company, &c. With Plates and other Illustrations. Medium 8vo, 16*s.* cloth. [*Just published.*

Cotton Spinning.

COTTON MANUFACTURE: A Manual of Practical Instruction of the Processes of Opening, Carding, Combing, Drawing, Doubling and Spinning of Cotton, the Methods of Dyeing &c. For the Use of Operatives, Overlookers, and Manufacturers. By JOHN LISTER, Technical Instructor, Pendleton. 8vo, 7*s.* 6*d.* cloth.

"This invaluable volume is a distinct advance in the literature of cotton manufacture."—*Machinery.*
"It is thoroughly reliable, fulfilling nearly all the requirements desired."—*Glasgow Herald.*

Flour Manufacture, Milling, etc.

FLOUR MANUFACTURE: A Treatise on Milling Science and Practice. By FRIEDRICH KICK, Imperial Regierungsrath, Professor of Mechanical Technology in the Imperial German Polytechnic Institute, Prague. Translated from the Second Enlarged and Revised Edition with Supplement. By H. H. P. POWLES, Assoc. Memb. Institution of Civil Engineers. Nearly 400 pp. Illustrated with 28 Folding Plates, and 167 Woodcuts. Roy. 8vo, 25*s.* cloth.

"This valuable work is, and will remain, the standard authority on the science of milling. . . . The miller who has read and digested this work will have laid the foundation, so to speak, of a successful career; he will have acquired a number of general principles which he can proceed to apply. In this handsome volume we at last have the accepted text-book of modern milling in good, sound English, which has little, if any, trace of the German idiom."—*The Miller.*

"The appearance of this celebrated work in English is very opportune, and British millers will, we are sure, not be slow in availing themselves of its pages."—*Millers' Gazette.*

Agglutinants.

CEMENTS, PASTES, GLUES AND GUMS: A Practical Guide to the Manufacture and Application of the various Agglutinants required in the Building, Metal-Working, Wood-Working, and Leather-Working Trades, and for Workshop, Laboratory or Office Use. With upwards of 900 Recipes and Formulæ. By H. C. STANDAGE, Chemist. Third Edition. Crown 8vo, 2*s.* cloth.

[*Just published.*

"We have pleasure in speaking favourably of this volume. So far as we have had experience, which is not inconsiderable, this manual is trustworthy."—*Athenæum.*

"As a revelation of what are considered trade secrets, this book will arouse an amount of curiosity among the large number of industries it touches."—*Daily Chronicle.*

Soap-making.

THE ART OF SOAP-MAKING: A Practical Handbook of the Manufacture of Hard and Soft Soaps, Toilet Soaps, &c. Including many New Processes, and a Chapter on the Recovery of Glycerine from Waste Leys. By ALEXANDER WATT. Fifth Edition, Revised, with an Appendix on Modern Candlemaking. Crown 8vo, 7*s.* 6*d.* cloth.

"The work will prove very useful, not merely to the technological student, but to the practical soap boiler who wishes to understand the theory of his art."—*Chemical News.*

"A thoroughly practical treatise on an art which has almost no literature in our language. We congratulate the author on the success of his endeavour to fill a void in English technical literature."—*Nature.*

Paper Making.

PRACTICAL PAPER-MAKING: A Manual for Paper-Makers and Owners and Managers of Paper-Mills. With Tables, Calculations, &c. By G. CLAPPERTON, Paper-maker. With Illustrations of Fibres from Micro-photographs. Crown 8vo, 5*s.* cloth.

"The author caters for the requirements of responsible mill hands, apprentices, &c., whilst his manual will be found of great service to students of technology, as well as to veteran paper-makers and mill owners. The illustrations form an excellent feature."—*The World's Paper Trade Review.*

"We recommend everybody interested in the trade to get a copy of this thoroughly practical book."—*Paper Making.*

Paper Making.

THE ART OF PAPER-MAKING: A Practical Handbook of the Manufacture of Paper from Rags, Esparto, Straw, and other Fibrous Materials. Including the Manufacture of Pulp from Wood Fibre, with a Description of the Machinery and Appliances used. To which are added Details of Processes for Recovering Soda from Waste Liquors. By ALEXANDER WATT, Author of "The Art of Soap-Making." With Illustrations. Crown 8vo, 7*s.* 6*d.* cloth.

"It may be regarded as the standard work on the subject. The book is full of valuable information. The 'Art of Paper-making,' is in every respect a model of a text-book, either for a technical class, or for the private student."—*Paper and Printing Trades Journal.*

Leather Manufacture.

THE ART OF LEATHER MANUFACTURE: Being a Practical Handbook, in which the Operations of Tanning, Currying, and Leather Dressing are fully Described, and the Principles of Tanning Explained, and many Recent Processes Introduced; as also Methods for the Estimation of Tannin, and a Description of the Arts of Glue Boiling, Gut Dressing, &c. By ALEXANDER WATT, Author of "Soap-Making," &c. Fourth Edition. Crown 8vo, 9*s.* cloth.

"A sound, comprehensive treatise on tanning and its accessories. The book is an eminently valuable production, which redounds to the credit of both author and publishers."—*Chemical Review.*

Boot and Shoe Making.

THE ART OF BOOT AND SHOE-MAKING: A Practical Handbook, including Measurement, Last-Fitting, Cutting-Out, Closing and Making, with a Description of the most approved Machinery Employed. By JOHN B. LENO, late Editor of *St. Crispin*, and *The Boot and Shoe-Maker.* 12mo, 2*s.* cloth.

Dentistry Construction.

MECHANICAL DENTISTRY: A Practical Treatise on the Construction of the various kinds of Artificial Dentures. Comprising also Useful Formulæ, Tables, and Receipts for Gold Plate, Clasps, Solders, &c. &c. By C. HUNTER. Third Edition. With 100 Wood Engravings. Crown 8vo, 3*s.* 6*d.* cloth.

Wood Engraving.

WOOD ENGRAVING: A Practical and Easy Introduction to the Study of the Art. By W. N. BROWN. 12mo, 1*s.* 6*d.* cloth.

"The book is clear and complete, and will be useful to anyone wanting to understand the first elements of the beautiful art of wood engraving."—*Graphic.*

Horology.

A TREATISE ON MODERN HOROLOGY, in Theory and Practice. Translated from the French of CLAUDIUS SAUNIER, ex-Director of the School of Horology at Macon, by JULIEN TRIPPLIN, F.R.A.S., Besancon Watch Manufacturer, and EDWARD RIGG, M.A., Assayer in the Royal Mint. With Seventy-eight Woodcuts and Twenty-two Coloured Copper Plates. Second Edition. Super-royal 8vo, £2 2*s.* cloth; £2 10*s.* half-calf.

"There is no horological work in the English language at all to be compared to this production of M. Saunier's for clearness and completeness. It is alike good as a guide for the student and as a reference for the experienced horologist and skilled workman."—*Horological Journal.*

"The latest, the most complete, and the most reliable of those literary productions to which continental watchmakers are indebted for the mechanical superiority over their English brethren—in fact the Book of Books, is M. Saunier's 'Treatise.'"—*Watchmaker, Jeweller, and Silversmith.*

Watch Adjusting.

THE WATCH ADJUSTER'S MANUAL: A Practical Guide for the Watch and Chronometer Adjuster in Making, Springing, Timing and Adjusting for Isochronism, Positions and Temperatures. By C. E. FRITTS. 370 pages, with Illustrations, 8vo, 16*s.* cloth.

Watchmaking.

THE WATCHMAKER'S HANDBOOK. Intended as a Workshop Companion for those engaged in Watchmaking and the Allied Mechanical Arts. Translated from the French of CLAUDIUS SAUNIER, and enlarged by JULIEN TRIPPLIN, F.R.A.S., and EDWARD RIGG, M.A., Assayer in the Royal Mint. Third Edition. Crown 8vo, 9*s.* cloth.

"Each part is truly a treatise in itself. The arrangement is good and the language is clear and concise. It is an admirable guide for the young watchmaker."—*Engineering.*

"It is impossible to speak too highly of its excellence. It fulfils every requirement in a handbook intended for the use of a workman. Should be found in every workshop."—*Watch and Clockmaker.*

Watches and Timekeepers.

A HISTORY OF WATCHES AND OTHER TIMEKEEPERS. By JAMES F. KENDAL, M.B.H. Inst. 1*s.* 6*d.* boards; or 2*s.* 6*d.* cloth, gilt.

"The best which has yet appeared on this subject in the English language."—*Industries.*

"Open the book where you may, there is interesting matter in it concerning the ingenious devices of the ancient or modern horologer."—*Saturday Review.*

Electrolysis of Gold, Silver, Copper, &c.

ELECTRO-DEPOSITION: A Practical Treatise on the Electrolysis of Gold, Silver, Copper, Nickel, and other Metals and Alloys. With descriptions of Voltaic Batteries, Magneto and Dynamo-Electric Machines, Thermopiles, and of the Materials and Processes used in every Department of the Art, and several Chapters on ELECTRO-METALLURGY. By ALEXANDER WATT, Author of "Electro-Metallurgy," &c. Third Edition, Revised. Crown 8vo, 9*s.*, cloth.

"Eminently a book for the practical worker in electro-deposition. It contains practical descriptions of methods, processes and materials, as actually pursued and used in the workshop."—*Engineer.*

Electro-Metallurgy.

ELECTRO-METALLURGY: Practically Treated. By ALEXANDER WATT. Tenth Edition, including the most recent Processes. 12mo, 3*s.* 6*d.* cloth.

"From this book both amateur and artisan may learn everything necessary for the successful prosecution of electroplating."—*Iron.*

Working in Gold.

THE JEWELLER'S ASSISTANT in the Art of Working in Gold. A Practical Treatise for Masters and Workmen, Compiled from the Experience of Thirty Years' Workshop Practice. By GEORGE E. GEE, Author of "The Goldsmith's Handbook," &c. Crown 8vo, 7*s.* 6*d.* cloth.

"This manual of technical education is apparently destined to be a valuable auxiliary to a handcraft which is certainly capable of great improvement."—*The Times.*

Electroplating.

ELECTROPLATING: A Practical Handbook on the Deposition of Copper, Silver, Nickel, Gold, Aluminium, Brass, Platinum, &c. &c. By J. W. URQUHART, C.E. Third Edition, Revised. Crown 8vo, 5*s.* cloth.

"An excellent practical manual."—*Engineering.*

"An excellent work, giving the newest information."—*Horological Journal.*

Electrotyping.

ELECTROTYPING: The Reproduction and Multiplication of Printing Surfaces and Works of Art by the Electro-deposition of Metals. By J. W. URQUHART, C.E. Crown 8vo, 5*s.* cloth.

"The book is thoroughly practical; the reader is, therefore, conducted through the leading laws of electricity, then through the metals used by electrotypers, the apparatus, and the depositing processes, up to the final preparation of the work."—*Art Journal.*

Goldsmiths' Work.

THE GOLDSMITH'S HANDBOOK. By GEORGE E. GEE, Jeweller, &c. Fourth Edition. 12mo, 3*s.* 6*d.* cloth.

"A good, sound educator, and will be generally accepted as an authority."—*Horological Journal.*

Silversmiths' Work.

THE SILVERSMITH'S HANDBOOK. By GEORGE E. GEE, Jeweller, &c. Third Edition, with numerous Illusts. 12mo, 3*s.* 6*d.* cloth.

"The chief merit of the work is its practical character. . . The workers in the trade will speedily discover its merits when they sit down to study it."—*English Mechanic.*

*** *The above two works together, strongly half-bound, price* 7*s.*

Sheet Metal Working.

SHEET METAL WORKER'S INSTRUCTOR: Comprising a Selection of Geometrical Problems and Practical Rules for Describing the Various Patterns Required by Zinc, Sheet-Iron, Copper and Tin-Plate Workers. By REUBEN HENRY WARN, Practical Tin-Plate Worker. New Edition, Revised and greatly Enlarged by JOSEPH G. HORNER, A.M.I.M.E. Crown 8vo, 254 pages, with 430 Illustrations. 7*s.* 6*d.* cloth. [*Just published.*

Bread and Biscuit Baking.

THE BREAD AND BISCUIT BAKER'S and Sugar-Boiler's Assistant. Including a large variety of Modern Recipes. With Remarks on the Art of Bread-making. By ROBERT WELLS. Third Edition. Cr. 8vo, 2*s.* cloth.

"A large number of wrinkles for the ordinary cook, as well as the baker."—*Saturday Review.*

Confectionery for Hotels and Restaurants.

THE PASTRYCOOK AND CONFECTIONER'S GUIDE. For Hotels, Restaurants, and the Trade in general, adapted also for Family Use. By R. WELLS, Author of "The Bread and Biscuit Baker." Crown 8vo, 2*s.* cloth.

"We cannot speak too highly of this really excellent work. In these days of keen competition our readers cannot do better than purchase this book."—*Baker's Times.*

Ornamental Confectionery.

ORNAMENTAL CONFECTIONERY: A Guide for Bakers, Confectioners and Pastrycooks; including a Variety of Modern Recipes, and Remarks on Decorative and Coloured Work. With 129 Original Designs. By ROBERT WELLS. Second Edition. Crown 8vo, 5*s.* cloth.

"A valuable work, practical, and should be in the hands of every baker and confectioner. The illustrative designs are alone worth treble the amount charged for the whole work."—*Baker's Times.*

Flour Confectionery.

THE MODERN FLOUR CONFECTIONER, Wholesale and Retail. Containing a large Collection of Recipes for Cheap Cakes, Biscuits, &c. With Remarks on the Ingredients Used in their Manufacture. By ROBERT WELLS. Author of "The Bread and Biscuit Baker," &c. Crown 8vo, 2*s.* cloth.

"The work is of a decidedly practical character, and in every recipe regard is had to economical working."—*North British Daily Mail.*

Laundry Work.

LAUNDRY MANAGEMENT. A Handbook for Use in Private and Public Laundries. By the EDITOR of "The Laundry Journal." Third Edition. Crown 8vo, 2*s.* cloth.

"This book should certainly occupy an honoured place on the shelves of all housekeepers who wish to keep themselves *au courant* of the newest appliances and methods."—*The Queen.*

HANDYBOOKS FOR HANDICRAFTS.

BY PAUL N. HASLUCK,
Editor of "Work" (New Series), Author of "Lathe Work," "Milling Machines," &c.

Crown 8vo, 144 pages, cloth, price 1*s.* each.

☞ *These* HANDYBOOKS *have been written to supply information for* WORKMEN, STUDENTS, *and* AMATEURS *in the several Handicrafts, on the actual* PRACTICE *of the* WORKSHOP, *and are intended to convey in plain language* TECHNICAL KNOWLEDGE *of the several* CRAFTS. *In describing the processes employed, and the manipulation of material, workshop terms are used; workshop practice is fully explained; and the text is freely illustrated with drawings of modern tools, appliances, and processes.*

THE METAL TURNER'S HANDYBOOK. A Practical Manual for Workers at the Foot-Lathe. With over 100 Illustrations. Price 1*s.*

"The book will be of service alike to the amateur and the artisan turner. It displays thorough knowledge of the subject."—*Scotsman.*

THE WOOD TURNER'S HANDYBOOK. A Practical Manual for Workers at the Lathe. With over 100 Illustrations. Price 1*s.*

"We recommend the book to young turners and amateurs. A multitude of workmen have hitherto sought in vain for a manual of this special industry."—*Mechanical World.*

THE WATCH JOBBER'S HANDYBOOK. A Practical Manual on Cleaning, Repairing, and Adjusting. With upwards of 100 Illustrations. Price 1*s.*

"We strongly advise all young persons connected with the watch trade to acquire and study this inexpensive work."—*Clerkenwell Chronicle.*

THE PATTERN MAKER'S HANDYBOOK. A Practical Manual on the Construction of Patterns for Founders. With upwards of 100 Illustrations. 1*s.*

"A most valuable, if not indispensable, manual for the pattern maker."—*Knowledge.*

THE MECHANIC'S WORKSHOP HANDYBOOK. A Practical Manual on Mechanical Manipulation, embracing Information on various Handicraft Processes. With Useful Notes and Miscellaneous Memoranda. Comprising about 200 Subjects. Price 1*s.*

"A very clever and useful book, which should be found in every workshop; and it should certainly find a place in all technical schools."—*Saturday Review.*

THE MODEL ENGINEER'S HANDYBOOK. A Practical Manual on the Construction of Model Steam Engines. With upwards of 100 Illustrations. 1*s.*

"Mr. Hasluck has produced a very good little book."—*Builder.*

THE CLOCK JOBBER'S HANDYBOOK. A Practical Manual on Cleaning, Repairing, and Adjusting. With upwards of 100 Illustrations. Price 1*s.*

"It is of inestimable service to those commencing the trade."—*Coventry Standard.*

THE CABINET WORKER'S HANDYBOOK. A Practical Manual on the Tools, Materials, Appliances, and Processes employed in Cabinet Work. With upwards of 100 Illustrations. Price 1*s.*

"Mr. Hasluck's thoroughgoing little Handybook is amongst the most practical guides we have been for beginners in cabinet-work."—*Saturday Review.*

THE WOODWORKER'S HANDYBOOK OF MANUAL INSTRUCTION. Embracing Information on the Tools, Materials, Appliances and Processes Employed in Woodworking. With 104 Illustrations. Price 1*s.*

OPINIONS OF THE PRESS.

"Written by a man who knows, not only how work ought to be done, but how to do it, and how to convey his knowledge to others."—*Engineering.*

"Mr. Hasluck writes admirably, and gives complete instructions."—*Engineer.*

"Mr. Hasluck combines the experience of a practical teacher with the manipulative skill and scientific knowledge of processes of the trained mechanician, and the manuals are marvels of what can be produced at a popular price."—*Schoolmaster.*

"Helpful to workmen of all ages and degrees of experience."—*Daily Chronicle.*

"Practical, sensible, and remarkably cheap."—*Journal of Education.*

"Concise, clear, and practical."—*Saturday Review.*

COMMERCE, COUNTING-HOUSE WORK, TABLES, etc.

Commercial Education.

LESSONS IN COMMERCE. By Professor R. GAMBARO, of the Royal High Commercial School at Genoa. Edited and Revised by JAMES GAULT, Professor of Commerce and Commercial Law in King's College, London. Second Edition, Revised. Crown 8vo, 3*s.* 6*d.* cloth.

"The publishers of this work have rendered considerable service to the cause of commercial education by the opportune production of this volume. . . . The work is peculiarly acceptable to English readers and an admirable addition to existing class books. In a phrase, we think the work attains its object in furnishing a brief account of those laws and customs of British trade with which the commercial man interested therein should be familiar."—*Chamber of Commerce Journal.*

"An invaluable guide in the hands of those who are preparing for a commercial career, and, in fact the information it contains on matters of business should be impressed on every one."—*Counting House.*

Foreign Commercial Correspondence.

THE FOREIGN COMMERCIAL CORRESPONDENT: Being Aids to Commercial Correspondence in Five Languages—English, French, German, Italian, and Spanish. By CONRAD E. BAKER. Second Edition. Cr. 8vo, 3*s.* 6*d.* cl.

"Whoever wishes to correspond in all the languages mentioned by Mr. Baker cannot do better than study this work, the materials of which are excellent and conveniently arranged. They consist not of entire specimen letters, but—what are far more useful—short passages, sentences, or phrases expressing the same general idea in various forms."—*Athenæum.*

"A careful examination has convinced us that it is unusually complete, well arranged and reliable. The book is a thoroughly good one."—*Schoolmaster.*

Commercial French.

A NEW BOOK OF COMMERCIAL FRENCH: Grammar—Vocabulary—Correspondence—Commercial Documents—Geography—Arithmetic—Lexicon. By P. CARROUÉ, Professor in the City High School J.—B. Say (Paris). Crown 8vo, 4*s.* 6*d.* cloth.

Accounts for Manufacturers.

FACTORY ACCOUNTS: Their Principles and Practice. A Handbook for Accountants and Manufacturers, with Appendices on the Nomenclature of Machine Details; the Income Tax Acts; the Rating of Factories; Fire and Boiler Insurance; the Factory and Workshop Acts, &c., including also a Glossary of Terms and a large number of Specimen Rulings. By EMILE GARCKE and J. M. FELLS. Fourth Edition, Revised and Enlarged. Demy 8vo, 250 pages. 6*s.* strongly bound.

"A very interesting description of the requirements of Factory Accounts. . . . The principle of assimilating the Factory Accounts to the general commercial books is one which we thoroughly agree with."—*Accountants' Journal.*

"Characterised by extreme thoroughness. There are few owners of factories who would not derive great benefit from the perusal of this most admirable work."—*Local Government Chronicle.*

Modern Metrical Units and Systems.

MODERN METROLOGY: A Manual of the Metrical Units and Systems of the present Century. With an Appendix containing a proposed English System. By LOWIS D'A. JACKSON, A.-M. Inst. C.E., Author of "Aid to Survey Practice," &c. Large crown 8vo, 12*s.* 6*d.* cloth.

"We recommend the work to all interested in the practical reform of our weights and measures." *Nature.*

The Metric System and the British Standards.

A SERIES OF METRIC TABLES, in which the British Standard Measures and Weights are compared with those of the Metric System at present in Use on the Continent. By C. H. DOWLING, C.E. 8vo, 10*s.* 6*d.* strongly bound.

"Mr. Dowling's Tables are well put together as a ready reckoner for the conversion of one system into the other."—*Athenæum.*

Iron and Metal Trades' Calculator.

THE IRON AND METAL TRADES' COMPANION: For expeditiously ascertaining the Value of any Goods bought or sold by Weight, from 1*s.* per cwt. to 112*s.* per cwt., and from one farthing per pound to one shilling per pound. By THOMAS DOWNIE. Strongly bound in leather, 396 pp., 9*s.*

"A most useful set of tables, nothing like them before existed."—*Building News.*

"Although specially adapted to the iron and metal trades, the tables will be found useful in every other business in which merchandise is bought and sold by weight."—*Railway News.*

Chadwick's Calculator for Numbers and Weights Combined.

THE NUMBER, WEIGHT, & FRACTIONAL CALCULATOR. Containing upwards of 250,000 Separate Calculations, showing at a glance the value at 422 different rates, ranging from $\frac{1}{128}$th of a Penny to 20*s.* each, or per cwt., and £20 per ton, of any number of articles consecutively, from 1 to 470.—Any number of cwts., qrs., and lbs., from 1 cwt. to 470 cwts.—Any number of tons, cwts., qrs., and lbs., from 1 to 1,000 tons. By WILLIAM CHADWICK, Public Accountant. Third Edition, Revised and Improved. 8vo, 18*s.* strongly bound.

"It is as easy of reference for any answer or any number of answers as a dictionary. For making up accounts or estimates the book must prove invaluable to all who have any considerable quantity of calculations involving price and measure in any combination to do."—*Engineer.*

"The most perfect work of the kind yet prepared."—*Glasgow Herald.*

Harben's Comprehensive Weight Calculator.

THE WEIGHT CALCULATOR: Being a Series of Tables upon a New and Comprehensive Plan, exhibiting at one Reference the exact Value of any Weight from 1 lb. to 15 tons, at 300 Progressive Rates, from 1*d.* to 168*s.* per cwt., and containing 186,000 Direct Answers, which, with their Combinations, consisting of a single addition (mostly to be performed at sight), will afford an aggregate of 10,266,000 Answers; the whole being calculated and designed to ensure correctness and promote despatch. By HENRY HARBEN, Accountant. Fifth Edition, carefully corrected. Royal 8vo, strongly half-bound, £1 5*s.*

"A practical and useful work of reference for men of business generally."—*Ironmonger.* [*pendent.*

"Of priceless value to business men. It is a necessary book in all mercantile offices."—*Sheffield Inde-*

Harben's Comprehensive Discount Guide.

THE DISCOUNT GUIDE. Comprising several Series of Tables for the use of Merchants, Manufacturers, Ironmongers, and others, by which may be ascertained the exact Profit arising from any mode of using Discounts, either in the Purchase or Sale of Goods, and the method of either Altering a Rate of Discount, or Advancing a Price, so as to produce, by one operation, a sum that will realise any required profit after allowing one or more Discounts: to which are added Tables of Profit or Advance from $1\frac{1}{4}$ to 90 per cent., Tables of Discount from $1\frac{1}{4}$ to $98\frac{3}{4}$ per cent., and Tables of Commission, &c., from $\frac{1}{8}$ to 10 per cent. By HENRY HARBEN, Accountant. New Edition, Corrected. Demy 8vo, £1 5*s.* half-bound.

"A book such as this can only be appreciated by business men, to whom the saving of time means saving of money. The work must prove of great value to merchants, manufacturers, and general traders."—*British Trade Journal.*

A New Series of Calculators.

DIRECT CALCULATORS: A Series of Tables and Calculations varied in arrangement to suit the needs of Particular Trades. By M. B. COTSWORTH. The Series comprises 13 distinct books, at prices ranging from 2*s.* 6*d.* to 10*s.* 6*d.* (Detailed prospectus on application).

New Wages Calculator.

TABLES OF WAGES at 54, 52, 50 and 48 Hours per Week. Showing the Amounts of Wages from One-quarter-of-an-hour to Sixty-four hours in each case at Rates of Wages advancing by One Shilling from 4*s.* to 55*s.* per week. By THOS. GARBUTT, Accountant. Square crown 8vo, 6*s.* half-bound.

Iron Shipbuilders' and Merchants' Weight Tables.

IRON-PLATE WEIGHT TABLES: For Iron Shipbuilders, Engineers, and Iron Merchants. Containing the Calculated Weights of upwards of 150,000 different sizes of Iron Plates from 1 foot by 6 in. by $\frac{1}{4}$ in. to 10 feet by 5 feet by 1 in. Worked out on the basis of 40 lbs. to the square foot of Iron of 1 inch in thickness. By H. BURLINSON and W. H. SIMPSON. 4to, 25*s.* half-bound

Tables for Actuaries.

MATHEMATICAL TABLES (ACTUARIAL). Comprising Commutation and Conversion Tables, Logarithms, Cologarithms, Antilogarithms and Reciprocals. By J. W. GORDON. Royal 8vo, mounted on canvas, in cloth case, 5*s.* [*Just published.*

AGRICULTURE, FARMING, GARDENING, etc.

Dr. Fream's New Edition of "The Standard Treatise on Agriculture."

THE COMPLETE GRAZIER AND FARMER'S AND CATTLE BREEDER'S ASSISTANT: A Compendium of Husbandry. Originally Written by WILLIAM YOUATT. Thirteenth Edition, entirely Re-written, considerably Enlarged, and brought up to the Present Requirements of Agricultural Practice, by WILLIAM FREAM, LL.D., Steven Lecturer in the University of Edinburgh, Author of "The Elements of Agriculture," &c. Royal 8vo, 1,100 pp., with over 450 Illustrations. Price £1 11*s.* 6*d.* strongly and handsomely bound.

EXTRACT FROM PUBLISHERS' ADVERTISEMENT.

"A treatise that made its original appearance in the first decade of the century, and that enters upon its Thirteenth edition before the century has run its course, has undoubtedly established its position as a work of permanent value. . . . The phenomenal progress of the last dozen years in the Practice and Science of Farming has rendered it necessary, however, that the volume should be re-written, . . . and for this undertaking the Publishers were fortunate enough to secure the services of Dr. FREAM, whose high attainments in all matters pertaining to agriculture have been so emphatically recognised by the highest professional and official authorities. In carrying out his editorial duties, Dr. FREAM has been favoured with valuable contributions by Prof. J. WORTLEY AXE, Mr. E. BROWN, Dr. BERNARD DYER, Mr. W. J. MALDEN, Mr. R. H. REW, Prof. SHELDON, Mr. J. SINCLAIR, Mr. SANDERS SPENCER, and others.

"As regards the illustrations of the work, no pains have been spared to make them as representative and characteristic as possible, so as to be practically useful to the Farmer and Grazier."

SUMMARY OF CONTENTS.

BOOK I. ON THE VARIETIES, BREEDING, REARING, FATTENING AND MANAGEMENT OF CATTLE.
BOOK II. ON THE ECONOMY AND MANAGEMENT OF THE DAIRY.
BOOK III. ON THE BREEDING, REARING, AND MANAGEMENT OF HORSES.
BOOK IV. ON THE BREEDING, REARING, AND FATTENING OF SHEEP.
BOOK V. ON THE BREEDING, REARING, AND FATTENING OF SWINE.
BOOK VI. ON THE DISEASES OF LIVE STOCK.
BOOK VII. ON THE BREEDING, REARING, AND MANAGEMENT OF POULTRY.
BOOK VIII. ON FARM OFFICES AND IMPLEMENTS OF HUSBANDRY.
BOOK IX. ON THE CULTURE AND MANAGEMENT OF GRASS LANDS.
BOOK X. ON THE CULTIVATION AND APPLICATION OF GRASSES, PULSE AND ROOTS.
BOOK XI. ON MANURES AND THEIR APPLICATION TO GRASS LAND AND CROPS.
BOOK XII. MONTHLY CALENDARS OF FARMWORK.

*** OPINIONS OF THE PRESS ON THE NEW EDITION.

"Dr. Fream is to be congratulated on the successful attempt he has made to give us a work which will at once become the standard classic of the farm practice of the country. We believe that it will be found that it has no compeer among the many works at present in existence. . . . The illustrations are admirable, while the frontispiece, which represents the well-known bull, New Year's Gift, bred by the Queen, is a work of art."—*The Times.*

"The book must be recognised as occupying the proud position of the most exhaustive work of reference in the English language on the subject with which it deals."—*Athenæum.*

"The most comprehensive guide to modern farm practice that exists in the English language to-day. . . . The book is one that ought to be on every farm and in the library of every land owner."—*Mark Lane Express.*

"In point of exhaustiveness and accuracy the work will certainly hold a pre-eminent and unique position among books dealing with scientific agricultural practice. It is, in fact, an agricultural library of itself."—*North British Agriculturist.*

"A compendium of authoritative and well-ordered knowledge on every conceivable branch of the work of the live stock farmer; probably without an equal in this or any other country."—*Yorkshire Post.*

"The best and brightest guide to the practice of husbandry: one that has no superior—no equal we might truly say—among the agricultural literature now before the public. . . . In every section in which we have tested it, the work has been found thoroughly up to date."—*Bell's Weekly Messenger.*

British Farm Live Stock.

FARM LIVE STOCK OF GREAT BRITAIN. By ROBERT WALLACE, F.L.S., F.R.S.E., &c., Professor of Agriculture and Rural Economy in the University of Edinburgh. Third Edition, thoroughly Revised and considerably Enlarged. With over 120 Phototypes of Prize Stock. Demy 8vo, 384 pp., with 79 Plates and Maps. Price 12*s.* 6*d.*, cloth.

"A really complete work on the history, breeds, and management of the farm stock of Great Britain, and one which is likely to find its way to the shelves of every country gentleman's library."—*The Times.*

"The latest edition of 'Farm Live Stock of Great Britain' is a production to be proud of, and its issue not the least of the services which its author has rendered to agricultural science."—*Scottish Farmer.*

"The book is very attractive, . . . and we can scarcely imagine the existence of a farmer who would not like to have a copy of this beautiful and useful work"—*Mark Lane Express.*

"A work which will long be regarded as a standard authority whenever a concise history and description of the breeds of live stock in the British Isles is required."—*Bell's Weekly Messenger.*

Dairy Farming.

BRITISH DAIRYING: A Handy Volume on the Work of the Dairy-Farm. For the Use of Technical Instruction Classes, Students in Agricultural Colleges and the Working Dairy-Farmer. By Prof. J. P. SHELDON, With Illusts. Second Edition, Revised. Crown 8vo, 2*s.* 6*d.* cloth. [*Just published.*

"Confidently recommended as a useful text-book on dairy farming. —*Agricultural Gazette.*

"Probably the best half-crown manual on dairy work that has yet been produced."—*North British Agriculturist.* "It is the soundest little work we have yet seen on the subject."—*The Times.*

Dairy Manual.

MILK, CHEESE, AND BUTTER: A Practical Handbook on their Properties and the Processes of their Production. Including a Chapter on Cream and the Methods of its Separation from Milk. By JOHN OLIVER, late Principal of the Western Dairy Institute, Berkeley. With Coloured Plates and 200 Illustrations. Crown 8vo, 7*s.* 6*d.* cloth.

"An exhaustive and masterly production. It may be cordially recommended to all students and practitioners of dairy science."—*N.B. Agriculturist.*

"We recommend this very comprehensive and carefully-written book to dairy-farmers and students of dairying. It is a distinct acquisition to the library of the agriculturist."—*Agricultural Gazette.*

Agricultural Facts and Figures.

NOTE-BOOK OF AGRICULTURAL FACTS AND FIGURES FOR FARMERS AND FARM STUDENTS. By PRIMROSE MCCONNELL, B.Sc. Fifth Edition. Royal 32mo, roan, gilt edges, with band, 4*s.*

"Literally teems with information and we can cordially recommend it to all connected with agriculture."—*North British Agriculturist.*

Small Farming.

SYSTEMATIC SMALL FARMING; or, The Lessons of my Farm. Being an Introduction to Modern Farm Practice for Small Farmers. By R. SCOTT BURN, Author of "Outlines of Modern Farming," &c. Crown 8vo, 6*s.* cloth.

"This is the completest book of its class we have seen, and one which every amateur farmer will read with pleasure, and accept as a guide."—*Field.*

Modern Farming.

OUTLINES OF MODERN FARMING. By R. SCOTT BURN. Soils, Manures, and Crops—Farming and Farming Economy—Cattle, Sheep, and Horses—Management of Dairy, Pigs, and Poultry—Utilization of Town-Sewage, Irrigation, &c. Sixth Edition. In one vol., 1,250 pp., half-bound, profusely Illustrated, 12*s.*

Agricultural Engineering.

FARM ENGINEERING, THE COMPLETE TEXT-BOOK OF. Comprising Draining and Embanking; Irrigation and Water Supply; Farm Roads, Fences and Gates; Farm Buildings; Barn Implements and Machines; Field Implements and Machines; Agricultural Surveying, &c. By Professor JOHN SCOTT. In one vol., 1,150 pages, half-bound, with over 600 Illustrations, 12*s.*

"Written with great care, as well as with knowledge and ability. The author has done his work well; we have found him a very trustworthy guide wherever we have tested his statements. The volume will be of great value to agricultural students."—*Mark Lane Express.*

Agricultural Text-Book.

THE FIELDS OF GREAT BRITAIN: A Text-Book of Agriculture. Adapted to the Syllabus of the Science and Art Department. For Elementary and Advanced Students. By HUGH CLEMENTS (Board of Trade). Second Edition, Revised, with Additions. 18mo, 2*s.* 6*d.* cloth.

"It is a long time since we have seen a book which has pleased us more, or which contains such a vast and useful fund of knowledge."—*Educational Times.*

Tables for Farmers, &c.

TABLES AND MEMORANDA FOR FARMERS, GRAZIERS, Agricultural Students, Surveyors, Land Agents, Auctioneers, &c. With a New System of Farm Book-keeping. By SIDNEY FRANCIS. Third Edition, Revised. 272 pp., waistcoat-pocket size, limp leather, 1*s.* 6*d.*

"Weighing less than 1 oz., and occupying no more space than a match box, it contains a mass of facts and calculations which has never before, in such handy form, been obtainable. Every operation on the farm is dealt with. The work may be taken as thoroughly accurate, the whole of the tables having been revised by Dr. Fream. We cordially recommend it."—*Bell's Weekly Messenger.*

Agricultural Experiments.

THE ROTHAMSTED EXPERIMENTS and their Practical Lessons for Farmers. Part I. STOCK. Part II. CROPS. By C. J. R. TIPPER. Crown 8vo, 3*s.* 6*d.* cloth. [*Just published.*

Artificial Manures and Foods.

FERTILISERS AND FEEDING STUFFS: Their Properties and Uses. A Handbook for the Practical Farmer. By BERNARD DYER, D.Sc. (Lond.). With the Text of the Fertilisers and Feeding Stuffs Act of 1893, &c. Second Edition, Revised. Crown 8vo, 1*s.* cloth. [*Just published.*

The Management of Bees.

BEES FOR PLEASURE AND PROFIT: Guide to the Manipulation of Bees, the Production of Honey, and the General Management of the Apiary. By G. GORDON SAMSON. With numerous Illustrations. Crown 8vo, 1*s.* cloth.

Farm and Estate Book-keeping.

BOOK-KEEPING FOR FARMERS AND ESTATE OWNERS. A Practical Treatise, presenting, in Three Plans, a System adapted for all Classes of Farms. By JOHNSON M. WOODMAN, Chartered Accountant. Second Edition, Revised. Crown 8vo, 3*s.* 6*d.* cloth boards; or, 2*s.* 6*d.* cloth limp.

"The volume is a capital study of a most important subject."—*Agricultural Gazette.*

Farm Account Book.

WOODMAN'S YEARLY FARM ACCOUNT BOOK. Giving Weekly Labour Account and Diary, and showing the Income and Expenditure under each Department of Crops, Live Stock, Dairy, &c. &c. With Valuation, Profit and Loss Account, and Balance Sheet at the end of the Year. By JOHNSON M. WOODMAN, Chartered Accountant. Second Edition. Folio, half-bound, 7*s.* 6*d.* net.

"Contains every requisite form for keeping farm accounts readily and accurately."—*Agriculture.*

Early Fruits, Flowers and Vegetables.

THE FORCING-GARDEN; or, How to Grow Early Fruits, Flowers, and Vegetables. With Plans and Estimates for Building Glasshouses, Pits and Frames. With Illustrations. By SAMUEL WOOD. Crown 8vo, 3*s.* 6*d.* cloth.

"A good book, containing a great deal of valuable teaching."—*Gardeners Magazine.*

Good Gardening.

A PLAIN GUIDE TO GOOD GARDENING; or, How to Grow Vegetables, Fruits, and Flowers. By S. WOOD. Fourth Edition, with considerable Additions, &c., and numerous Illustrations. Crown 8vo, 3*s.* 6*d.* cloth.

"A very good book, and one to be highly recommended as a practical guide. The practical directions are excellent."—*Athenæum.*

Gainful Gardening.

MULTUM-IN-PARVO GARDENING; or, How to make One Acre of Land produce £620 a-year, by the Cultivation of Fruits and Vegetables; also, How to Grow Flowers in Three Glass Houses, so as to realise £176 per annum clear Profit. By SAMUEL WOOD, Author of "Good Gardening," &c. Fifth and Cheaper Edition, revised, with Additions. Crown 8vo, 1*s.* sewed.

"We are bound to recommend it as not only suited to the case of the amateur and gentleman's gardener, but to the market grower."—*Gardeners' Magazine.*

Gardening for Ladies.

THE LADIES' MULTUM-IN-PARVO FLOWER GARDEN, and Amateur's Complete Guide. By S. WOOD. Crown 8vo, 3*s.* 6*d.* cloth.

"Full of shrewd hints and useful instructions, based on a lifetime of experience."—*Scotsman.*

Cultivation of the Potato.

POTATOES: How to Grow and Show Them. A Practical Guide to the Cultivation and General Treatment of the Potato. By J. PINK. Cr. 8vo, 2*s.*

Market Gardening.

MARKET AND KITCHEN GARDENING. By C. W. SHAW, late Editor of "Gardening Illustrated." 3*s.* 6*d.* cloth.

"The most valuable compendium of kitchen and market-garden work published."—*Farmer.*

AUCTIONEERING, VALUING, LAND SURVEYING, ESTATE AGENCY, etc.

Auctioneer's Assistant.

THE APPRAISER, AUCTIONEER, BROKER, House and Estate Agent and Valuer's Pocket Assistant, for the Valuation for Purchase, Sale, or Renewal of Leases, Annuities and Reversions, and of property generally; with Prices for Inventories, &c. By JOHN WHEELER, Valuer, &c. Sixth Edition, Re-written and greatly Extended by C. NORRIS, Surveyor, Valuer, &c. Royal 32mo, 5*s.* cloth.

"A neat and concise book of reference, containing an admirable and clearly-arranged list of prices for inventories, and a very practical guide to determine the value of furniture, &c."—*Standard.*

"Contains a large quantity of varied and useful information as to the valuation for purchase, sale, or renewal of leases, annuities and reversions, and of property generally, with prices for inventories, and a guide to determine the value of interior fittings and other effects."—*Builder.*

Auctioneering.

AUCTIONEERS: THEIR DUTIES AND LIABILITIES. A Manual of Instruction and Counsel for the Young Auctioneer. By ROBERT SQUIBBS, Auctioneer. Second Edition, Revised and partly Re-written. Demy 8vo, 12*s.* 6*d.* cl.

"The standard text-book on the topics of which it treats."—*Athenæum.*

"The work is one of general excellent character, and gives much information in a compendious and satisfactory form."—*Builder.*

"May be recommended as giving a great deal of information on the law relating to auctioneers, in a very readable form."—*Law Journal.*

"Auctioneers may be congratulated on having so pleasing a writer to minister to their special needs."—*Solicitors' Journal.*

Inwood's Estate Tables.

TABLES FOR THE PURCHASING OF ESTATES, Freehold, Copyhold, or Leasehold; Annuities, Advowsons, &c., and for the Renewing of Leases held under Cathedral Churches, Colleges, or other Corporate bodies, for Terms of Years certain, and for Lives; also for Valuing Reversionary Estates, Deferred Annuities, Next Presentations, &c.; together with SMART'S Five Tables of Compound Interest, and an Extension of the same to Lower and Intermediate Rates. By W. INWOOD. 24th Edition, with considerable Additions, and new and valuable Tables of Logarithms for the more Difficult Computations of the Interest of Money, Discount, Annuities, &c., by M. FÉDOR THOMAN, of the Société Crédit Mobilier of Paris. Crown 8vo, 8*s.* cloth.

"Those interested in the purchase and sale of estates, and in the adjustment of compensation cases, as well as in transactions in annuities, life insurances, &c., will find the present edition of eminent service."—*Engineering.*

"'Inwood's Tables' still maintain a most enviable reputation. The new issue has been enriched by large additional contributions by M. Fédor Thoman, whose carefully-arranged Tables cannot fail to be of the utmost utility."—*Mining Journal.*

Agricultural Valuer's Assistant.

THE AGRICULTURAL VALUER'S ASSISTANT. A Practical Handbook on the Valuation of Landed Estates; including Rules and Data for Measuring and Estimating the Contents, Weights and Values of Agricultural Produce and Timber, and the Values of Feeding Stuffs, Manures, and Labour; with Forms of Tenant-Right Valuations, Lists of Local Agricultural Customs, Scales of Compensation under the Agricultural Holdings Act, &c. &c. By TOM BRIGHT, Agricultural Surveyor. Second Edition, Enlarged. Crown 8vo, 5*s.* cloth.

"Full of tables and examples in connection with the valuation of tenant-right, estates, labour, contents and weights of timber, and farm produce of all kinds."—*Agricultural Gazette.*

"An eminently practical handbook, full of practical tables and data of undoubted interest and value to surveyors and auctioneers in preparing valuations of all kinds."—*Farmer.*

Plantations and Underwoods.

POLE PLANTATIONS AND UNDERWOODS: A Practical Handbook on Estimating the Cost of Forming, Renovating, Improving, and Grubbing Plantations and Underwoods, their Valuation for Purposes of Transfer, Rental, Sale or Assessment. By TOM BRIGHT. Crown 8vo, 3*s.* 6*d.* cloth.

"To valuers, foresters and agents it will be a welcome aid."—*North British Agriculturist.*

"Well calculated to assist the valuer in the discharge of his duties, and of undoubted interest and use both to surveyors and auctioneers in preparing valuations of all kinds."—*Kent Herald.*

Hudson's Land Valuer's Pocket-Book.

THE LAND VALUER'S BEST ASSISTANT: Being Tables on a very much improved Plan, for Calculating the Value of Estates. With Tables for reducing Scotch, Irish, and Provincial Customary Acres to Statute Measure, &c. By R. HUDSON, C.E. New Edition. Royal 32mo, leather, elastic band, 4*s*.

"Of incalculable value to the country gentleman and professional man."—*Farmers' Journal.*

Ewart's Land Improver's Pocket-Book.

THE LAND IMPROVER'S POCKET-BOOK of Formulæ, Tables, and Memoranda required in any Computation relating to the Permanent Improvement of Landed Property. By JOHN EWART, Surveyor. Second Edition, Revised. Royal 32mo, oblong, 4*s*. leather.

"A compendiousand handy little volume."—*Spectator.*

Complete Agricultural Surveyor's Pocket-Book.

THE LAND VALUER'S and Land Improver's Complete Pocket-Book. Being the above Two Works bound together. 7*s*. 6*d*. leather.

House Property.

HANDBOOK OF HOUSE PROPERTY: A Popular and Practical Guide to the Purchase, Mortgage, Tenancy, and Compulsory Sale of Houses and Land, including the Law of Dilapidations and Fixtures: with Examples of all kinds of Valuations, Useful Information on Building and Suggestive Elucidations of Fine Art. By E. L. TARBUCK, Architect and Surveyor. Fifth Edition, Enlarged. 12mo, 5*s*. cloth.

LAW AND MISCELLANEOUS.

Journalism.

MODERN JOURNALISM: A Handbook of Instruction and Counsel for the Young Journalist. By JOHN B. MACKIE, Fellow of the Institute of Journalists. Crown 8vo, 2*s*. cloth.

"This invaluable guide to journalism is a work which all aspirants to a journalistic career will read with advantage."—*Journalist.*

Private Bill Legislation and Provisional Orders.

HANDBOOK FOR THE USE OF SOLICITORS and Engineers Engaged in Promoting Private Acts of Parliament and Provisional Orders, for the authorization of Railways, Tramways, Gas and Water Works, &c. By L. LIVINGSTON MACASSEY, of the Middle Temple, Barrister-at-Law, M.Inst.C.E. 8vo, 25*s*. cloth.

Law of Patents.

PATENTS FOR INVENTIONS, and How to Procure Them. Compiled for the Use of Inventors, Patentees and others. By G. G. M. HARDINGHAM, Assoc.Mem.Inst.C.E., &c. Demy 8vo, 1*s*. 6*d*. cloth.

Labour Disputes.

CONCILIATION AND ARBITRATION in Labour Disputes: A Historical Sketch and Brief Statement of the Present Position of the Question at Home and Abroad. By J. S. JEANS, Author of "England's Supremacy," &c. Crown 8vo, 200 pp., 2*s*. 6*d*. cloth.

Pocket-Book for Sanitary Officials.

THE HEALTH OFFICER'S POCKET-BOOK: A Guide to Sanitary Practice and Law. For Medical Officers of Health, Sanitary Inspectors, Members of Sanitary Authorities, &c. By EDWARD F. WILLOUGHBY, M.D. (Lond.), &c. Fcap. 8vo, 7*s*. 6*d*., cloth.

"A mine of condensed information of a pertinent and useful kind on the various subjects of which it treats. The matter seems to have been carefully compiled and arranged for facility of reference, and it is well illustrated by diagrams and woodcuts. The different subjects are succinctly but fully and scientifically dealt with."—*The Lancet.*

"Ought to be welcome to those for whose use it is designed, since it practically boils down a reference library into a pocket volume. . . . It combines, with an uncommon degree of efficiency, the qualities of accuracy, conciseness and comprehensiveness."—*Scotsman.*

A Complete Epitome of the Laws of this Country.

EVERY MAN'S OWN LAWYER: A Handy-Book of the Principles of Law and Equity. With a Concise Dictionary of Legal Terms. By A BARRISTER. Thirty-fourth Edition, carefully Revised, and including New Acts of Parliament of 1896. Comprising the *Locomotives on Highways Act*, 1896, *amending the law to meet the case of the New Motor Cars or Horseless Carriages; the Finance Act*, 1896; *the Agricultural Rates Act*, 1896; *the Conciliation Act*, 1896; *the Truck Act*, 1896; *the Light Railways Act*, 1896; *the Judicial Trustees Act*, 1896; *the Vexatious Actions Act*, 1896; *the Wild Birds Protection Act*, 1896; *the London Cab Act*, 1896, &c. *Judicial Decisions during the year have also been duly noted.* Crown 8vo, 750 pp., price 6*s.* 8*d.* (saved at every consultation !), strongly bound in cloth. [*Just published.*

*** *The Book will be found to comprise (amongst other matter)*—

THE RIGHTS AND WRONGS OF INDIVIDUALS—LANDLORD AND TENANT—VENDORS AND PURCHASERS — LEASES AND MORTGAGES — PRINCIPAL AND AGENT — PARTNERSHIP AND COMPANIES — MASTERS, SERVANTS AND WORKMEN—CONTRACTS AND AGREEMENTS—BORROWERS, LENDERS AND SURETIES—SALE AND PURCHASE OF GOODS — CHEQUES, BILLS AND NOTES — BILLS OF SALE — BANKRUPTCY — RAILWAY AND SHIPPING LAW — LIFE, FIRE, AND MARINE INSURANCE—ACCIDENT AND FIDELITY INSURANCE—CRIMINAL LAW—PARLIAMENTARY ELECTIONS — COUNTY COUNCILS — DISTRICT COUNCILS—PARISH COUNCILS—MUNICIPAL CORPORATIONS—LIBEL AND SLANDER—PUBLIC HEALTH AND NUISANCES — COPYRIGHT, PATENTS, TRADE MARKS — HUSBAND AND WIFE — DIVORCE — INFANCY — CUSTODY OF CHILDREN — TRUSTEES AND EXECUTORS — CLERGY, CHURCHWARDENS, ETC. — GAME LAWS AND SPORTING—INNKEEPERS — HORSES AND DOGS — TAXES AND DEATH DUTIES — FORMS OF AGREEMENTS, WILLS, CODICILS, NOTICES, ETC.

☞ *The object of this work is to enable those who consult it to help themselves to the law; and thereby to dispense, as far as possible, with professional assistance and advice. There are many wrongs and grievances which persons submit to from time to time through not knowing how or where to apply for redress; and many persons have as great a dread of a lawyer's office as of a lion's den. With this book at hand it is believed that many a* SIX-AND-EIGHTPENCE *may be saved; many a wrong redressed; many a right reclaimed; many a law suit avoided; and many an evil abated. The work has established itself as the standard legal adviser of all classes, and has also made a reputation for itself as a useful book of reference for lawyers residing at a distance from law libraries, who are glad to have at hand a work embodying recent decisions and enactments.*

*** OPINIONS OF THE PRESS.

"It is a complete code of English Law written in plain language, which all can understand. . . Should be in the hands of every business man, and all who wish to abolish lawyers' bills."—*Weekly Times*

"A useful and concise epitome of the law, compiled with considerable care."—*Law Magazine.*

"A complete digest of the most useful facts which constitute English law."—*Globe.*

"This excellent handbook. . . . Admirably done, admirably arranged, and admirably cheap."—*Leeds Mercury.*

"A concise, cheap, and complete epitome of the English law. So plainly written that he who runs may read, and he who reads may understand."—*Figaro.*

"A dictionary of legal facts well put together. The book is a very useful one."—*Spectator.*

Legal Guide for Pawnbrokers.

THE PAWNBROKERS', FACTORS', AND MERCHANTS' GUIDE TO THE LAW OF LOANS AND PLEDGES. With the Statutes and a Digest of Cases. By H. C. FOLKARD, Barrister-at-Law. 3*s.* 6*d.* cloth.

The Law of Contracts.

LABOUR CONTRACTS: A Popular Handbook on the Law of Contracts for Works and Services. By DAVID GIBBONS. Fourth Edition, with Appendix of Statutes by T. F. UTTLEY, Solicitor. Fcap. 8vo, 3*s.* 6*d.* cloth.

The Factory Acts.

SUMMARY OF THE FACTORY AND WORKSHOP ACTS (1878-1891). For the Use of Manufacturers and Managers. By EMILE GARCKE and J. M. FELLS. (Reprinted from "FACTORY ACCOUNTS.") Cr. 8vo, 6*d.* sewed.

WEALE'S SERIES

OF

SCIENTIFIC & TECHNICAL

WORKS.

"It is not too much to say that no books have ever proved more popular with or more useful to young engineers and others than the excellent treatises comprised in WEALE'S SERIES."—Engineer.

A New Classified List.

	PAGE		PAGE
Civil Engineering and Surveying	50	Industrial and Useful Arts . .	57
Mining and Metallurgy . . .	51	Agriculture, Gardening, Etc. .	58
Mechanical Engineering . . .	52	Mathematics, Arithmetic, Etc. .	60
Navigation, Shipbuilding, Etc. .	53	Books of Reference and Miscellaneous Volumes	62
Architecture and Building . .	54		

CROSBY LOCKWOOD AND SON,

7, STATIONERS' HALL COURT, LONDON, E.C.

1897.

CIVIL ENGINEERING & SURVEYING.

Civil Engineering.

By HENRY LAW, M. Inst. C.E. Including a Treatise on HYDRAULIC ENGINEERING by G. R. BURNELL, M.I.C.E. Seventh Edition, revised, WITH LARGE ADDITIONS ON RECENT PRACTICE by D. KINNEAR CLARK, M. Inst. C.E. **6/6**, cloth boards **7/6**

"An admirable volume, which we warmly recommend to young engineers."—*Builder.*

Pioneer Engineering.

A Treatise on the Engineering Operations connected with the Settlement of Waste Lands in New Countries. By E. DOBSON, A.I.C.E. Second Edition . . **4/6**

"Mr. Dobson is familiar with the difficulties which have to be overcome in this class of work, and much of his advice will be valuable to young engineers proceeding to our colonies."—*Engineering.*

Iron Bridges of Moderate Span:

Their Construction and Erection. By H. W. PENDRED. With 40 illustrations **2/0**

"Students and engineers should obtain this book for constant and practical use."—*Colliery Guardian.*

A Treatise on the Application of Iron to the Construction of Bridges, Roofs, & other Works.

By FRANCIS CAMPIN, C.E. Fourth Edition **2/6**

"For numbers of young engineers the book is just the cheap, handy, first guide they want."—*Middlesbrough Weekly News.* "Remarkably accurate and well written."—*Artizan.*

Constructional Iron and Steel Work,

As applied to Public, Private, and Domestic Buildings. By FRANCIS CAMPIN C.E. **3/6**

"This practical book may be counted a most valuable work."—*British Architect.*

Tubular and other Iron Girder Bridges,

Describing the Britannia and Conway Tubular Bridges. With a Sketch of Iron Bridges, &c. By G. DRYSDALE DEMPSEY, C.E. Fourth Edition . . **2/0**

Materials and Construction.

A Theoretical and Practical Treatise on the Strains, Designing, and Erection of Works of Construction. By FRANCIS CAMPIN, C.E. Second Edition . **3/0**

"No better exposition of the practical application of the principles of construction has yet been published to our knowledge in such a cheap comprehensive form."—*Building News.*

Sanitary Work in Small Towns and Villages.

By CHARLES SLAGG, Assoc. M. Inst. C.E. Second Edition, Enlarged . . **3/0**

"This is a very useful book. There is a great deal of work required to be done in the smaller towns and villages, and this little volume will help those who are willing to do it."—*Builder.*

Construction of Roads and Streets.

In Two Parts: I. THE ART OF CONSTRUCTING COMMON ROADS, by H. LAW, C.E., Revised by D KINNEAR CLARK, C.E.; II. RECENT PRACTICE: Including Pavements of Stone, Wood, and Asphalte. By D. K. CLARK, C.E. . . **4/6**

"A book which every borough surveyor and engineer must possess, and which will be of considerable service to architects, builders, and property owners generally."—*Building News.*

Construction of Gas Works,

And the Manufacture and Distribution of Coal Gas. By S. HUGHES, C.E. Re-written by WILLIAM RICHARDS. C.E. Eighth Edition, with important Additions . **5/6**

"Will be of infinite service alike to manufacturers, distributors, and consumers."—*Foreman Engineer.*

Water Works, for the Supply of Cities and Towns.

With a Description of the Principal Geological Formations of England as influencing Supplies of Water. By SAMUEL HUGHES **4/0**

"Everyone who is debating how his village, town, or city shall be plentifully supplied with pure water should read this book.—*Newcastle Courant.*

Power of Water.

As applied to drive Flour Mills, and to give motion to Turbines and other Hydrostatic Engines. By JOSEPH GLYNN, F.R.S., &c. New Edition. Illustrated . . **2/0**

Wells and Well-Sinking.

By J. G. SWINDELL, A.R.I.B.A., and G. R. BURNELL, C.E. Revised Edition **2/0**

"Solid practical information, written in a concise and lucid style. The work can be recommended as a text-book for all surveyors, architects &c."—*Iron and Coal Trades Review.*

Drainage of Lands, Towns, and Buildings

By G. D. DEMPSEY, C.E. Revised, with large Additions on Recent Practice in Drainage Engineering, by D. KINNEAR CLARK, M.I.C.E. Third Edition . **4/6**

Embanking Lands from the Sea.

With Examples and Particulars of actual Embankments, &c. By JOHN WIGGINS, F.G.S. **2/0**

Blasting and Quarrying of Stone,

For Building and other Purposes. With Remarks on the Blowing up of Bridges. By Gen. Sir J. BURGOYNE, K.C.B. 1/6

Foundations and Concrete Works.

With Practical Remarks on Footings, Planking, Sand, Concrete. Béton, Pile-driving, Caissons, and Cofferdams. By E. DOBSON, M.R.I.B.A. Seventh Edition . 1/6

Pneumatics,

Including Acoustics and the Phenomena of Wind Currents, for the use of Beginners. By CHARLES TOMLINSON, F.R.S. Fourth Edition, enlarged. Illustrated . 1/6

Land and Engineering Surveying.

For Students and Practical Use. By T. BAKER, C.E. Fifteenth Edition, revised and corrected by J. R. YOUNG, formerly Professor of Mathematics, Belfast College. Illustrated with Plates and Diagrams 2/0

Mensuration and Measuring,

With the Mensuration and Levelling of Land for the purposes of Modern Engineering. By. T. BAKER, C.E. New Edition by E. NUGENT, C.E. 1/6

MINING AND METALLURGY.

Mineralogy,

Rudiments of. By A. RAMSAY, F.G.S. Third Edition. Woodcuts and Plates. 3/6

"The author throughout has displayed an intimate knowledge of his subject, and great facility in imparting that knowledge to others. The book is of great utility."—*Mining Journal.*

Coal and Coal Mining,

A Rudimentary Treatise on. By the late Sir WARINGTON W. SMYTH, M.A., F.R.S., &c., Chief Inspector of the Mines of the Crown. 7th Edn., revised and enlarged 3/6

"Every portion of the volume appears to have been prepared with much care, and as an outline is given of every known coal-field in this and other countries, as well as of the two principal methods of working, the book will doubtless interest a very large number of readers."—*Mining Journal.*

Metallurgy of Iron.

Containing History of Iron Manufacture, Methods of Assay, and Analyses of Iron Ores, Processes of Manufacture of Iron and Steel, &c. By H. BAUERMAN, F.G.S., A.R.S.M. With numerous Illustrations. Sixth Edition, revised and enlarged . . . 5/0

"Carefully written, it has the merit of brevity and conciseness, as to less important points; while all material matters are very fully and thoroughly entered into."—*Standard.*

Mineral Surveyor & Valuer's Complete Guide.

Comprising a Treatise on Improved Mining Surveying and the Valuation of Mining Properties, with New Traverse Tables. By W. LINTERN, C.E., Third Edition, with an Appendix on Magnetic and Angular Surveying, with Records of the Peculiarities of Needle Disturbances. With Four Plates of Diagrams, Plans, &c. . . . 3/6

"Contains much valuable information, and is thoroughly trustworthy."—*Iron & Coal Trades Review.*

Slate and Slate Quarrying,

Scientific, Practical, and Commercial. By D. C. DAVIES, F.G.S., Mining Engineer, &c. With numerous Illustrations and Folding Plates. Third Edition . . . 3/0

"One of the best and best-balanced treatises on a special subject that we have met with."—*Engineer.*

A First Book of Mining and Quarrying,

With the Sciences connected therewith, for Primary Schools and Self-Instruction. By J. H. COLLINS, F.G.S. Second Edition, with Additions 1/6

"For those concerned in schools in the mining districts, this work is the very thing that should be in the hands of their schoolmasters."—*Iron.*

Subterraneous Surveying.

By THOMAS FENWICK. Also the Method of Conducting Subterraneous Surveys without the use of the Magnetic Needle, &c. By T. BAKER, C.E. . . . 2/6

Mining Tools,

Manual of. By WILLIAM MORGANS, Lecturer on Practical Mining at the Bristol School of Mines 2/6

Mining Tools, Atlas

Of Engravings to Illustrate the above, containing 235 Illustrations of Mining Tools, drawn to Scale. 4to. 4/6

"Students, Overmen, Captains, Managers, and Viewers may gain practical knowledge and useful hints by the study of Mr. Morgans' Manual."—*Colliery Guardian.*

Physical Geology,

Partly based on Major-General PORTLOCK'S "Rudiments of Geology." By RALPH TATE, A.L.S., &c. Woodcuts 2/0

Historical Geology,

Partly based on Major-General PORTLOCK'S "Rudiments." By RALPH TATE . 2/6

Geology,

PHYSICAL and HISTORICAL. Consisting of "Physical Geology," which sets forth the Leading Principles of the Science; and "Historical Geology," which treats of the Mineral and Organic Conditions of the Earth at each successive epoch. By RALPH TATE, F.G.S. With 250 Illustrations 4/0

"The fulness of the matter has elevated the book into a manual. Its information is exhaustive and well-arranged, so that any subject may be opened upon at once."—*School Board Chronicle.*

MECHANICAL ENGINEERING.

Workman's Manual of Engineering Drawing.

By JOHN MAXTON, Instructor in Engineering Drawing, Royal Naval College, Greenwich. Seventh Edition. 300 Plates and Diagrams 3/6

"A copy of it should be kept for reference in every drawing office."—*Engineering.*

Fuels: Solid, Liquid, and Gaseous.

Their Analysis and Valuation. For the use of Chemists and Engineers. By H. J. PHILLIPS, F.C.S., formerly Analytical and Consulting Chemist to the Great Eastern Railway. Second Edition, revised 2/0

"Ought to have its place in the laboratory of every metallurgical establishment, and wherever fuel is used on a large scale."—*Chemical News.*

Fuel, Its Combustion and Economy.

Consisting of an Abridgment of "A Treatise on the Combustion of Coal and the Prevention of Smoke." By C. W. WILLIAMS, A.I.C.E. With extensive Additions by D. KINNEAR CLARK, M. Inst. C.E. Third Edition, corrected . . . 3/6

"Students should buy the book and read it, as one of the most complete and satisfactory treatises on the combustion and economy of fuel to be had."—*Engineer.*

Boilermaker's Assistant

In Drawing, Templating, and Calculating Boiler Work, &c. By J. COURTNEY, Practical Boilermaker. Edited by D. K. CLARK, C.E. Third Edition, revised 2/0

"With very great care we have gone through the 'Boilermaker's Assistant,' and have to say that it has our unqualified approval. Scarcely a point has been omitted."—*Foreman Engineer.*

Boilermaker's Ready Reckoner,

With Examples of Practical Geometry and Templating for the Use of Platers, Smiths, and Riveters. By JOHN COURTNEY. Edited by D. K. CLARK, M.I.C.E. . 4/0

*** *The last two Works in One Vol., half-bound, entitled* "THE BOILERMAKER'S READY RECKONER AND ASSISTANT." By J. COURTNEY and D. K. CLARK. *Price* 7/0

"A most useful work. No workman or apprentice should be without it."—*Iron Trade Circular.*

Steam Boilers.

Their Construction and Management. By R. ARMSTRONG, C.E. Illustrated . 1/6

"A mass of information suitable for beginners."—*Design and Work.*

Steam and Machinery Management.

A Guide to the Arrangement and Economical Management of Machinery, with Hints on Construction and Selection. By M. POWIS BALE, M. Inst. M.E. . . . 2/6

"Gives the results of wide experience."—*Lloyd's Newspaper.*

Steam and the Steam Engine,

Stationary and Portable. Being an Extension of the Treatise on the Steam Engine of Mr. J. SEWELL. By D. K. CLARK, C.E. Third Edition 3/6

"Every essential part of the subject is treated of competently, and in a popular style."—*Iron.*

The Steam Engine,

A Treatise on the Mathematical Theory of, with Rules and Examples for Practical Men. By T. BAKER, C.E. 1/6

"Teems with scientific information with reference to the steam-engine."—*Design and Work.*

The Steam Engine.

For the use of Beginners. By Dr. LARDNER. Illustrated 1/6

Locomotive Engines.

A Rudimentary Treatise on. By G. D. DEMPSEY, C.E. With large Additions treating of the Modern Locomotive, by D. K. CLARK, M. Inst. C.E. With Illustrations 3/0

"A model of what an elementary technical book should be."—*Academy.*

Locomotive Engine-Driving.

A Practical Manual for Engineers in Charge of Locomotive Engines. By MICHAEL REYNOLDS, M.S.E. Eighth Edition. 3/6 limp; cloth boards . . . 4/6

"We can confidently recommend the book, not only to the practical driver, but to everyone who takes an interest in the performance of locomotive engines."—*The Engineer.*

Stationary Engine Driving.

A Practical Manual for Engineers in Charge of Stationary Engines. By MICHAEL REYNOLDS, M.S.E. Fourth Edition. 3/6 limp; cloth boards . . . 4/6

"The author is thoroughly acquainted with his subjects, and has produced a manual which is an exceedingly useful one for the class for whom it is specially intended."—*Engineering.*

Smithy and Forge.

Including the Farrier's Art and Coach Smithing. By W. J. E. CRANE. . 2/6

"The first modern English book on the subject. Great pains have been bestowed by the author upon the book; shoeing-smiths will find it both useful and interesting."—*Builder.*

Modern Workshop Practice,

As applied to Marine, Land, and Locomotive Engines, Floating Docks, Dredging Machines, Bridges, Ship-Building, &c. By J. G. WINTON. 4th Edn., Illustrated 3/6

"Whether for the apprentice determined to master his profession, or for the artisan bent upon raising himself to a higher position, this clearly-written and practical treatise will be a great help."—*Scotsman.*

Mechanical Engineering.

Comprising Metallurgy, Moulding, Casting, Forging, Tools, Workshop Machinery, Mechanical Manipulation, Manufacture of the Steam Engine, &c. By FRANCIS CAMPIN, C.E. Third Edition, Re-written and Enlarged . . . [*Just published.* 2/6

"A sound and serviceable text-book, quite up to date."—*Building News.*

Details of Machinery.

Comprising Instructions for the Execution of various Works in Iron in the Fitting-shop, Foundry, and Boiler-Yard. By FRANCIS CAMPIN, C.E. 3/0

"A sound and practical handbook for all engaged in the engineering trades."—*Building World.*

Elementary Engineering:

A Manual for Young Marine Engineers and Apprentices. In the Form of Questions and Answers on Metals, Alloys, Strength of Materials, &c. By J. S. BREWER. Second Edition 1/6

"A useful introduction to the more elaborate text-books."—*Scotsman.*

Power in Motion:

Horse-power Motion, Toothed-Wheel Gearing, Long and Short Driving Bands, Angular Forces, &c. By JAMES ARMOUR, C.E. With 73 Diagrams. Third Edition . 2/0

"The value of the knowledge imparted cannot well be over-estimated."—*Newcastle Weekly Chron.*

Iron and Heat.

Exhibiting the Principles concerned in the Construction of Iron Beams, Pillars and Girders. By J. ARMOUR, C.E. 2/6

"A very useful and thoroughly practical little volume."—*Mining Journal.*

Practical Mechanism,

And Machine Tools. By T. BAKER, C.E. With Remarks on Tools and Machinery by J. NASMYTH, C.E. 2/6

Mechanics.

Being a concise Exposition of the General Principles of Mechanical Science, and their Applications. By CHARLES TOMLINSON, F.R.S. 1/6

Cranes,

The Construction of, and other Machinery for Raising Heavy Bodies for the Erection of Buildings, &c. By JOSEPH GLYNN, F.R.S. 1/6

NAVIGATION, SHIPBUILDING, ETC.

Sailor's Sea Book:

A Rudimentary Treatise on Navigation. By JAMES GREENWOOD, B.A. With numerous Woodcuts and Coloured Plates. New and Enlarged Edition. By W. H. ROSSER 2/6

"Is perhaps the best and simplest epitome of navigation ever compiled."—*Field.*

Practical Navigation.

Consisting of the SAILOR'S SEA BOOK, by JAMES GREENWOOD and W. H. ROSSER; together with Mathematical and Nautical Tables for the Working of the Problems, by HENRY LAW, C.E., and Prof. J. R. YOUNG. Half-bound in leather . . . 7/0

"A vast amount of information is contained in this volume, and we fancy in a very short time that it will be seen in the library of almost every ship or yacht afloat."—*Hunt's Yachting Magazine.*

Navigation and Nautical Astronomy,

In Theory and Practice. By Prof. J. R. YOUNG. New Edition. Illustrated . 2/6

"A very complete, thorough, and useful manual for the young navigator."—*Observatory.*

Mathematical Tables,

For Trigonometrical, Astronomical, and Nautical Calculations; to which is prefixed a Treatise on Logarithms, by H. LAW, C.E. Together with a Series of Tables for Navigation and Nautical Astronomy. By Professor J. R. YOUNG. New Edition 4/0

Masting, Mast-Making, and Rigging of Ships.

Also Tables of Spars, Rigging, Blocks; Chain, Wire, and Hemp Ropes, &c., relative to every class of vessels. By ROBERT KIPPING, N.A. 2/0

Sails and Sail-Making.

With Draughting, and the Centre of Effort of the Sails. Weights and Sizes of Ropes; Masting, Rigging, and Sails of Steam Vessels, &c. By R. KIPPING, N.A. . 2/6

Marine Engines and Steam Vessels.

By R. MURRAY, C.E. Eighth Edition, thoroughly Revised, with Additions by the Author and by GEORGE CARLISLE, C.E. 4/6

"An indispensable manual for the student of marine engineering."—*Liverpool Mercury.*

Iron Ship-Building.

With Practical Examples and Details. By JOHN GRANTHAM. Fifth Edition . 4/0

Naval Architecture.

An Exposition of the Elementary Principles. By JAMES PEAKE . . . 3/6

Ships for Ocean and River Service,

Principles of the Construction of. By H. A. SOMMERFELDT 1/6

An Atlas of Engravings

To Illustrate the above. Twelve large folding Plates. Royal 4to, cloth . . 7/6

Ships and Boats.

By W. BLAND. Seventh Edition, revised, with numerous Illustrations and Models 1/6

ARCHITECTURE AND BUILDING.

Constructional Iron and Steel Work,

As applied to Public, Private, and Domestic Buildings. By FRANCIS CAMPIN, C.E. 3/6

"Anyone who wants a book on ironwork as employed for stanchions, columns, and beams, will find the present volume to be suitable."—*British Architect.*

Building Estates:

A Treatise on the Development, Sale, Purchase, and Management of Building Land. By F. MAITLAND. Second Edition, revised 2/0

"This book should undoubtedly be added to the library of every professional man dealing with building land."—*Land Agent's Record.*

Science of Building:

An Elementary Treatise on the Principles of Construction. By E. WYNDHAM TARN, M.A. Lond. Third Edition, revised and enlarged 3/6

Art of Building,

Rudiments of. General Principles of Construction, Strength, and Use of Materials, Working Drawings, Specifications, &c. By EDWARD DOBSON, M.R.I.B.A. &c. 2/0

"A good book for practical knowledge, and about the best to be obtained."—*Building News.*

Book on Building,

Civil and Ecclesiastical. By Sir EDMUND BECKETT, Bart., LL.D., Q.C., F.R.A.S., Author of "Clocks and Watches and Bells," &c. Second Edition, enlarged. . 4/6

"A book which is always amusing and nearly always instructive."—*Times.*

Dwelling-Houses,

Erection of, Illustrated by a Perspective View, Plans, Elevations, and Sections of a Pair of Villas, with the Specification, Quantities, and Estimates. By S. H. BROOKS 2/6

Cottage Building.

By C. BRUCE ALLEN. Eleventh Edition, with Chapter on Economic Cottages for Allotments, by E. E. ALLEN, C.E. 2/0

Acoustics of Public Buildings:

The Laws of Sound as applied to the Arrangement of Buildings. By Professor T. ROGER SMITH, F.R.I.B.A. New Edition, revised. With numerous Illustrations. [*Just published.* 1/6

Practical Bricklaying.

General Principles of Bricklaying; Arch Drawing, Cutting and Setting; Pointing; Paving, Tiling, &c. By ADAM HAMMOND. With 68 Woodcuts . . . 1/6

"The young bricklayer will find it infinitely valuable to him."—*Glasgow Herald.*

Art of Practical Brick-Cutting and Setting.

By ADAM HAMMOND. With 90 Engravings 1/6

Brickwork:

Embodying the General and Higher Principles of Bricklaying, Cutting and Setting; with the Application of Geometry to Roof Tiling, &c. By F. WALKER . . 1/6

"Contains all that a young tradesman or student needs to learn from books."—*Building News.*

Bricks and Tiles,

Rudimentary Treatise on the Manufacture of. Containing an Outline of the Principles of Brickmaking. By E. DOBSON, M.R.I.B.A. Additions by C. TOMLINSON, F.R.S. Illustrated 3/0

"The best handbook on the subject. We can safely recommend it as a good investment."—*Builder.*

Practical Brick and Tile Book.

Comprising: BRICK AND TILE MAKING, by E. DOBSON, A.I.C.E.; Practical BRICKLAYING, by A. HAMMOND; BRICK-CUTTING and SETTING, by A. HAMMOND. 550 pp. with 270 Illustrations, strongly half-bound 6/0

Carpentry and Joinery—

THE ELEMENTARY PRINCIPLES OF CARPENTRY. Chiefly composed from the Standard Work of THOMAS TREDGOLD, C.E. With Additions, and a TREATISE ON JOINERY by E. W. TARN, M.A. Sixth Edition, revised and extended . . 3/6

Carpentry and Joinery.

Atlas of 35 Plates to accompany and illustrate the foregoing book. With Descriptive Letterpress. 4to. 6/0

"These two volumes form a complete treasury of carpentry and joinery, and should be in the hands of every carpenter and joiner in the Empire."—*Iron.*

Practical Treatise on Handrailing:

Showing New and Simple Methods. By GEO. COLLINGS. Second Edition, Revised, including a TREATISE ON STAIRBUILDING. With Plates 2/6

"Will be found of practical utility in the execution of this difficult branch of joinery."—*Builder.*

Circular Work in Carpentry and Joinery.

A Practical Treatise on Circular Work of Single and Double Curvature. By GEORGE COLLINGS. Second Edition 2/6

"Cheap in price, clear in definition, and practical in the examples selected."—*Builder.*

Roof Carpentry:

Practical Lessons in the Framing of Wood Roofs. For the use of Working Carpenters. By GEO. COLLINGS, Author of "Handrailing and Stairbuilding," &c. . . 2/0

Construction of Roofs, of Wood and Iron:

Deduced chiefly from the Works of Robison, Tredgold, and Humber. By E. WYNDHAM TARN, M.A., Architect. Second Edition, revised . . . 1/6

"Mr. Tarn is so thoroughly master of his subject, that although the treatise was founded on the works of others he has given it a distinct value of his own. It will be found valuable by all students."—*Builder.*

The Joints Made and Used by Builders.

By WYVILL J. CHRISTY, Architect. With 160 Woodcuts 3/0

"The work is deserving of high commendation."—*Builder.*

Shoring,

And its Application: A Handbook for the use of Students. By G. H. BLAGROVE 1/6

"We recommend this valuable treatise to all students."—*Building News.*

Timber Importer's, Timber Merchant's, and Builder's Standard Guide.

By R. E. GRANDY. 2/0

"Everything it pretends to be: built up gradually, it leads one from a forest to a treenail, and throws in, as a makeweight, a host of material concerning bricks, columns, cisterns, &c."—*English Mechanic.*

Plumbing:

A Text-Book to the Practice of the Art or Craft of the Plumber. With Chapters upon House Drainage and Ventilation. By WM. PATON BUCHAN, R.P., Sanitary Engineer. Seventh Edition, Rewritten and Enlarged, with 500 Illustrations 3/6

"A text-book which may be safely put into the hands of every young plumber, and which will also be found useful by architects and medical professors."—*Builder.*

Ventilation:

A Text-Book to the Practice of the Art of Ventilating Buildings. By W. P. BUCHAN, R.P., Author of "Plumbing," &c. With 170 Illustrations 3/6

The Practical Plasterer:

A Compendium of Plain and Ornamental Plaster Work. By WILFRED KEMP 2/0

House Painting, Graining, Marbling, and Sign Writing:

With a Course of Elementary Drawing, and a Collection of Useful Receipts. By ELLIS A. DAVIDSON. Seventh Edition. Coloured Plates 5/0

*** *The above, in cloth boards, strongly bound,* 6/0.

"A mass of information of use to the amateur and of value to the practical man."—*English Mechanic.*

Grammar of Colouring.

Applied to Decorative Painting and the Arts. By GEORGE FIELD. New Edition, revised and enlarged by ELLIS A. DAVIDSON. With Coloured Plates . . 3/0

"The book is a most useful *resumé* of the properties of pigments."—*Builder.*

Elementary Decoration:

As Applied to Dwelling-Houses, &c. By JAMES W. FACEY. Illustrated . . 2/0

"The principles which ought to guide the decoration of dwelling-houses are clearly set forth, and elucidated by examples; while full instructions are given to the learner."—*Scotsman.*

Practical House Decoration.

A Guide to the Art of Ornamental Painting, the Arrangement of Colours in Apartments, and the Principles of Decorative Design. By JAMES W. FACEY . . . 2/6

*** *The last two Works in One handsome Vol., half-bound, entitled* "HOUSE DECORATION, ELEMENTARY AND PRACTICAL," *price* 5/0.

Warming and Ventilation

Of Domestic and Public Buildings, &c. By C. TOMLINSON, F.R.S. . . 3/0

Portland Cement for Users.

By HENRY FAIJA, A.M. Inst. C.E. Third Edition, corrected 2/0

"Supplies in a small compass all that is necessary to be known by users of cement."—*Building News.*

Limes, Cements, Mortars, Concretes, Mastics, Plastering, &c.

By G. R. BURNELL, C.E. Thirteenth Edition 1/6

Masonry and Stonecutting,

The Principles of Masonic Projection, and their Application to Construction. By E. DOBSON, M.R.I.B.A. 2/6

Arches, Piers, Buttresses, &c.

Experimental Essays on the Principles of Construction in. By WILLIAM BLAND 1/6

Quantities and Measurements,

In Bricklayers', Masons', Plasterers', Plumbers', Painters', Paperhangers', Gilders', Smiths', Carpenters' and Joiners' Work. By A. C. BEATON, Surveyor . . 1/6

"This book is indispensable to builders and their quantity clerks."—*English Mechanic.*

Complete Measurer;

Setting forth the Measurement of Boards, Glass, Timber, and Stone. By R. HORTON. Fifth Edition 4/0

*** *The above, strongly bound in leather, price* 5/0.

Light:

An Introduction to the Science of Optics. Designed for the Use of Students of Architecture, Engineering, and other Applied Sciences. By E. W. TARN, M.A. . 1/6

Hints to Young Architects.

By GEORGE WIGHTWICK, Architect, Author of "The Palace of Architecture," &c., &c. Fifth Edition, revised and enlarged by G. HUSKISSON GUILLAUME, Architect . 3/6

"A copy ought to be considered as necessary a purchase as a box of instruments."—*Architect.*

Architecture—Orders.

The Orders and their Æsthetic Principles. By W. H. LEEDS. Illustrated . 1/6

Architecture—Styles.

The History and Description of the Styles of Architecture of Various Countries, from the Earliest to the Present Period. By T. TALBOT BURY, F.R.I.B.A., &c. Illustrated 2/0

ORDERS AND STYLES OF ARCHITECTURE, *in One Vol.*, 3/6.

Architecture—Design.

The Principles of Design in Architecture, as deducible from Nature and exemplified in the Works of the Greek and Gothic Architects. By EDW. L. GARBETT, Architect 2/6

"We know no work that we would sooner recommend to an attentive reader desirous to obtain clear views of the nature of architectural art. The book is a valuable one."—*Builder.*

The three preceding Works in One handsome. Vol., half-bound, entitled "MODERN ARCHITECTURE," *price* 6/0.

Architectural Modelling in Paper,

The Art of. By T. A. RICHARDSON. With Illustrations, engraved by O. JEWITT 1/6

"A valuable aid to the practice of architectural modelling."—*Builder's Weekly Reporter.*

Perspective for Beginners.

For Students and Amateurs in Architecture, Painting, &c. By G. PYNE . . 2/0

Glass Staining, and the Art of Painting on Glass.

From the German of Dr. GESSERT and EMANUEL OTTO FROMBERG. With an Appendix on THE ART OF ENAMELLING 2/6

Vitruvius—The Architecture of Marcus Vitruvius Pollio.

In Ten Books. Translated from the Latin by JOSEPH GWILT, F.S.A., F.R.A.S. With 23 Plates 5/0

N.B.—This is the only Edition of VITRUVIUS *procurable at a moderate price.*

Grecian Architecture,

An Inquiry into the Principles of Beauty in; with an Historical View of the Rise and Progress of the Art in Greece. By the EARL OF ABERDEEN 1/0

*** *The two preceding Works in One handsome Vol., half-bound, entitled* "ANCIENT ARCHITECTURE," *price* 6/0.

INDUSTRIAL AND USEFUL ARTS.

Cements, Pastes, Glues, and Gums.

A Practical Guide to the Manufacture and Application of the various Agglutinants required for Workshop, Laboratory, or Office Use. With upwards of 900 Recipes and Formulæ. By H. C. STANDAGE. 2/0

"As a revelation of what are considered trade secrets, this book will arouse an amount of curiosity among the large number of industries it touches."—*Daily Chronicle.*

Clocks and Watches, and Bells,

A Rudimentary Treatise. By Sir EDMUND BECKETT. Seventh Edition. . 4/6

*** *The above, handsomely bound, Cloth Boards,* 5/6.

"The best work on the subject probably extant. The treatise on bells is undoubtedly the best in the language."—*Engineering.* "The only modern treatise on clock-making."—*Horological Journal.*

Electro-Metallurgy,

Practically Treated. By ALEXANDER WATT. Tenth Edition, enlarged and revised. With Additional Illustrations, and including the most Recent Processes . . 3/6

"From this book both amateur and artisan may learn everything necessary."—*Iron.*

Goldsmith's Handbook,

Containing full Instructions in the Art of Alloying, Melting, Reducing, Colouring, Collecting, and Refining. The processes of Manipulation, Recovery of Waste, Chemical and Physica Properties of Gold; Solders, Enamels, and other useful Rules and Recipes, &c. By GEORGE E. GEE. Third Edition, considerably enlarged 3/0

"A good, sound, technical educator."—*Horological Journal.*

Silversmith's Handbook,

On the same plan as the above. By GEORGE E. GEE. Second Edition, Revised 3/0

'A valuable sequel to the author's 'Practical Goldworker.'"—*Silversmith's Trade Journal.*

*** *The two preceding Works, in One handsome Vol., half-bound, entitled* "THE GOLDSMITH'S AND SILVERSMITH'S COMPLETE HANDBOOK," 7/0.

Hall-Marking of Jewellery.

Comprising an account of all the different Assay Towns of the United Kingdom; with the Stamps at present employed; also the Laws relating to the Standards and Hall-Marks at the various Assay Offices. By GEORGE E. GEE. 3/0

"Deals thoroughly with its subject from a manufacturer's and dealer's point of view."—*Jeweller.*

"A valuable and trustworthy guide."—*English Mechanic.*

Practical Organ Building.

By W. E. DICKSON, M.A., Precentor of Ely Cathedral. Second Edition, Revised 2/6

"The amateur builder will find in this book all that is necessary to enable him personally to construct a perfect organ with his own hands."—*Academy.*

"The best work on the subject that has yet appeared in book form."—*English Mechanic.*

Coach-Building:

A Practical Treatise, Historical and Descriptive. By JAMES W. BURGESS . 2/6

"This handbook will supply a long-felt want, not only to manufacturers themselves, but more particularly apprentices, and others whose occupations may be in any way connected with the trade of coach-building."—*European Mail.*

Brass Founder's Manual:

Instructions for Modelling, Pattern Making, Moulding, Turning, &c. By W. GRAHAM 2/0

Sheet Metal-Worker's Guide.

A Practical Handbook for Tinsmiths, Coppersmiths, Zincworkers, &c., with 46 Diagrams and Working Patterns. By W. J. E. CRANE. Second Edition, revised 1/6

"The author has acquitted himself with considerable tact in choosing his examples, and with no less ability in treating them."—*Plumber.*

Sewing Machinery.

Its Construction, History, &c. With full Technical Directions for Adjusting, &c. By J. W. URQUHART, C.E. 2/0

"A full description of the principles and construction of the leading machines, and minute instructions as to their management."—*Scotsman.*

Gas Fitting:

A Practical Handbook. By JOHN BLACK. Revised Edition. With 130 Illustrations 2/6.

"Contains all the requisite information for the successful fitting of houses with a gas service, &c. It is written in a simple practical style, and we heartily recommend it."—*Plumber and Decorator.*

Construction of Door Locks.

From the Papers of A. C. HOBBS. Edited by CHARLES TOMLINSON, F.R.S. With a Note upon IRON SAFES by ROBERT MALLET. Illustrated. . . . . 2/6.

The Model Locomotive Engineer, Fireman, and Engine-Boy.

Comprising an Historical Notice of the Pioneer Locomotive Engines and their Inventors. By MICHAEL REYNOLDS . . . . . 3/6.

Art of Letter Painting made Easy.

By JAMES GREIG BADENOCH. With 12 full-page Engravings of Examples. . 1/6

"Any intelligent lad who fails to turn out decent work after studying this system, has mistaken his vocation."—*English Mechanic.*

Art of Boot and Shoemaking,

Including Measurement, Last-fitting, Cutting-out, Closing and Making; with a Description of the most Approved Machinery employed. By J. B. LENO . 2/0

"By far the best work ever written on the subject. The chapter on clicking, which shows how waste may be prevented, will save fifty times the price of the book."—*Scottish Leather Trader.*

Mechanical Dentistry:

A Practical Treatise on the Construction of the Various Kinds of Artificial Dentures, comprising also Useful Formulæ, Tables and Receipts. By C. HUNTER . . 3/0.

Wood Engraving:

A Practical and Easy Introduction to the Study of the Art. By W. N. BROWN 1/6.

Laundry Management.

A Handbook for Use in Private and Public Laundries. Including Accounts of Modern Machinery and Appliances. By the EDITOR of *The Laundry Journal* . . 2/0

"This book should certainly occupy an honoured place on the shelves of all housekeepers who wish to keep themselves *au courant* of the newest appliances and methods."—*The Queen.*

AGRICULTURE, GARDENING, ETC.

Draining and Embanking.

A Practical Treatise. By JOHN SCOTT, late Professor of Agriculture and Rural Economy at the Royal Agricultural College, Cirencester. With 68 Illustrations . . . 1/6.

"A valuable handbook to the engineer as well as to the surveyor."—*Land.*

Irrigation and Water Supply:

A Practical Treatise on Water Meadows, Sewage Irrigation, Warping, &c.; on the Construction of Wells, Ponds, and Reservoirs, &c. By Professor J. SCOTT . 1/6.

"A valuable and indispensable book for the estate manager and owner."—*Forestry.*

Farm Roads, Fences, and Gates:

A Practical Treatise on the Roads, Tramways, and Waterways of the Farm; the Principles of Enclosures; and on Fences, Gates, and Stiles. By Prof. JOHN SCOTT . 1/6.

"A useful practical work, which should be in the hands of every farmer."—*Farmer.*

Farm Buildings:

A Practical Treatise on the Buildings necessary for various kinds of Farms, their Arrangement and Construction, with Plans and Estimates. By Professor J. SCOTT 2/0

"No one who is called upon to design farm buildings can afford to be without this work."—*Builder.*

Barn Implements and Machines:

Treating of the Application of Power to the Operations of Agriculture; and of the various Machines used in the Threshing-barn, in the Stockyard, Dairy, &c. By Professor JOHN SCOTT. With 123 Illustrations . . . . . 2/0.

Field Implements and Machines:

With Principles and Details of Construction and Points of Excellence, their Management, &c. By Professor JOHN SCOTT. With 138 Illustrations . . . 2/0.

Agricultural Surveying:

A Treatise on Land Surveying, Levelling, and Setting-out; with Directions for Valuing and Reporting on Farms and Estates. By Professor J. SCOTT . 1/6.

Farm Engineering.

By Professor JOHN SCOTT. Comprising the above Seven Volumes in One, 1,150 pages, and over 600 Illustrations. Half-bound . . . . . 12/0.

"A copy of this work should be treasured up in every library where the owner thereof is in any way connected with land."—*Farm and Home.*

Outlines of Farm Management.

Treating of the General Work of the Farm; Stock; Contract Work; Labour, &c. By R. SCOTT BURN, Author of "Outlines of Modern Farming," &c. . . . 2/6

"The book is eminently practical, and may be studied with advantage by beginners in agriculture, while it contains hints which will be useful to old and successful farmers."—*Scotsman.*

Outlines of Landed Estates Management.

Treating of the Varieties of Lands, Methods of Farming, the Setting-out of Farms, &c.; Roads, Fences, Gates, Irrigation, Drainage, &c. By R. S. BURN . . . 2/6

"A complete and comprehensive outline of the duties appertaining to the management of landed estates."—*Journal of Forestry.*

The above Two Vols. in One, handsomely half-bound, entitled "OUTLINES OF LANDED ESTATES AND FARM MANAGEMENT." By ROBERT SCOTT BURN. *Price* 6/0.

Soils, Manures, and Crops.

(Vol. I. OUTLINES OF MODERN FARMING.) By R. SCOTT BURN. Woodcuts . 2/0

Farming and Farming Economy,

Historical and Practical. (Vol. II. OUTLINES OF MODERN FARMING.) By R. SCOTT BURN 3/0

"Eminently calculated to enlighten the agricultural community on the varied subjects of which it treats; hence it should find a place in every farmer's library."—*City Press.*

Stock: Cattle, Sheep, and Horses.

(Vol. III. OUTLINES OF MODERN FARMING.) By R. SCOTT BURN. Woodcuts 2/6

"The author's grasp of his subject is thorough, and his grouping of facts effective. . . . We commend this excellent treatise."—*Weekly Dispatch.*

Dairy, Pigs, and Poultry.

(Vol. IV. OUTLINES OF MODERN FARMING.) By R. SCOTT BURN. Woodcuts 2/0

"We can testify to the clearness and intelligibility of the matter, which has been compiled from the best authorities."—*London Review.*

Utilization of Sewage, Irrigation, &c.

(Vol. V. OUTLINES OF MODERN FARMING.) By R. SCOTT BURN. Woodcuts 2/6

"A work containing valuable information, which will recommend itself to all interested in modern farming."—*Field.*

Outlines of Modern Farming.

By R. SCOTT BURN, Author of "Landed Estates Management," &c. Consisting of the above Five Volumes in One, 1,250 pp., profusely Illustrated, half-bound . . 12/0

"The aim of the author has been to make his work at once comprehensive and trustworthy, and in this aim he has succeeded to a degree which entitles him to much credit."—*Morning Advertiser.*

Book-keeping for Farmers and Estate Owners.

A Practical Treatise, presenting, in Three Plans, a System adapted for all classes of Farms. By J. M. WOODMAN, Chartered Accountant. Third Edition, revised . 2/6

*** *The above, in cloth boards, strongly bound,* 3/6.

"Will be found of great assistance by those who intend to commence a system of book-keeping, the author's examples being clear and explicit, and his explanations full and accurate."—*Live Stock Journal.*

Ready Reckoner for Admeasurement of Land,

By A. ARMAN. Third Edition, revised and extended by C. NORRIS, Surveyor . 2/0

"A very useful book to all who have land to measure."—*Mark Lane Express.*
"Should be in the hands of all persons having any connection with land."—*Irish Farm.*

Ready Reckoner for Millers, Corn Merchants,

And Farmers. Second Edition, revised, with a Price List of Modern Flour Mill Machinery. By W. S. HUTTON, C.E. 2/0

"Will prove an indispensable *vade mecum.* Nothing has been spared to make the book complete and perfectly adapted to its special purpose."—*Miller.*

The Hay and Straw Measurer:

New Tables for the use of Auctioneers, Valuers, Farmers, Hay and Straw Dealers, &c., forming a complete Calculator and Ready Reckoner. By JOHN STEELE . . 2/0

"A most useful handbook. It should be in every professional office where agricultural valuations are conducted."—*Land Agent's Record.*

Meat Production:

A Manual for Producers, Distributors, and Consumers of Butchers' Meat. By JOHN EWART 2/6

"A compact and handy volume on the meat question. —*Meat and Provision Trades Review.*

Sheep:

The History, Structure, Economy, and Diseases of. By W. C. SPOONER. Fifth Edition, with Engravings, including Specimens of New and Improved Breeds . . . **3/6**

"The book is decidedly the best of the kind in our language."—*Scotsman.*

Market and Kitchen Gardening.

By C. W. SHAW, late Editor of "Gardening Illustrated" **3/0**

"The most valuable compendium of kitchen and market-garden work published."—*Farmer.*

Kitchen Gardening made Easy.

Showing the best means of Cultivating every known Vegetable and Herb, &c., with directions for management all the year round. By GEO. M. F. GLENNY. Illustrated **1/6**

"This book will be found trustworthy and useful."—*North British Agriculturist.*

Cottage Gardening;

Or, Flowers, Fruits, and Vegetables for Small Gardens. By E. HOBDAY . . **1/6**

"Definite instructions as to the cultivation of small gardens."—*Scotsman.*

Garden Receipts.

Edited by CHARLES W. QUIN. Third Edition **1/6**

"A singularly complete collection of the principal receipts needed by gardeners."—*Farmer.*

Fruit Trees,

The Scientific and Profitable Culture of. From the French of M. DU BREUIL. Fourth Edition, carefully Revised by GEORGE GLENNY. With 187 Woodcuts . . **3/6**

"The book teaches how to prune and train fruit trees to perfection."—*Field.*

Tree Planter and Plant Propagator:

With numerous Illustrations of Grafting, Layering, Budding, Implements, Houses, Pits, &c. By S. WOOD, Author of "Good Gardening," &c. **2/0**

"Sound in its teaching and very comprehensive in its aim. It is a good book."—*Gardeners' Magazine.*

Tree Pruner:

Being a Practical Manual on the Pruning of Fruit Trees, including also their Training and Renovation, also treating of the Pruning of Shrubs, Climbers, and Flowering Plants. With numerous Illustrations. By SAMUEL WOOD, Author of "Good Gardening," &c. **1/6**

"A useful book, written by one who has had great experience."—*Mark Lane Express.*

*** *The above Two Vols. in One, handsomely half-bound, entitled* "THE TREE PLANTER, PROPAGATOR AND PRUNER." By SAMUEL WOOD. *Price* **3/6.**

Art of Grafting and Budding.

By CHARLES BALTET. With Illustrations **2/6**

"The one standard work on this subject."—*Scotsman.*

MATHEMATICS, ARITHMETIC, ETC.

Descriptive Geometry,

An Elementary Treatise on; with a Theory of Shadows and of Perspective, extracted from the French of G. MONGE. To which is added a Description of the Principles and Practice of Isometrical Projection. By J. F. HEATHER, M.A. With 14 Plates. **2/0**

Practical Plane Geometry:

Giving the Simplest Modes of Constructing Figures contained in one Plane and Geometrical Construction of the Ground. By J. F. HEATHER, M.A. . **2/0**

"The author is well-known as an experienced professor, and the volume contains as complete a collection of problems as is likely to be required in ordinary practice."—*Architect.*

Analytical Geometry and Conic Sections.

By JAMES HANN. New Edition, Enlarged by Professor J. R. YOUNG . . **2/0**

"The author's style is exceedingly clear and simple, and the book is well adapted for the beginner and those who may be obliged to have recourse to self-tuition."—*Engineer.*

Euclid,

THE ELEMENTS OF; with many Additional Propositions and Explanatory Notes; to which is prefixed an Introductory Essay on Logic. By HENRY LAW, C.E. . **2/6**

*** *Sold also separately, viz.:—*

EUCLID. The First Three Books. By HENRY LAW, C.E. **1/6**
EUCLID. Books 4, 5, 6, 11, 12. By HENRY LAW, C.E. **1/6**

Plane Trigonometry,

The Elements of. By JAMES HANN, M.A. Sixth Edition **1/6**

Spherical Trigonometry,

The Elements of. By JAMES HANN. Revised by CHARLES H. DOWLING, C.E. 1/0

*** *Or with "The Elements of Plane Trigonometry," in One Vol.*, 2/6.

Differential Calculus,

Elements of the. By W. S. B. WOOLHOUSE, F.R.A.S., &c. 1/6

Integral Calculus.

By HOMERSHAM COX, B.A. 1/0

Algebra,

The Elements of. By JAMES HADDON, M.A., formerly Mathematical Master of King's College School. With Appendix, containing Miscellaneous Investigations, and a collection of Problems 2/0

Key and Companion to the Above.

An extensive repository of Solved Examples and Problems in Illustration of the various Expedients necessary in Algebraical Operations. By J. R. YOUNG. . 1/6

Commercial Book-keeping.

With Commercial Phrases and Forms in English, French, Italian, and German. By JAMES HADDON, M.A., formerly Mathematical Master, King's College School . 1/6

Arithmetic,

A Rudimentary Treatise on: with full Explanations of its Theoretical Principles, and numerous Examples for Practice. For the use of Schools and for Self-Instruction. By J. R. YOUNG, late Professor of Mathematics in Belfast College. Eleventh Edition 1/6

Key to the Above.

By J. R. YOUNG 1/6

Equational Arithmetic,

Applied to Questions of Interest, Annuities, Life Assurance, and General Commerce; with various Tables by which all calculations may be greatly facilitated. By W. HIPSLEY 2/0

Arithmetic,

Rudimentary, for the Use of Schools and Self-Instruction. By JAMES HADDON, M.A. Revised by ABRAHAM ARMAN 1/6

Key to the Above.

By A. ARMAN 1/6

Mathematical Instruments,

A Treatise on; Their Construction, Adjustment, Testing, and Use concisely explained. By J. F. HEATHER, M.A., of the Royal Military Academy, Woolwich. Fourteenth Edition, Revised with Additions, by A. T. WALMISLEY, M.I.C.E., Fellow of the Surveyors' Institution. Original Edition in One Vol., Illustrated . . . 2/0

*** *In ordering be careful to say "Original Edition," to distinguish it from the Enlarged Edition in Three Vols.* (*see below*).

Drawing and Measuring Instruments.

Including—I. Instruments employed in Geometrical and Mechanical Drawing, and in the Construction, Copying, and Measurement of Maps and Plans. II. Instruments used for the purposes of Accurate Measurement, and for Arithmetical Computations. By J. F. HEATHER, M.A. 1/6

Optical Instruments.

Including (more especially) Telescopes, Microscopes, and Apparatus for producing copies of Maps and Plans by Photography. By J. F. HEATHER, M.A. Illustrated 1/6

Surveying and Astronomical Instruments.

Including—I. Instruments used for Determining the Geometrical Features of a portion of Ground. II. Instruments employed in Astronomical Observations. By J. F. HEATHER, M.A. Illustrated 1/6

*** *The above Three Volumes form an enlargement of the Author's original work, "Mathematical Instruments," price* 2/0.

Mathematical Instruments:

Their Construction, Adjustment, Testing and Use. Comprising Drawing, Measuring, Optical, Surveying, and Astronomical Instruments. By J. F. HEATHER, M.A. Enlarged Edition, for the most part re-written. Three Parts as above 4/6

"An exhaustive treatise, belonging to the well-known Weale's Series. Mr. Heather's experience well qualifies him for the task he has so ably fulfilled."—*Engineering and Building Times.*

Slide Rule, and How to Use It.

Containing full, easy, and simple Instructions to perform all Business Calculations with unexampled rapidity and accuracy. By CHARLES HOARE, C.E. With a Slide Rule, in tuck of cover. Fifth Edition 2/6

Mathematical Tables,

For Trigonometrical, Astronomical, and Nautical Calculations; to which is prefixed a Treatise on Logarithms. by H. LAW, C.E. Together with a Series of Tables for Navigation and Nautical Astronomy. By Professor J. R. YOUNG. New Edition **4/0**

Logarithms.

With Mathematical Tables for Trigonometrical, Astronomical, and Nautical Calculations. By HENRY LAW, C.E. Revised Edition. (Forming part of the above work) **3/0**

Theory of Compound Interest and Annuities:

With Tables of Logarithms for the more Difficult Computations of Interest, Discount, Annuities, &c., in all their Applications and Uses for Mercantile and State Purposes. By FEDOR THOMAN, of the Société Crédit, Mobilier, Paris. Fourth Edition . **4/0**

"A very powerful work, and the author has a very remarkable command of his subject."—Professor A. DE MORGAN. "We recommend it to the notice of actuaries and accountants."—*Athenæum.*

Treatise on Mathematics,

As applied to the Constructive Arts. By FRANCIS CAMPIN, C.E., &c. 2nd Edn. **3/0**

"Should be in the hands of everyone connected with building construction."—*Builder's Reporter.*

Astronomy.

By the late Rev. ROBERT MAIN, M.A., F.R.S. Third Edition revised and corrected. By WILLIAM THYNNE LYNN, B.A., F.R.A.S. **2/0**

'A sound and simple treatise, very carefully edited and a capital book for beginners "—*Knowledge*

Statics and Dynamics,

The Principles and Practice of; embracing also a clear development of Hydrostatics, Hydrodynamics and Central Forces. By T. BAKER, C.E. Fourth Edition **1/6**

BOOKS OF REFERENCE AND MISCELLANEOUS VOLUMES.

Manual of the Mollusca:

A Treatise on Recent and Fossil Shells. By Dr. S. P. WOODWARD, A.L.S. With Appendix by RALPH TATE, A.L.S., F.G.S. With numerous Plates and 300 Woodcuts **7/6**

"A storehouse of conchological and geological information."—*Hardwicke's Science Gossip.*

Dictionary of Painters,

And Handbook for Picture Amateurs; being a Guide for Visitors to Public and Private Picture Galleries, and for Art Students, including Glossary of Terms, &c. By PHILIPPE DARYL, B.A. **2/6**

"Considering its small compass, really admirable. We cordially recommend the book."—*Builder.*

Painting Popularly Explained.

By THOMAS JOHN GULLICK, Painter, and JOHN TIMBS, F.S.A. Including Fresco, Oil, Mosaic, Water Colour, Water-Glass, Tempera, Encaustic, Miniature, Painting on Ivory, Vellum, Pottery, Enamel, Glass, &c. Fifth Edition. **5/0**

*** *Adopted as a Prize Book at South Kensington.*

"Much may be learned, even by those who fancy they do not require to be taught, from the careful perusal of this unpretending but comprehensive treatise."—*Art Journal.*

Dictionary of Terms used in Architecture,

Building, Engineering, Mining, Metallurgy, Archæology, the Fine Arts, &c. By JOHN WEALE. Sixth Edition. Edited by ROBT. HUNT, F.R.S., Keeper of Mining Records, Editor of "Ure's Dictionary." Numerous Illustrations . . **5/0**

*** *The above, strongly bound in cloth boards, price* **6/0.**

"The best small technological dictionary in the language."—*Architect.*

Music,

A Rudimentary and Practical Treatise on. By CHARLES CHILD SPENCER . **2/6**

"Mr. Spencer has marshalled his information with much skill, and yet with a simplicity that must recommend his works to all who wish to thoroughly understand music."—*Weekly Times.*

Pianoforte,

The Art of Playing the. With Exercises and Lessons. By C. C. SPENCER . **1/6**

"A sound and excellent work, written with spirit, and calculated to inspire the pupil with a desire to aim at high accomplishment in the art."—*School Board Chronicle*

House Manager:

Being a Guide to Housekeeping, Practical Cookery, Pickling and Preserving, Household Work, Dairy Management, the Table and Dessert, Cellarage of Wines, Home-brewing and Wine-making, the Boudoir and Dressing-room, Travelling, Stable Economy, Gardening Operations, &c. By AN OLD HOUSEKEEPER . . 3/6

"We find here directions to be discovered in no other book, tending to save expense to the pocket, as well as labour to the head."—*John Bull.*

Manual of Domestic Medicine.

By R. GOODING, B.A., M.D. Intended as a Family Guide in all Cases of Accident and Emergency. Third Edition, carefully revised 2/0

"The author has, we think, performed a useful service by placing at the disposal of those situated, by unavoidable circumstances, at a distance from medical aid, a reliable and sensible work in which professional knowledge and accuracy have been well seconded by the ability to express himself in ordinary untechnical language."—*Public Health.*

Management of Health.

A Manual of Home and Personal Hygiene. By the Rev. JAMES BAIRD, B.A. . 1/0

"The author gives sound instruction for the preservation of health."—*Athenæum.*

"It is wonderfully reliable, it is written with excellent taste, and there is instruction crowded into every page."—*English Mechanic.*

House Book,

Comprising: I. THE HOUSE MANAGER. By AN OLD HOUSEKEEPER. II. DOMESTIC MEDICINE. By RALPH GOODING, M.D. III. MANAGEMENT OF HEALTH. By JAMES BAIRD. In One Vol., strongly half-bound 6/0

Natural Philosophy,

For the Use of Beginners. By CHARLES TOMLINSON, F.R.S. 1/6

Electric Telegraph:

Its History and Progress; with Descriptions of some of the Apparatus. By R. SABINE, C.E., F.S.A., &c. 3/0

"Essentially a practical and instructive work."—*Daily Telegraph.*

Handbook of Field Fortification.

By Major W. W. KNOLLYS, F.R.G.S. With 163 Woodcuts. 3/0

"A well-timed and able contribution to our military literature. . . . The author supplies, in clear business style, all the information likely to be practically useful."—*Chambers of Commerce Chronicle.*

Logic,

Pure and Applied. By S. H. EMMENS. Third Edition. 1/6

"This admirable work should be a text-book not only for schools, students, and philosophers, for all *litterateurs* and men of science, but for those concerned in the practical affairs of life, &c."—*The News.*

Locke's Essays on the Human Understanding.

Selections, with Notes by S. H. EMMENS 1/6

Compendious Calculator

(*Intuitive Calculations*); or Easy and Concise Methods of performing the various Arithmetical Operations required in Commercial and Business Transactions; together with Useful Tables, &c. By DANIEL O'GORMAN. Twenty-seventh Edition, carefully revised by C. NORRIS 2/6

*** *The above, strongly half-bound, price* 3/6.

"It would be difficult to exaggerate the usefulness of this book to everyone engaged in commerce or manufacturing industry. It is crammed full with rules and formulæ for shortening and employing calculations in money, weights and measures, &c., of every sort and description."—*Knowledge.*

Measures, Weights, and Moneys of all Nations,

And an Analysis of the Christian, Hebrew, and Mahometan Calendars. By W. S. B. WOOLHOUSE, F.R.A.S., F.S.S. Seventh Edition 2/6

"A work necessary for every mercantile office."—*Building Trades Journal.*

Grammar of the English Tongue,

Spoken and Written. With an Introduction to the Study of Comparative Philology. By HYDE CLARKE, D.C.L. Fifth Edition 1/6

Dictionary of the English Language,

As Spoken and Written. Containing about 100,000 Words. By HYDE CLARKE, D.C.L. 3/6

Complete with the GRAMMAR, 5/6.

Composition and Punctuation,

Familiarly Explained for those who have neglected the Study of Grammar. By JUSTIN BRENAN. Eighteenth Edition 1/6

French Grammar.

With Complete and Concise Rules on the Genders of French Nouns. By G. L. STRAUSS, Ph.D. 1/6

English-French Dictionary.

By ALFRED ELWES 2/0

French Dictionary.

In Two Parts: I. French-English. II. English-French. Complete in One Vol. 3/0

*** *Or with the* GRAMMAR, 4/6.

French and English Phrase Book.

Containing Introductory Lessons, with Translations, Vocabularies of Words, Collection of Phrases, and Easy Familiar Dialogues 1/6

German Grammar.

Adapted for English Students, from Heyse's Theoretical and Practical Grammar, by Dr. G. L. STRAUSS 1/6

German Triglot Dictionary.

By N. E. S. A. HAMILTON. Part I. German-French-English. Part II. English-German-French. Part III. French-German-English 3/0

German Triglot Dictionary

(As above). Together with German Grammar in One Vol. 5/0

Italian Grammar

Arranged in Twenty Lessons, with Exercises. By ALFRED ELWES . . . 1/6

Italian Triglot Dictionary,

Wherein the Genders of all the Italian and French Nouns are carefully noted down. By ALFRED ELWES. Vol I. Italian-English-French 2/6

Italian Triglot Dictionary.

By ALFRED ELWES. Vol. II. English-French-Italian 2/6

Italian Triglot Dictionary.

By ALFRED ELWES. Vol. III. French-Italian-English 2/6

Italian Triglot Dictionary

(As above). In One Vol. 7/6

Spanish Grammar.

In a Simple and Practical Form. With Exercises. By ALFRED ELWES . . 1/6

Spanish-English and English-Spanish Dictionary.

Including a large number of Technical Terms used in Mining, Engineering, &c., with the proper Accents and the Gender of every Noun. By ALFRED ELWES . . 4/0

*** *Or with the* GRAMMAR, 6/0.

Portuguese Grammar,

In a Simple and Practical Form. With Exercises. By ALFRED ELWES. . 1/6

Portuguese English and English-Portuguese Dictionary.

Including a large number of Technical Terms used in Mining, Engineering, &c., with the proper Accents and the Gender of every Noun. By ALFRED ELWES. Third Edition, revised 5/0

*** *Or with the* GRAMMAR, 7/0.

Animal Physics,

Handbook of. By DIONYSIUS LARDNER, D.C.L. With 520 Illustrations. In One Vol. (732 pages), cloth boards 7/6

*** *Sold also in Two Parts, as follows:—*

ANIMAL PHYSICS. By Dr. LARDNER. Part I., Chapters I.—VII. . . 4/0
ANIMAL PHYSICS. By Dr. LARDNER. Part II., Chapters VIII.—XVIII. . 3/0

INDEX TO CATALOGUE.

PAGE

ABERDEEN (Earl of), Grecian Architecture 57
Acoustics of Buildings, *Smith* ... 54
Actuarial Tables, *Gordon* 42
Agricultural Note Book, *McConnell* 44
—— Surveying, *Scott* 58
—— Valuing, *Bright* 46
Algebra, *Haddon* 61
Alkali Trade, *Lomas* 35
ALLEN (C. B.) Cottage Building ... 54
—— (J. P.) Building Construction 25
Alphabets, *Delamotte*... 31
ANDERSON, Prospecting 20
Animal Physics, *Lardner* 64
—— Physiology, *Lardner* 33
Appraiser's Assistant, *Wheeler* ... 46
Arches and Piers, *Bland* 56
—— Oblique, *Hart* 13
Architect's Guide, *Rogers* 26
Architects, Hints to, *Wightwick* ... 56
Architectural Modelling, *Richardson* 56
—— Perspective, *Ferguson* 26
Architecture, *Vitruvius* 57
—— Civil, *Chambers*... 26
—— Design, *Garbett* 56
—— Grecian, *Earl of Aberdeen* ... 57
—— Mechanics of, *Tarn* 25
—— Orders of, *Leeds* 56
—— Styles of, *Bury* 56
—— Villa, *Wickes* 26
Arithmetic, *Haddon* 61
—— *Young* 61
ARMAN, Land Reckoner 59
ARMOUR, Iron and Heat 53
—— Power in Motion 53
ARMSTRONG, Steam Boilers... ... 52
Artists' Pigments, *Standage* 36
Asbestos, *Jones* 21
Astronomy, *Gore* 32
—— *Lardner* 33
—— *Main* 32, 62
ATKINSON, Dynamic Electricity ... 24
—— Electrical Transformation ... 24
Auctioneers, *Souibbs* 46

BADENOCH, Letter Painting ... 58
BAIRD, Management of Health 63
BAKER (C.) Foreign Correspondence 41
—— (T.) Mechanism 53
—— Mensuration 51
—— Statics and Dynamics... ... 62
—— Steam Engine 52
—— Surveying 51
BALE, Machinery Management ... 52
—— Pumps and Pumping 7
—— Saw Mills 28
—— Stone Working Machinery ... 7
—— Wood Working Machinery ... 28
BALTET, Art of Grafting 60
BARLOW, Strength of Materials ... 14
Barn Implements, *Scott* 58
BARTHOLOMEW, Specifications ... 27
BAUERMAN, Metallurgy of Iron 22, 51
BEATON, Quantities 56
—— Technical Guide 26
BEAZELEY, Tables of Curves .. 12
BECKETT, Book on Building 27, 54
—— Clocks and Watches 57
Bee and White Ants, *Lardner* ... 33

PAGE

Bees, *Samson* 45
BLACK, Gasfitting 58
BLAGROVE, Marble Decoration ... 30
—— Shoring... 55
BLAND, Arches 56
—— Ships and Boats 54
Blasting, *Burgoyne* 51
Blow-pipe in Chemistry, *Ross* ... 35
Boiler Chimneys, *Wilson* 5
—— Construction, *Hutton* 3
—— Maker's Assistant, *Courtney* ... 52
—— Maker's Reckoner, *Courtney* ... 52
Boilers, Treatise on, *Wilson* ... 4
Book-keeping, *Haddon* 61
—— for Farmers, *Woodman* 45, 59
Book on Building, *Beckett* ... 27, 54
Boot and Shoe Making, *Leno* 37, 58
Brakes, Railway, *Reynolds* 16
Brass Founder's Manual, *Graham*... 57
Bread and Biscuits, *Wells* 39
BRENAN, Composition & Punctuation 63
BREWER, Elementary Engineering 18, 53
Brewing, *Wright* 35
Brick and Tile Book 55
Brick-cutting, *Hammond* 54
Bricklaying, *Hammond* 54
Bricks and Tiles, *Dobson* 55
Brickwork, *Walker* 55
Bridges, *Buck* 13
—— *Campin* 50
—— *Humber* 13
—— *Pendred* 50
BRIGHT (C.) Submarine Telegraphs 23
(T.) Agricultural Valuing ... 46
—— Pole Plantations 46
British Mining, *Hunt* 20
BROADBENT, Earthwork Tables ... 13
BROOKS, Dwelling Houses 54
BROWN, Wood Engraving ... 38, 58
BUCHAN, Plumbing 27, 55
—— Ventilation 27, 55
BUCK, Earthwork Tables 12
—— Oblique Bridges 13
—— Table of Weight of Girders .. 13
—— Tunnel Shafts 13
Budding and Grafting, *Baltet* .. 60
Builder's Price Book 25
Building Act (London), 1894, *David* 26
—— Civil and Ecclesiastical 27, 54
—— Art of, *Dobson* 54
—— Construction, *Allen* 25
—— Design, *Woodley* 26
—— Estates, *Maitland* 54
—— Science of, *Tarn* ... 27, 54
BULMAN and REDMAYNE, Colliery Working 19
BURGESS, Coach Building 57
BURGOYNE, Blasting 51
BURLINSON & SIMPSON; Iron Tables 42
BURN, Cattle, Sheep and Horses ... 59
—— Dairy, Pigs and Poultry ... 59
—— Estates Management 59
—— Farm Management 59
—— Farming Economy 59
—— Modern Farming ... 44, 59
—— Small Farming 44
—— Soils, Manures and Crops ... 59
—— Utilization of Sewage 59
BURNELL, Civil Engineering ... 50

PAGE

BURNELL, Limes, Cements, &c. ... 56
—— Wells 50
BURTON, Water Supply 9
BURY, Styles of Architecture ... 56
BYRNE, Geometry of Compasses ... 27

CABINET WORKER, *Hasluck* 40
CAMPIN, Details of Machinery 53
—— Earthwork Tables 13
—— Iron Bridges 50
—— Iron and Steel Work .. 27, 50, 54
—— Materials 50
—— Mathematics 62
—— Mechanical Engineering ... 53
Carpenters' Guide, *Nicholson* ... 28
Carpentry, *Tredgold* 28
—— and Joinery, *Tredgold and Tarn* 55
CARROUÉ, Commercial French ... 41
Cast Iron, Strength of, *Tredgold* ... 14
Cattle, Sheep and Horses, *Burn* ... 59
Cements, Glues, &c., *Standage* 37, 57
CHADWICK, Calculator 42
Chain Cables, *Traill*... 18
CHAMBERS, Civil Architecture ... 26
Chemical Analysis, *Normandy* ... 35
Chemistry, Engineering, *Phillips* ... 34
CHRISTY, Builders' Joints 55
Circular Work, *Collings* ... 28, 55
Civil Engineering, *Law* 50
CLAPPERTON, Practical Paper Making 37
CLARK, Engineers' Pocket Book ... 1
—— Tramways 11
—— Steam and the Steam Engine 52
CLARKE, English Dictionary ... 63
—— English Grammar 63
CLEMENTS, Fields of Great Britain 44
Clock Jobber, *Hasluck* 40
Clocks, Watches and Bells, *Beckett* 57
CLOWES, Inflammable Gases ... 19
Coach Building, *Burgess* 57
Coal and Coal Mining, *Smyth* 21, 51
—— and Iron Industries, *Meade* ... 21
—— and Speed Tables, *Foley* ... 4
Colliery Manager, *Pamely* 21
—— Working, *Bulman & Redmayne* 19
COLLINGS, Circular Work ... 28, 55
—— Hand-railing 29, 55
—— Roof Carpentry 55
COLLINS, Mining and Quarrying ... 51
Colouring, Grammar of, *Field* ... 56
Colours and Dye Wares, *Slater* ... 35
Commerce, *Gambaro*... 41
Commercial Correspondence, *Baker* 41
—— French, *Carroué* 41
Common Things, *Lardner* 33
Compasses, Geometry of, *Byrne* ... 27
Compendious Calculator, *O'Gorman* 63
Complete Agricultural Surveyor's Pocket Book, *Hudson and Ewart*... 47
——— Grazier, *Youatt* 43
Composition & Punctuation, *Brenan* 63
Concrete, *Sutcliffe* 25
Condensed Mechanics, *Hughes* ... 8
Confectionery, *Wells*... 39
—— Flour, *Wells* 39
Contracts, Labour, *Gibbons*... ... 48
Cottage Building, *Allen* 54
—— Gardening, *Hobday* 60
Cotton Manufacture, *Lister* ... 36

PAGE

COTSWORTH, Direct Calculators .. 42
COURTNEY (C. F.) Masonry Dams... 11
—— (J.) Boiler Makers' Assistant... 52
—— Boiler Maker's Ready Reckoner 52
—— Ready Reckoner and Assistant 5
COX, Integral Calculus 61
CRANE, Sheet Metal Worker ... 57
—— Smithy and Forge 53
Cranes. *Glynn*... 53
Creation, Records of, *Le Vaux* ... 32
CROFTS, How to Make a Dynamo... 24
CROLE, Tea 36
CURRY & GREENWELL, Water Supply 10
Curves, Tables of, *Beazeley* ... 12
Cyanide Process, *Eissler* 22
Cycles, *Tayler* 36

DAIRYING, *Sheldon* 44
Dairy Management, *Burn* ... 59
Dangerous Goods, *Phillips* 34
DARYL, Dictionary of Painters ... 62
DAVID, London Bui ding Act (1894) 26
DAVIDSON, House Painting... 30, 55
DAVIES, Earthy Minerals 19
—— Metalliferous Minerals ... 19
—— Mining Machinery 19
—— Slate and Slate Quarrying ... 51
Decoration, Elementary, *Facey* 30, 56
—— Marble, *Blagrove* 30
—— Practical, *Facey*... 56
Decorators' Assistant 30
DELAMOTTE, Illuminating 31
DEMPSEY, Drainage of Lands 11, 50
—— Iron Girder Bridges 50
—— Locomotive Engines 52
Dentistry, Mechanical, *Hunter* 37, 58
Details of Machinery, *Campin* ... 53
DICKSON, Organ Building 57
Dictionary, Electrical, *Sloane* ... 24
—— of Painters, *Daryl* 62
—— of Terms, *Horner* 6
—— of Terms, *Weale* 62
Differential Calculus, *Woolhouse* ... 61
Direct Calculators, *Cotsworth* ... 42
Discount Guide, *Harben* 42
DOBSON, Art of Building 54
—— Bricks and Tiles 55
—— Foundations 51
—— Masonry and Stone Cutting ... 56
—— Pioneer Engineering 50
—— & HAMMOND, Brick & Tile Book 55
—— AND TARN, Students' Guide ... 26
Door Locks, *Hobbs* 58
DOWLING, Metric Tables 41
DOWNIE, Iron Companion 41
DOWSING, Timber Companion ... 29
Drainage of Lands, *Dempsey* 11, 50
—— of Mines, *Michell* 20
Draining and Embanking, *Scott* ... 58
Drawing Instruments, *Heather* ... 61
—— Rules on, *Pyne* 26
DU BREUIL, Fruit Trees 60
Dwelling-Houses, *Brooks* 54
DYER, Fertilisers and Feeding Stuffs 45
Dynamic Electricity, *Atkinson* ... 24
Dynamo Construction, *Crofts* ... 24
—— Construction, *Urquhart* ... 23
—— Management, *Paterson* ... 24

PAGE

EARTHWORK, Manual on, *Graham* 13
—— Tables, *Buck* 12
—— Tables, *Broadbent and Campin*... 13
Earthy Minerals, *Davies* 19
EISSLER, Cyanide Process 22
—— Metallurgy of Gold 22
—— Metallurgy of Lead 22
—— Metallurgy of Silver 22
—— Modern Explosives 34
Electric Light, *Swinton* 24
—— Light, *Urquhart* 23
—— Light, *Knight* 24
—— Light Fitting, *Urquhart* .. 23
—— Ship Lighting, *Urquhart* 18, 24
—— Telegraph, *Lardner* 33
—— Telegraph, *Lardner & Bright*... 33
—— Telegraph, *Sabine* 63
Electrical Engineer's Pocket Book, *Kempe* 23
—— Dictionary, *Sloane* 24
—— Transformation, *Atkinson* ... 24
Electricity, Dynamic, *Atkinson* ... 24
—— Handbook of, *Lardner*... ... 33
—— Text-book of, *Noad* 24
Electro-Deposition, *Watt* 38
—— Metallurgy, *Watt* ... 38, 57
—— Plating, *Urquhart* 39
—— Typing, *Urquhart* 39
ELWES, French Dictionary ... 64
—— Italian Grammar 64
—— Italian Triglot Dictionary ... 64
—— Portuguese Dictionary .. 64
—— Portuguese Grammar 64
—— Spanish Dictionary 64
—— Spanish Grammar 64
Embroidery, *Delamotte* 31
EMMENS, Logic 63
—— Selections from Locke... ... 63
Engine, Locomotive, *Dempsey* ... 52
—— Locomotive, *Reynolds* ... 16, 53
—— Portable, *Wansbrough* 8
—— Stationary, *Reynolds* ... 16, 53
Engine-Driving, *Reynolds* ... 16, 53
—— Life, *Reynolds* 16
Engineer, Model, *Hasluck* 40
—— Model, *Reynolds* ... 16, 58
Engineering Chemistry, *Phillips* ... 34
—— Civil, *Law and Burnell* ... 50
—— Drawing, *Maxton* 52
—— Elementary, *Brewer* ... 18, 53
—— Estimates 5
—— Farm, *Scott* 44, 58
—— Water, *Slagg* 10
Engineer's Assistant, *Templeton* ... 3
—— Field Book, *Haskoll* 12
—— Handbook, *Hutton* 2
—— Pocket Book, *Clark* 1
—— Reference Book, *Foley*... ... 4
—— Tables, *Smith* 7
—— Year-Book, *Kempe* 8
Engineman's Companion, *Reynolds* . 16
English Dictionary, *Clarke* ... 63
—— Grammar, *Clarke* 63
Estates Management, *Burn* ... 59
—— Purchasing of, *Inwood*... ... 46
Estimating, *Simon* 27
Every Man's Own Lawyer 48
EWART, Land Pocket Book... ... 47

PAGE

EWART, Meat Production 59
Expansion by Heat, *Keily* 14
Explosives, *Eissler* 34
—— Nitro, *Sanford* 34

FACEY, Elementary Decoration 30, 56
—— Practical Decoration ... 56
Factory Accounts, *Garcke and Fells*. 41
—— Acts, *Garcke and Fells*... ... 48
FAIJA, Portland Cement 56
Farm Account Book, *Woodman* ... 45
—— Book-keeping, *Woodman* 45, 59
—— Buildings, *Scott*... 58
—— Engineering, *Scott* ... 44, 58
—— Live Stock, *Wallace* 43
—— Management, *Burn* 59
—— Roads, *Scott* 58
Farmer's Tables, *Francis* 44
Farming Economy, *Burn* 59
—— Modern, *Burn* 44, 59
Feeding Stuffs, *Dyer* 45
FELLS & GARCKE, Factory Accounts 41
FENWICK & BAKER, Surveying 21, 50
FERGUSON, Perspective 26
Fertilisers and Feeding Stuffs, *Dyer* 45
FIELD, Colouring 56
Field Fortification, *Knollys*... ... 63
—— Fortification, *Macaulay* ... 14
—— Implements, *Scott* 58
Fields of Great Britain, *Clements* ... 44
Fire Engines, *Young* 6
FLETCHER, Glossary... 7
Flour Confectionery, *Wells*... ... 39
—— Manufacture, *Kick* 36
FOLEY, Coal and Speed Tables ... 4
—— Reference Book 4
FOLKARD, Pawnbroker's Guide ... 48
Forcing Garden, *Wood* 45
Foreign Correspondence, *Baker* ... 41
Forestry, Elements of, *Hough* ... 29
Foundations, *Dobson*... 51
FRANCIS, Tables for Farmers ... 44
FRITTS, Watch Adjuster's Manual.. 38
FREAM & YOUATT, Complete Grazier 43
French Dictionary, *Elwes* 64
—— Grammar, *Strauss* 64
—— and English Phrase-Book ... 64
FROMBERG, Glass Staining 56
FROME, Surveying 12
Fruit Trees, *Du Breuil* 60
Fuel, *Williams* 52
Fuels, *Phillips* 35, 52

GAMBARO, Commerce... ... 41
GARBETT, Design 56
GARBUTT, Tables of Wages ... 42
GARCKE & FELLS, Factory Accounts 41
—— Factory Acts 48
Garden, Forcing, *Wood* 45
—— Ladies', *Wood* 45
—— Receipts, *Quin* 60
Gardening, Cottage, *Hobday* ... 60
—— Good, *Wood* 45
—— Kitchen, *Glenny* 60
—— Market, *Shaw* 45, 60
—— Multum in Parvo, *Wood* ... 45
Gas and Gas Works, *Hughes* ... 50
—— Engines, *Goodeve* 4
—— Fitting, *Black* 58

PAGE

Gases, Inflammable, *Clowes* ... 19
Gauging, *Mant* 36
Gearing, *Horner* 6
GEE, Goldsmith's Handbook 39, 57
—— Hallmarking 57
—— Jeweller's Assistant 38
—— Silversmith's Handbook 39, 57
Geology, *Lardner* 33
—— *Tate* 52
Geometry, Analytical, *Hann* ... 60
—— Descriptive, *Heather* 60
—— Euclid, *Law* 60
—— *Law* 60
—— of Compasses, *Byrne* 27
—— *Tarn* 27
German Grammar, *Strauss* 64
—— Triglot Dictionary, *Hamilton* ... 64
GESSERT, Glass Staining 56
GIBBONS, Labour Contracts ... 48
Glass Staining, *Gessert & Fromberg* 56
GLENNY, Kitchen Gardening ... 60
Glossary, *Fletcher* 7
—— Astronomical, *Gore* 32
GLYNN, Cranes 53
—— Power of Water 50
Gold, Extraction of, *Eissler* 22
—— Metallurgy of, *Eissler* 22
Goldsmith's Handbook, *Gee* 39, 57
GOLDTHORP, Handrailing 28
GOODEVE, Gas Engines 4
—— Steam Engine 4
GOODING, Domestic Medicine ... 63
—— House Book 63
—— House Manager 63
GORDON, Actuarial Tables 42
GORE, Astronomical Glossary ... 32
—— Star Groups 32
—— Visible Universe 32
Grafting and Budding, *Baltet* ... 60
GRAHAM (A.), Earthwork 13
—— (R. H.), Graphic Statics ... 13
—— (W.), Brass Founding 57
Graining and Painting, *Davidson* 30, 55
—— *Van der Burg* 30
GRANDY, Timber Importer ... 29, 55
Granites, *Harris* 21
GRANTHAM, Shipbuilding 54
Graphic Statics, *Graham* 13
—— Table, *Buck* 13
GREENWELL & CURRY, Water Supply 10
GREENWOOD, Navigation ... 18, 53
—— Sailor's Sea Book 53
GRIFFITHS, Trusses 14
GULLICK & TIMBS, Painting 31, 62
GWILT, Vitruvius' Architecture ... 57

HADDON, Algebra 61
—— Arithmetic 61
—— Book-keeping 61
HARDER, Steam Engine 5
Hallmarking, *Gee* 57
HAMILTON, German Triglot Dictionary 64
HAMMOND, Brick-cutting 54
—— Bricklaying 54
Handrailing, *Collings* ... 29, 55
—— *Goldthorp* 28
Handybooks for Handicrafts ... 40

PAGE

HANN, Analytical Geometry ... 60
—— Plane Trigonometry 60
—— Spherical Trigonometry ... 61
HARBEN, Discount Guide 42
—— Weight Calculator 42
HARDINGHAM, Patents 47
HARRIS, Granites 21
HART, Oblique Arches 13
HASKOLL, Field Book 12
—— Survey., Land and Marine ... 12
HASLUCK, Handicrafts 40
—— Lathe Work 7
—— Milling Machines 7
—— Screw Threads 7
HAWKINGS, Measurement 29
Hay and Straw Measurer, *Steele* ... 59
Health Officer's Pocket Book, *Wilbloughby* 47
Heat, Expansion by, *Keily* 14
—— *Lardner* 33
HEATHER, Descriptive Geometry ... 60
—— Drawing Instruments 61
—— Mathematical Instruments ... 61
—— Optical Instruments 61
—— Practical Plane Geometry ... 60
—— Surveying Instruments ... 61
Heating by Hot Water, *Jones* ... 8
HIPSLEY, Equational Arithmetic ... 61
HOARE, Slide Rule 61
—— Iron and Steel 8
HOBDAY, Cottage Gardening ... 60
HORNER, Mechanical Terms ... 6
—— Pattern Making 6
—— Plating and Boilermaking ... 6
—— Toothed Gearing 6
Horology, *Saunier* 38
HORTON, Complete Measurer ... 56
HOUGH, Forestry 29
House Book 63
—— Decoration, *Facey* ... 30, 56
—— Manager 63
—— Owner's Estimator, *Simon* ... 27
—— Painting, *Davidson* ... 30, 55
—— Property, *Tarbuck* 47
HUDSON, Land Valuer 47
HUGHES (S.) Gas Works 50
—— Water Works 50
—— (W.), Condensed Mechanics ... 8
HUMBER, Water Supply 10
—— Bridge Construction 13
—— Calculation of Strains 14
—— Modern Engineering 15
HUNT, British Mining 20
HUNTER, Dentistry 37, 58
HUTTON, Engineer's Handbook ... 2
—— "Modernized Templeton" ... 3
—— Steam Boiler Construction ... 3
—— Works' Manager's Handbook 2
Hydraulic Machinery, *Marks* ... 5
—— Manual, *Jackson* 10
—— Tables, *Neville* 10
Hydrostatics, *Lardner* 33

ILLUMINATION, *Delamotte* . 31
Industrial Conciliation, *Jeans* 47
Inflammable Gases, *Clowes* 19
Integral Calculus, *Cox* 61
Interest and Annuities, *Thoman* ... 62
INWOOD, Tables 46

PAGE

Iron and Heat, *Armour* 53
—— and Steel, *Hoare* 8
—— and Steel Work, *Campin* 27, 50, 54
—— Bridge Construction, *Campin* 50
—— Bridge Construction, *Humber* 13
—— Bridge Construction, *Pendred* 50
—— Metallurgy of, *Bauerman* 22, 51
—— Ores, *Kendall* 22
—— Plate Weight Tables, *Burlinson* 42
—— Shipbuilding, *Grantham* ... 54
—— Strength of, *Tredgold* 14
—— Trades' Companion, *Downie* ... 41
—— Work, Strains in, *Shields* ... 14
Irrigation, *Scott* 58
Italian Grammar, *Elwes* 64
—— Triglot Dictionary, *Elwes* ... 64

JACKSON, Hydraulic Manual ... 10
—— Modern Metrology 41
—— Survey Practice 11
JEANS, Industrial Conciliation ... 47
Jeweller's Assistant, *Gee* 38
Jewellery, Hall-marking of, *Gee* ... 57
Joinery, *Tredgold and Tarn* 55
—— Circular Work, *Collings* 28, 55
Joints, *Christy* 55
JONES, Asbestos 21
—— Heating by Hot Water ... 8
Journalism, *Mackie* 47

KEILY, Expansion by Heat ... 14
KEMP, Plasterer 55
KEMPE, Electrical Pocket Book ... 23
—— Engineer's Year-Book ... 8
KENDAL, History of Watches ... 38
KENDALL, Iron Ores 22
KICK, Flour Manufacture 36
KIPPING, Masts, Rigging, &c. ... 54
—— Sails and Sail-making 54
Kitchen Gardening, *Glenny* ... 60
—— and Market Gardening, *Shaw* 45, 60
KNIGHT, Electric Light 24
KNOLLYS, Field Fortification ... 63

LABOUR Contracts, *Gibbons and Uttley* 48
Ladies' Garden, *Wood* 45
Land, Admeasurement of, *Arman* ... 59
—— Improver's Pocket Book, *Ewart* 47
—— Valuer's Assistant, *Hudson* ... 47
LARDNER, Animal Physics 63
—— Animal Physiology 33
—— Astronomy 33
—— Bee and White Ants 33
—— Common Things Explained ... 33
—— Electric Telegraph 33
—— Electricity 33
—— Heat 33
—— Hydrostatics 33
—— Mechanics 33
—— Museum of Science and Art ... 33
—— Natural Philosophy 33
—— Optics 33
—— Popular Astronomy 33
—— Popular Geology 33
—— Popular Physics 33
—— Steam and its Uses 33
—— Steam Engine 52
—— The Microscope 33

PAGE

LARDNER & BRIGHT, Telegraph ... 33
Lathe Work, *Hasluck* 7
Laundry Management ... 39, 58
LAW & BURNELL, Civil Engineering 50
—— AND CLARK, Roads and Streets 50
LAW, Euclid 60
—— Logarithms 62
—— Mathematical Tables ... 54, 62
Lawyer, Every Man's Own... ... 48
Lead, Argentiferous, *Eissler* ... 22
Leather Manufacture, *Watt* ... 37
LEEDS, Architecture 56
LENO, Boot and Shoemaking 37, 58
Letter Painting, *Badenoch* 58
LE VAUX, Records of Creation ... 32
Levelling, *Simms* 12
Light, *Tarn* 56
—— Railways, *Mackay* 9
Limes, Cements, &c., *Burnell* ... 56
LINTERN, Mineral Surveyor's Guide 20, 51
LISTER, Cotton Manufacture ... 36
Live Stock, *Wallace* 43
Locke on the Understanding. *Emmens* 63
LOCKIE, Marine Engineer's Drawing 18
Locks, *Tomlinson* 58
LOCKWOOD's Builder's Price Book... 25
—— Dictionary of Terms, *Horner* ... 6
Locomotive Engine Driving, *Reynolds* 16, 53
—— Development, *Stretton*... ... 5
—— Engineer, The, *Reynolds* 16, 53
—— Engines, *Dempsey* 52
Logarithms, *Law* 62
Logic, *Emmens* 63
LOMAS, Alkali Trade... 35
London Building Act, 1894, *David* 26

MACASSEY, Private Bills ... 47
MACAULAY, Field Fortification 14
M'CONNELL, Agricultural Note Book 44
Machinery, Details of, *Campin* ... 53
—— Management of, *Bale* 52
MACKAY, Light Railways 9
MACKIE, Modern Journalism ... 47
MACKROW, Naval Architect's Pocket Book 17
MAIN, Astronomy 32, 62
MAITLAND, Building Estates ... 54
MANN, River Bars 11
MANT, Pocket Book of Gauging ... 36
Manures, *Burn* 59
Marble Decoration, *Blagrove* ... 30
Marine Engines, *Murray* ... 17, 54
—— Engineer's Drawing, *Lockie* ... 18
—— Engineer's Pocket Book, *Proctor* 18
—— Surveying, *Haskoll* 12
MARKS, Hydraulic Machinery ... 5
Masonry Dams, *Courtney* 11
Masonry, Practical, *Purchase* ... 25
—— and Stonecutting, *Dobson* ... 56
Masting and Rigging, *Kipping* ... 53
Materials and Construction, *Campin* 50
—— Strength of, *Barlow* 11
Mathematical Instruments, *Heather* 61
Mathematical Tables, *Law*... 54, 62
Mathematics, *Campin* 62
MAXTON, Engineering Drawing ... 52
MEADE, Coal and Iron Industries ... 21
Measures, Weights, &c., *Woolhouse* 63
Measuring, Guide to, *Dobson* ... 26

PAGE

Meat Production, *Ewart* 59
Mechanical Engineer's Pocket Book, *Clark*... 1
—— Engineer's Reference Book, *Foley* 4
—— Engineering, *Campin* 53
Mechanic's Workshop Companion, *Templeton* 3
—— Workshop Handybook, *Hasluck* 40
Mechanics, Condensed, *Hughes* ... 8
—— *Lardner* 33
—— of Architecture, *Tarn* 25
—— Tables for, *Smith* 7
Mechanism, *Baker* 53
Mensuration, *Baker* 51
—— and Gauging, *Mant* 36
MERIVALE, Mining Notes 20
Metal Trades' Companion, *Downie* 41
—— Turning, *Hasluck* 40
Metalliferous Minerals, *Davies* ... 19
Metallurgy of Gold, *Eissler*... ... 22
—— of Iron, *Bauerman* ... 22, 51
—— of Lead, *Eissler*... 22
—— of Silver, *Eissler* 22
Metric Tables, *Dowling* 41
Metrology, *Jackson* 41
MICHELL, Mine Drainage 20
Microscope, The, *Van Heurck* ... 32
—— *Lardner* 33
Milk, Cheese and Butter, *Oliver* ... 44
Miller's Ready Reckoner 59
Milling Machines, *Hasluck* 7
MILNE, Miner's Handbook 20
Mine Drainage, *Michell* 20
Mineral Surveyor's Guide, *Lintern* 20, 51
Mineralogy, *Ramsay* 51
Miner's Handbook, *Milne* 20
—— Pocket Book, *Power* 20
Mining and Quarrying, *Collins* ... 51
—— British, *Hunt* 20
—— Coal, *Smyth* 21, 51
—— Earthy, *Davies* 19
—— Machinery, *Davies* 19
—— Metalliferous, *Davies* 19
—— Students, Notes for, *Merivale*... 20
—— Tools, *Morgans* 51
Model Engineer's Handybook, *Hasluck* 40
—— Locomotive Engineer, *Reynolds* 16, 58
Modern Journalism, *Mackie* ... 47
"Modernized Templeton" 3
Mollusca, Manual of, *Woodward* 32, 62
MORGANS, Mining Tools 51
Motor Cars, *Tayler* 6
MURRAY, Marine Engines ... 17, 54
Museum of Science and Art, *Lardner* 33
Music, *Spencer*... 62

NATURAL Philosophy for Schools, *Lardner* 33
—— Philosophy, *Tomlinson*... ... 63
Naval Architecture, *Peake* 54
Naval Architect's Pocket Book, *Mackrow* 17
Navigation and Nautical Astronomy, *Young* 53
—— Practical, *Greenwood and Rosser* 18, 53
NEVILLE, Hydraulic Tables ... 10
NICHOLSON, Carpenter's Guide ... 28
Nitro-Explosives, *Sanford* 34
NOAD, Text-Book of Electricity ... 24

PAGE

NORMANDY, Chemical Analysis ... 35
Number & Weight Calculator, *Chadwick* 42

OBLIQUE Arches, *Hart* ... 13
—— Bridges, *Buck* 13
O'GORMAN, Calculator 63
OLIVER, Milk, Cheese and Butter... 44
Organ Building, *Dickson* 57
Optical Instruments, *Heather* ... 61
Optics, Handbook of, *Lardner* ... 33

PACKING Case Tables, *Richardson* 29
Painting, *Gullick and Timbs*... 31, 62
PAMELY, Colliery Manager's Handbook 21
Paper Making, *Clapperton* 37
—— *Watt* 37
Pastry Cook's Guide, *Wells*... ... 39
Patents, *Hardingham* 47
PATERSON, Dynamo Management... 24
Pattern Maker's Handybook, *Hasluck* 40
—— Making, *Horner* 6
Pawnbroker's Guide, *Folkard* ... 48
PEAKE, Naval Architecture... ... 54
PENDRED, Iron Bridges 50
Perspective for Beginners, *Pyne* ... 56
PHILLIPS, Dangerous Goods ... 34
—— Engineering Chemistry ... 34
—— Fuels 35, 52
Photo-Micrography, *Van Heurck* ... 32
Physical Geology, *Tate* 52
Physics, Animal, *Lardner* 64
—— Popular, *Lardner* 33
Physiology, Animal, *Lardner* ... 33
Pianoforte, *Spencer* 62
PINK, Potatoes 45
Pioneer Engineering, *Dobson* ... 50
PIRRIE, Dictionary of Sea Terms... 17
Plasterer, Practical, *Kemp* 55
Plating & Boilermaking, *Horner* ... 6
Plumbing, *Buchan* 27, 55
Pneumatics, *Tomlinson* 51
Pocket Glossary, *Fletcher* 7
—— Technical Guide, *Beaton* ... 26
Pole Plantations, *Bright* 46
Popular Astronomy, *Lardner* ... 33
—— Geology, *Lardner* 33
—— Physics, *Lardner* 33
Portable Engine, The, *Wansbrough* 8
Portland Cement for Users, *Faija*... 56
Portuguese Dictionary, *Elwes* ... 64
Portuguese Grammar, *Elwes* ... 64
Potatoes, *Pink* 45
POWER, Pocket Book for Miners ... 20
Power in Motion, *Armour* 53
PROCTOR, Marine Engineer's Pocket Book... 18
Prospector's Handbook, *Anderson*... 20
Pumps and Pumping, *Bale* 7
PURCHASE, Practical Masonry ... 25
PYNE, Perspective 56
—— Rules on Drawing 26

QUANTITIES and Measurements, *Beaton*... 56
QUIN, Garden Receipts ... 60

RAILWAY Working, *Stretton* ... 14
RAMSAY, Mineralogy ... 51

PAGE

Ready Reckoner for Boiler Makers 52
—— Reckoner for Land, *Arman* ... 59
Record of Engineering, *Humber* ... 15
REDMAYNE and BULMAN, Colliery Working 19
Refrigerating Machinery, *Tayler* ... 5
REYNOLDS, Continuous Brakes ... 16
—— Engine Driving Life 16
—— Engineman's Companion ... 16
—— Locomotive Engine Driving 16, 53
—— Model Engineer ... 16, 58
—— Stationary Engine Driving 16, 53
RICHARDSON, Packing Case Tables 29
—— Practical Timber Merchant ... 29
—— Modelling 56
RIDEAL, Water Purification ... 34
River Bars, *Mann* 11
Roads and Streets, *Law and Clark* 50
ROGERS, Architect's Guide 26
Roof Carpentry, *Collings* 55
Roofs, Construction of, *Tarn* ... 55
Ross, Blowpipe 35
Rothamsted Experiments, *Tipper* ... 45

SABINE, Electric Telegraph ... 63
SADLER, Sail-making 18
Safe Railway Working, *Stretton* ... 14
—— Use of Steam 8
Sail-making, *Sadler* 18
Sailor's Sea Book, *Greenwood* ... 53
Sails and Sail Making, *Kipping* ... 54
SAMSON, Bees 45
SANFORD, Nitro-Explosives 34
Sanitary Dwelling Houses, *Tayler* .. 27
—— Work, *Slagg* 50
SAUNIER, Modern Horology ... 38
—— Watchmaker's Handbook ... 38
Saw Mills, *Bale* 28
School of Painting, *Van der Burg* ... 30
Science of Building, *Tarn* ... 27, 54
SCOTT, Agricultural Surveying ... 58
—— Barn Implements 58
—— Draining and Embanking ... 58
—— Farm Buildings... 58
—— Farm Engineering ... 44, 58
—— Farm Roads 58
—— Field Implements 58
—— Irrigation 58
Screw Threads, *Hasluck* 7
Sea Terms, Dictionary of, *Pirrie* ... 17
Sewage, Utilization of, *Burn* ... 59
Sewing Machinery, *Urquhart* ... 57
SHAW, Market Gardening ... 45, 60
Sheep, *Spooner* 60
Sheet Metal Worker's Guide, *Crane* 57
—— Instructor, *Warn & Horner* ... 39
SHELDON, Dairy Farming 44
Shells, Recent and Fossil, *Woodward* 32, 62
SHIELDS, Strains 14
Ship-building, Iron, *Grantham* ... 54
Ships, *Sommerfeldt* 54
—— and Boats, *Bland* 54
Shoring, *Blagrove* 55
Silver, Metallurgy of, *Eissler* ... 22
Silversmith's Handbook, *Gee* 39, 57
SIMMS, Levelling 12
—— Practical Tunnelling 9
SIMON, House Owner's Estimator 27
SLAGG, Sanitary Work 50

PAGE

SLAGG, Water Engineering... ... 10
Slate Quarrying, *Davies* 51
SLATER, Colours and Dye Wares ... 35
Slide Rule, *Hoare* 61
SLOANE, Electrical Dictionary ... 24
Small Farming, *Burn* 44
SMITH (F.), Tables for Mechanics ... 7
—— (R.), Acoustics for Buildings... 54
Smithy and Forge, *Crane* 53
SMYTH, Coal and Coal Mining 21, 51
Soap Making, *Watt* 37
Soils, Manures and Crops, *Burn* ... 59
SOMMERFELDT, Ships 54
Specifications, *Rogers* 27
SPENCER, Music 62
—— Pianoforte 62
Spherical Trigonometry, *Hann* ... 61
SPOONER, Sheep 60
SQUIBBS, Auctioneers 46
STANDAGE, Artists' Pigments ... 36
—— Cements, Glues, &c. ... 37, 57
Star Groups, *Gore* 32
Statics, *Graham* 13
—— and Dynamics, *Baker* 62
Stationary Engine Driving, *Reynolds* 16, 53
Steam and its Uses, *Lardner* ... 33
—— & Machinery Management, *Bale* 52
—— and the Steam Engine, *Clark* ... 52
—— Boiler Construction, *Hutton* ... 3
—— Boilers, *Armstrong* 52
—— Boilers, *Wilson* 4
—— Engine, *Baker* 52
—— Engine, *Dempsey* 52
—— Engine, *Goodeve*... 4
—— Engine, *Haeder* 5
—— Engine, *Lardner* 52
—— Safe Use of, *An Engineer* ... 8
STEELE, Hay and Straw Measurer 59
Stone Working Machinery, *Bale* ... 7
Strains in Girders, *Humber*... ... 13
—— on Structures, *Shields* 14
STRAUSS, French Grammar ... 64
—— German Grammar 64
Strength of Cast Iron, *Tredgold* ... 14
—— of Materials, *Barlow* 14
STRETTON, Safe Railway Working . 14
—— Locomotive Development ... 5
Submarine Telegraphs, *Bright* ... 23
Subterraneous Surveying, *Fenwick* 21, 50
Superficial Measurement, *Hawkings* 29
Survey Practice, *Jackson* 11
Surveying Instruments, *Heather* ... 61
—— Land, *Baker* 51
—— Land and Marine, *Haskoll* ... 12
—— Mineral, *Lintern* ... 20, 51
—— Practical, *Usill* 11
—— Subterraneous, *Fenwick* 21, 50
—— Trigonometrical, *Frome* ... 12
SUTCLIFFE, Concrete 25
SWINDELL, Wells 50
SWINTON, Electric Lighting ... 24

TARBUCK, House Property ... 47
TARN, Mechanics of Architecture 25
—— Practical Geometry 27
—— Roofs 55
—— Science of Building ... 27, 54
—— Student's Guide 26

PAGE

TARN AND TREDGOLD, Carpentry ... 28
—— Light 56
TATE, Geology 52
TAYLER, Modern Cycles 36
—— Motor Cars 6
—— Refrigerating Machinery ... 5
—— Sanitary Dwelling Houses ... 27
Tea, *Crole* 36
Technical Guide, *Beaton* 26
Telegraphs, Submarine, *Bright* ... 23
TEMPLETON, Engineer's Assistant ... 3
—— Workshop Companion ... 3
THOMAN, Compound Interest ... 62
Timber Importer's Guide, *Grandy* 29, 55
—— Merchant, *Richardson* 29
—— Merchant's Companion, *Dowsing* 29
TIPPER, Rothamsted Experiments.. 45
TOMLINSON, Door Locks 58
—— Mechanics 53
—— Natural Philosophy 63
—— Pneumatics 51
—— Warming and Ventilation ... 56
Toothed Gearing, *Horner* 6
TRAILL, Chain Cables 18
Tramways, *Clark* 11
TRAUTWINE, Curves 12
TREDGOLD, Carpentry and Joinery 55
—— Principles of Carpentry ... 28
—— Strength of Cast-Iron 14
Tree Planter, *Wood* 60
—— Pruner, *Wood* 60
Trusses, *Griffiths* 14
Tunnel Shafts, *Buck*... 13
Tunnelling, *Simms* 9
Turning, Lathework, *Hasluck* ... 7
—— Metal, *Hasluck* 40
—— Wood, *Hasluck* 40
Twin Records, *Le Vaux* 32

URQUHART, Dynamo Construction 23
—— Electric Light 23
—— Electric Light Fitting 23
—— Electric Ship Lighting 18, 24
—— Electroplating 39
—— Electrotyping 39
—— Sewing Machinery 57
USILL, Practical Surveying ... 11
UTTLEY, Labour Contracts... ... 48

VALUATION of Estates, &c., *Bright* 46
—— of House Property, *Tarbuck* ... 47
—— of Land, *Ewart*... 47
—— of Land, *Hudson* 47
VAN DER BURG, Imitation of Woods, 30
VAN HEURCK, Microscope 32
—— Photo-Micrography 32
Ventilation, *Buchan* 27, 55
Villa Architecture, *Wickes* 26
Visible Universe, The, *Gore* ... 32
VITRUVIUS' Architecture 57

WAGES TABLES, *Garbutt* ... 42
WALKER, Brickwork ... 55

PAGE

WALLACE, Farm Live Stock ... 43
WANSBROUGH, Portable Engine ... 8
Warming, *Tomlinson*... 56
WARN, Sheet Metal Working ... 39
Watch Adjuster's Manual, *Fritts* ... 38
—— Jobbing, *Hasluck* 40
Watches, History of, *Kendal* ... 38
Watchmaker's Handbook, *Saunier* 38
Water Engineering, *Slagg* 10
Water Power, *Glynn*... 50
—— Purification, *Rideal* 34
—— Supply, *Burton* 9
—— Supply, *Greenwell and Curry*... 10
—— Supply, *Humber* 10
—— Works, *Hughes* 50
WATT, Electro-Deposition 38
—— Electro-Metallurgy ... 38, 57
—— Leather Manufacture 37
—— Paper Manufacture 37
—— Soapmaking 37
WEALE, Dictionary of Terms ... 62
Weight Calculator, *Harben*... ... 42
Weights and Measures, *Woolhouse* 63
WELLS, Bread and Biscuit Baking 39
—— Confectioner's Guide 39
—— Flour Confectionery 39
—— Ornamental Confectionery ... 39
Wells and Well Sinking, *Burnell* ... 50
WHEELER, Appraiser's Assistant ... 46
WICKES, Villa Architecture... ... 26
WIGGINS, Embanking Lands ... 50
WIGHTWICK, Hints to Young Architects... 56
WILLIAMS, Fuel 52
WILLOUGHBY, Health Officer's Pocket Book... 47
WILSON, Chimneys 5
—— Steam Boilers 4
WINTON, Workshop Practice ... 53
WOOD, Forcing Garden 45
—— Good Gardening 45
—— Ladies' Gardening 45
—— Multum-in-Parvo Gardening 45
—— Tree Planter 60
—— Tree Pruner 60
Wood Carving, *A Lady* 31
—— Engraving, *Brown* ... 38, 58
—— Turning, *Hasluck* 40
—— Working, *Hasluck* 40
—— Working Machinery, *Bale* ... 28
WOODMAN, Book-keeping for Farmers 45, 59
—— Farm Account Book 45
WOODWARD, Mollusca .. 32, 62
WOODLEY, Design of Buildings ... 26
WOOLHOUSE, Calculus 61
—— Measures, Weights and Moneys 63
Works' Manager, *Hutton* 2
WRIGHT, Handybook for Brewers 35

YOUATT & FREAM, Complete Grazier... 43
YOUNG, Arithmetic 61
—— Fire Engines 6
—— Navigation 53

OGDEN, SMALE AND CO. LIMITED, PRINTERS, GREAT SAFFRON HILL, E.C.

BINDING SECT. JUN 12 1

PLEASE DO NOT REMOVE
CARDS OR SLIPS FROM THIS POCKET

UNIVERSITY OF TORONTO LIBRARY

TH
145
A42
1897

Allen, John Parnell
Practical building
construction. 2d ed., rev.

[redacted]

Engineering